




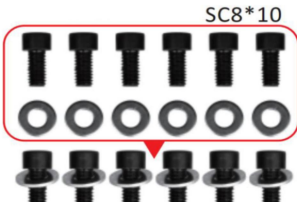


# Installation Instructions




## 1. Parts Included




		
Seat	Base	Wrench
		
Footrest	Pump	Screws

## 2. Installation Instruction

### Step 1. Install the pump to the base

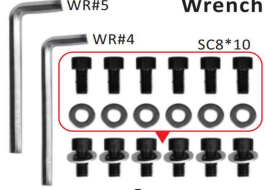


1. Parts you will need for this step.


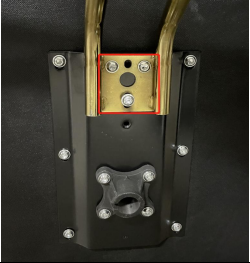

		
Base	Pump	Screws & Wrench

		
1-1. Align the 6 screw holes of the pump and the base.	1-2. Put the base and pump upside down, and insert 6 screws first, then tighten them with the wrench to secure the base and pump.	1-3. Make sure the screws are tightened to avoid wobbling of the chair.


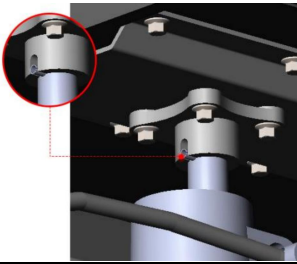

## Step 2. Install the footrest to the seat

Parts you will need for this step.

		
Seat	Footrest	Wrench

		
2-1. Remove 3 pre-installed screws on the bottom of the seat with the wrench, and keep them for the next step.	2-2. Align the 3 screw holes of the footrest and the seat, insert the 3 screws and then tighten them.	

## Step 3. Install the seat to the pump

		
3-1. Lift the seat to align with the pump and insert to the pump. (Two people is recommended to complete this step.)	3-2. Adjust the direction of seat. (Please note the pinon the pump toward the gap of the pump joint).	3-3. Sit on the chair for a while to make the seat more firmly connected with the oil pump and avoid the chair being wobbly.

**Please feel free to contact us if there are any problems with installation or items. We will reply to you within 24 hours.**