 


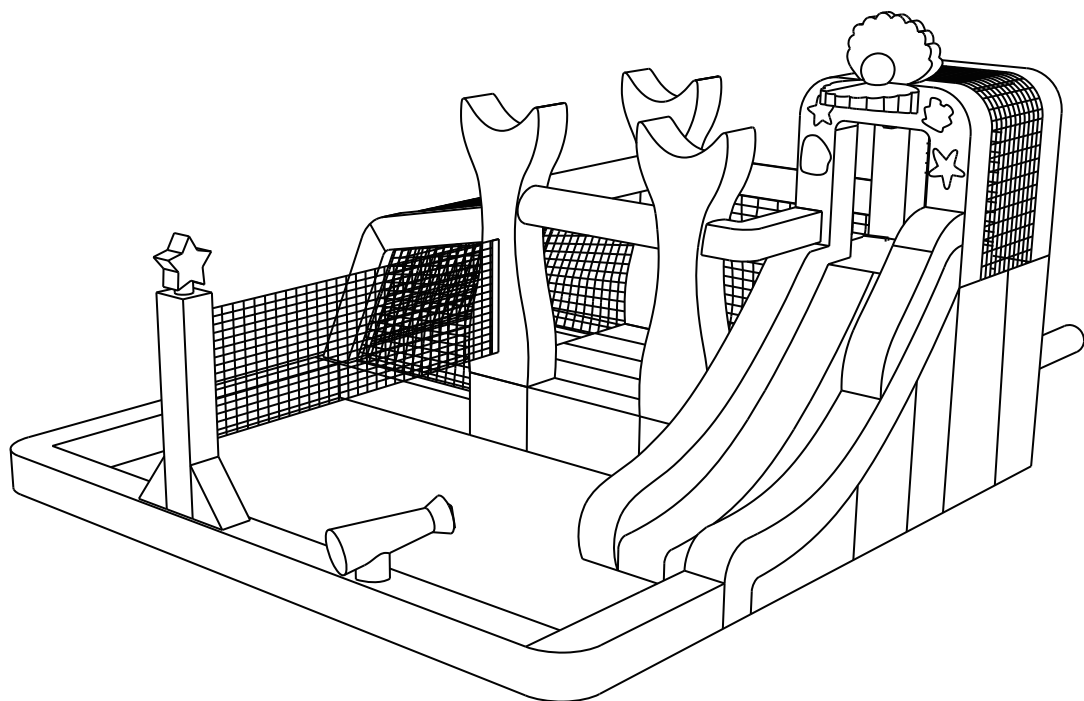

USER'S MANUAL

Inflatable Water Slide

Dear Customer:

To continuously improve our product, we reserve the right to modify this information without prior notification.

For any questions regarding assembly, please check the instruction carefully as a matter of priority or contact our customer service.

Our customer service will gladly assist you with any additional questions, comments or concerns.

THANK YOU FOR PURCHASING!



Before You Start

Please read all instructions carefully and keep it for future reference.

Warnings:

Attention: For home use only.

Attention: The product is not suitable for the children under 3 years.

Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.

Danger: Lack of attachment may cause a tipping or falling hazard.

General Warnings:

- ⚠ The product must be installed and used under the supervision of an adult.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ Remove all packaging, separate and count all parts and hardware.
- ⚠ Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.
- ⚠ We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during installation, and place the product always on a flat, steady and stable surface.
- ⚠ Please check and maintain it regularly. Ensure that all critical parts are securely fixed to the ground.

CAUTION - ELECTRICALLY OPERATED PRODUCT

The operation of Blower Fan Unit not recommended for children under 14 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

- Do not operate any air blower with a damaged cord or plug.
- Do not cover cord with throw rugs, runners, or similar coverings.
- Warn the user to unplug or disconnect the appliance from the power supply before servicing.
- To prevent electric shock, do not immerse the blower in water, wipe clean with damp cloth.
- Arrange cord away from traffic area and where it will not be tripped over.

IMPORTANT CARE INSTRUCTIONS

- Environmental factors such as prolonged exposure to sun, water, heat or cold will destroy inflatables, so the inflatable must not be left outside when not in use.
- Inflatables must be stored dry, or mold will develop and cause irreparable decay to the material. Please note this will void your warranty. Units left outside in humid environments will develop mold as well.
- Water slide is designed with inner stitching and constant air flow, so the unit is still functional with small holes.
- To repair, deflate the product thoroughly, and ensure the surface is dry. Cut patches to the appropriate sizes suitable for repair. Apply glue to both the repair patches and the damaged surface. For large punctures and rips, the unit can be repaired using the included patch and strong thread.
- Do not use harsh chemicals to clean your inflatable bouncer. Soap and water may be used sparingly.
- Maximum weight limits must be obeyed at all times, or the unit may fail.

PACKAGE CONTENTS

- Inflatable Water Slide X1
- Air Blower X1
- Hose X1
- Carrying Bag X1
- Repair Pads X5
- Bouncer ground stakes X6
- White Thread X1
- User Manual X1

SAFETY INSTRUCTIONS & MAINTENANCE

- Suitable for Children 3 to 10 years old to use this product.
- Combined user maximum weight limit: 400lbs (180kg).
- Individual user maximum weight limit: 99lbs (45kg).
- The maximum fall height is 110inches (280cm).
- Only one child should slide down the slide at a time.
- Do not stand on the rails, or on the slide itself.
- Do not play on the inflatable bouncer before it is fully inflated and properly anchored.
- Do not pour water on blower and never leave outside overnight.
- Do not drag on concrete floor or Rough ground.
- Keep the blower away from water and fire.
- Do not modified products without authorization.
- No diving of any sort is safe.
- Remove shoes, eyeglasses, and sharp objects before playing.
- Do not jump off or dive off the slide into the pool to avoid the risk of serious injury or death.
- Keep children away from blower.



Total weight on inflated surface 300lbs (136kg)



Adult supervision required. Do not leave children unattended



Age 3-10 years



No sharp objects



No shoes, no glasses



No flipping



Do not slide head first



No Wrestling



No hands or feet



 
Do not use in windy conditions



Do not leave out in rain




Do not allow children to touch fan or electrical cord

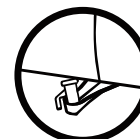

Must be anchored using stakes


INSTALLATION METHOD

 Step 1

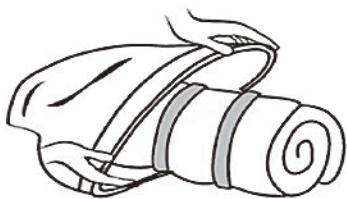


Unpack from the bag.

 Step 2

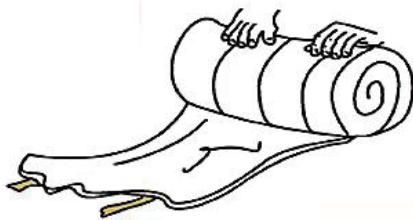


Unfold and lay out the inflatable bouncer on the ground face up.

 Step 3

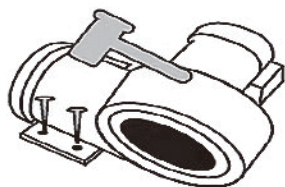

Fix ground stakes for air blower through blower base holes firmly on the lawn ground.

 Step 4

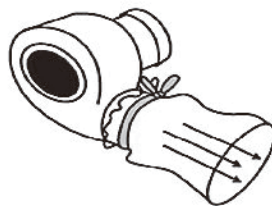


Tie the air intake sleeve to the blower, the air fill tube should be straight and untwisted and connect to the air socket.

Step 5



Hook stakes over loops in the bounce house, push stakes firmly into the soil. The stakes should be placed level with or under the ground.

 
Step 6

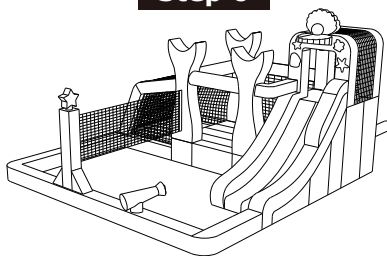


Wait for the inflatable to complete inflation before use. The blower should remain ON continuously inflate the inflatable bouncer during use.

WATER PARK SPRAY ASSEMBLY

 Attach the hose to the velcro
on the side of the water slide

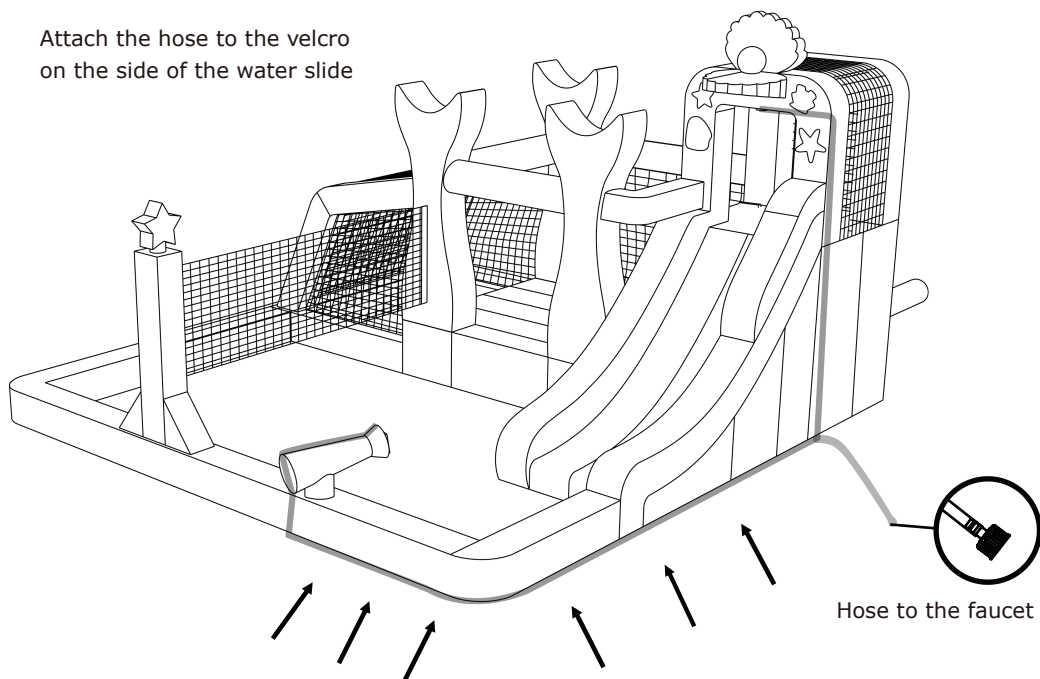

Place the sprinkler on top of the arch

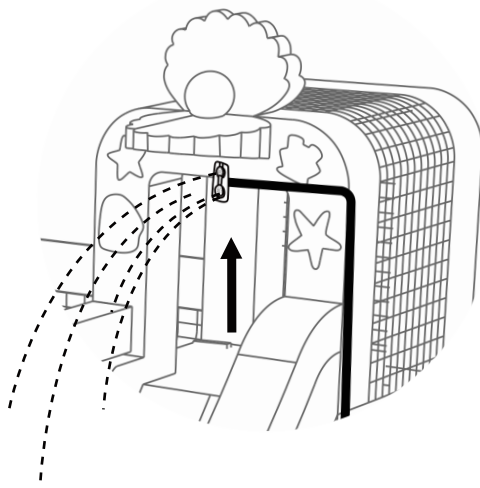 

Please note:

1. The sprinkler must be placed correctly and cannot be folded, otherwise the water will not flow.
2. There are two sprinklers, corresponding to the top of the slide arch.

FOLDING METHOD

Step 1



 
Turn the blower (air pump) "ON/OFF" switch to off.

Step 2




Unplug the blower (air pump) power cord.

Step 3

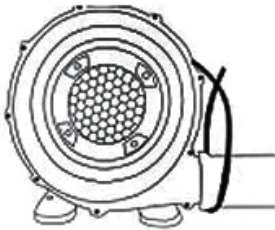

Loosen string and detach the air fill tube from the blower.

 Step 4

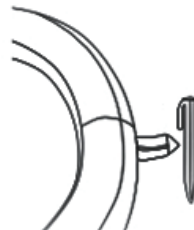

Remove ground support stakes.

Step 5



Let the bouncer deflate entirely. Fold all pieces of the inflatable bouncer towards the center.

Step 6



Roll up the inflatable bouncer tightly and compress the fabric to expel all the remaining air.

AFTER-SALES SERVICE POLICY

- For return reasons:

Wrong purchase, mistaken purchase, no longer needed, does not meet expectations, the size is larger or smaller than expected, and the customer is required to pay return shipping.

- Cancel order:

If the goods have already been shipped, the customer is required to pay the freight and carrier handling fee. Change of address: Customers are required to pay additional shipping and carrier handling charges if the item has been shipped.

- Customer Service:

If you have any question, please contact us in time, we will reply to you within 24 hours.

If you have any advice for us, please also contact us. Have a good experience.

Here's the way to contact us:

1. Log in Your Amazon Account
2. Choose "Orders" in the top right-hand corner
3. Find the Orders You Purchased & Click "the seller's brand"
4. Click "Ask a question" & "An order I placed"
5. Choose "Select a subject" & "Other Shipping Question"
6. Click "Write message" & "Send e-mail"

