




# **INSTALLATION**

## *Product Manual*

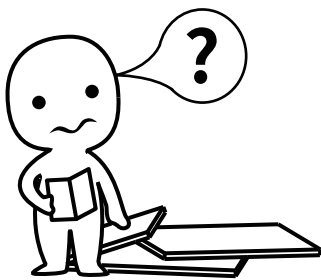


### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

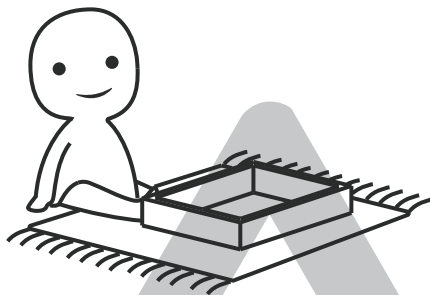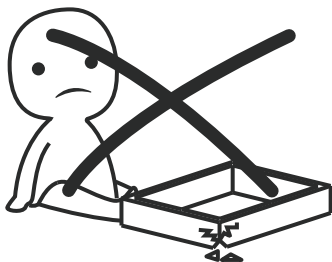



### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

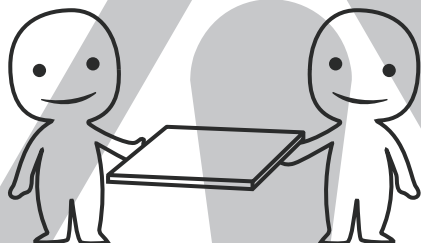

### **IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

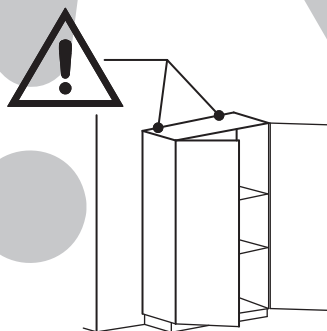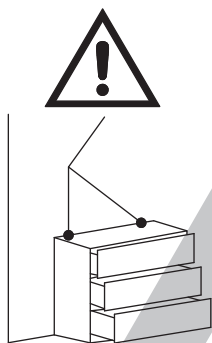

### **ANTI-TOPPLE WARNING !**


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

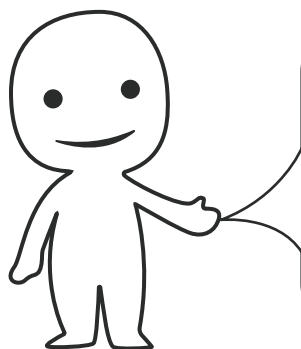


Please prepare the following tools

 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 67+1




Ø 6 x 32 mm

 B x 18+1




Ø 15 x 12 mm

 C x 49+1




Ø 12 x 9 mm

 D x 32+3




Ø 6 x 30 mm

 
E x 2

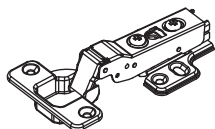


F x 4

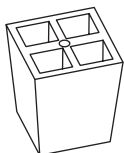 

G x 4+1

 


H x 2

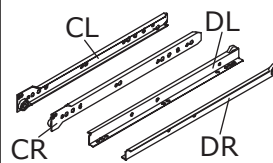 


350 mm

 J x 12+2




K x 36+2

 


Ø 3.5 x 14 mm

 L x 4+2

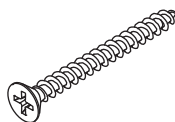

Ø 3.5 x 35 mm

 M x 2+1




Ø 4 x 18 mm

N x 4+2





Ø 3.5 x 10 mm

 P x 1

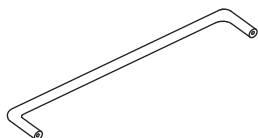

Q x 1

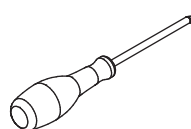 

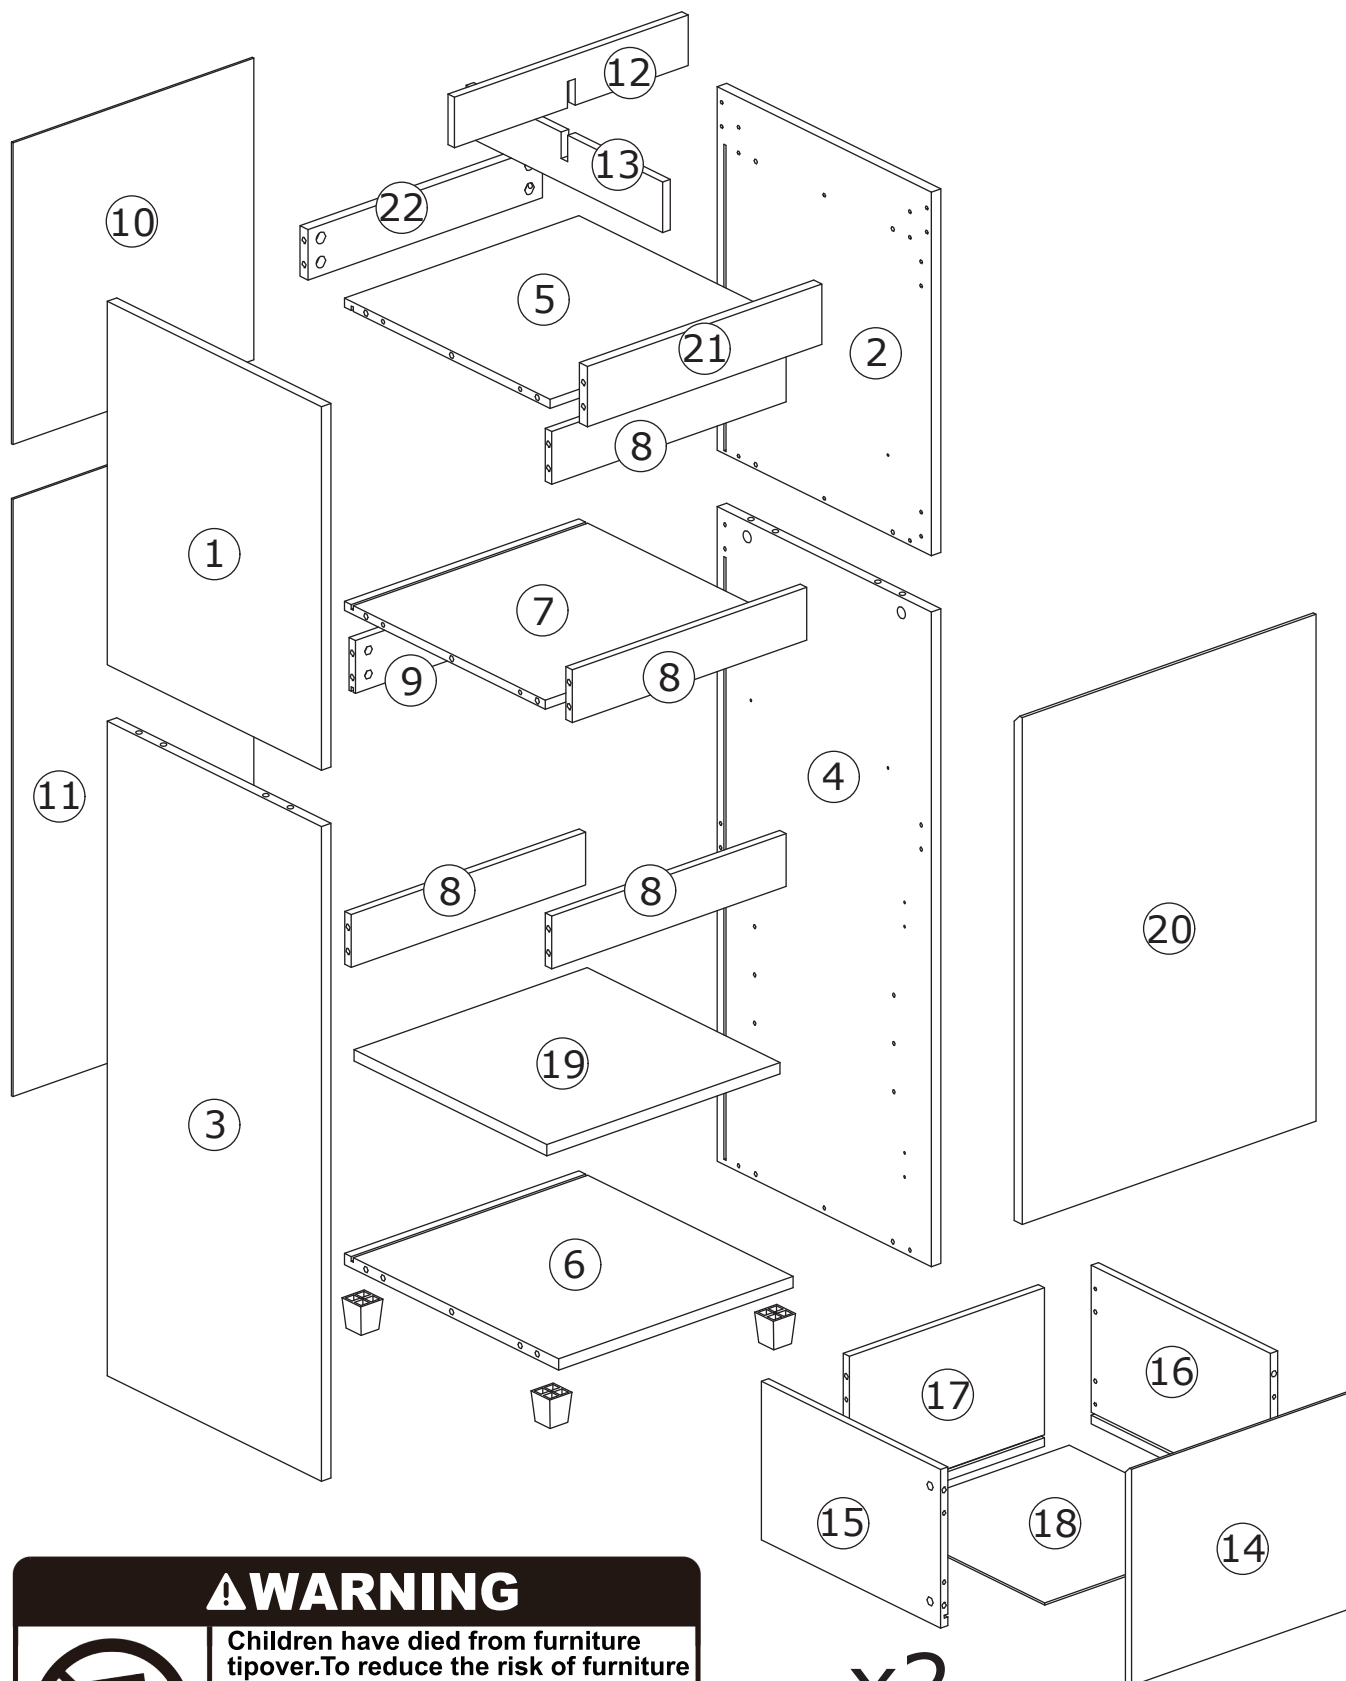 

x2


## ⚠ WARNING



 **Children have died from furniture tipover. To reduce the risk of furniture tipover:**

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


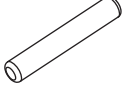
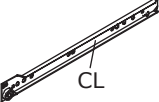

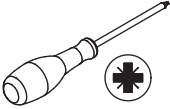
*This is a permanent label.  
Do not remove!*

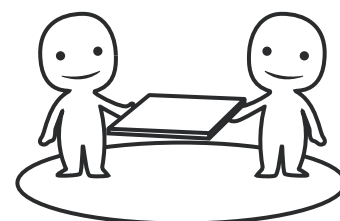



ASSEMBLED BY 2 ADULTS



  
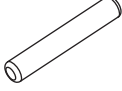
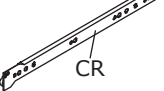
 
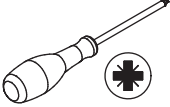
# 1

<p>A x 14</p>  <p>Ø6 x 32 mm</p>	<p>D x 4</p>  <p>Ø6 x 30 mm</p>	<p>H x 1</p>  <p>CL 350 mm</p>	<p>K x 2</p>  <p>Ø3.5 x 14 mm</p>	
---	--	---	---	---

 
 
 
Screw eccentric rod(A) and insert wooden dowel(D) into panel 1 at first. Fix rail(H-CL) to panel 1 with screw(K) as shown.

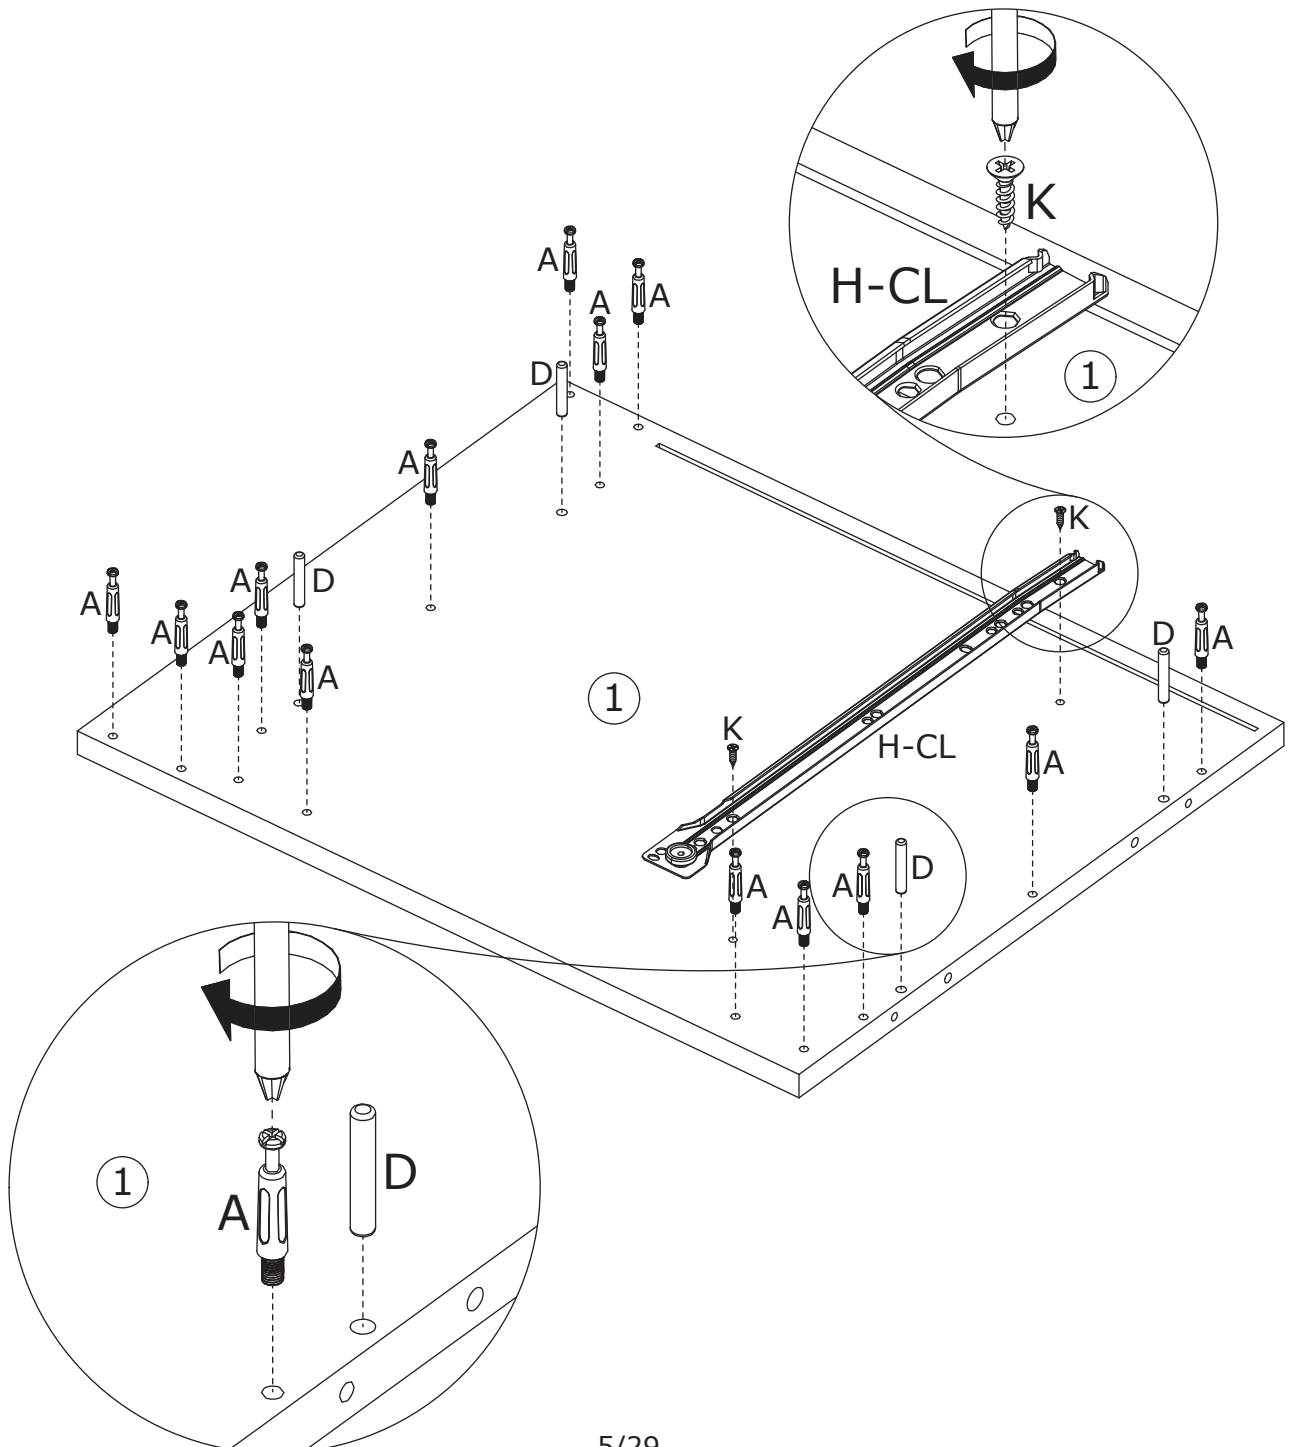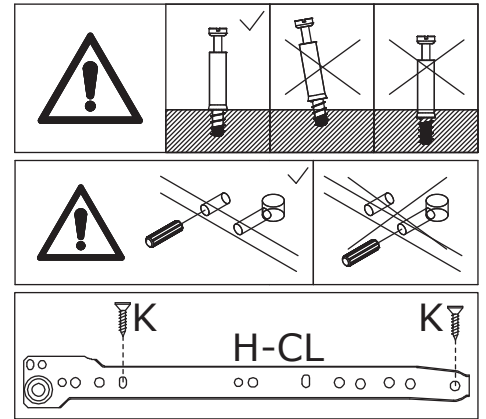





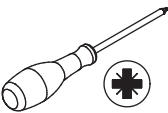
2

<p>A x 14</p>  <p>Ø6 x 32 mm</p>	<p>D x 4</p>  <p>Ø6 x 30 mm</p>	<p>H x 1</p>  <p>CR 350 mm</p>	<p>K x 2</p>  <p>Ø3.5 x 14 mm</p>	
---	--	---	---	---

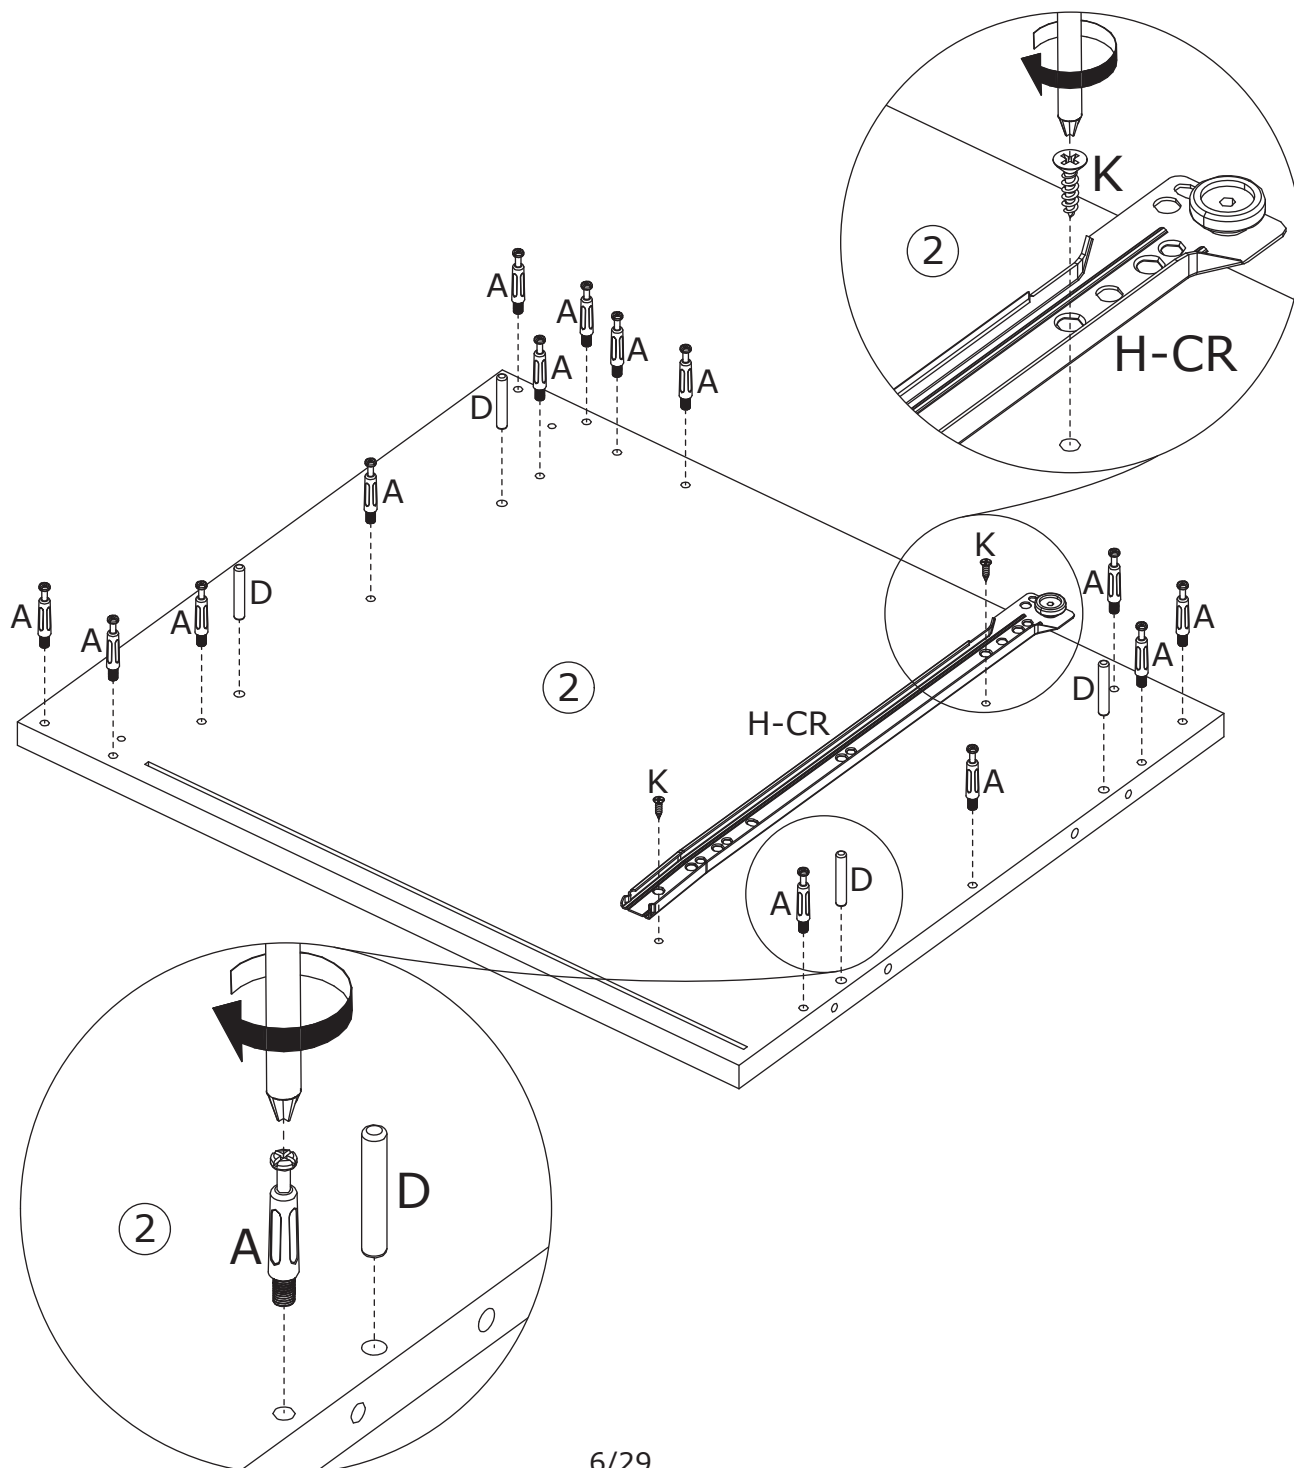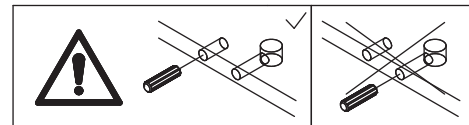
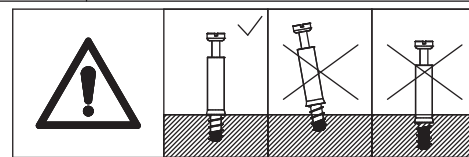
Screw eccentric rod(A) and insert wooden dowel(D) into panel 2 at first. Fix rail(H-CR) to panel 2 with screw(K) as shown.



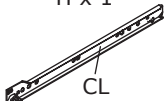




3



<p>A x 9</p>  <p>Ø 6 x 32 mm</p>	<p>D x 2</p>  <p>Ø 6 x 30 mm</p>	<p>H x 1</p>  <p>CL 350 mm</p>	<p>K x 2</p>  <p>Ø 3.5 x 14 mm</p>	
---	---	---	--	---

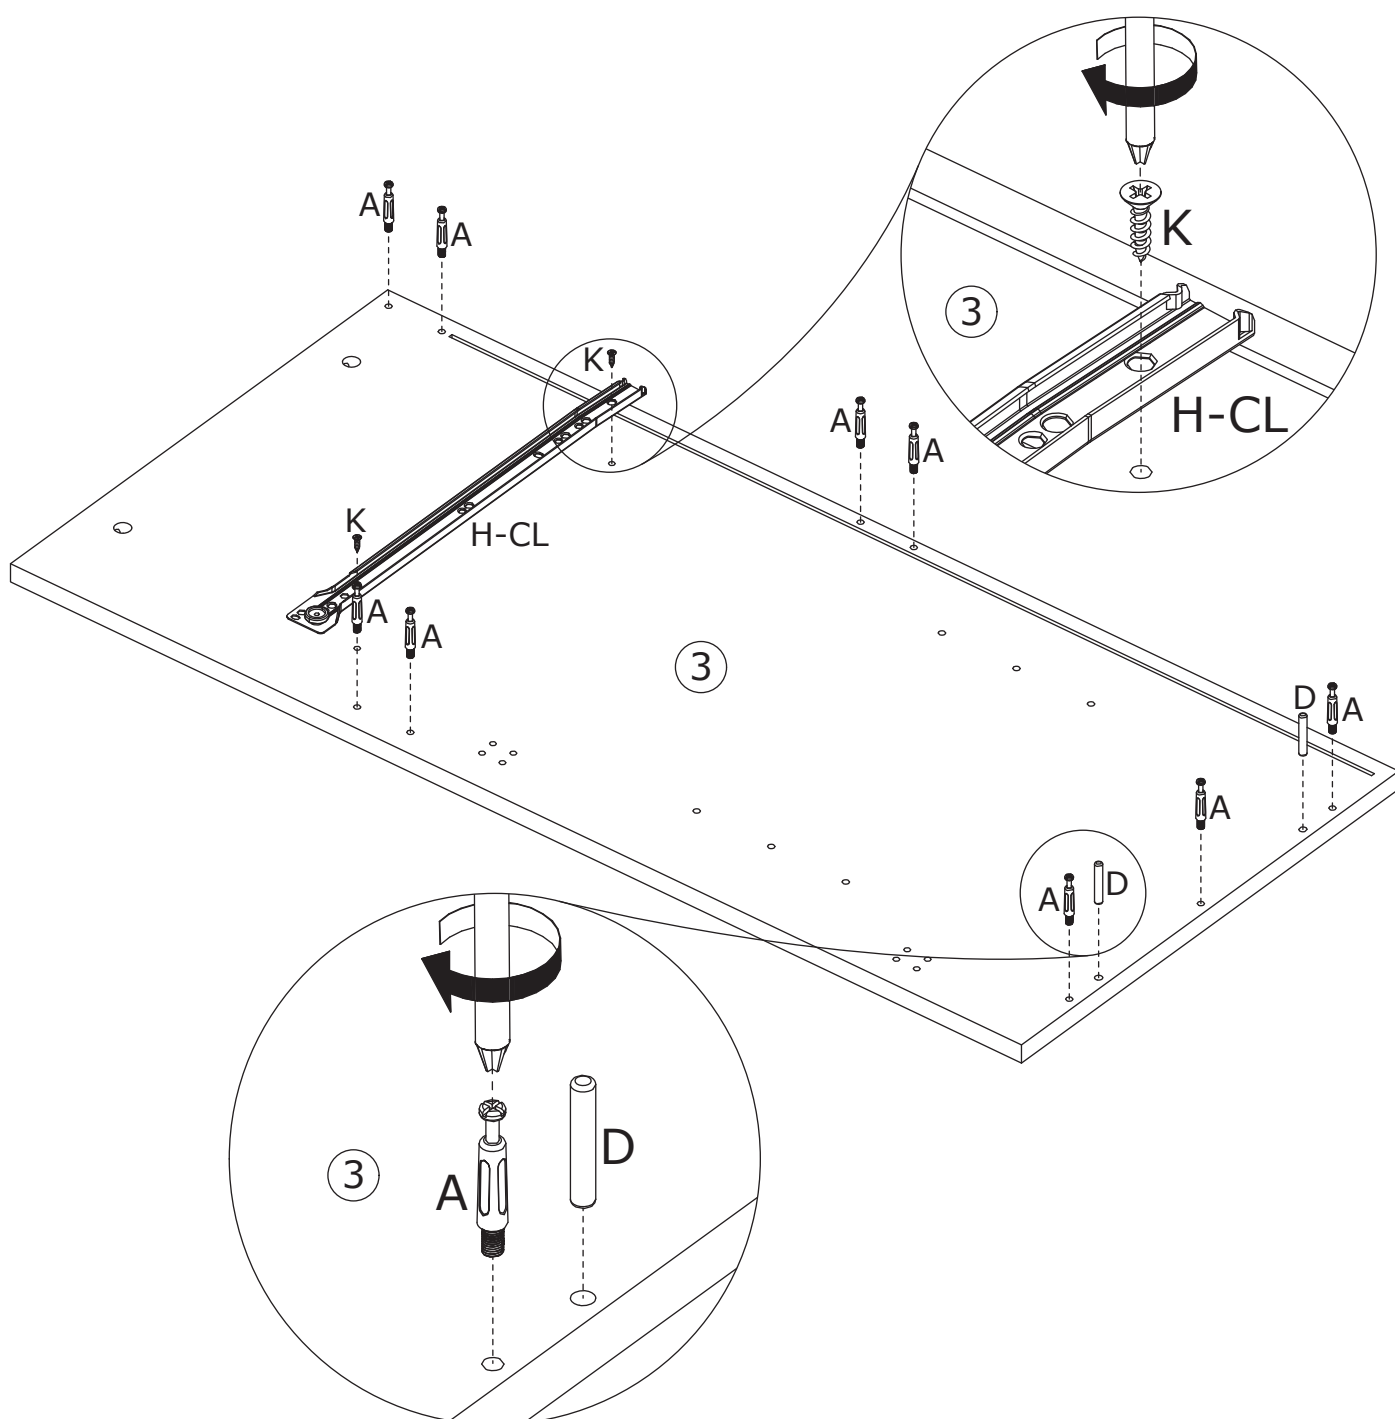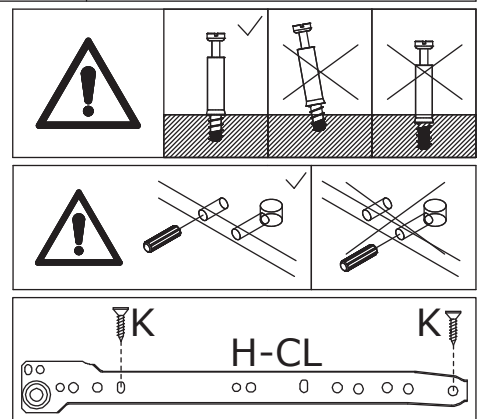  Screw eccentric rod(A) and insert wooden dowel(D) into panel 3 at first. Fix rail(H-CL) to panel 3 with screw(K) as shown.




 4

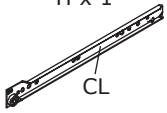
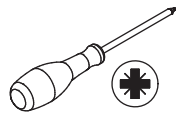
<p>A x 9</p>  <p>Ø 6 x 32 mm</p>	<p>D x 2</p>  <p>Ø 6 x 30 mm</p>	<p>H x 1</p>  <p>CL 350 mm</p>	<p>K x 2</p>  <p>Ø 3.5 x 14 mm</p>	
---	---	---	--	---

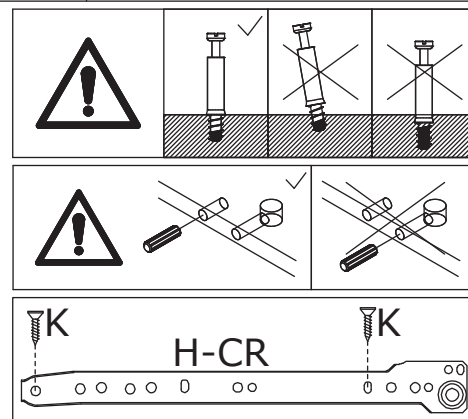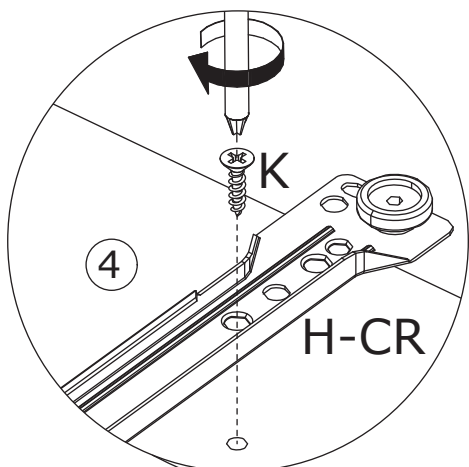  



 
Screw eccentric rod(A) and insert wooden dowel(D) into panel 4 at first. Fix rail(H-CR) to panel 4 with screw(K) as shown.

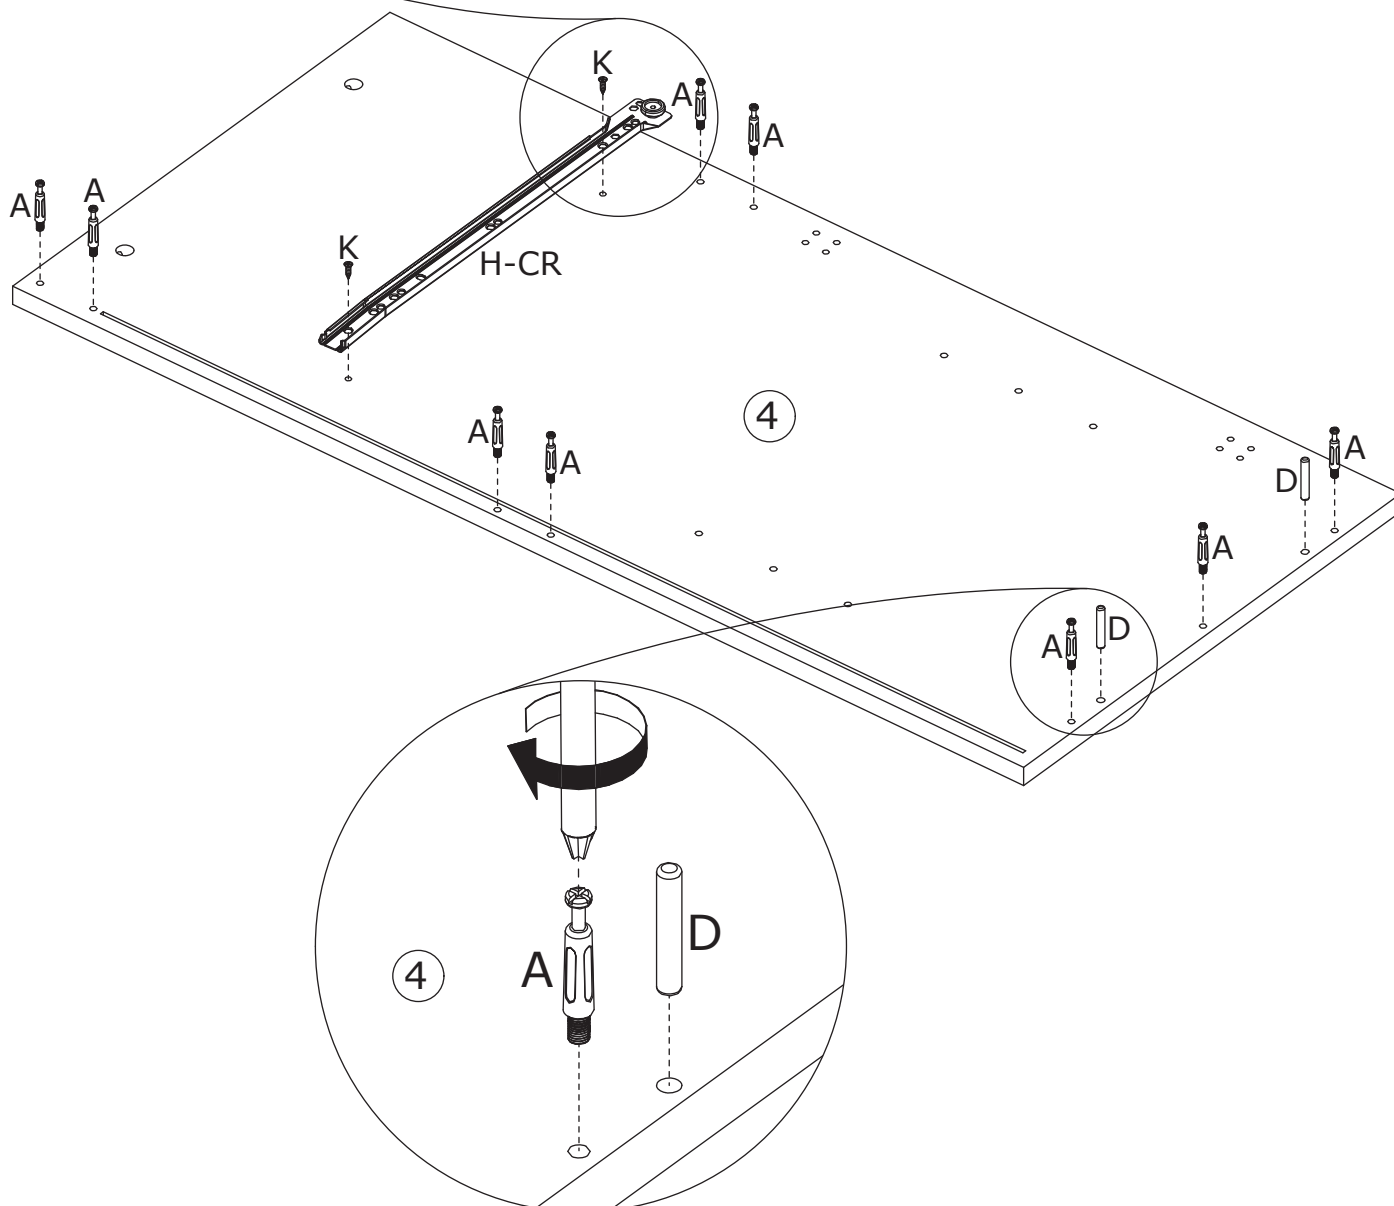



5

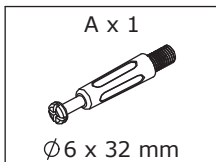  

 
 
 
Screw eccentric rod(A) into panel 21 at first.

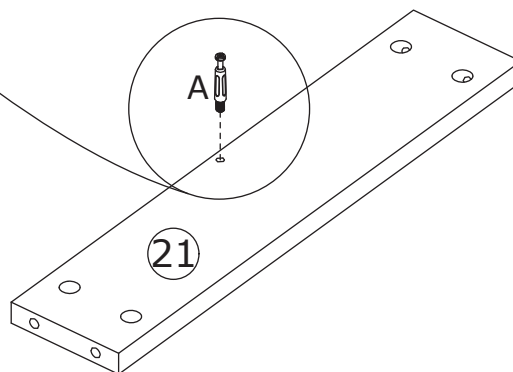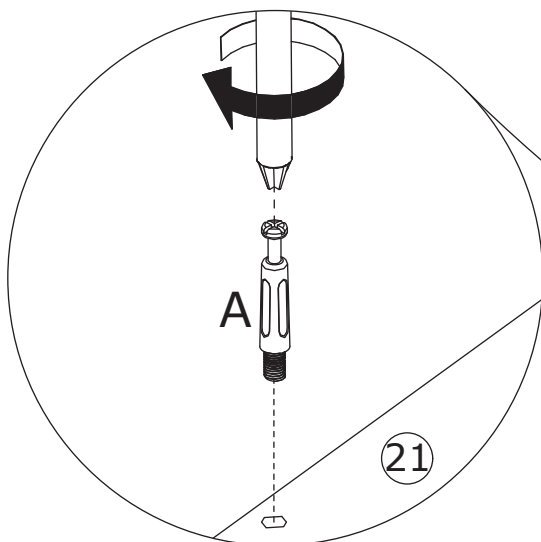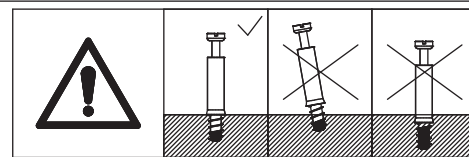




6

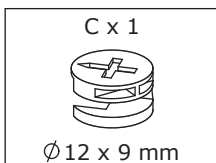  

   
Attach panel 21 to panel 5, add cam lock(C) into panel 5 and turn clockwise to tighten as shown.

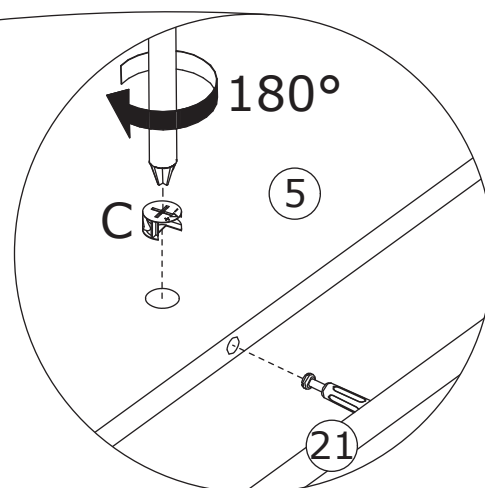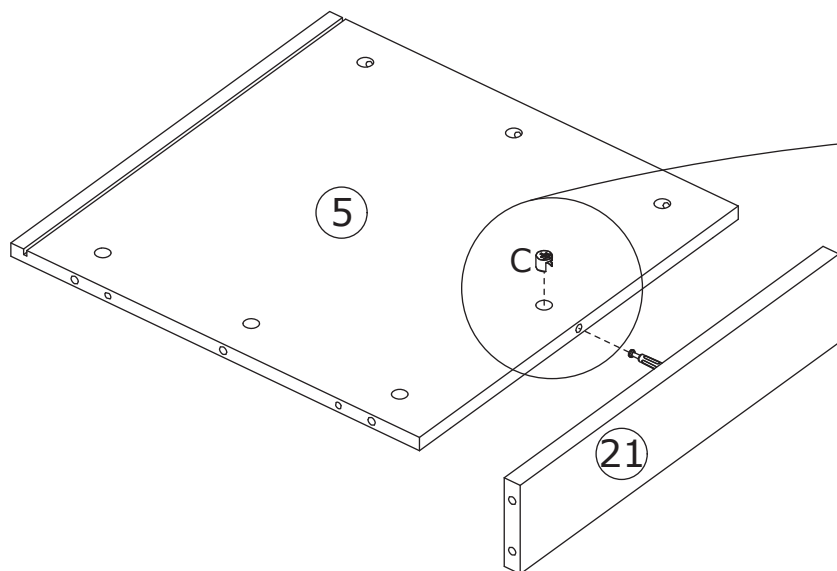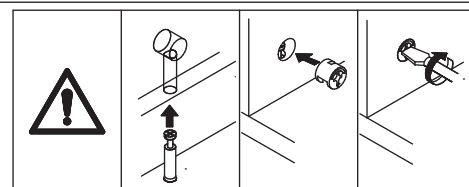

7

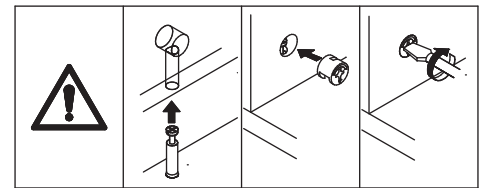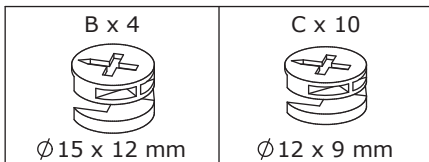   


 Attach panel 21, 22, 5, 7 and 8 to panel 1, add cam lock(C) into panel 5, 7, 8 and cam lock(B) into panel 21, 22, turn clockwise to tighten as shown.




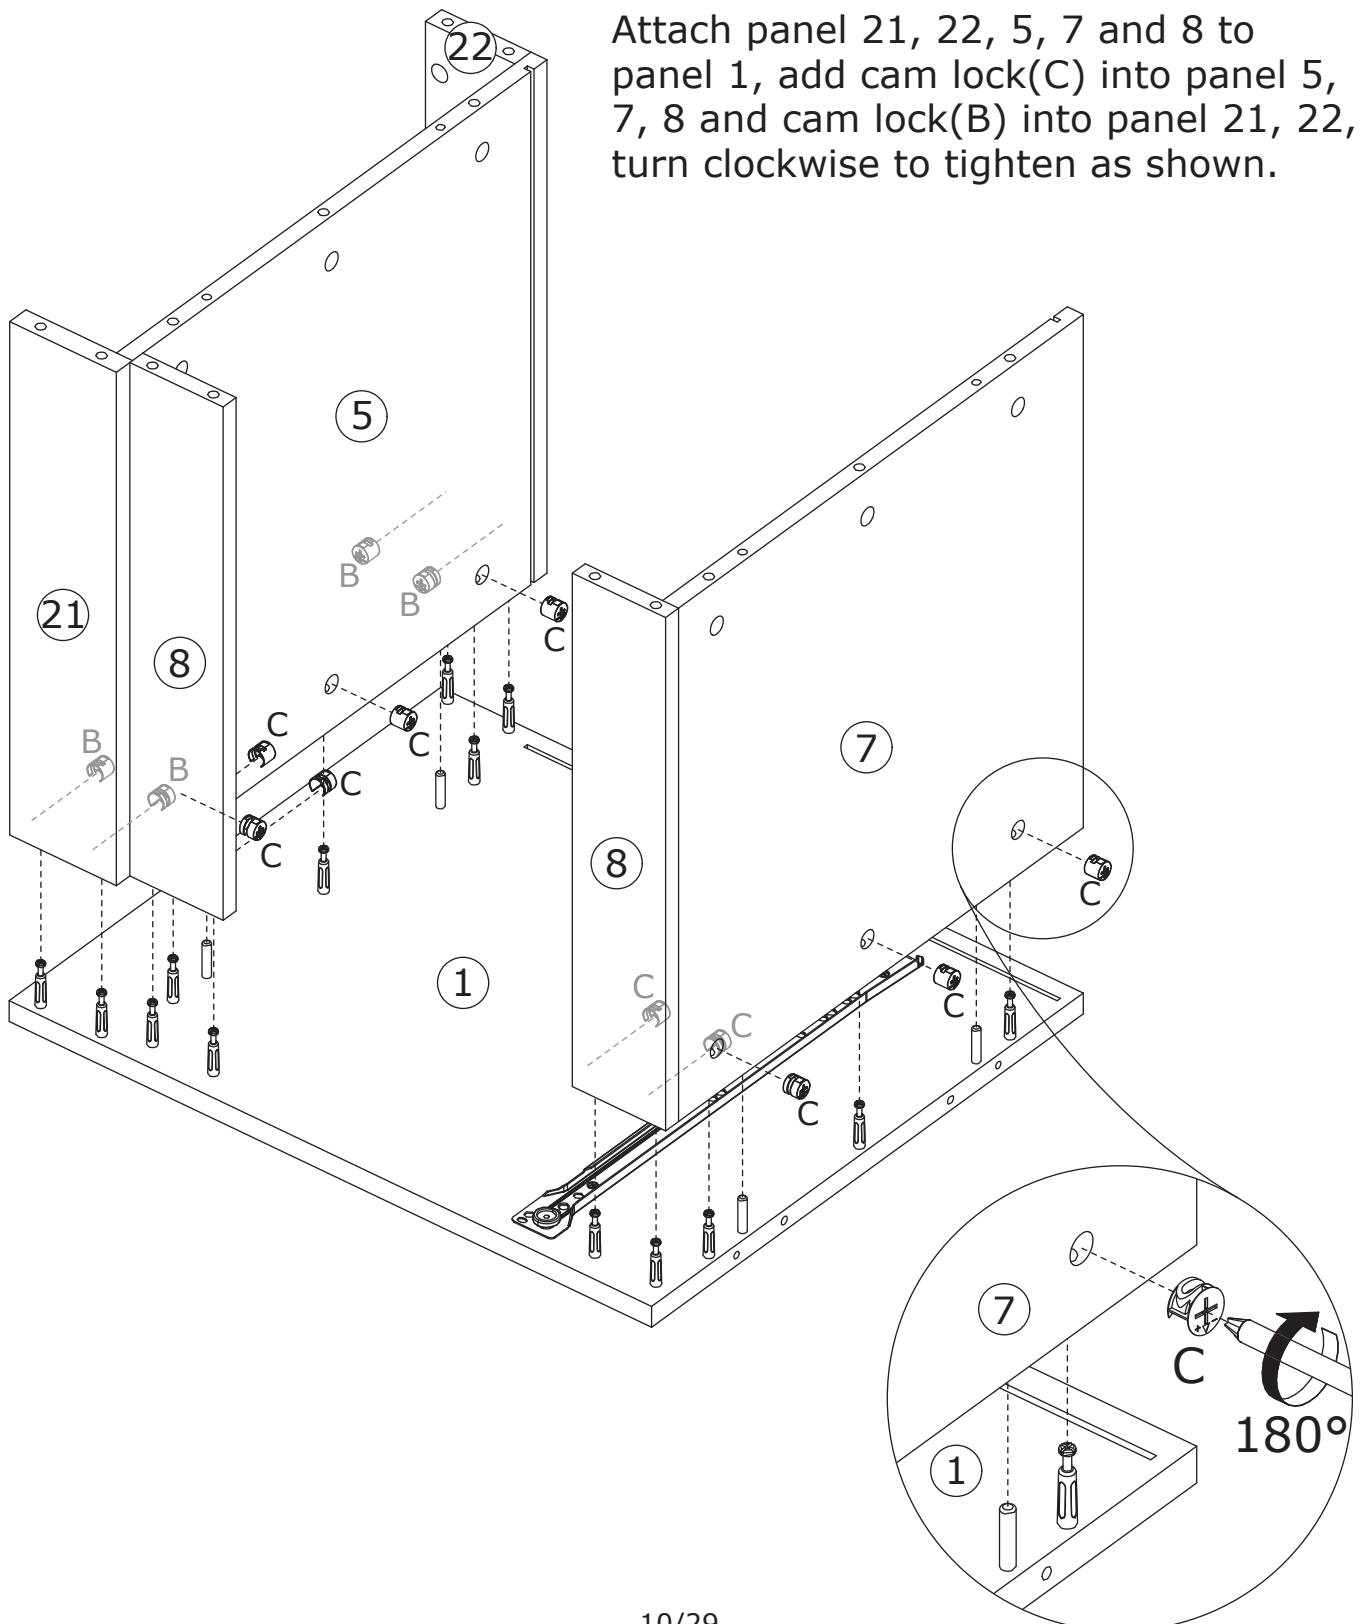


8


 
Insert back panel 10 along available grooves as shown.

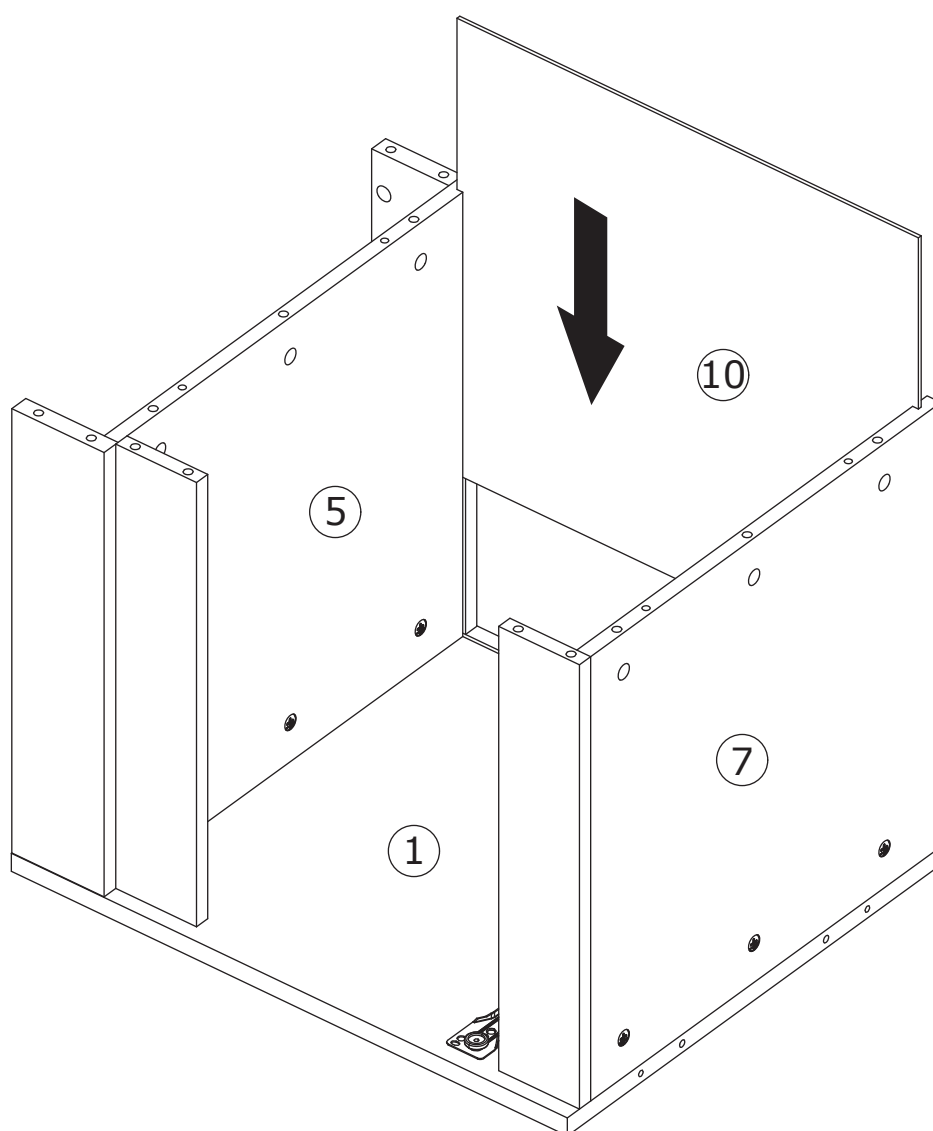

9

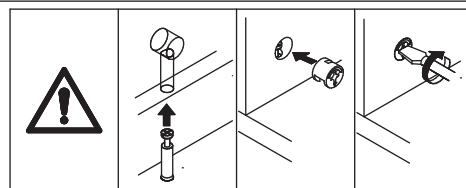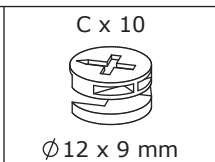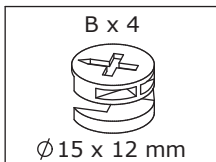    

  Attach panel 2 to panel 21, 22, 5, 7 and 8, add cam lock(C) into panel 5,7,8 and cam lock(B) into panel 21,22, then turn clockwise to tighten as shown.

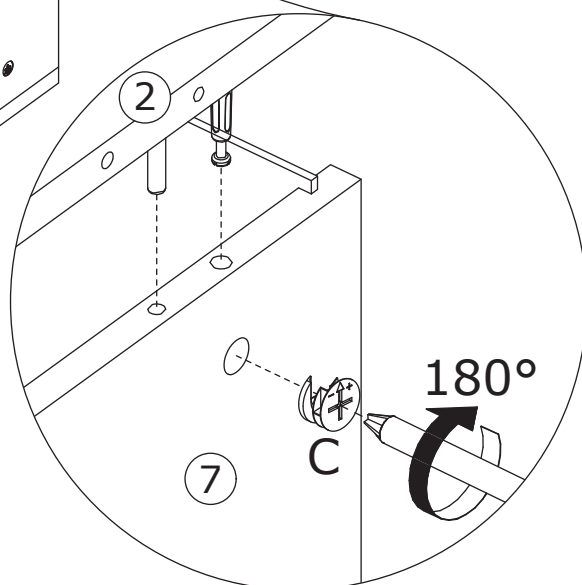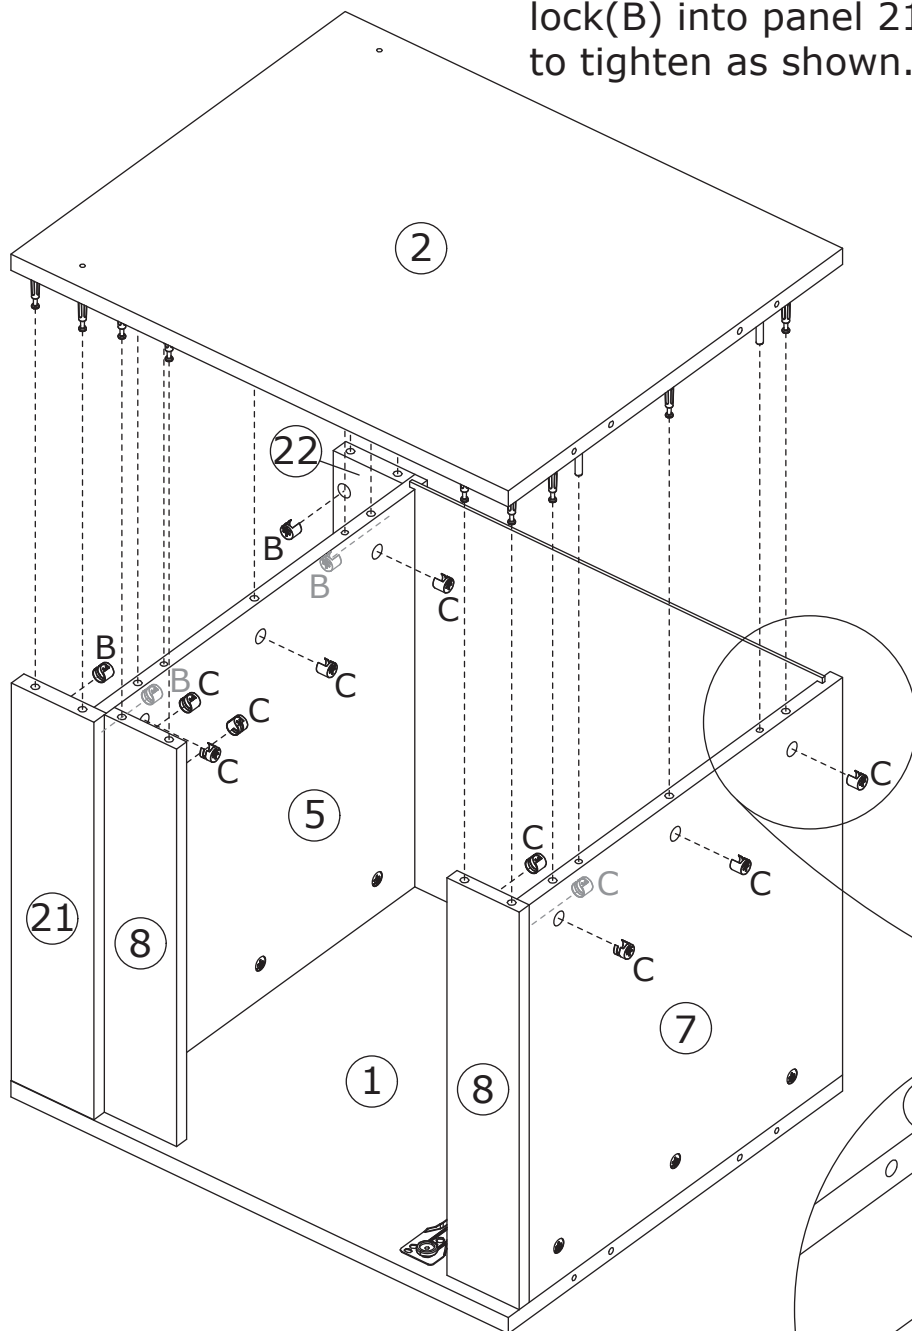



# 10

B x 3

 
 
 
 


Ø 15 x 12 mm


C x 6



Ø 12 x 9 mm




 Attach panel 6, 9 and 8 to panel 3, add cam lock(B) into panel 6 and cam lock(C) into panel 8,9, then turn clockwise to tighten as shown.

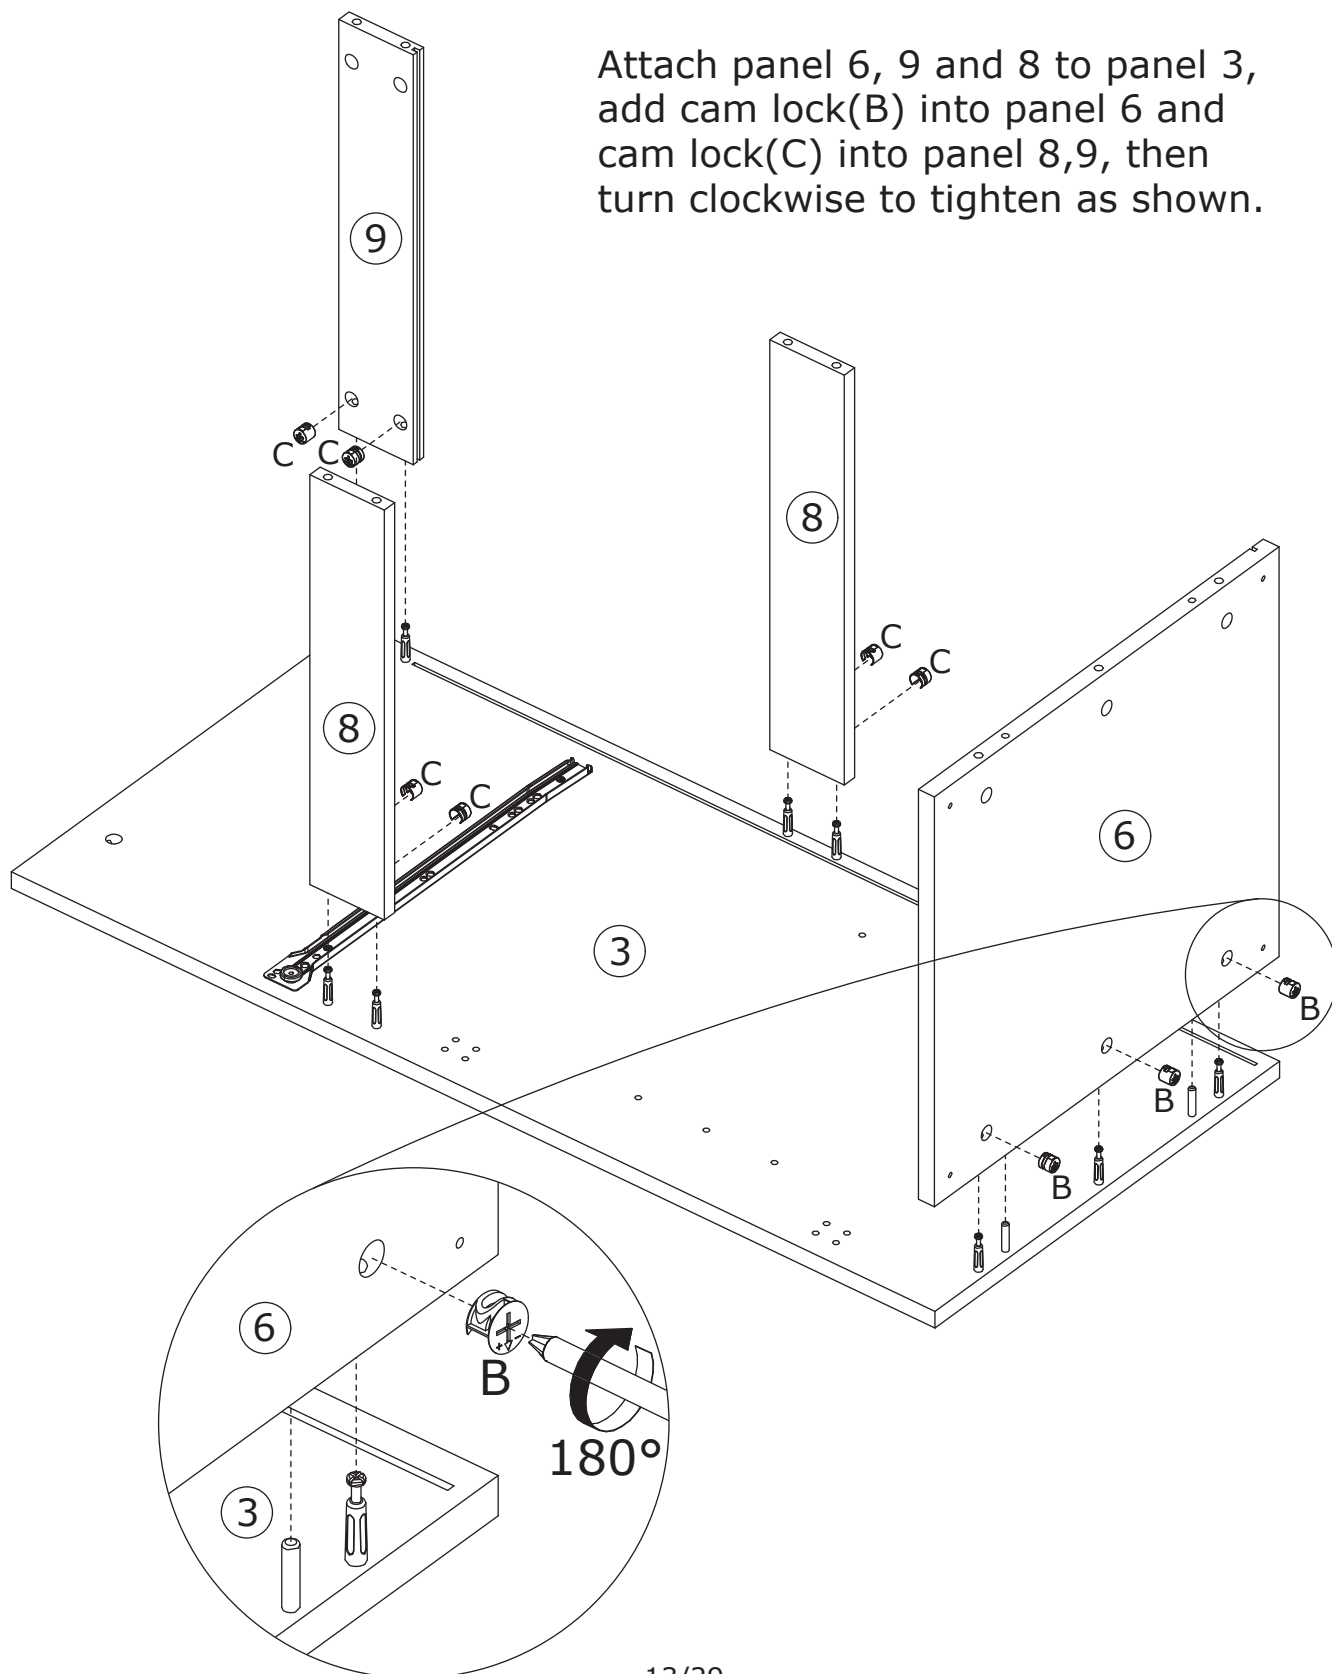

11


 
Insert back panel 11 along available grooves as shown.

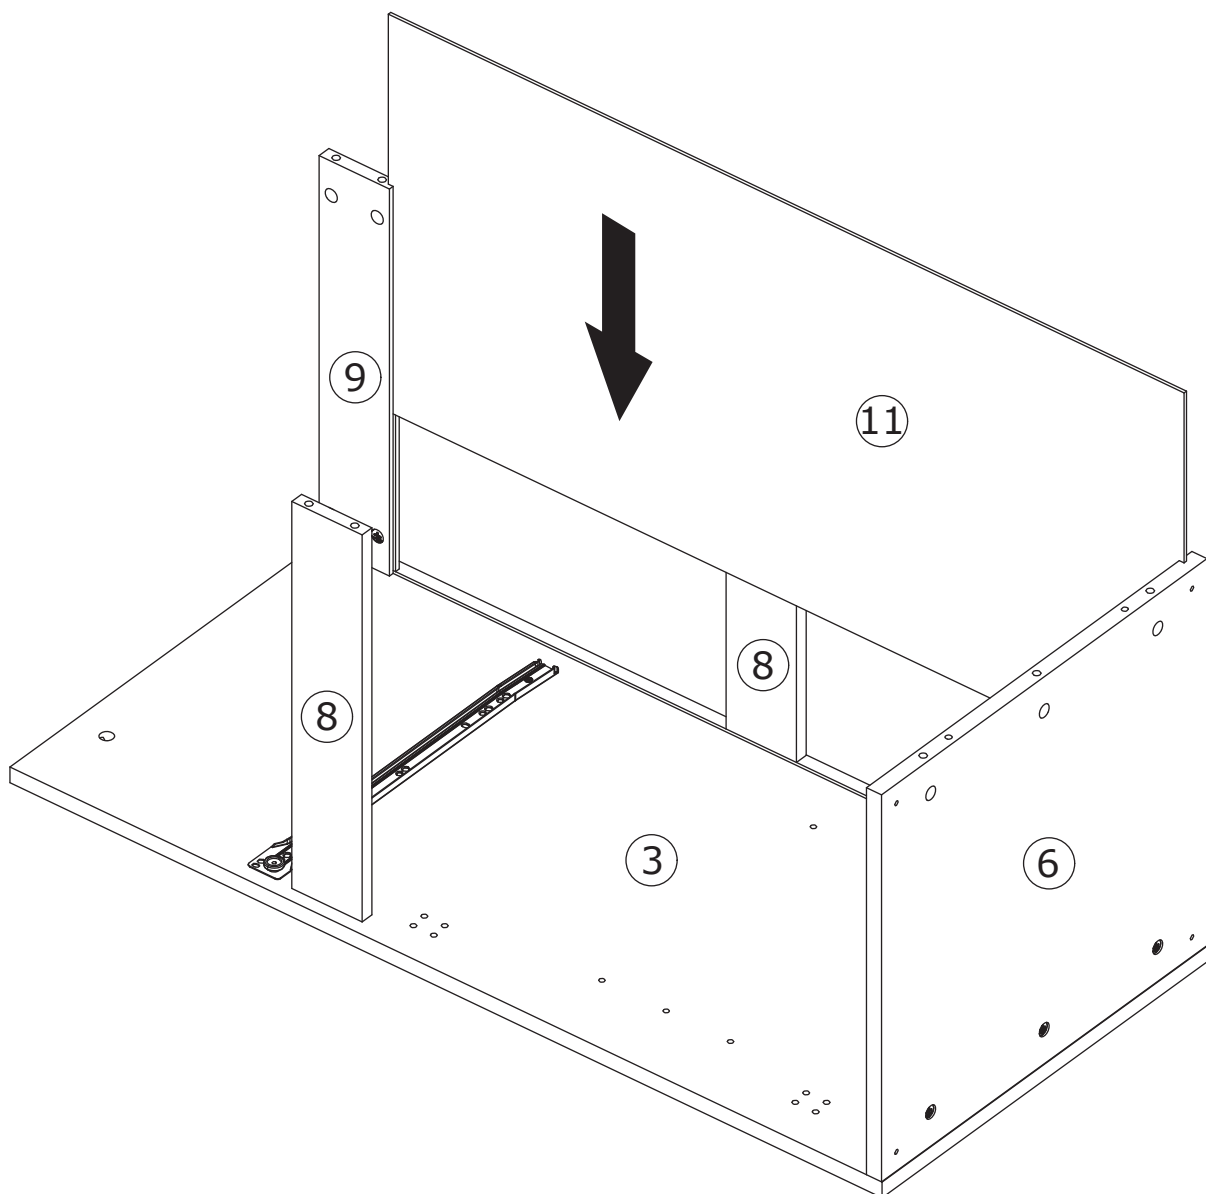



# 12



 
 
Attach panel 4 to panel 6, 9 and 8, add cam lock(C) into panel 8,9 and cam lock(B) into panel 6, then turn clockwise to tighten as shown.

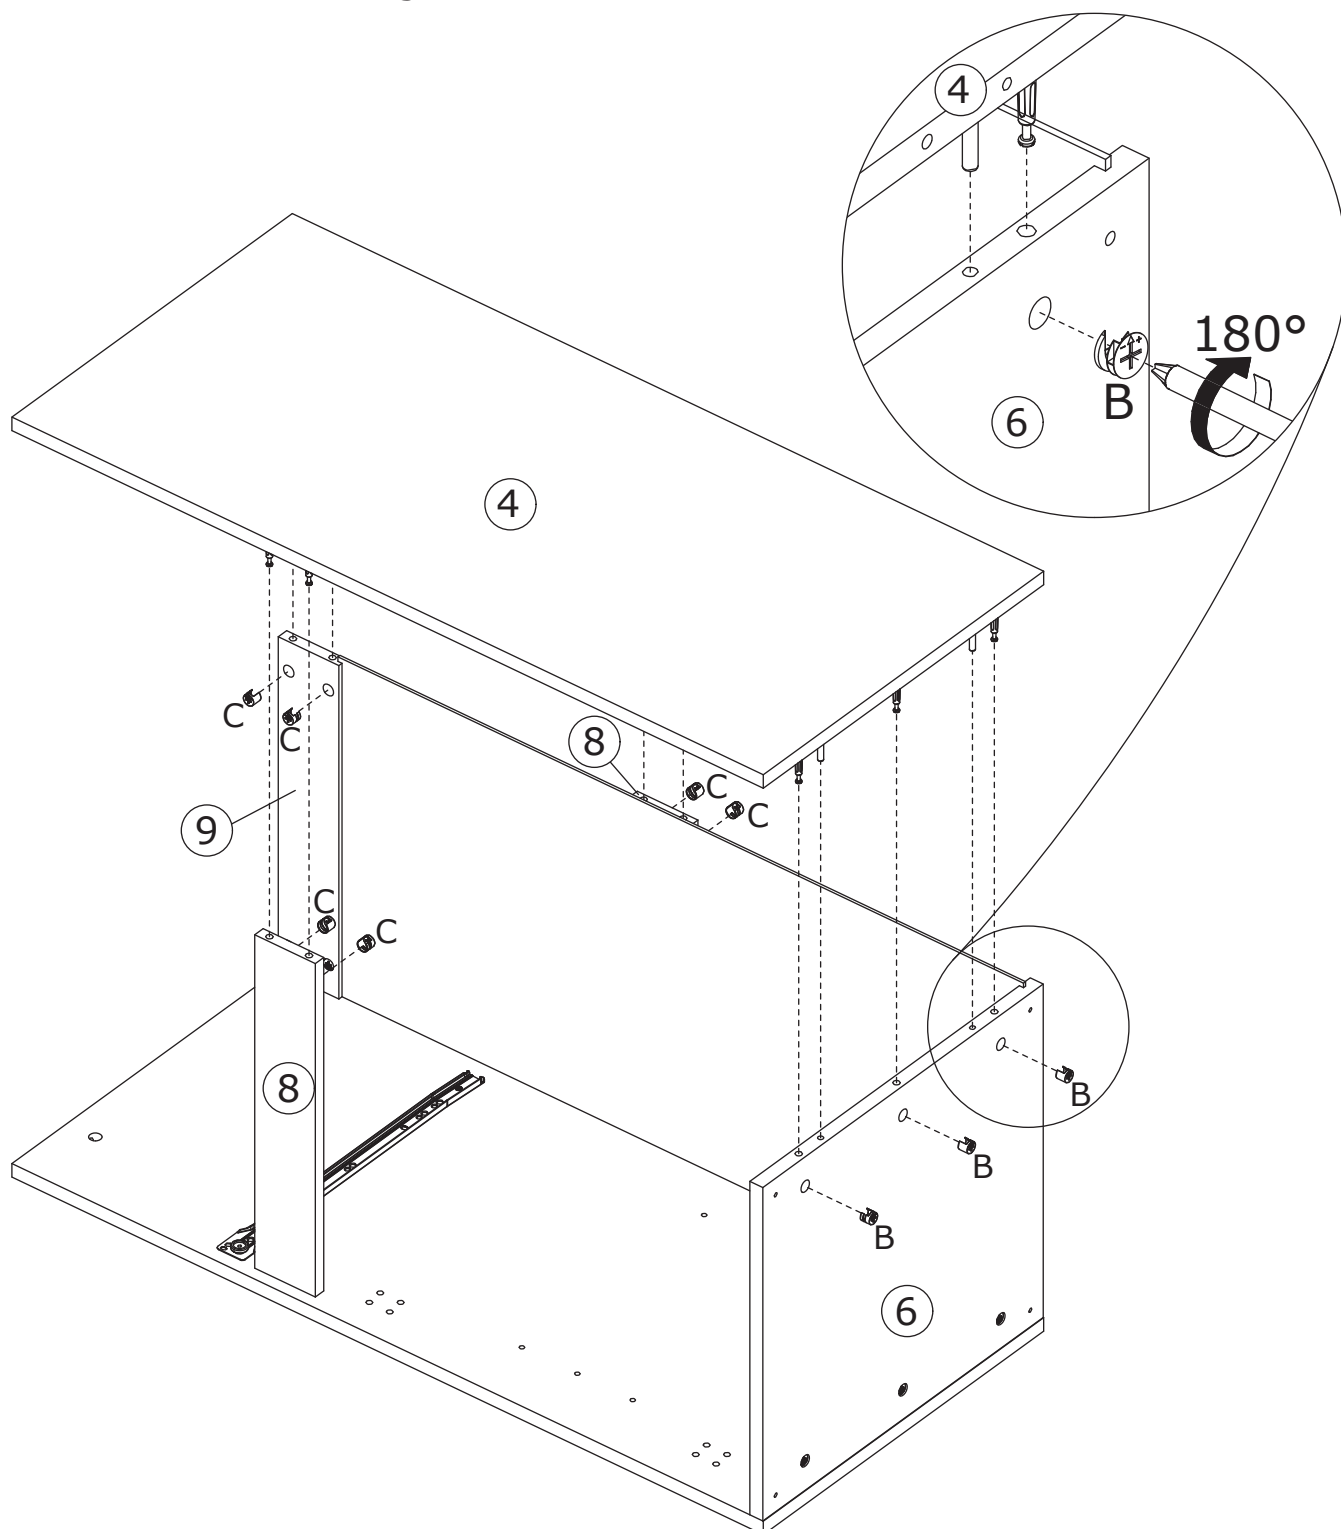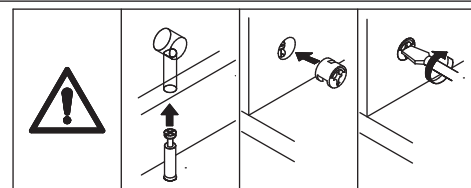




# 13

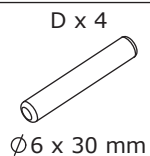  

  
Screw eccentric rod(A) and insert wooden dowel(D) into panel 1 and 2 at first.

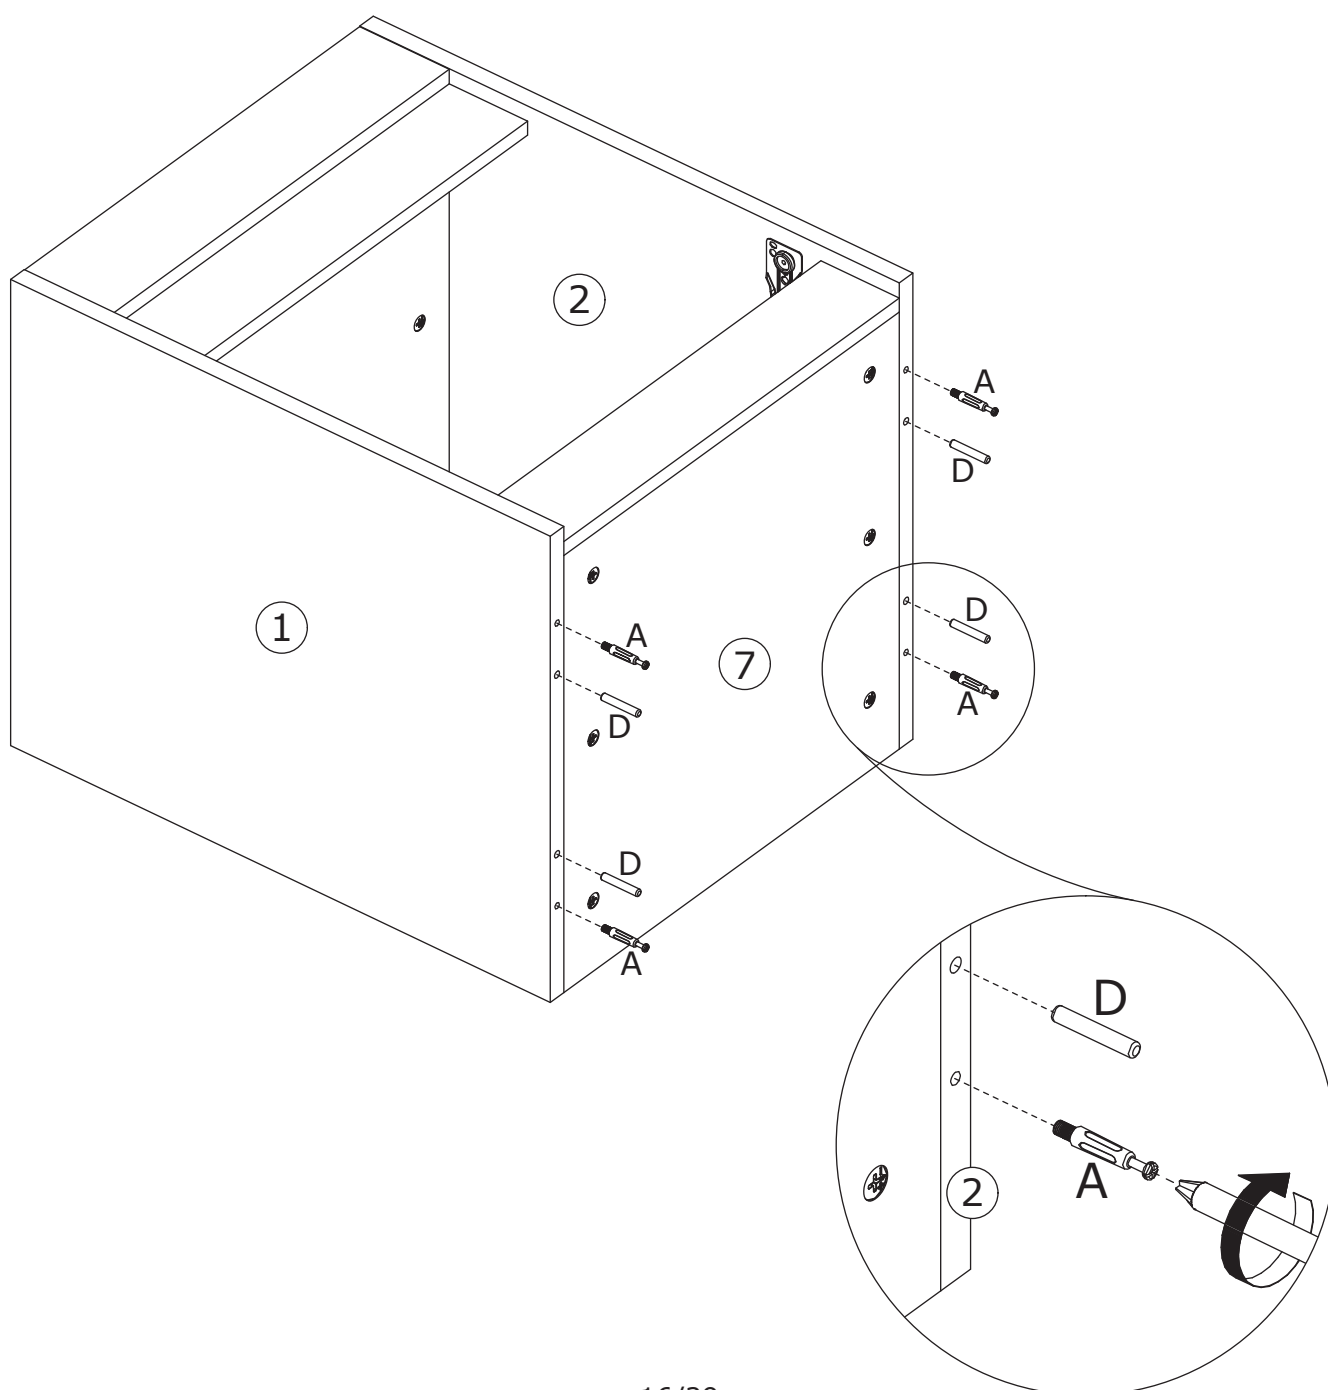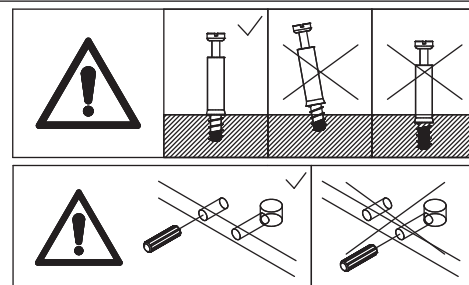



# 14

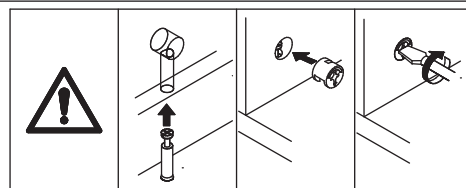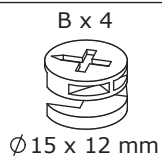   

 
Attach panel 1 and 2 to panel 3 and 4,  
add cam lock(B) into panel 3,4, then turn  
clockwise to tighten as shown.

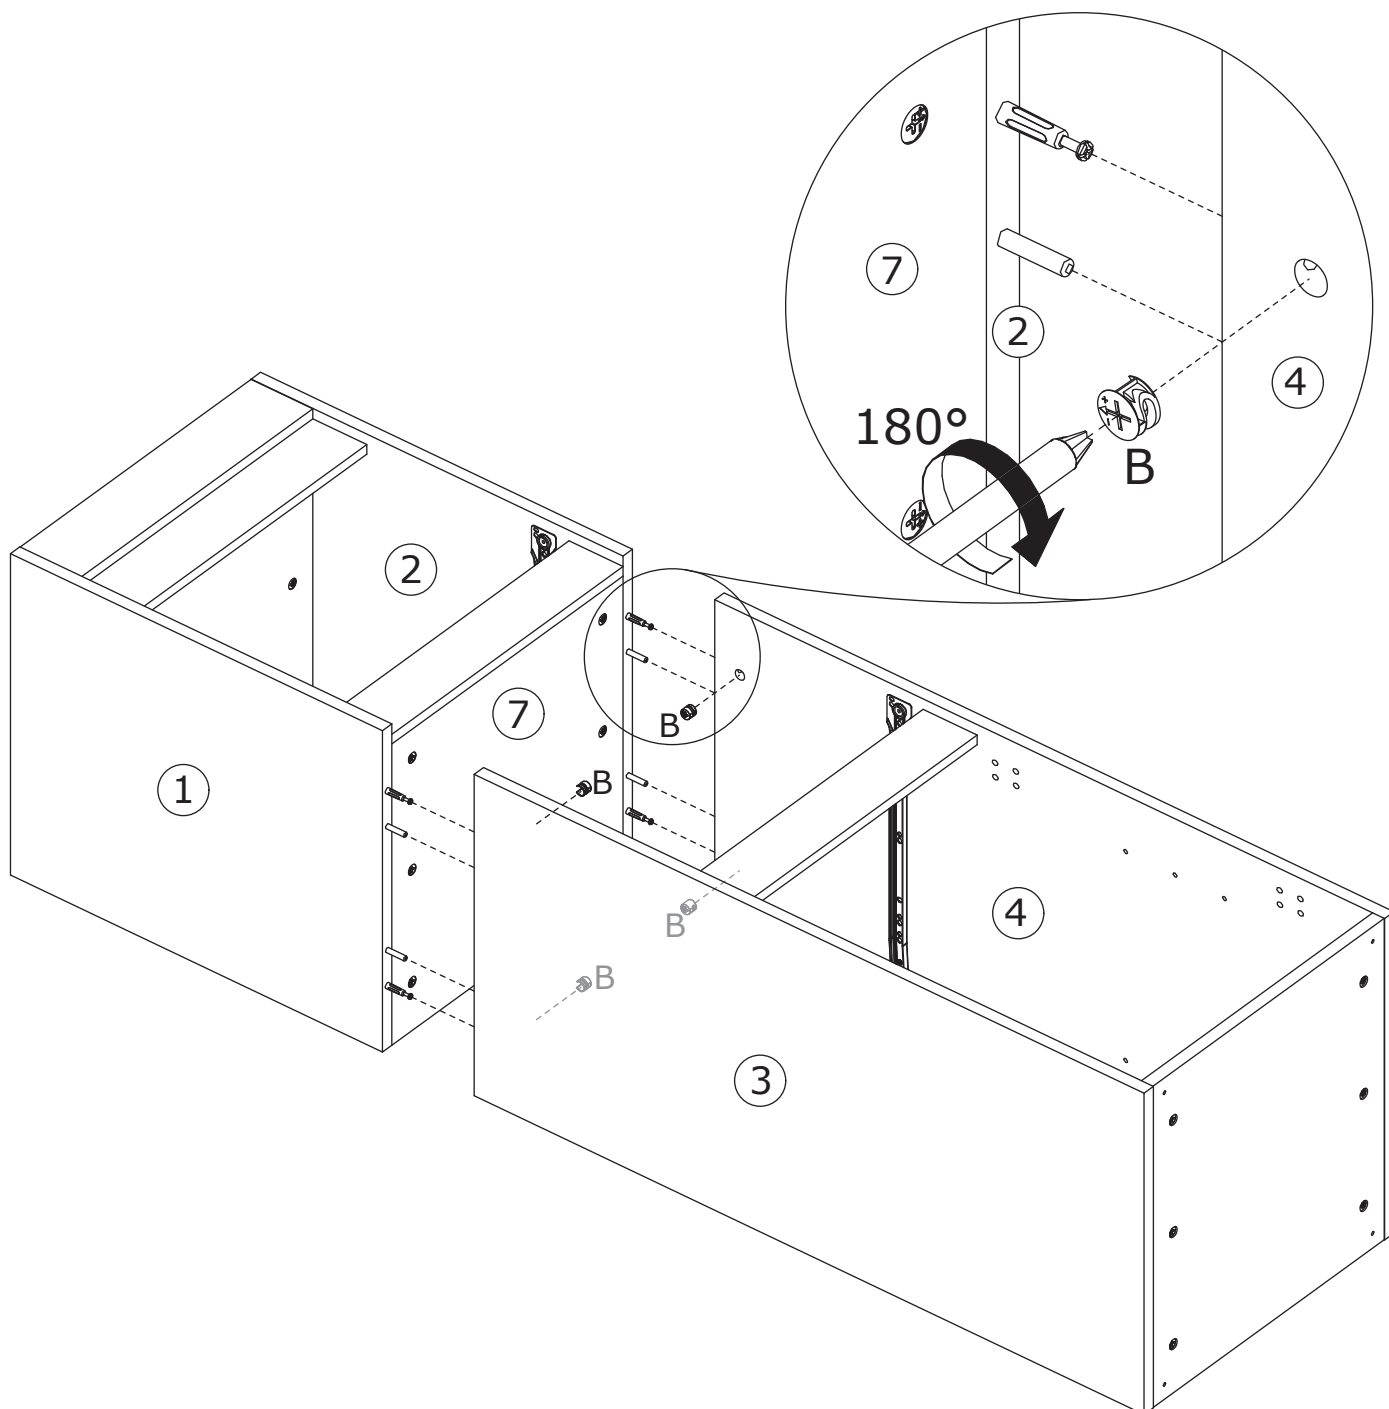





# 15

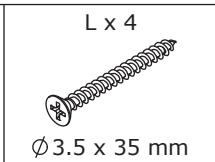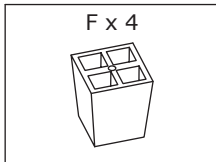  

 
Fix leg part(F) to panel 6 with screw(L) as shown.

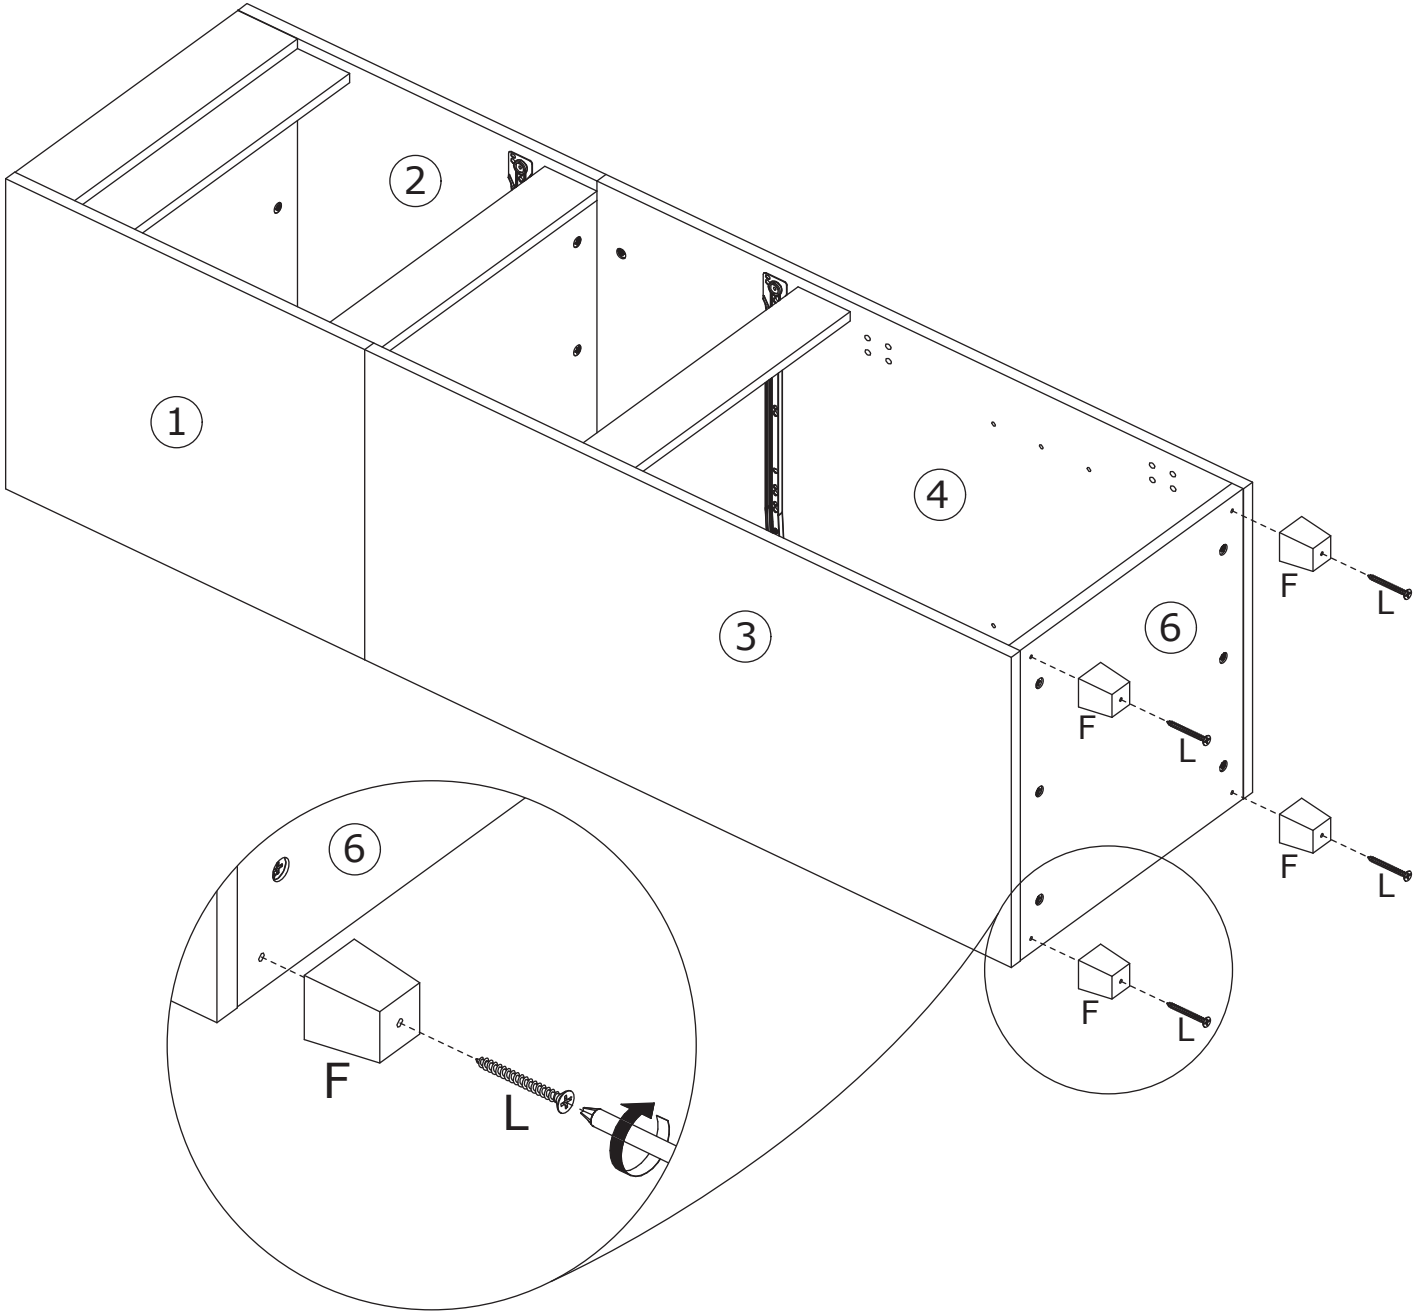





# 16

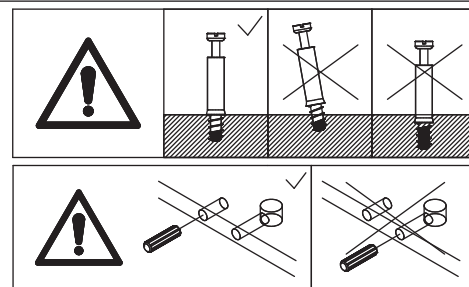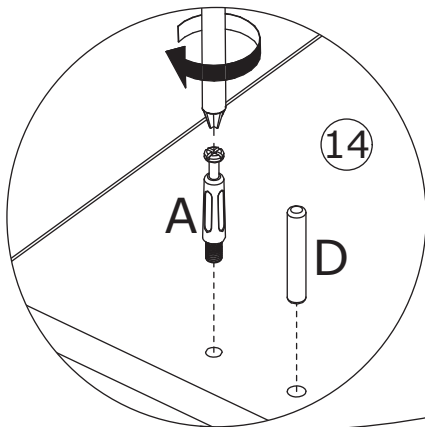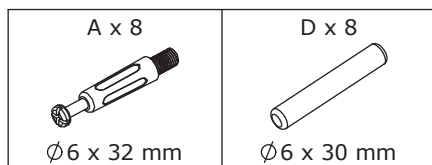    

 
Screw eccentric rod(A) and insert wooden dowel(D) into panel 14 at first.

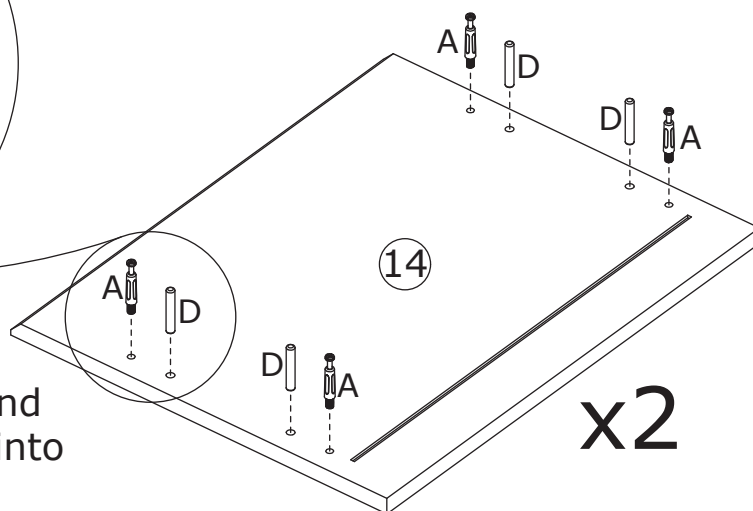

# 17

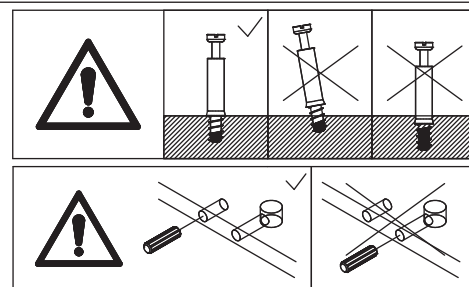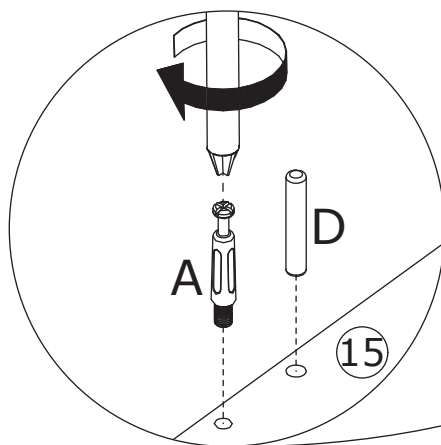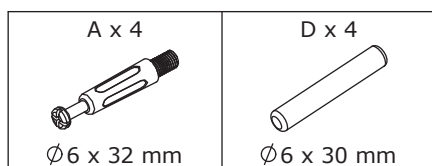    

 Screw eccentric rod(A) and insert wooden dowel(D) into panel 15 at first.






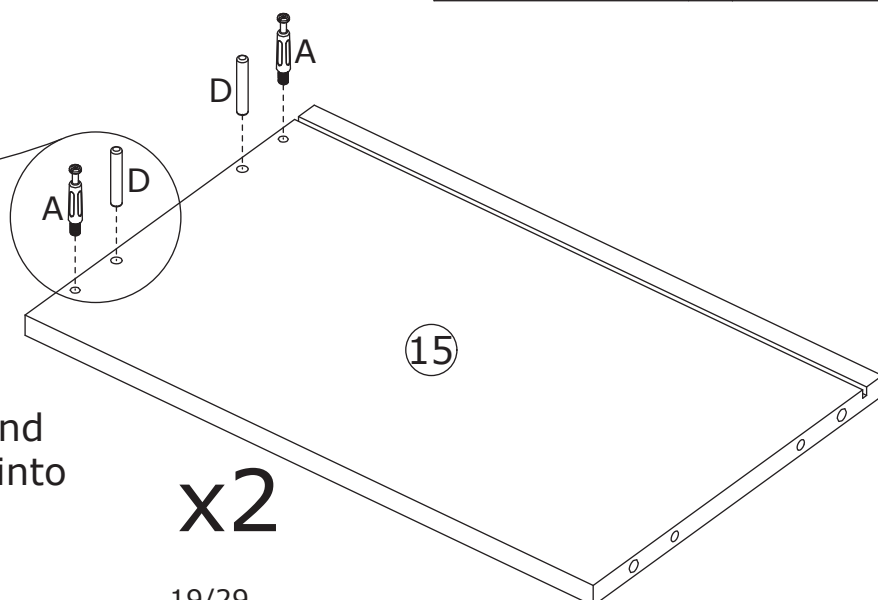


# 18

A x 4



      D x 4

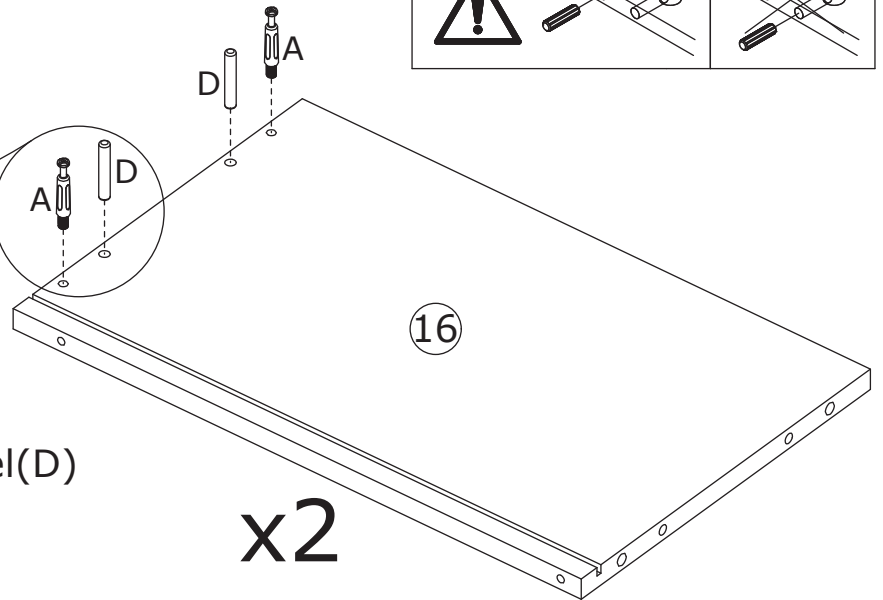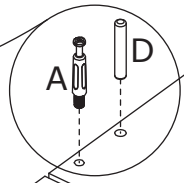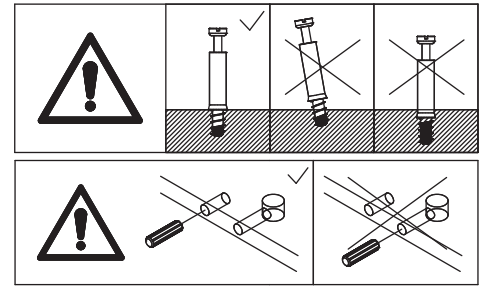
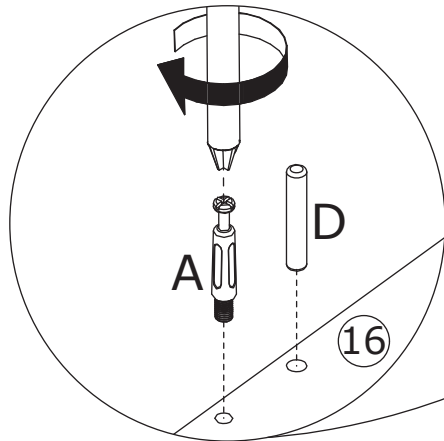

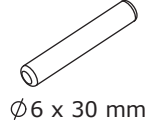


Screw eccentric rod(A)  
and insert wooden dowel(D)  
into panel 16 at first.

x2

# 19

    C x 8

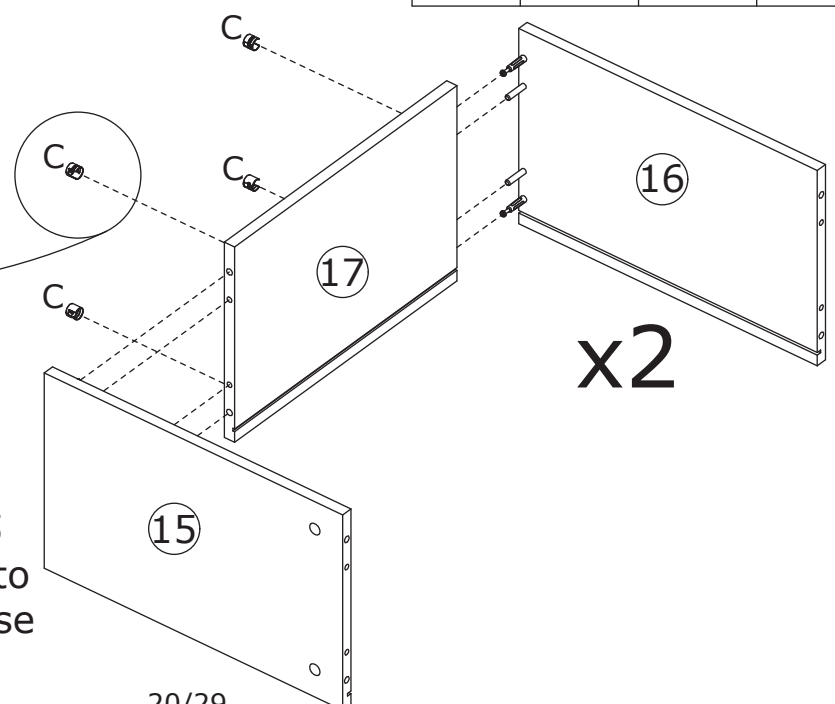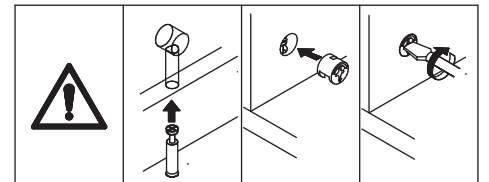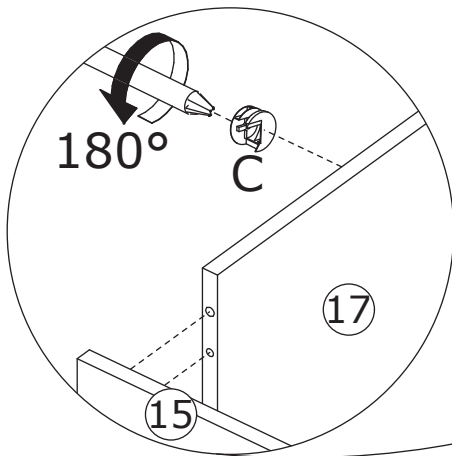



Attach panel 17 to panel 15  
and 16, add cam lock(C) into  
panel 17, then turn clockwise  
to tighten as shown.

x2






# 20





 
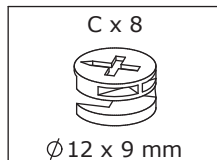 


Insert back panel 18 along available grooves as shown.

   Attach panel 14 to panel 15 and 16, add cam lock(C) into panel 15,16, then turn clockwise to tighten as shown.

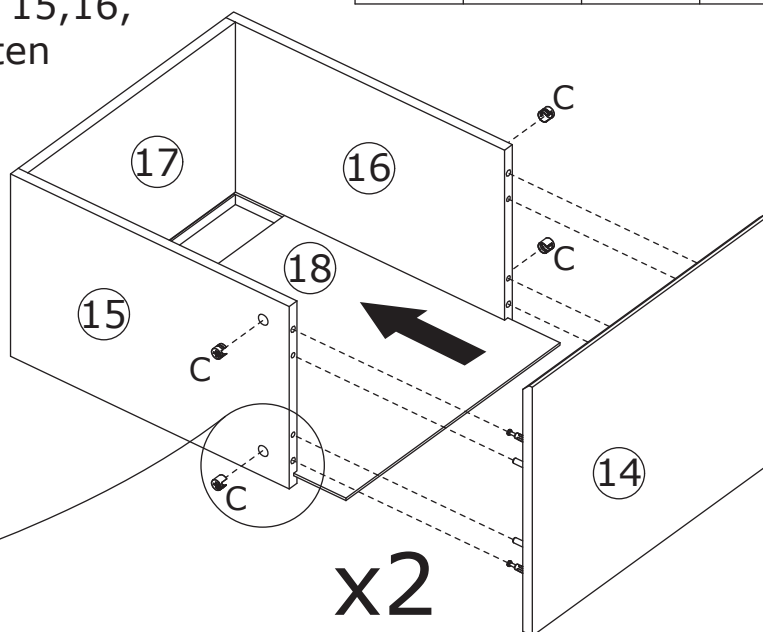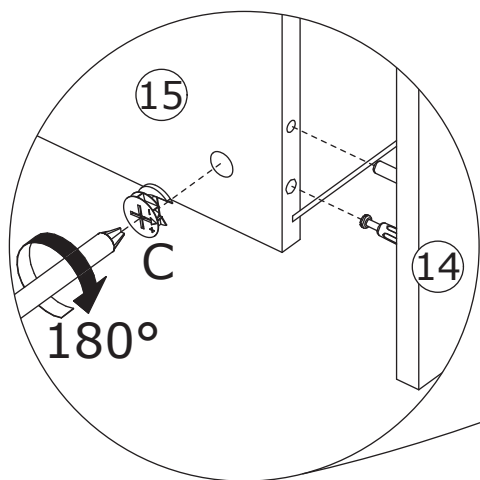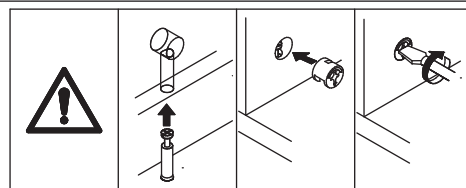


# 21

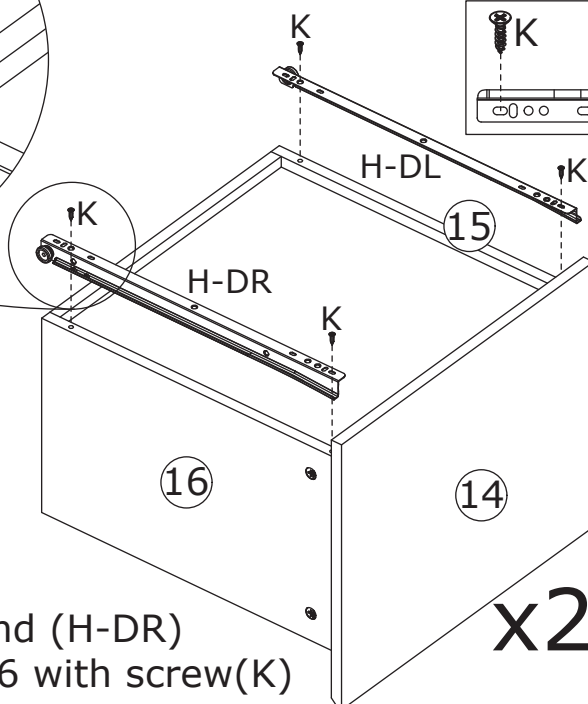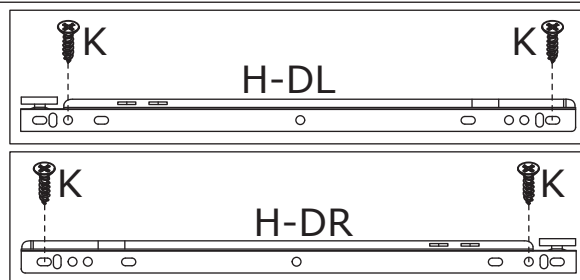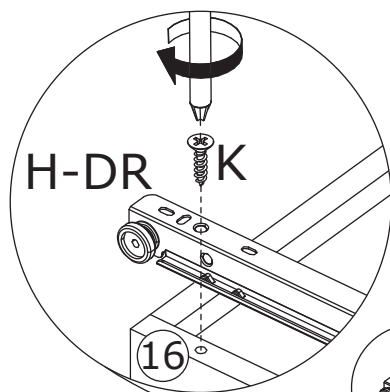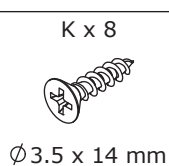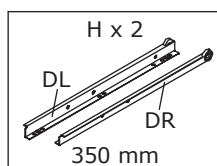      

Fix track(H-DL) and (H-DR) to panel 15 and 16 with screw(K) as shown.

# 22


 
E x 2





N x 4



  
Ø3.5 x 10 mm

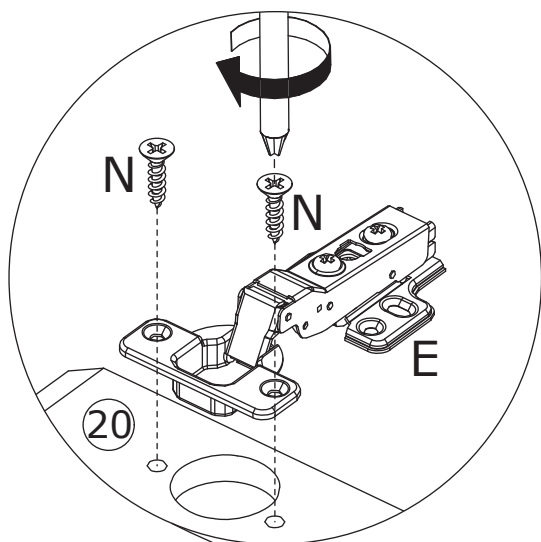



  Fix hinge(E) to panel 20 with screw(N) as shown.

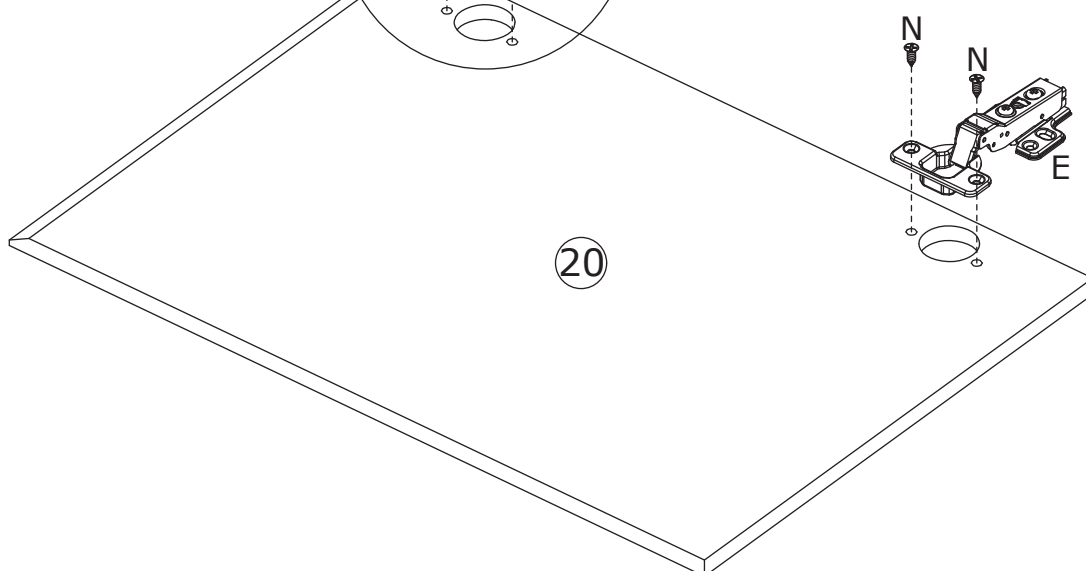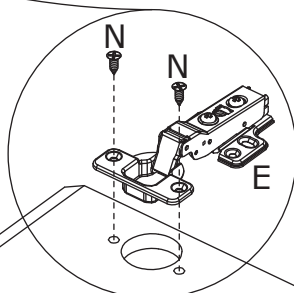



23

 K x 8  
  
 Ø 3.5 x 14 mm

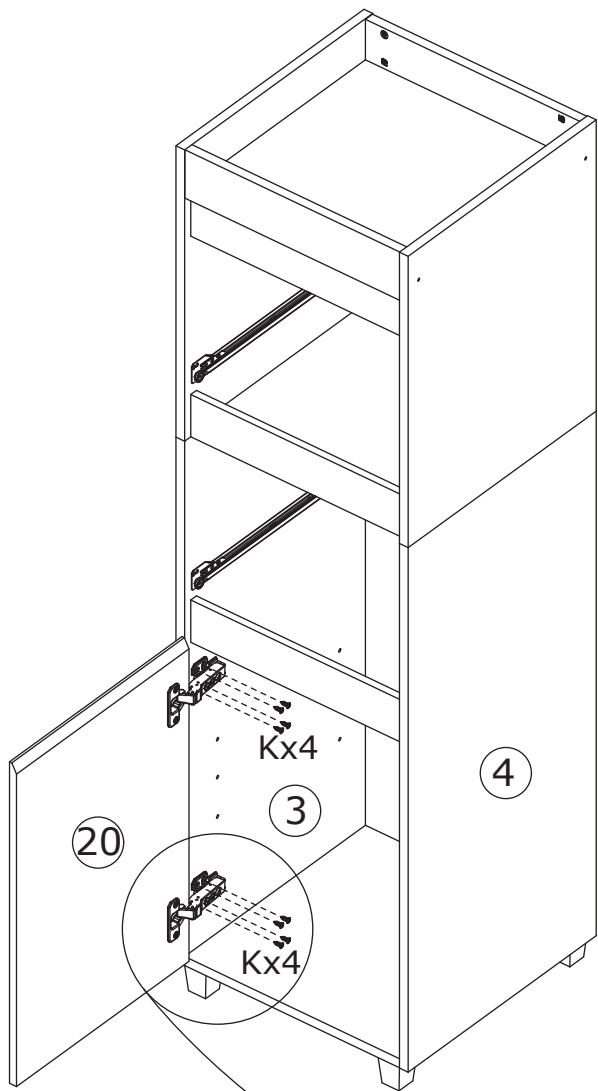  



Assemble door panel 20 to panel 3 or 4 by fixing hinge with screw(K) as shown.

  OR

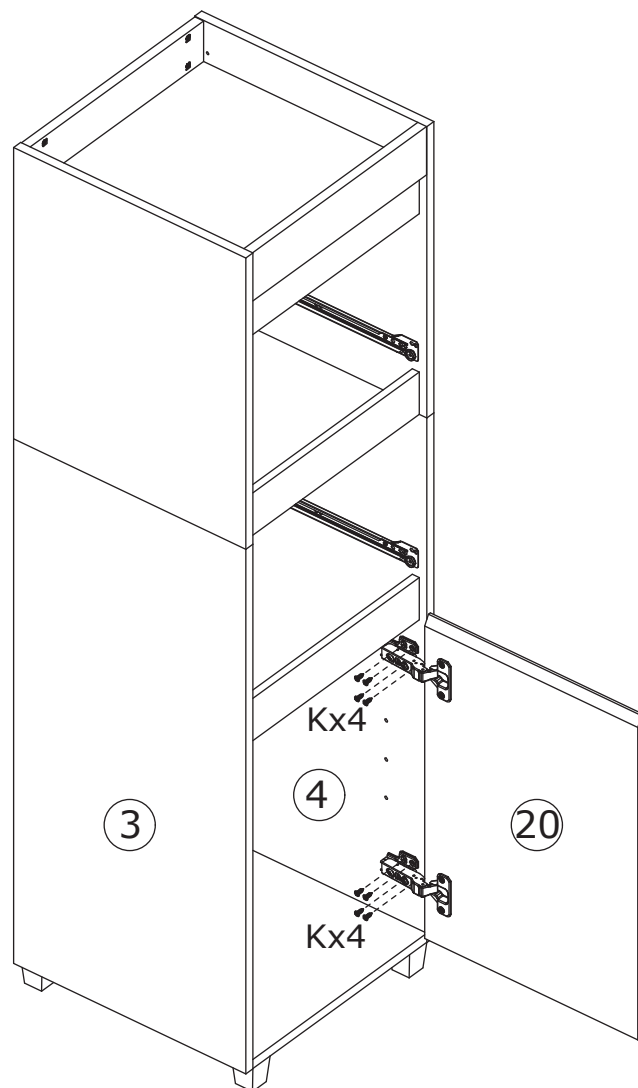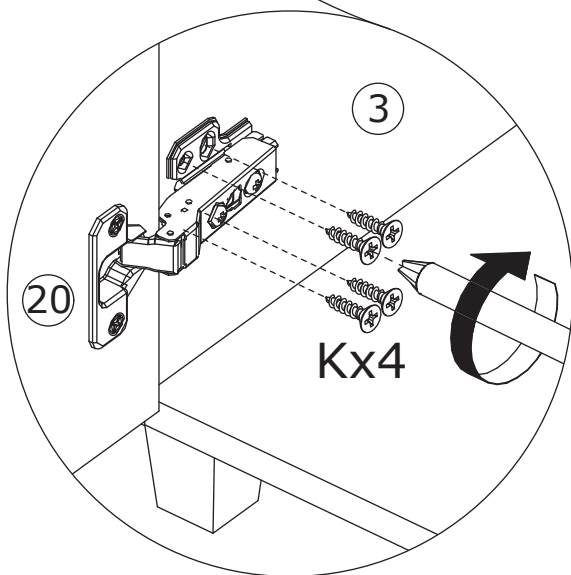



24

  
G x 4

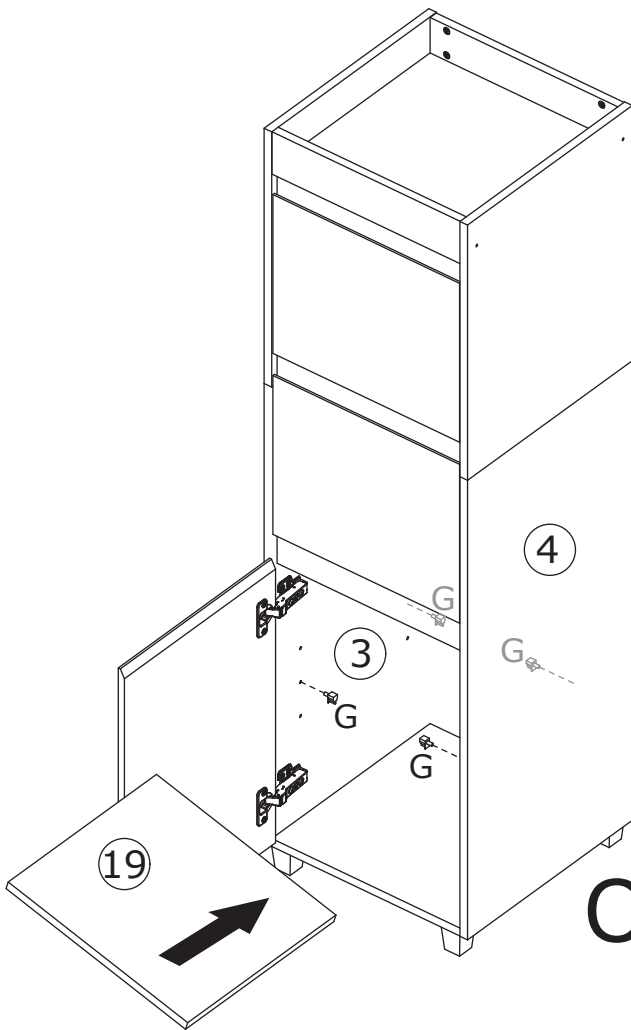





Insert layer pin(G) into panel 3 and 4, and place shelf panel 19 on.

   OR

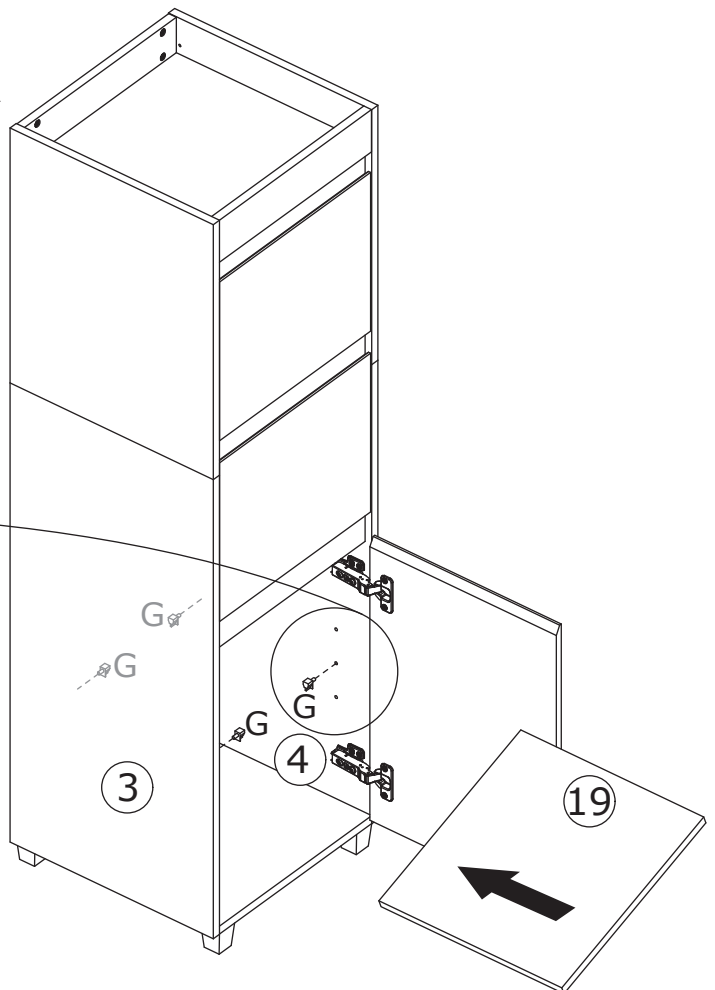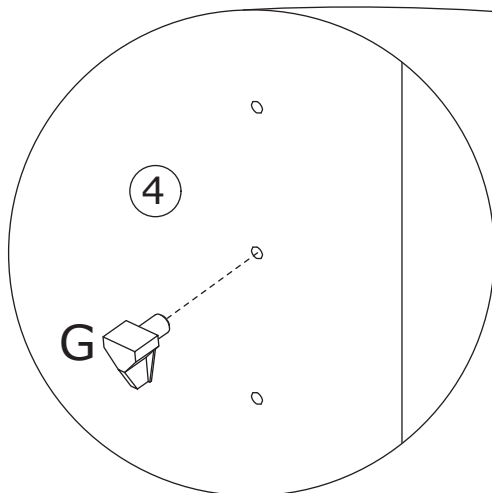


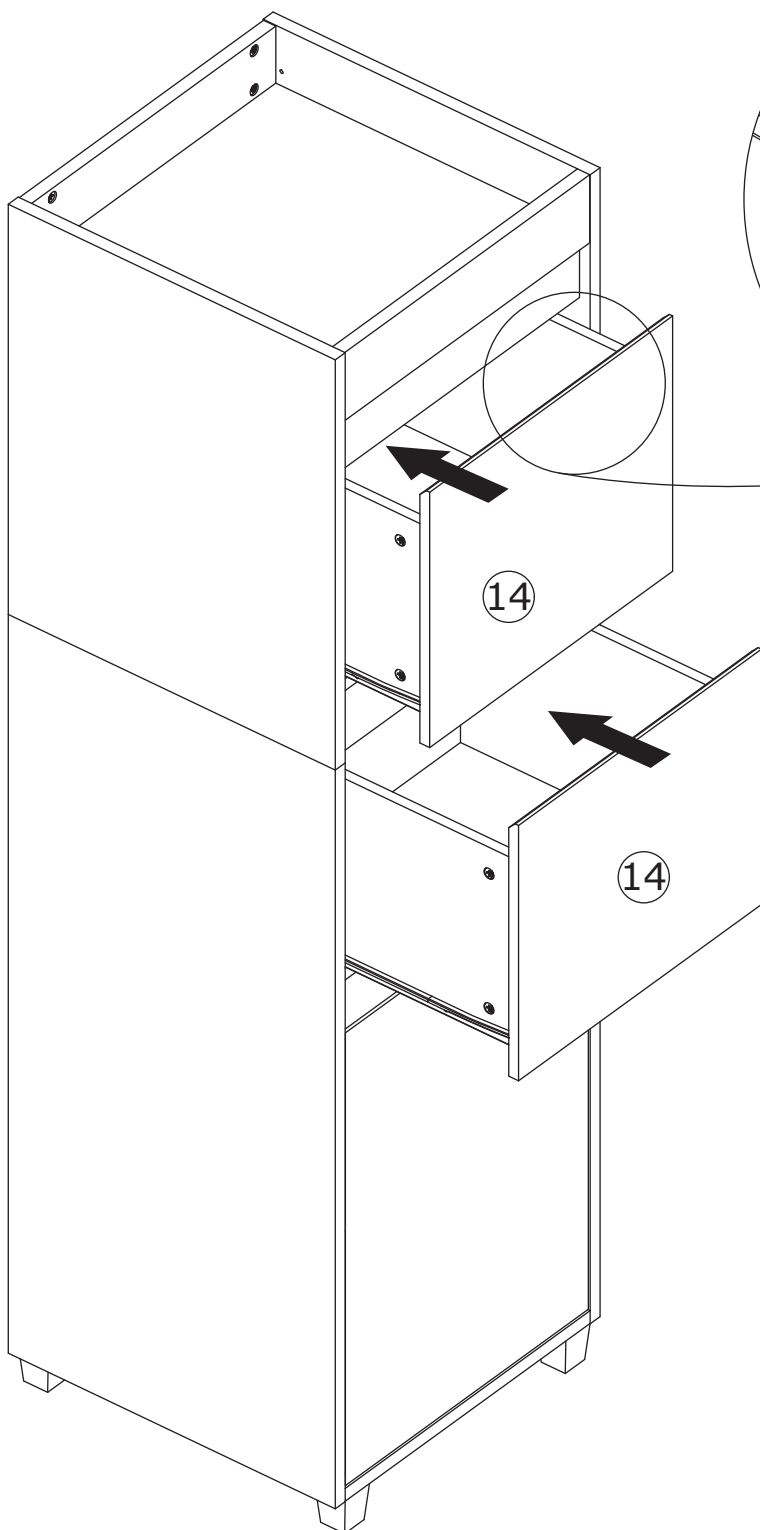


26

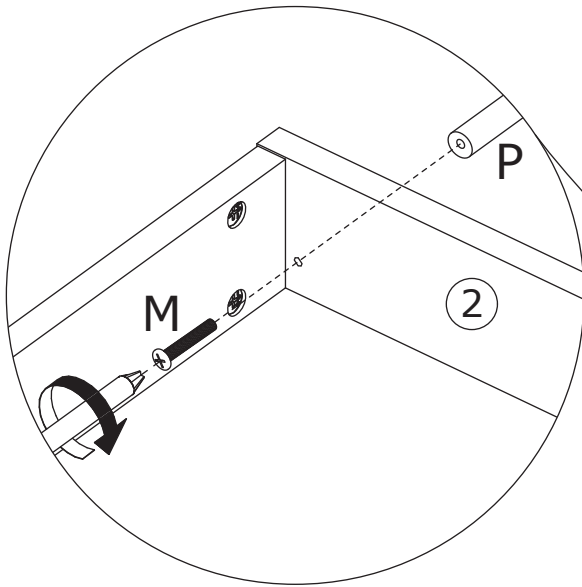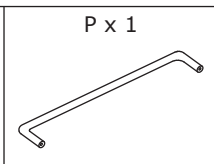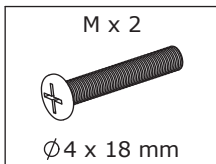    

 Fix handle(P) to panel 2  
with screw(M) as shown.

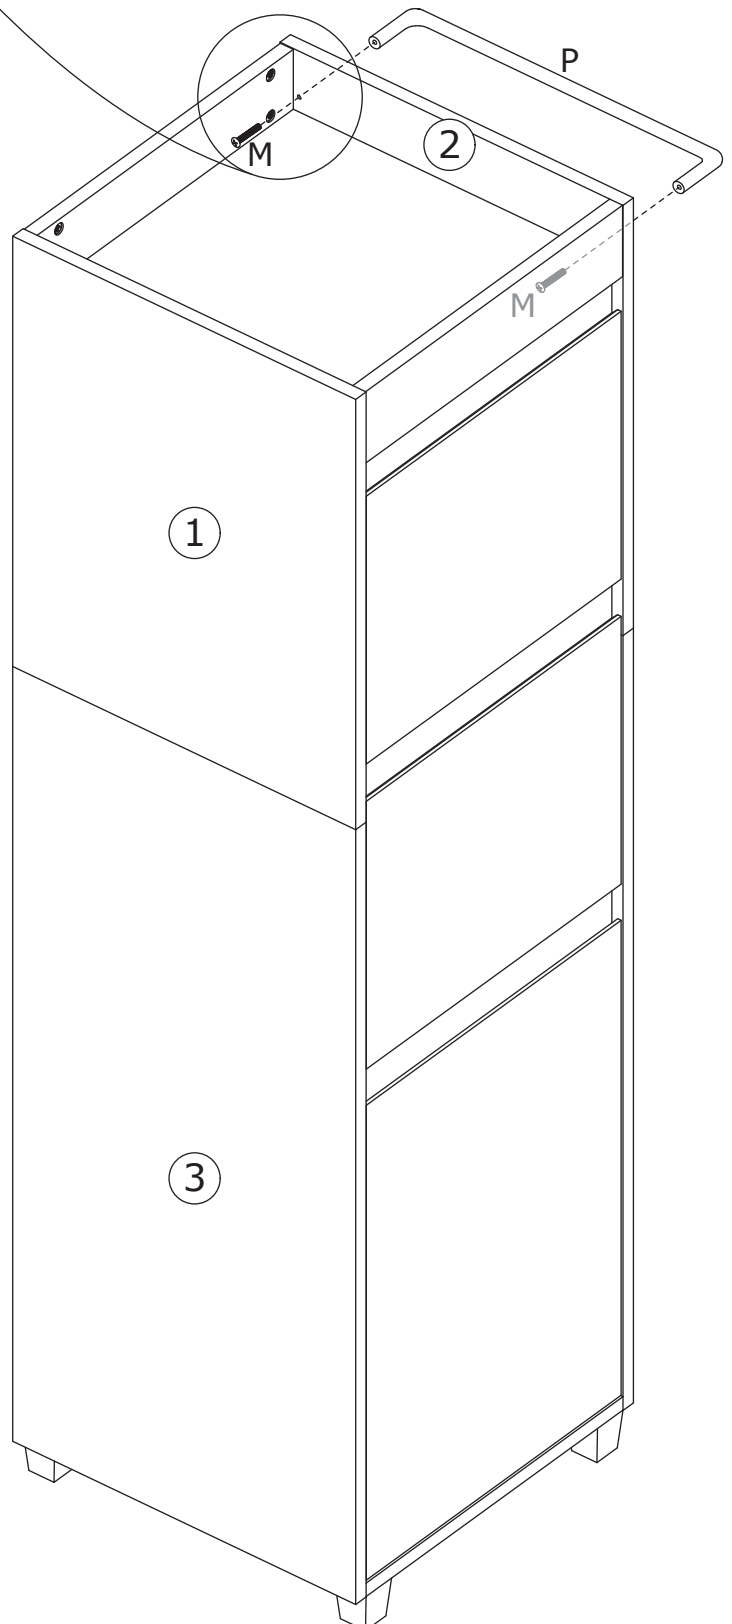

27

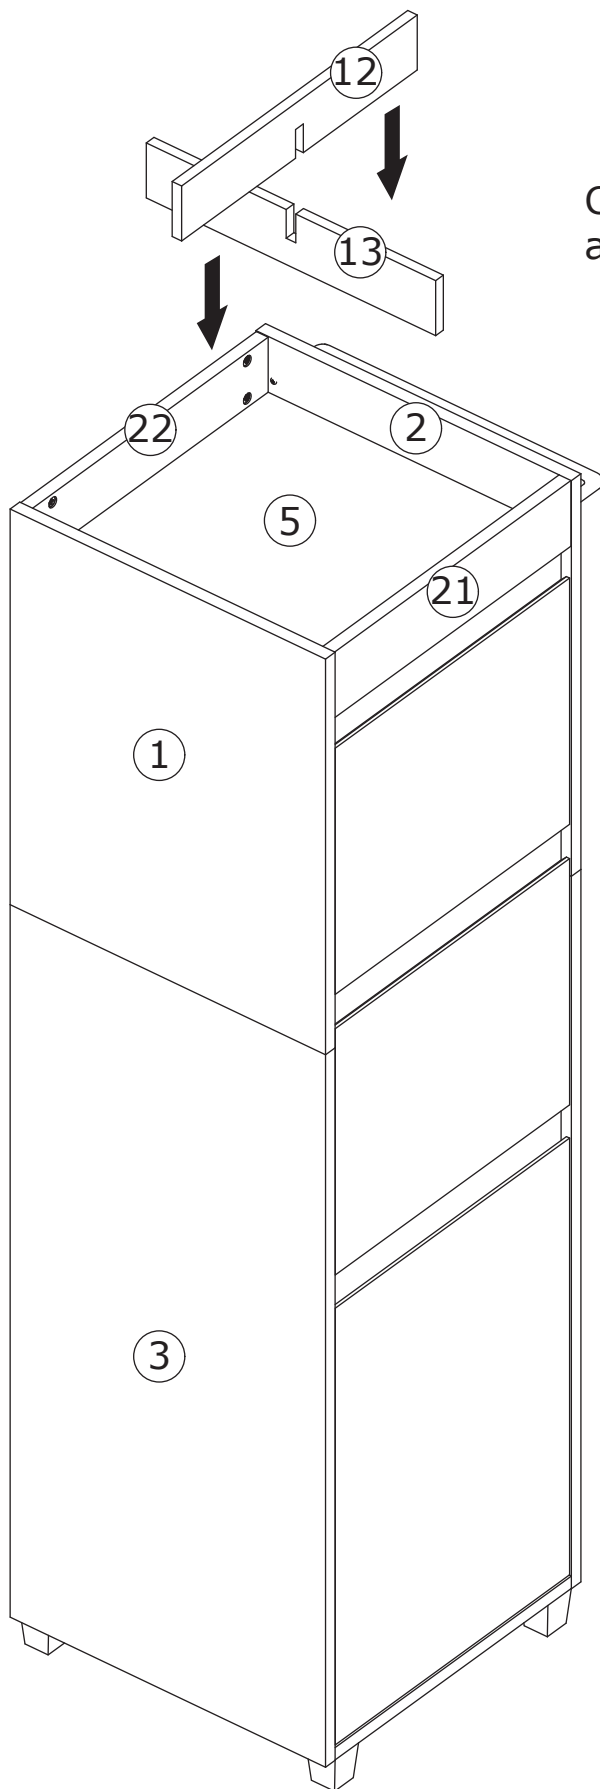 

Connect panel 12 to panel 13,  
and place on top.



# 28



  
K x 12






Ø 3.5 x 14 mm

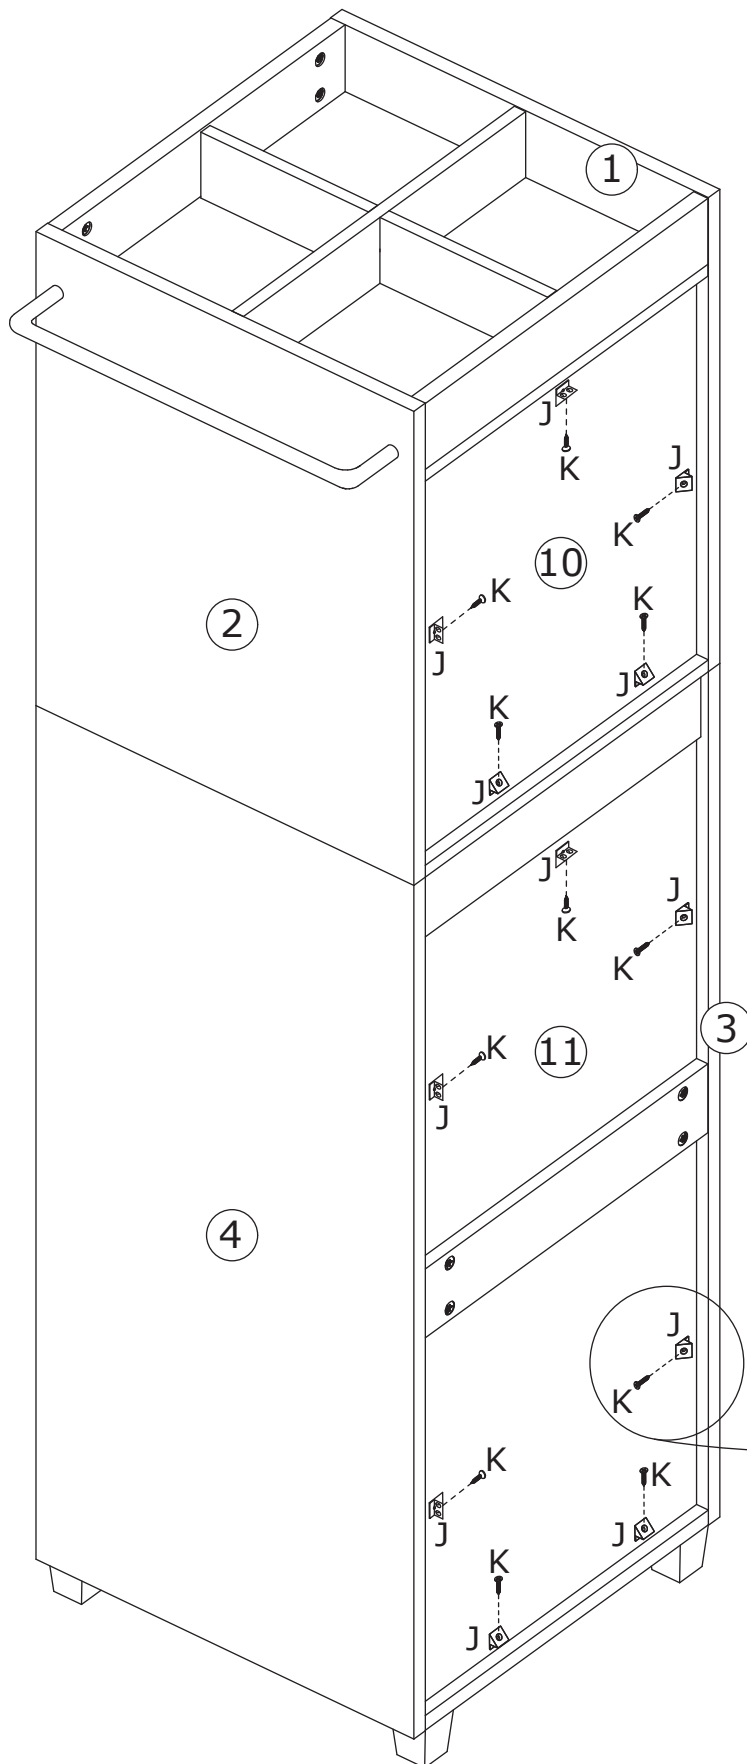

    
Insert buckle(J) into back slots and fix with screw(K) as shown.

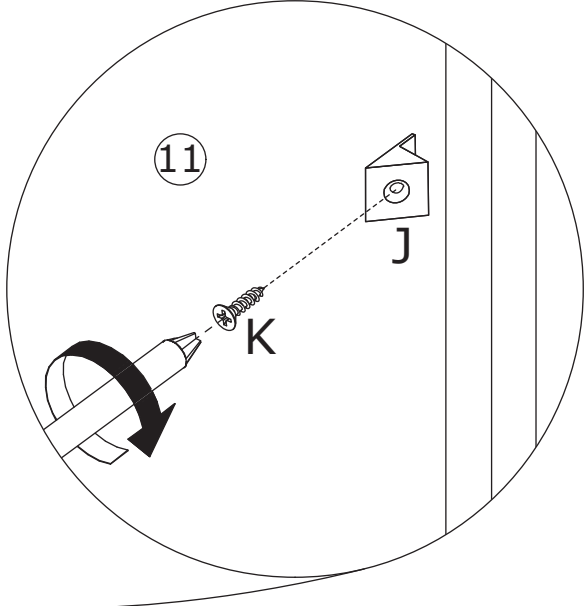




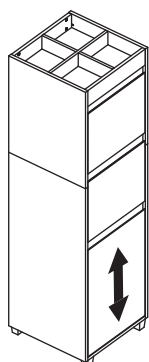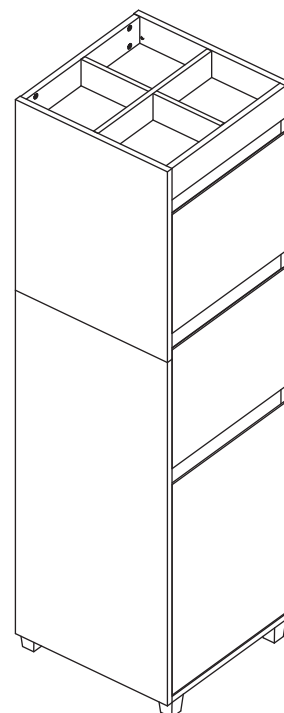



①

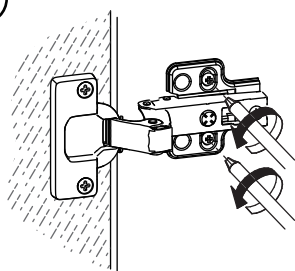 


②

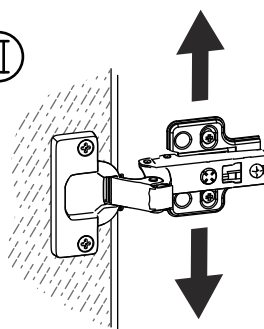 


③

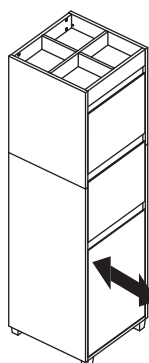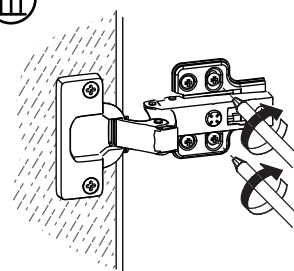  



①

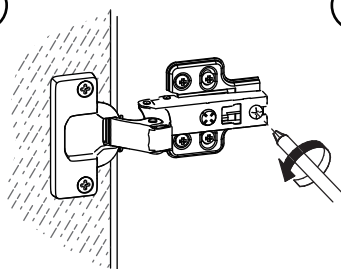 


②

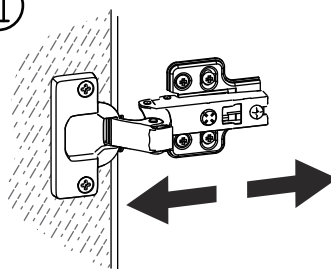 


③

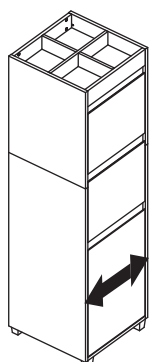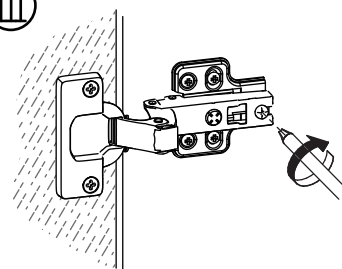  

①

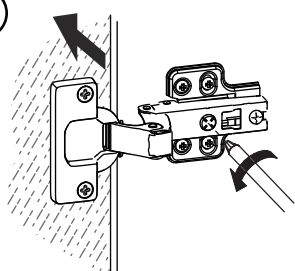 

②

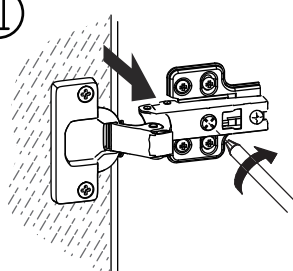 

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.