 


# Calvin TV Fire Stand

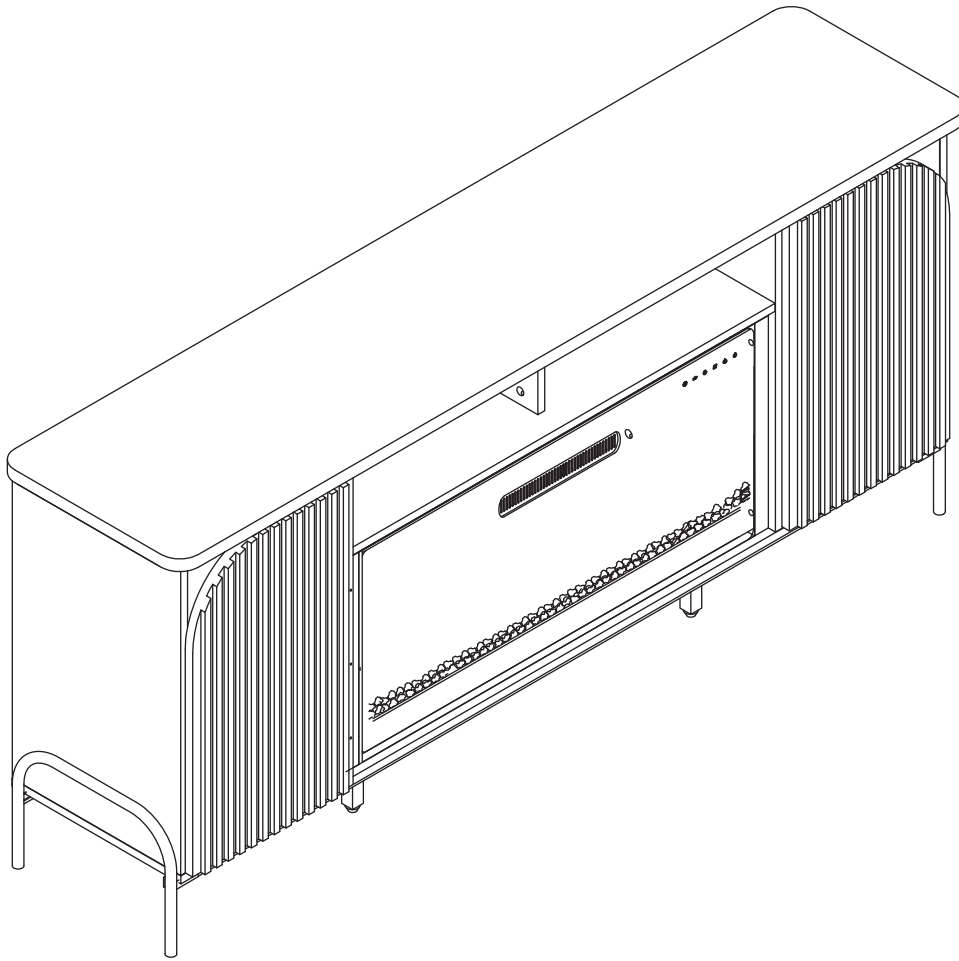

**BELLEZE®**

**FOLLOW US:**



@bellezefurniture

**CONTACT INFO:**

support@belleze.com  
1-800-682-6376

**ITEM NO. 014-HG-41862**

The instruction booklet contains **IMPORTANT** safety information. Please read it in full and keep it for future reference.

[www.belleze.com](http://www.belleze.com)

Scan this QR Code  
to view our online tutorial

 


 
Estimated time for assembly:

**120 mins**



Weight limitations are as follows:

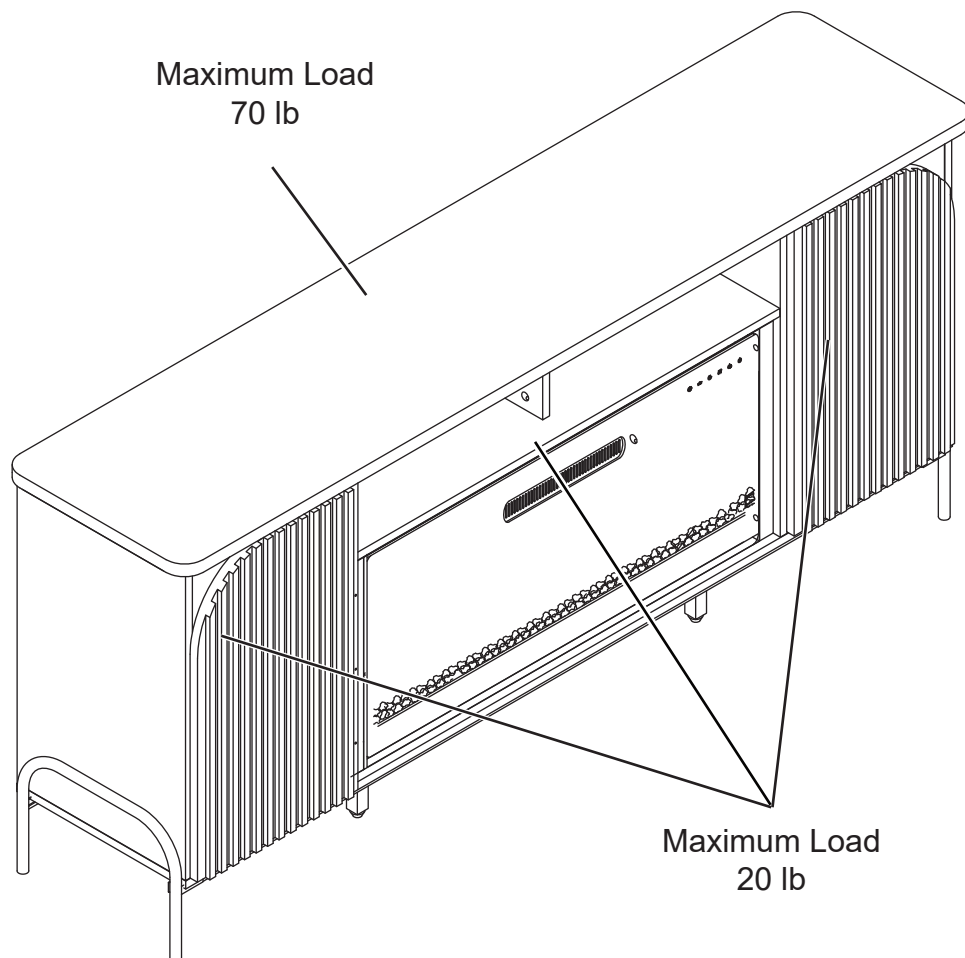


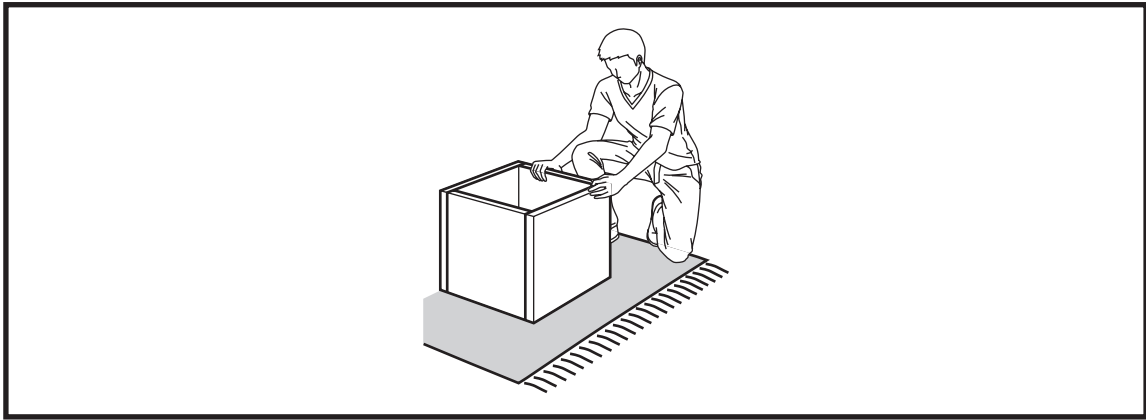

Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.

For safety, please keep pets and children away from the assembly area.

 Ensure the product is fully assembled before use. If you are missing any hardware or products, do not use it until you have restored the missing parts.

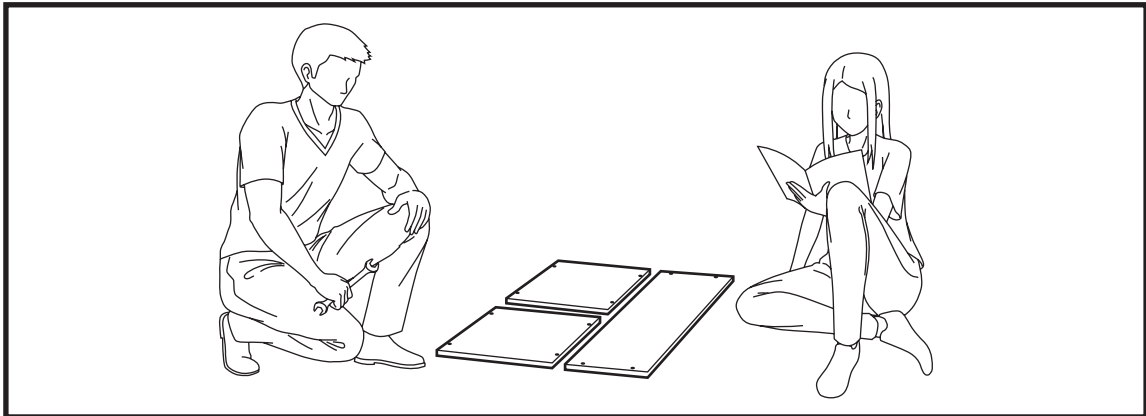

This furniture requires 2 people for assembly.

Read this instruction manual prior to assembly to familiarize yourself with the various steps.

Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.


Hand tight all hardware and careful not to over tighten to avoid damaging the product.

## CAUTION

 There are small components used in the construction of this product. Loose items should be kept away from pets and children to avoid a choking hazard.

Keep all plastic bags and packaging film away from pets and children to avoid suffocation.

# PACKAGE CONTENTS











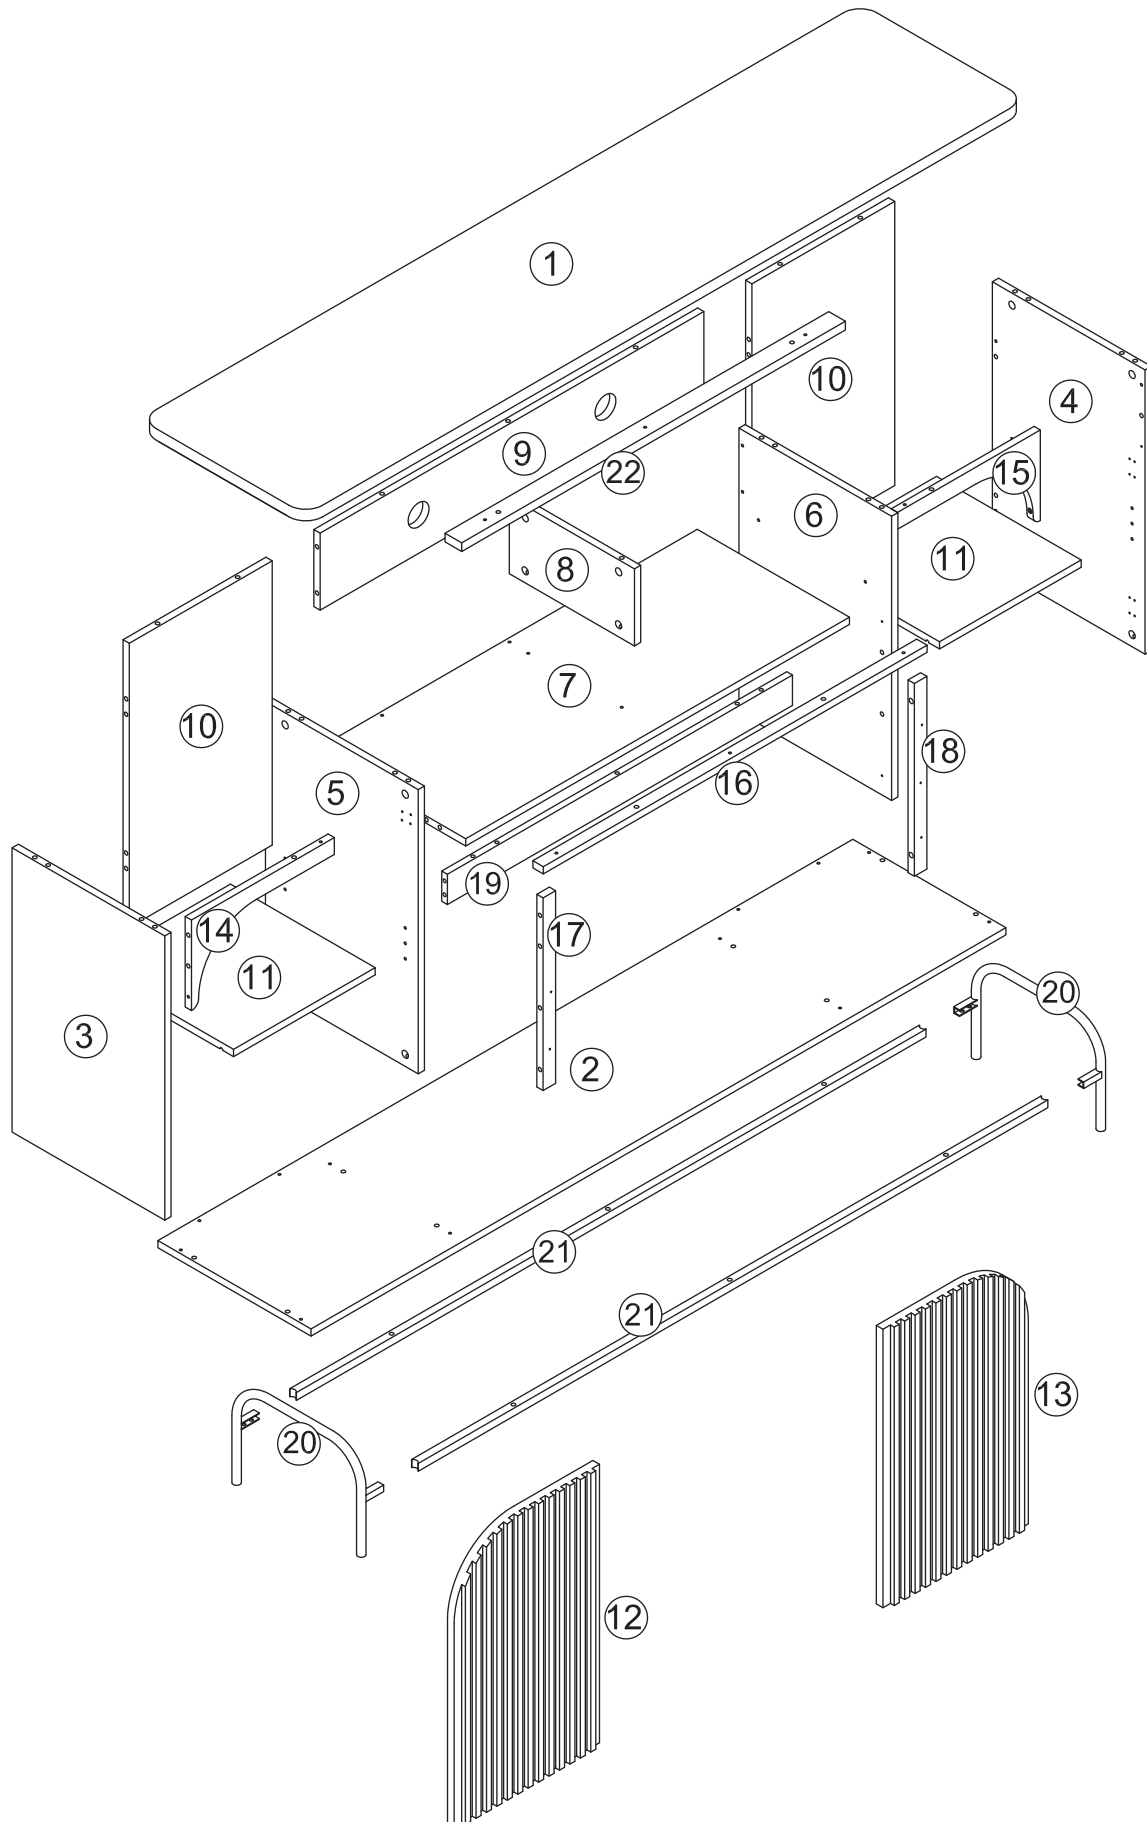




# PACKAGE CONTENTS


CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Bottom Panel	1
3	Left Lateral Panel	1
4	Right Lateral Panel	1
5	Left Medial Panel	1
6	Right Medial Panel	1
7	Center Panel	1
8	Divider Panel	1
9	Center Back Panel	1
10	Side Back Panel	2
11	Storage Shelf Panel	2
12	Left Cabinet Door	1
13	Right Cabinet Door	1
14	Left Trim Panel	1
15	Right Trim Panel	1
16	Top Surround Strip	1
17	Left Surround Strip	1
18	Right Surround Strip	1
19	Center Crossbar	1
20	Leg	2
21	Base Crossbar	2
22	Top Crossbar	1
           
# PACKAGE CONTENTS

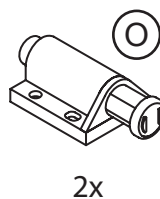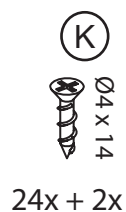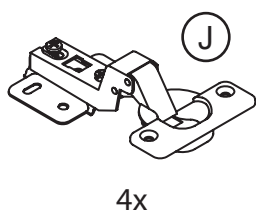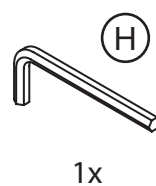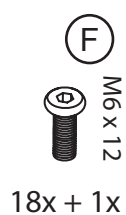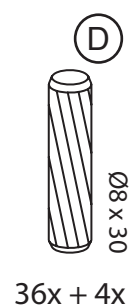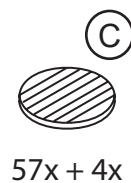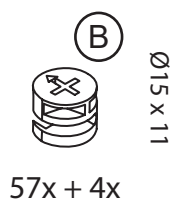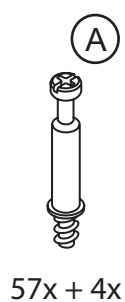


Install all hardware perpendicular to the opening.


# PACKAGE CONTENTS

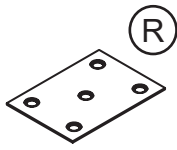 

2x

 

2x

 

2x



2x



2x

 


2x




Install all hardware perpendicular to the opening.


Required tools for assembly (Not included)

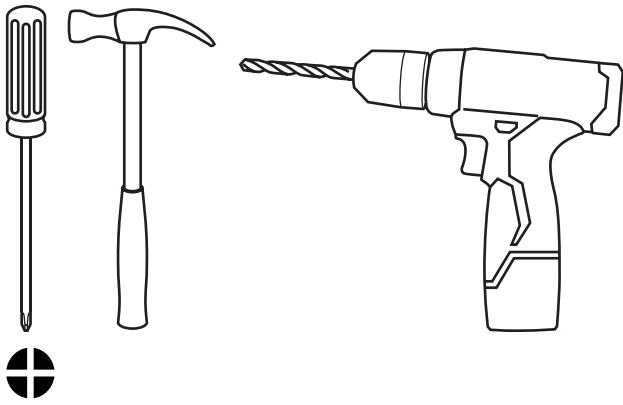

1


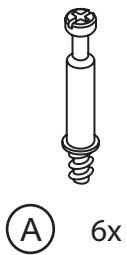 


 Attach cam bolts to the lateral panels (3, 4).

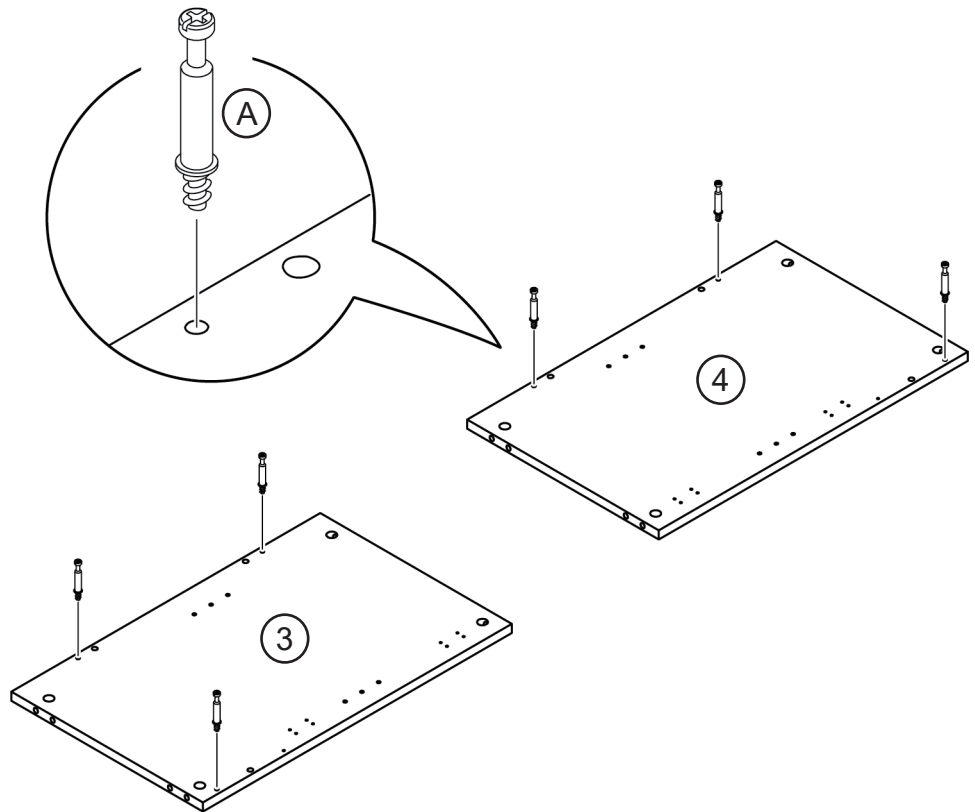



# 2

  Attach cam bolts both sides of the medial panels (5, 6) and the center panel (7).

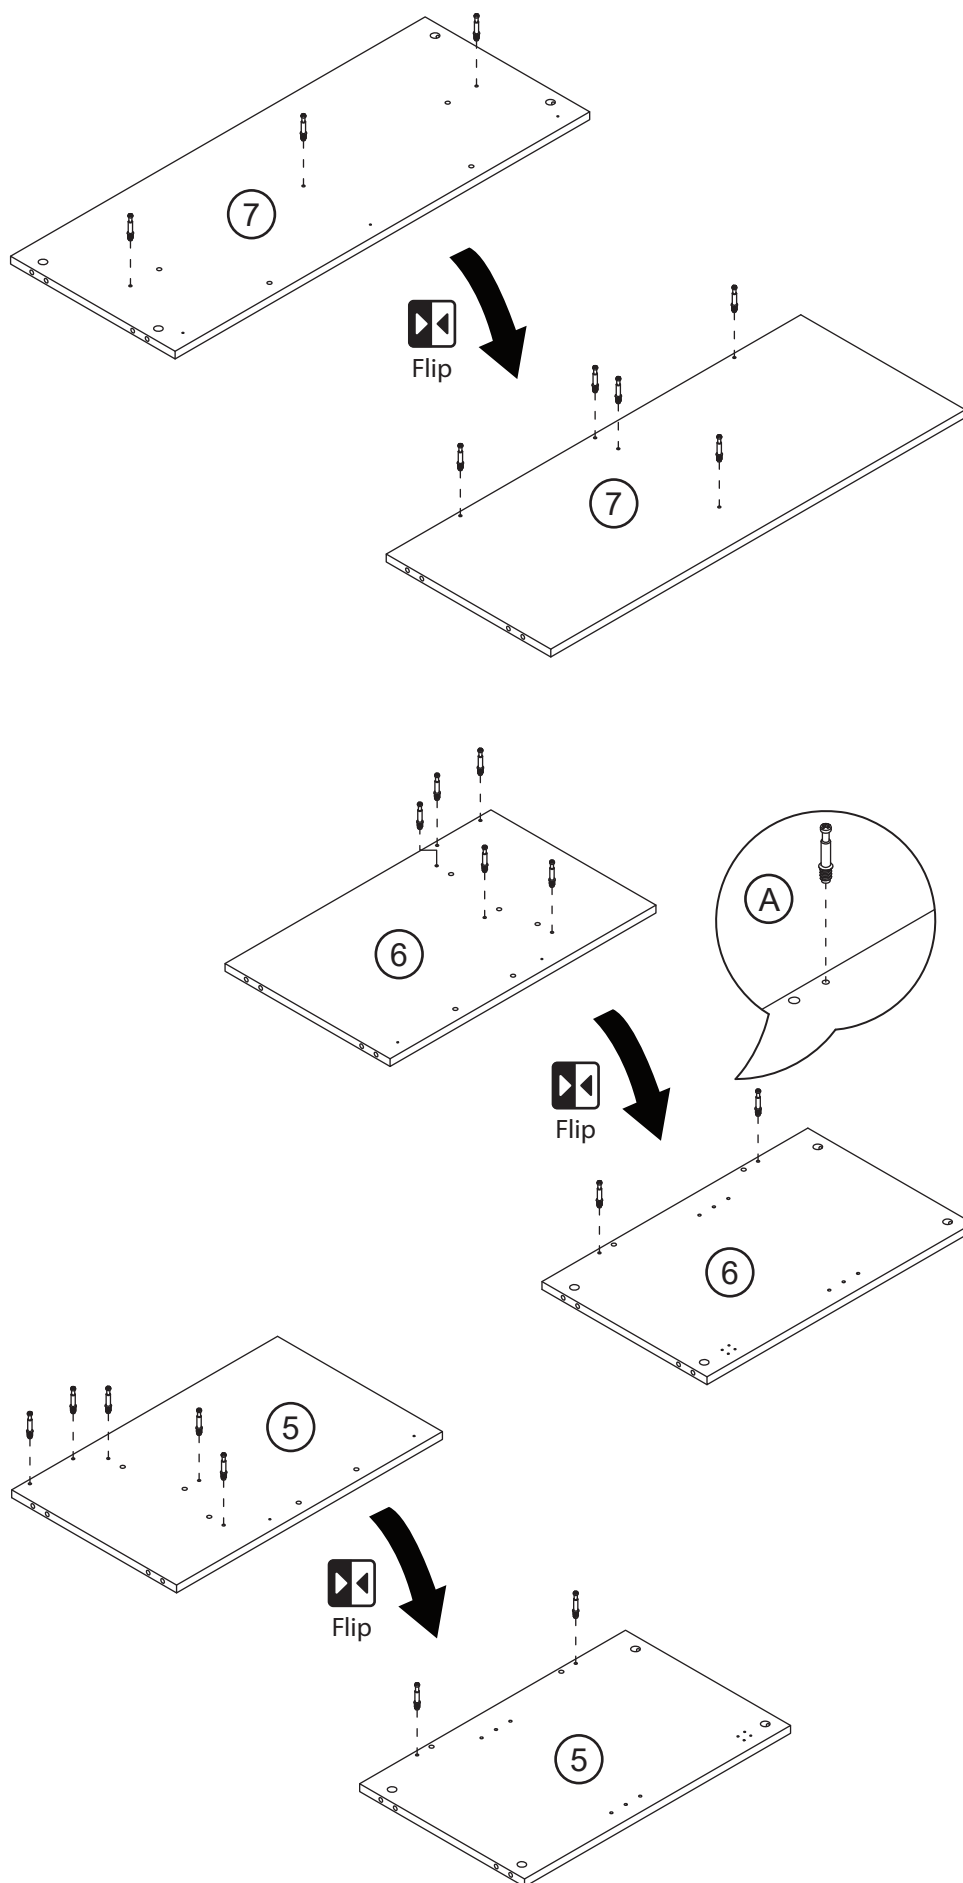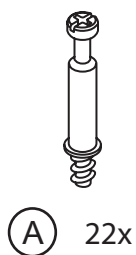




# 3

  Insert wood dowels to the lateral panels (3, 4), medial panels (5, 6), center panel (7), side back panels (10), trim panels (14, 15), and center crossbar (19).

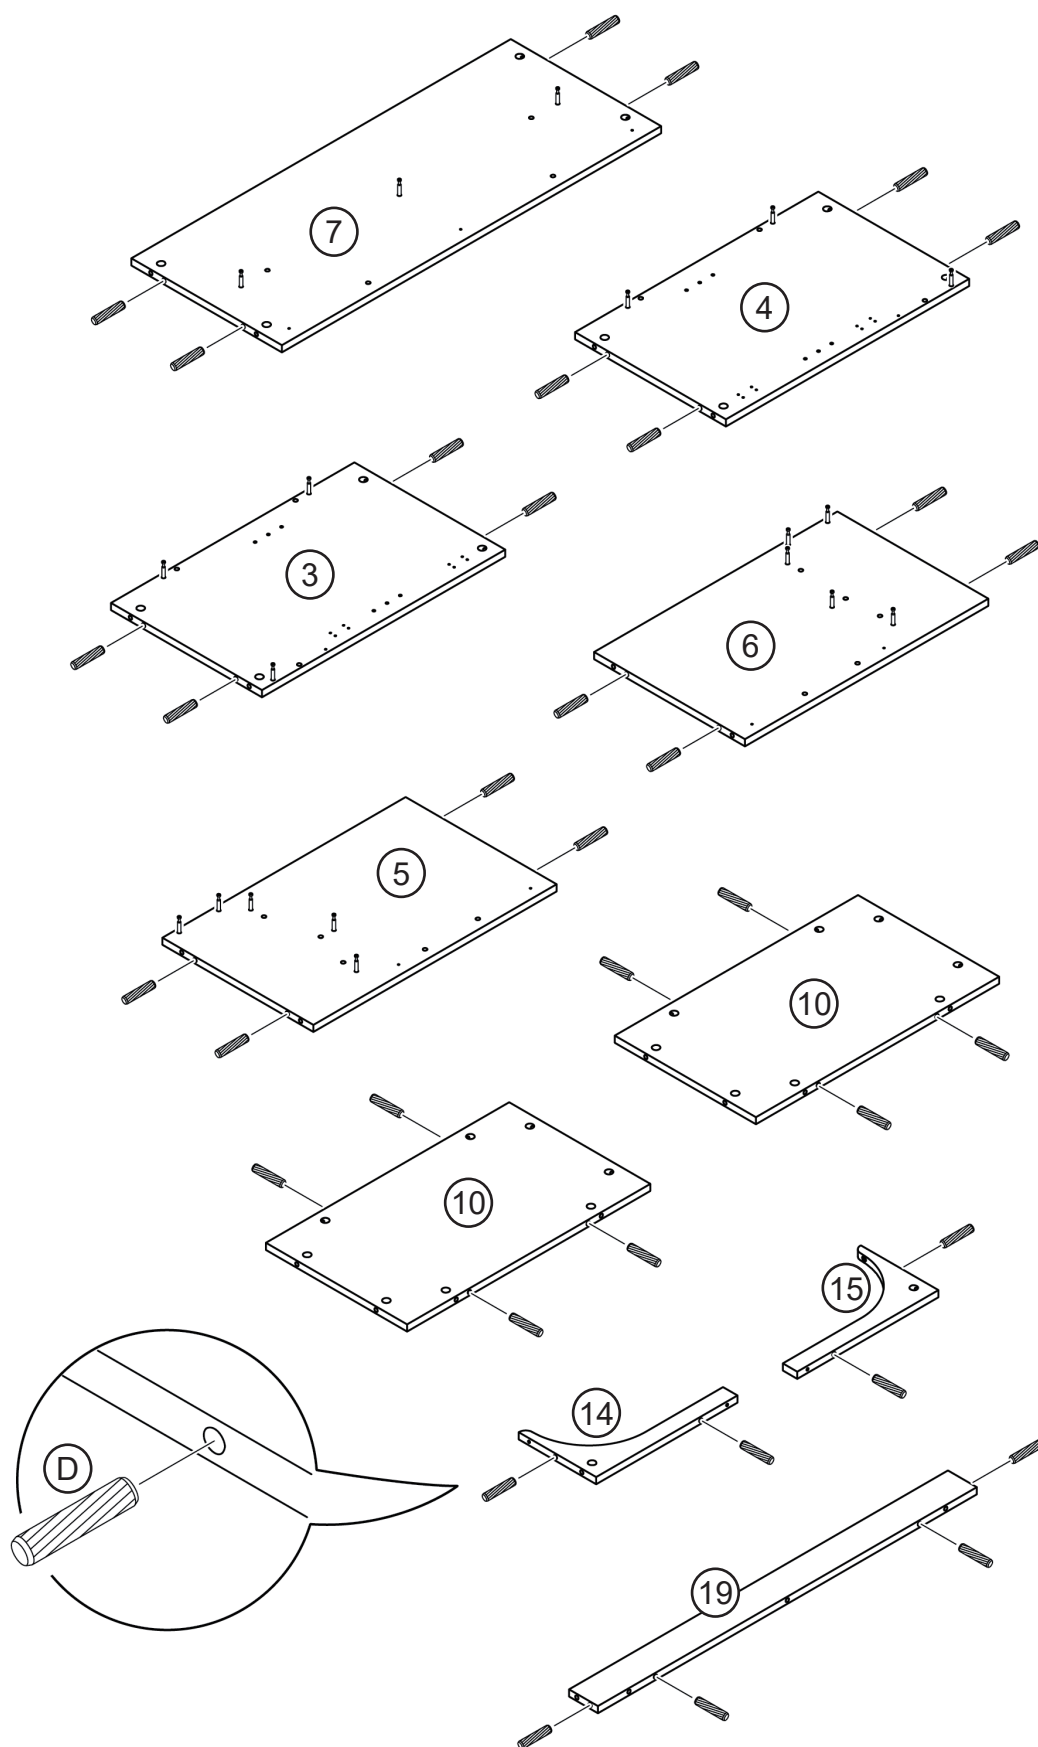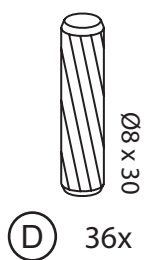




# 4

   Insert small wood dowels to the medial panels (5, 6) and the center panel (7).

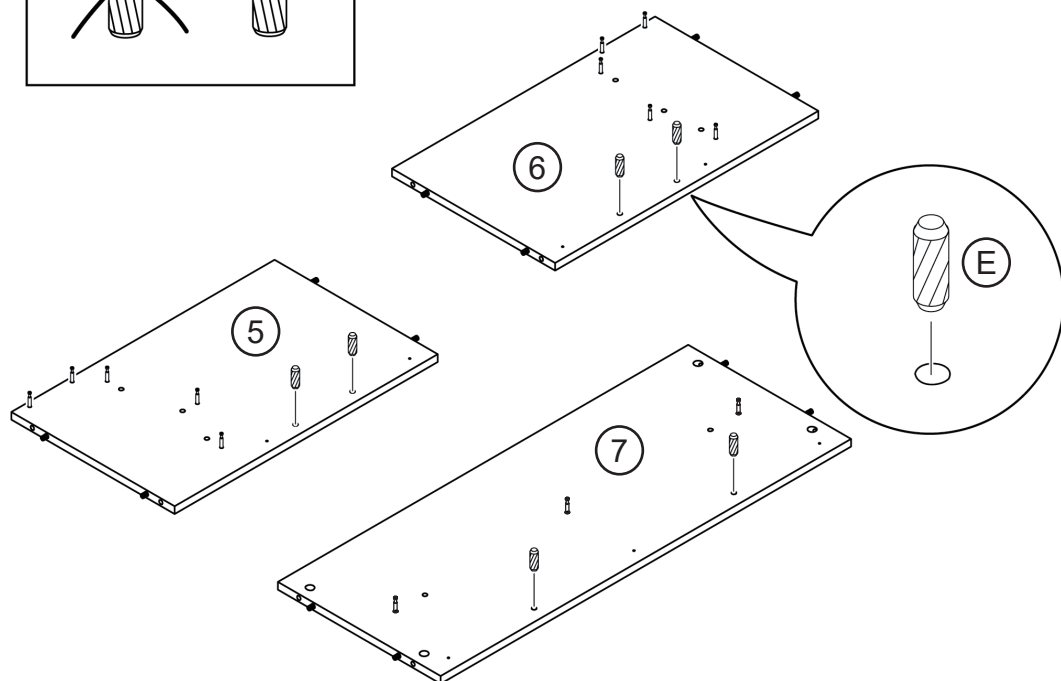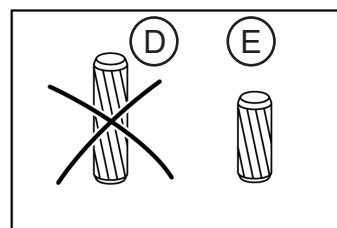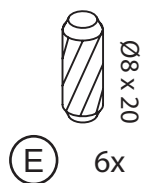




# 5

   Assemble surround panels (16, 17, 18) to the medial panels (5, 6) and the center panel (7).

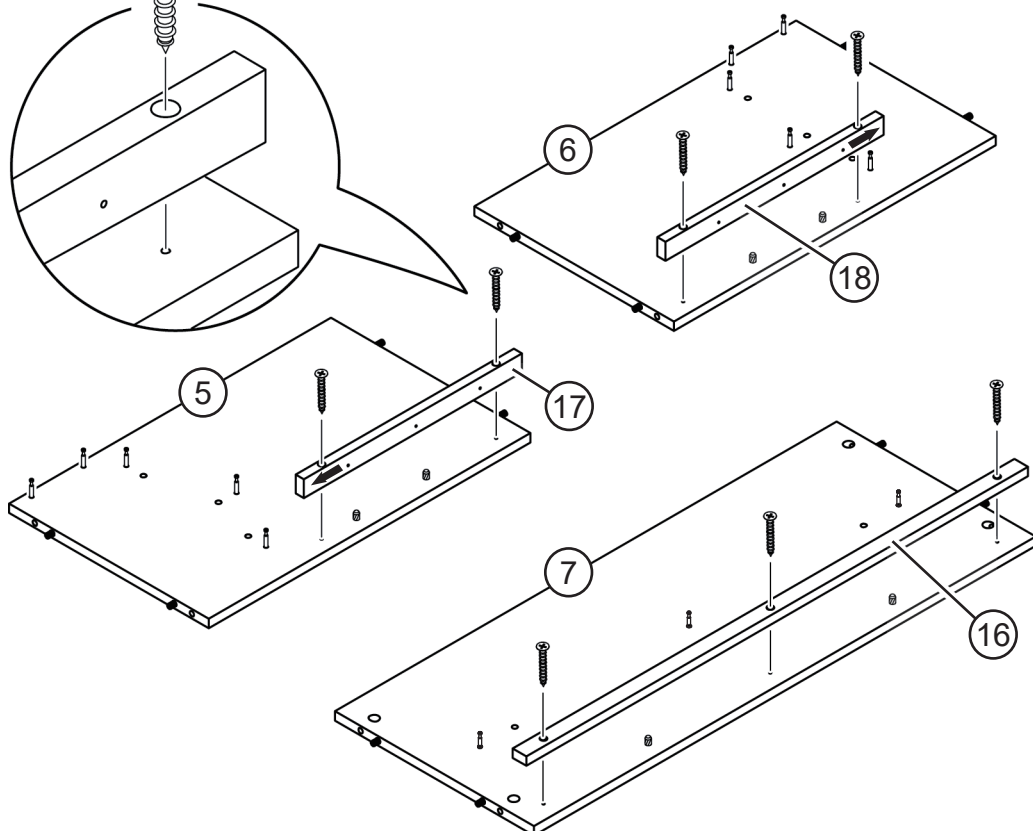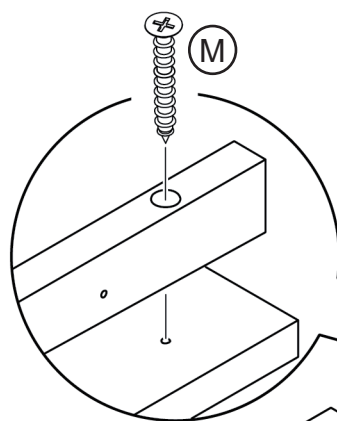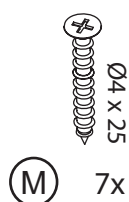




# 6

   Assemble the center crossbar (19) to the center panel (7).

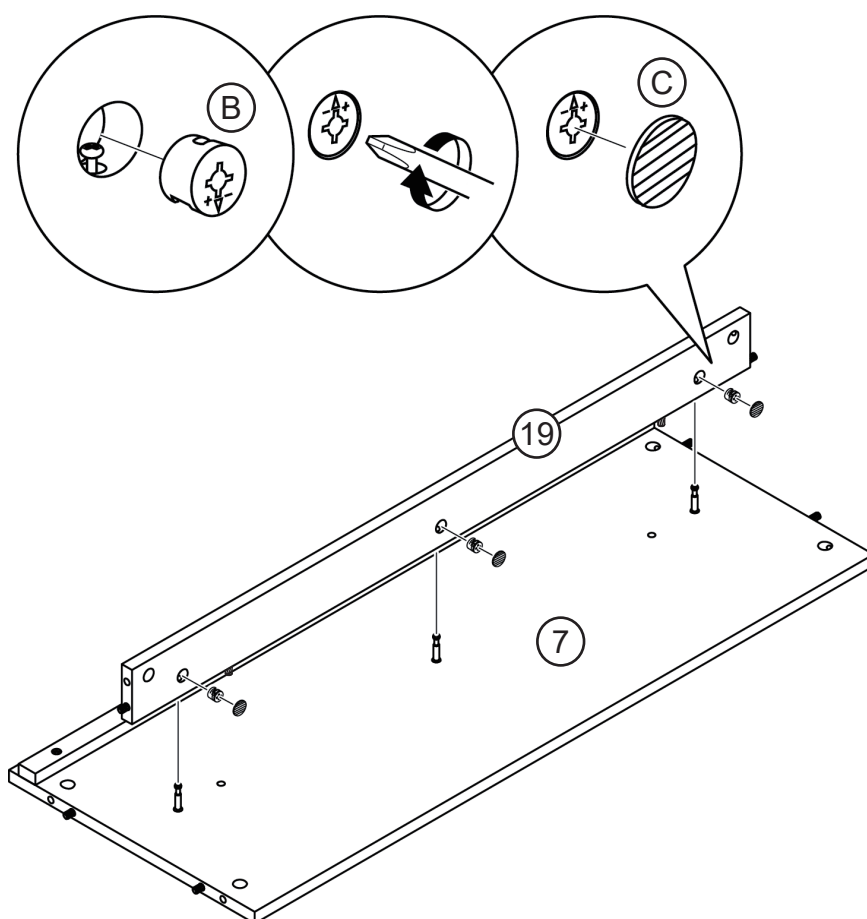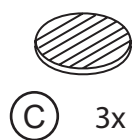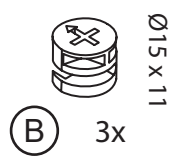

# 7

 
 
 
Assemble the center back panel (9) to the center panel (7).

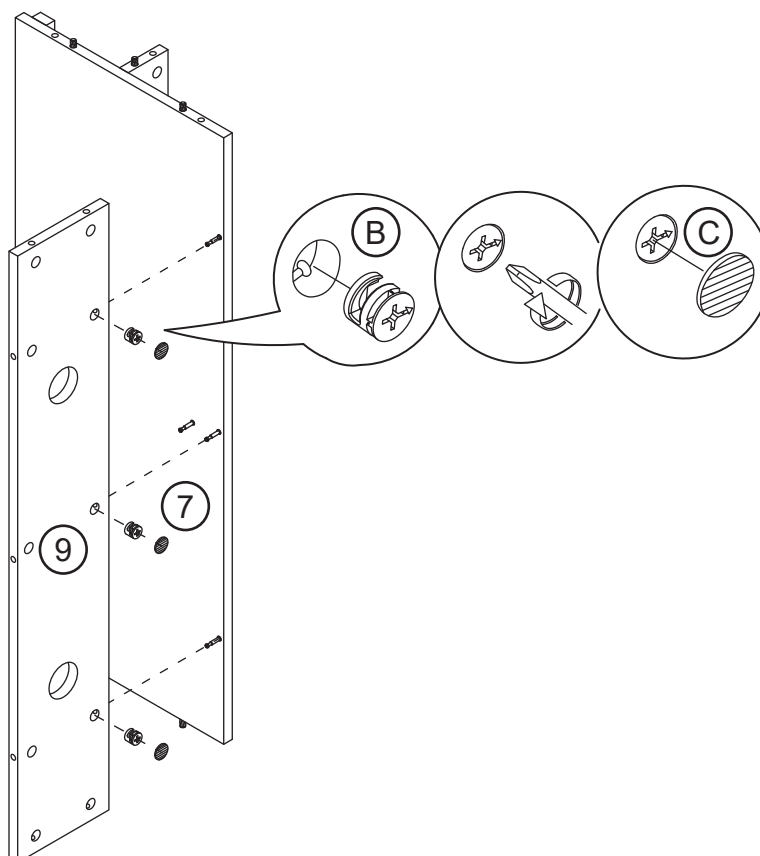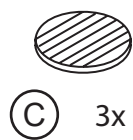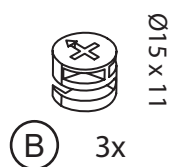






# 8

   Assemble the center panel (7) between the medial panels (5, 6).

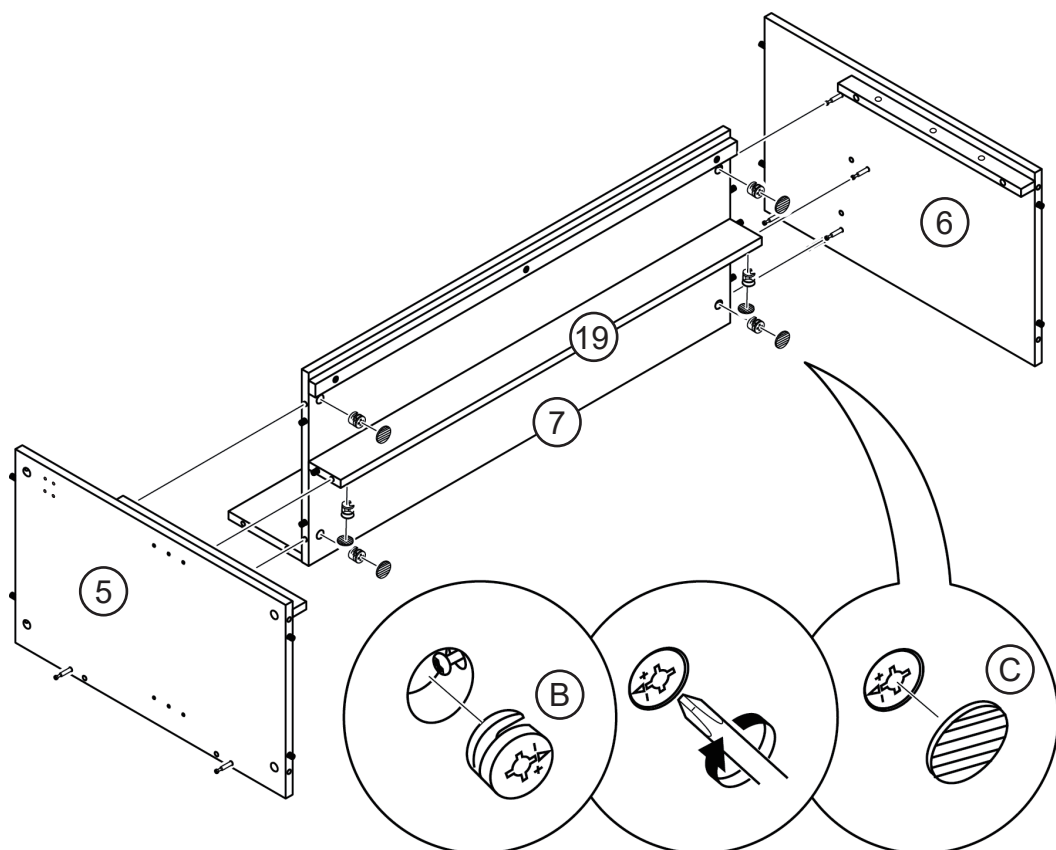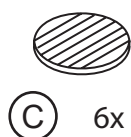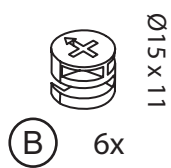




# 9

   Secure the center back panel (9) to the medial panels (5, 6).

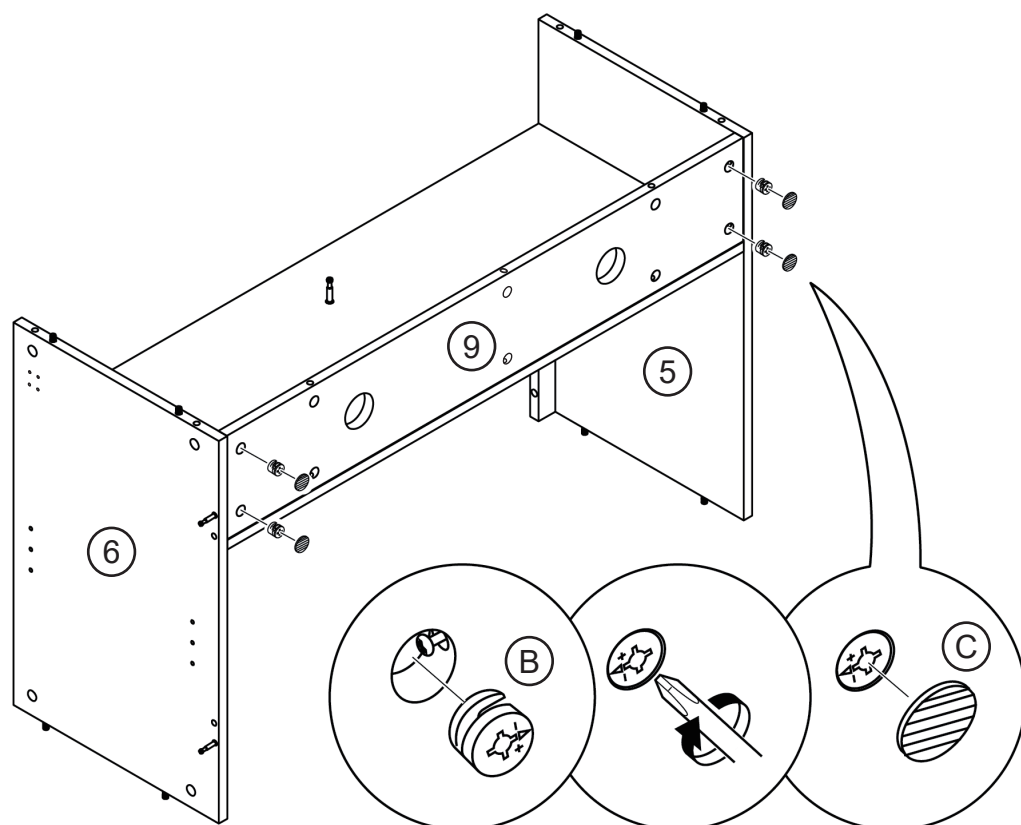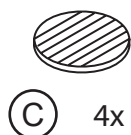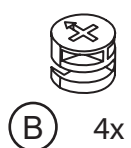




# 10

   Assemble side back panels (10) to the outside of the medial panels (5, 6).

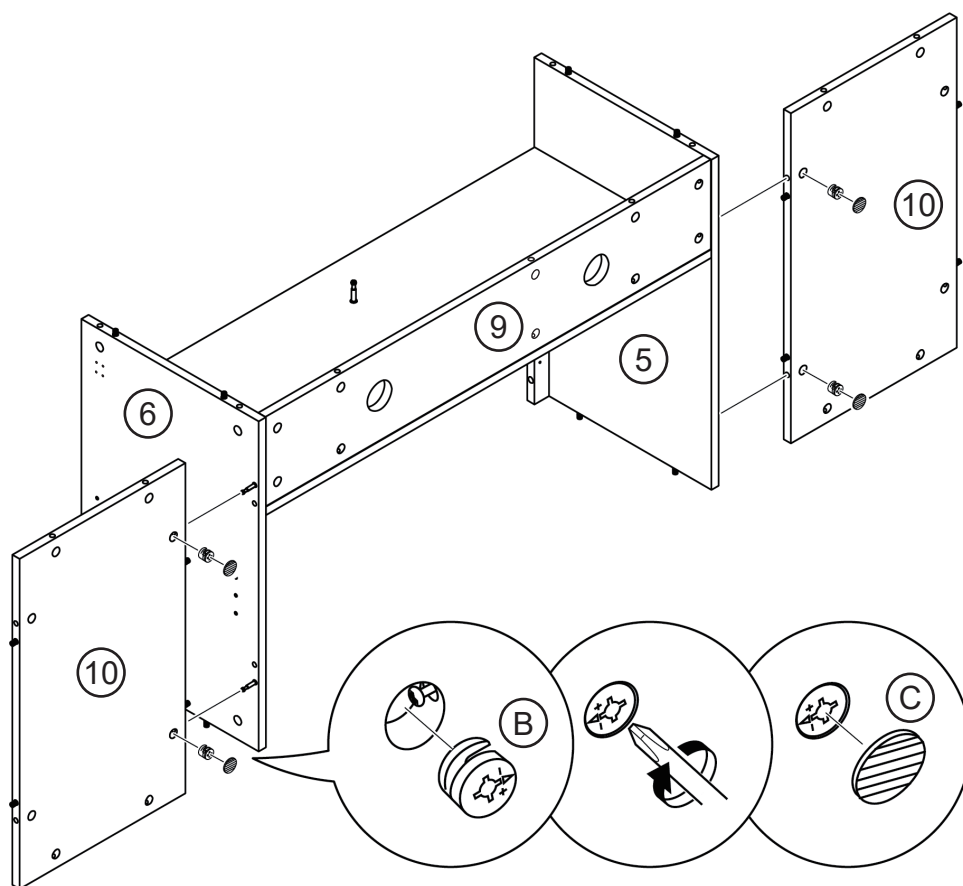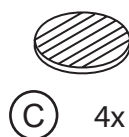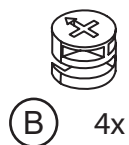

# 11

   
Attach trim panels (14, 15) to the lateral panels (3, 4).

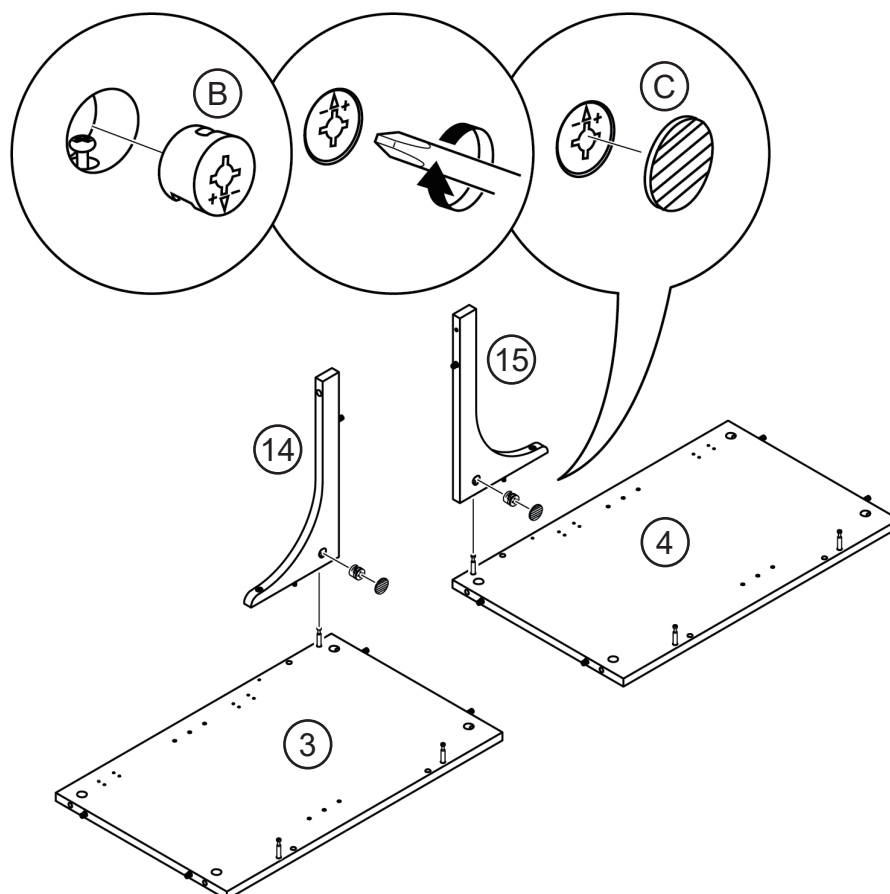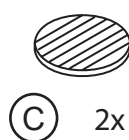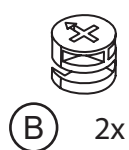


# 12



 
Secure the trim panels (14, 15) in place with screws.

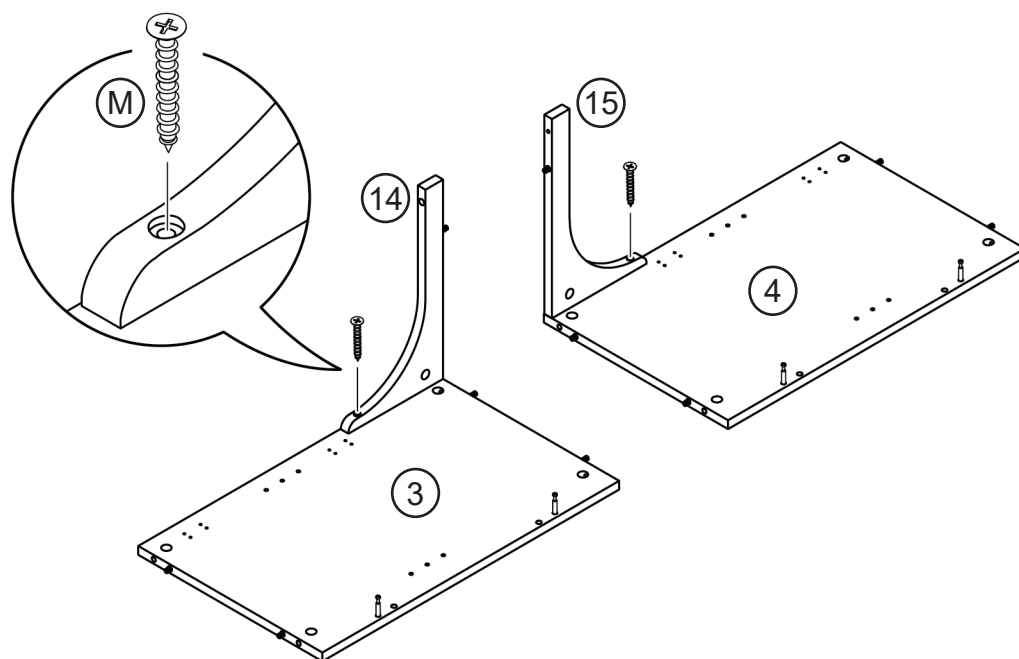

# 13



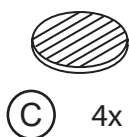 


 Assemble the lateral panels to the outside of the side back panels (10).

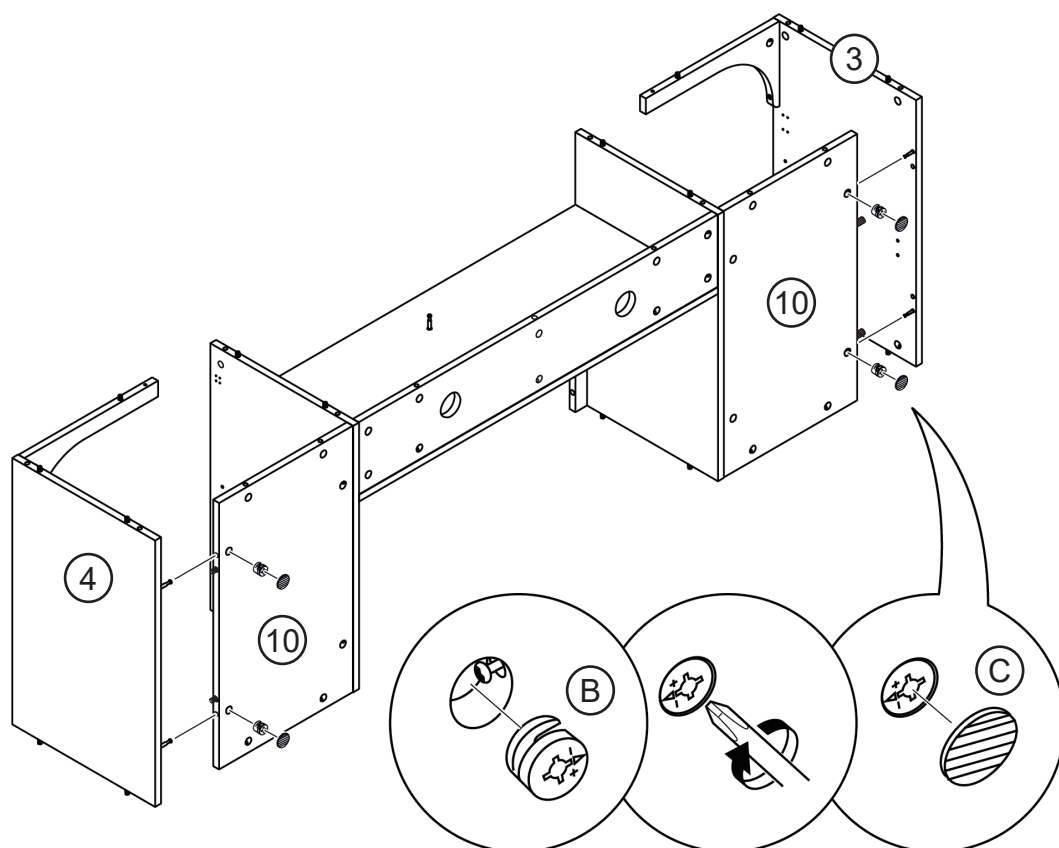




# 14

   Attach the divider panel (8) on top of the center panel (7).

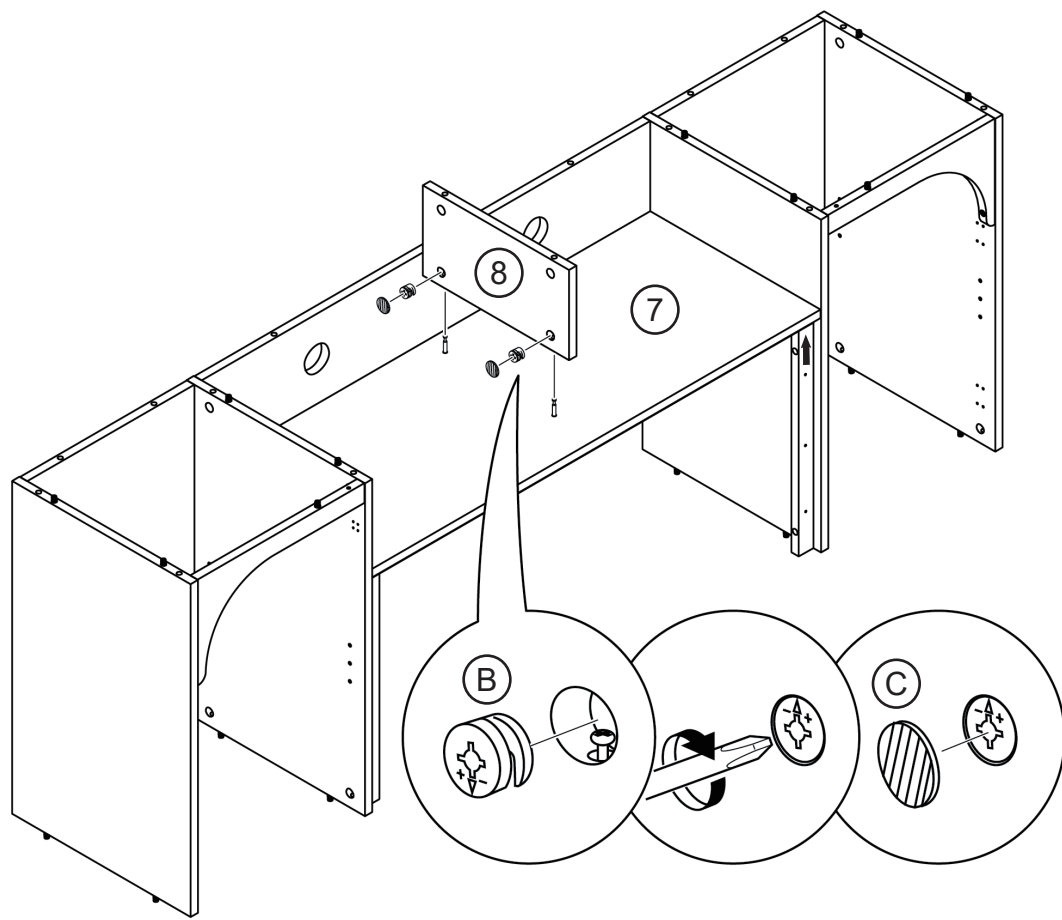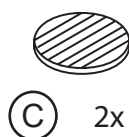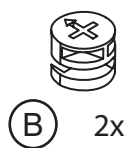


# 15

   Insert small wood dowels to the top panel (1).

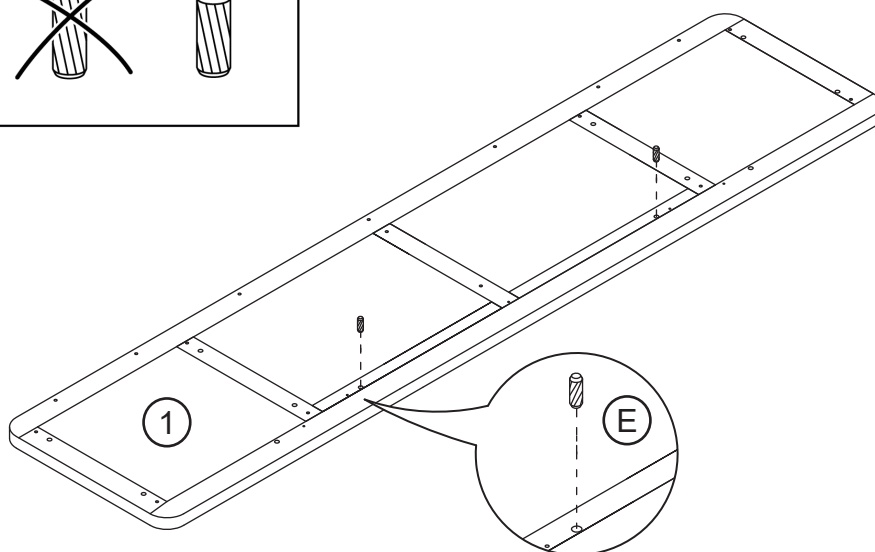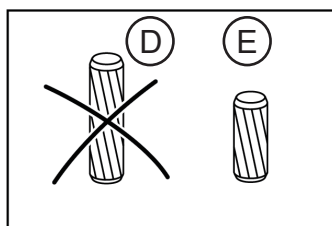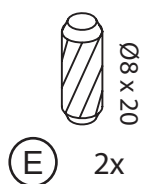



# 16

 Attach top crossbar (22) underneath the top panel (1).



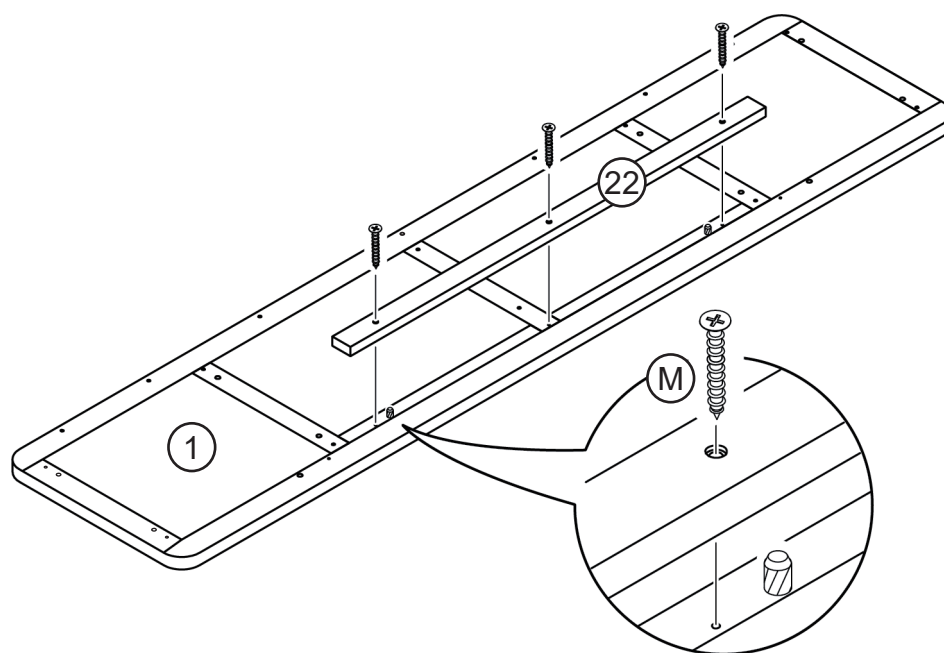


# 17


 
 
Attach cam bolts to the top panel (1).

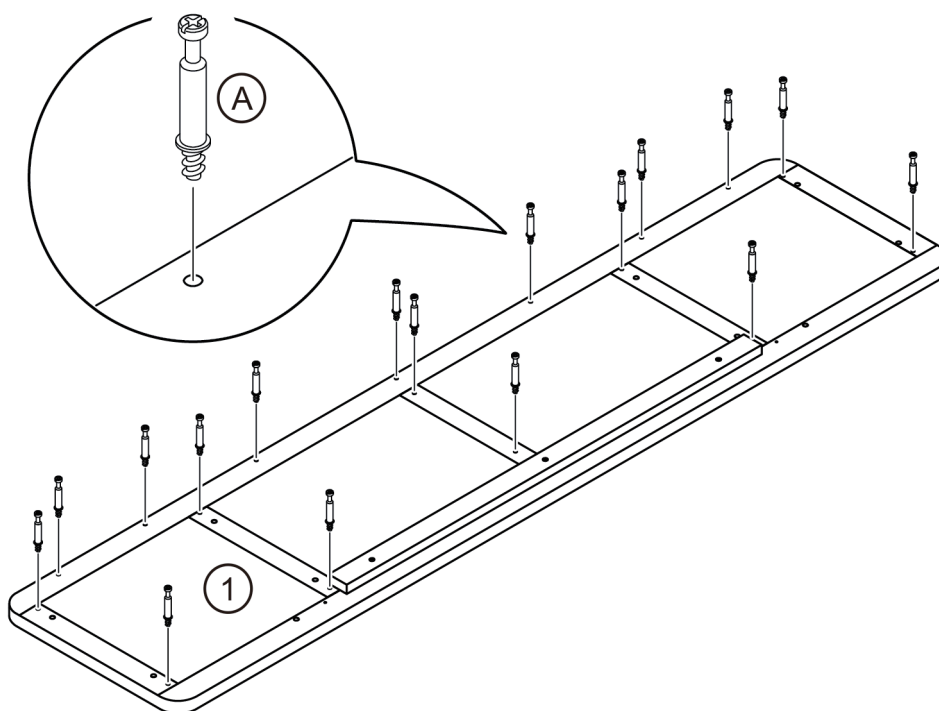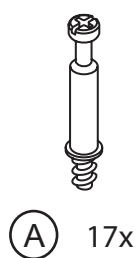

   Assemble the top panel (1) on top of the stand assembly.

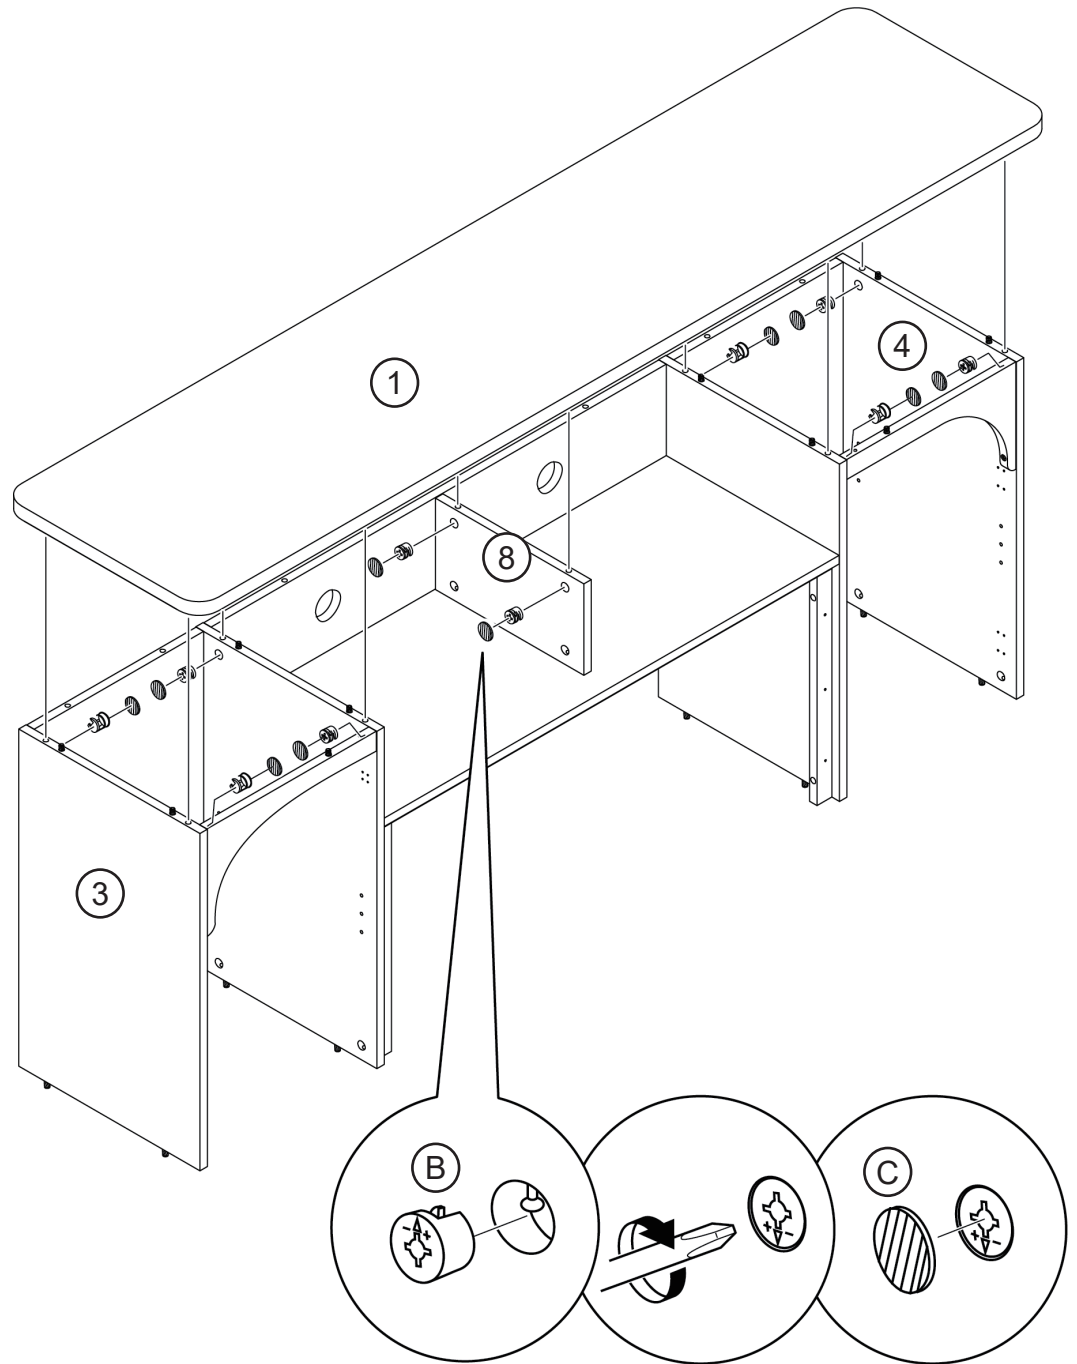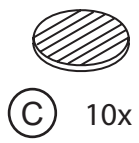
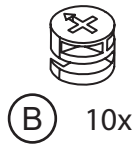


   Further secure the top panel (1) to the back panels.

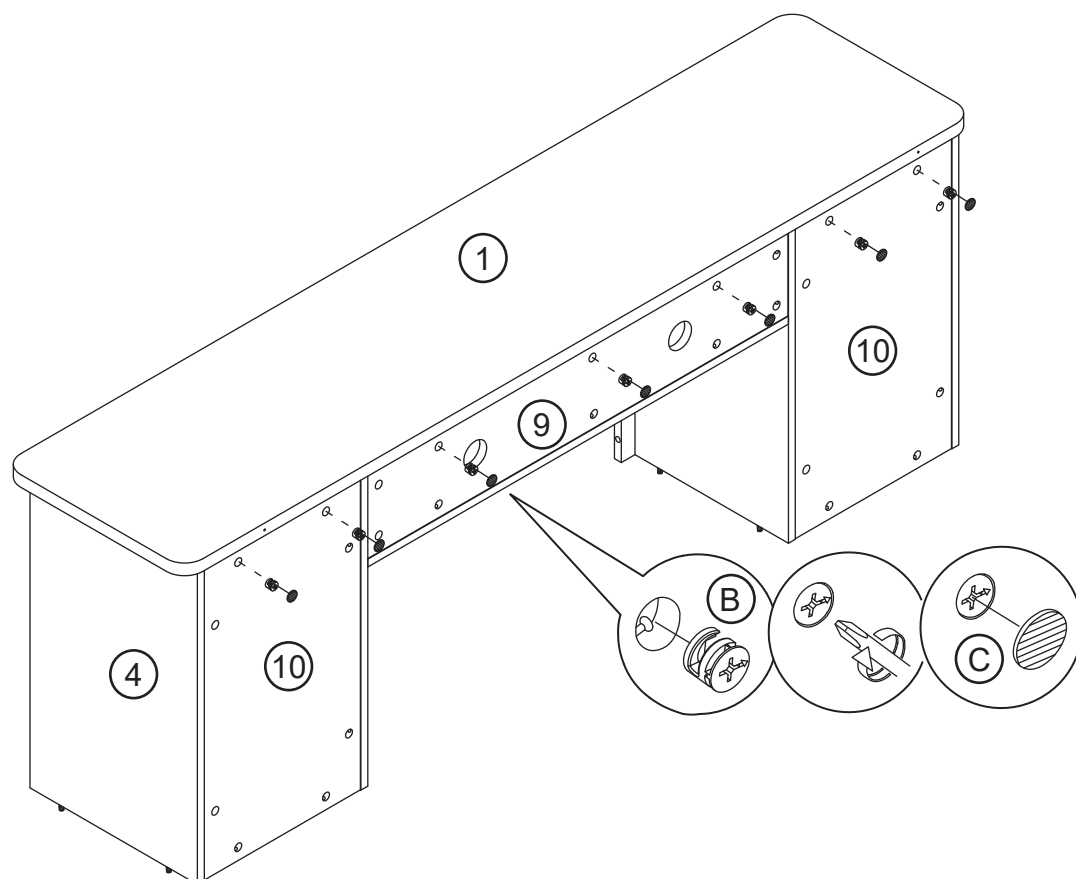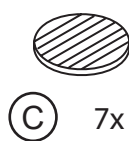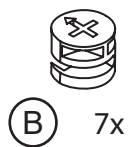



# 20

  Secure the trim panels (14, 15) to the top panel (1).

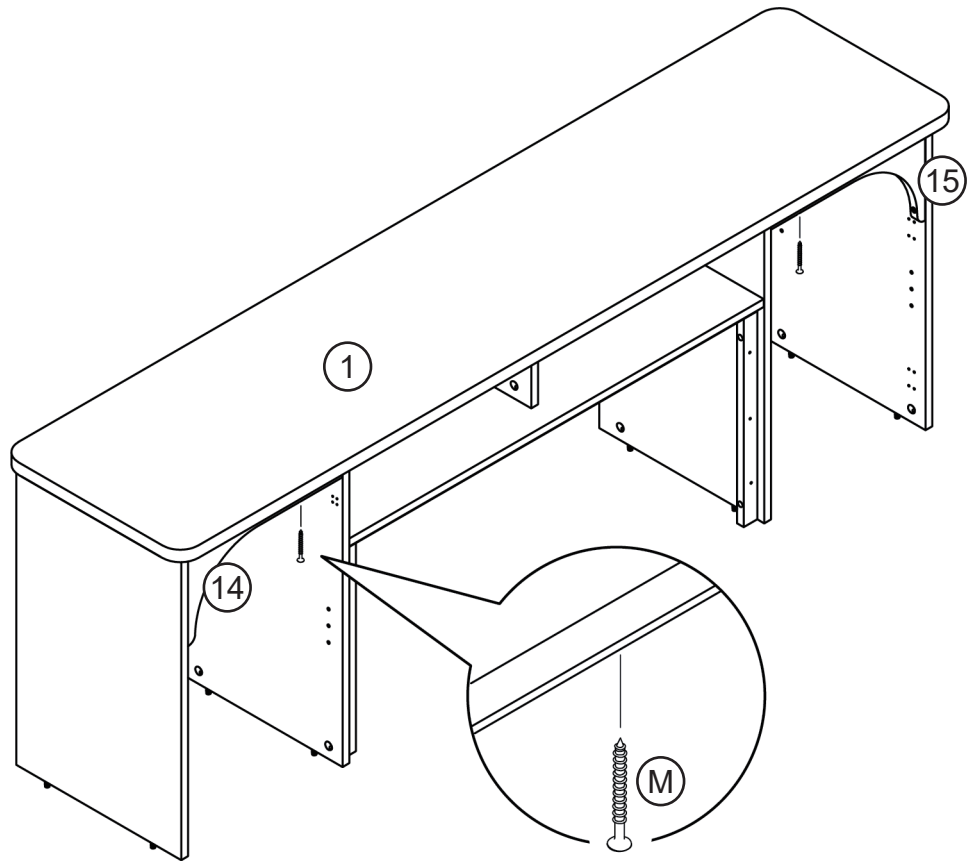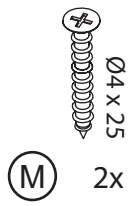




# 21

  Attach cam bolts to the bottom panel (2).


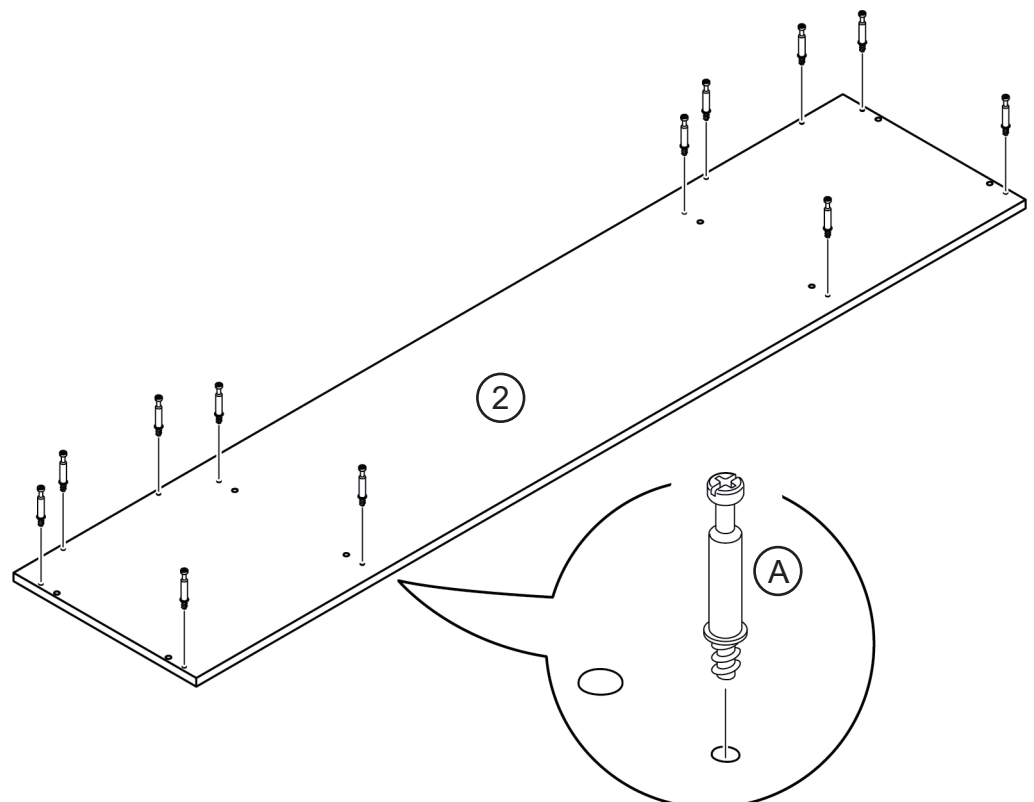
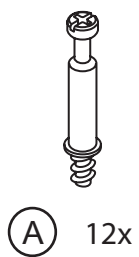




   Place the stand assembly upside down and assemble the bottom panel (2) to the stand.

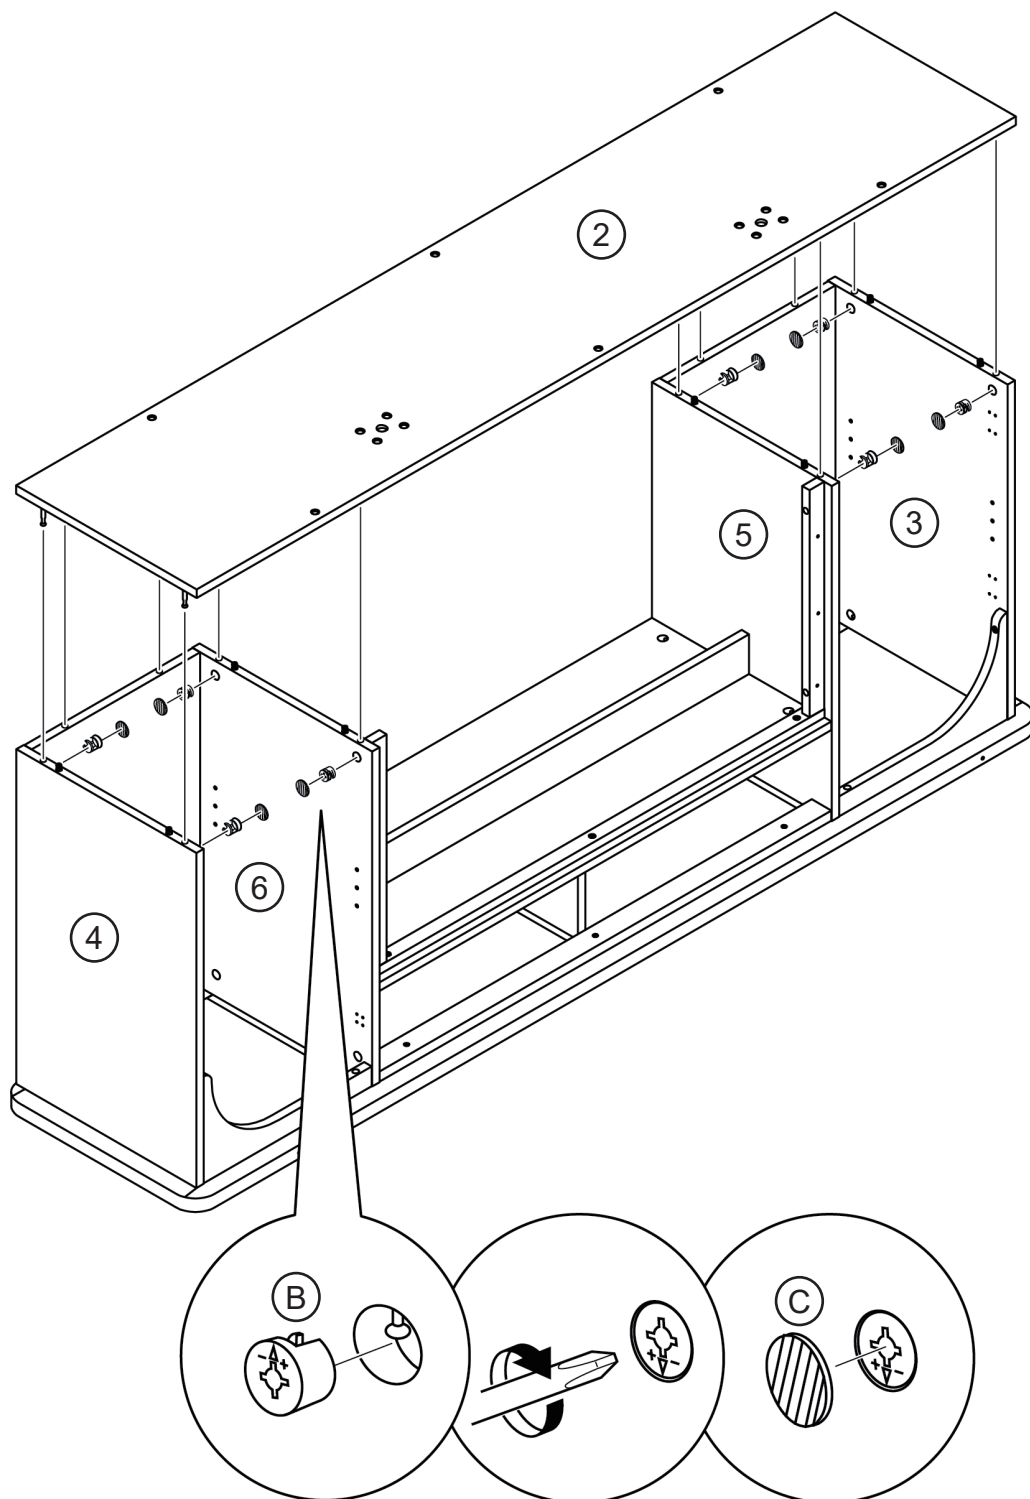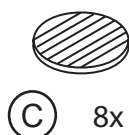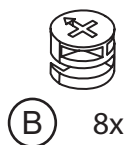


   Further secure the back panels to the bottom panel (2).

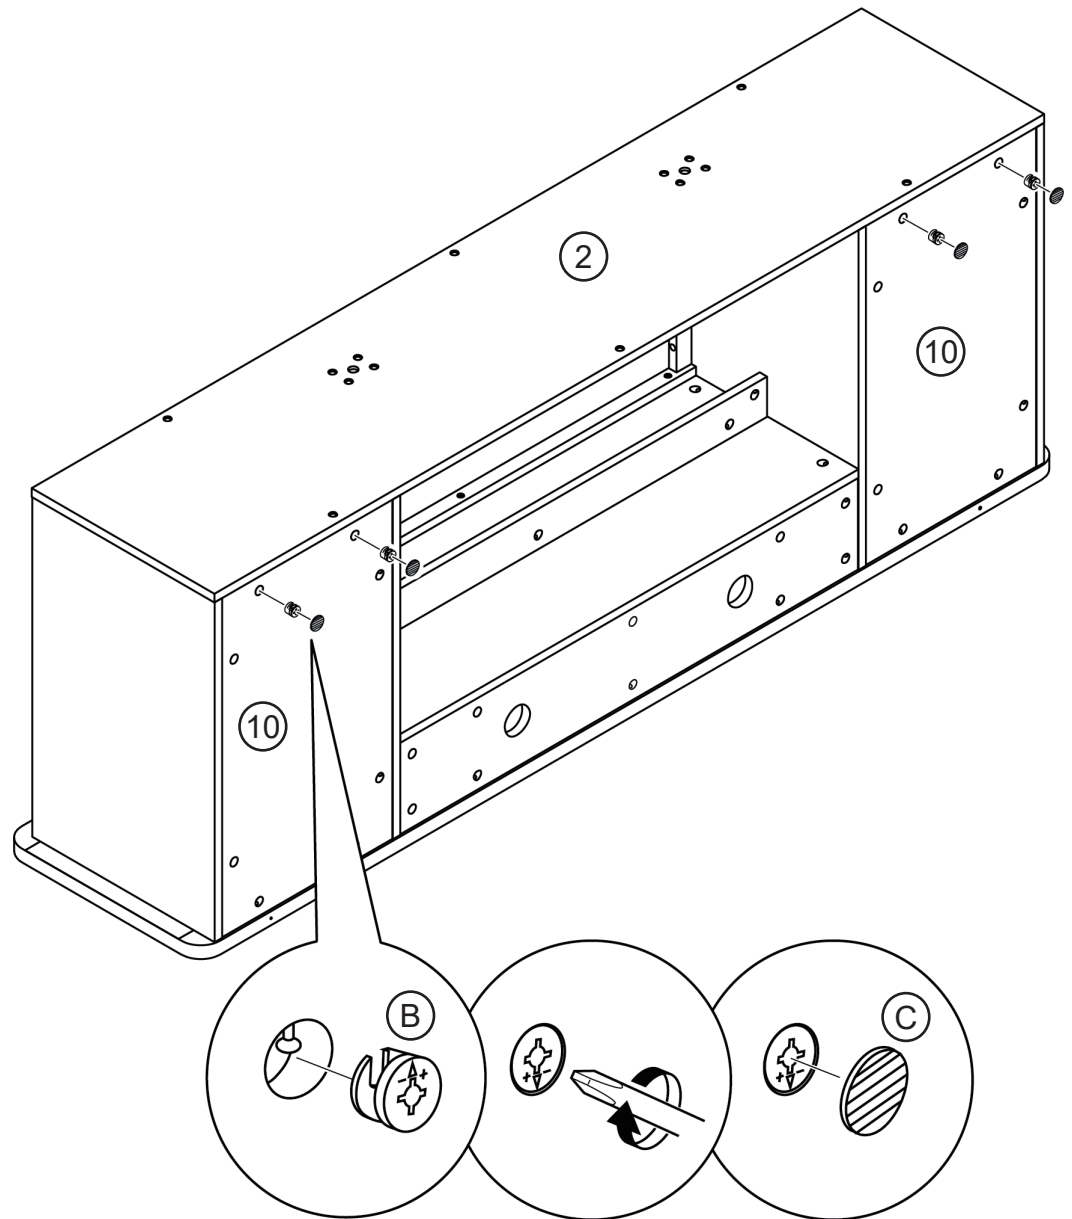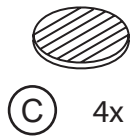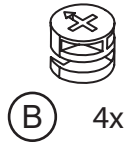



# 24

 Insert legs (20) into the base crossbars (21).

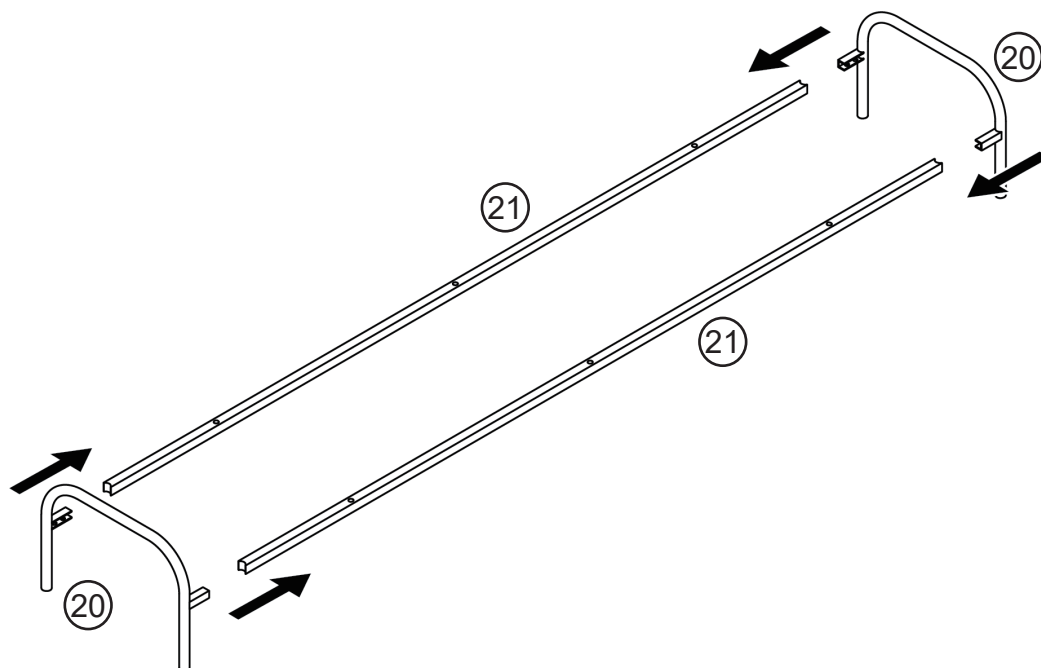



# 25

  Secure the legs (20) to the base crossbars (21).

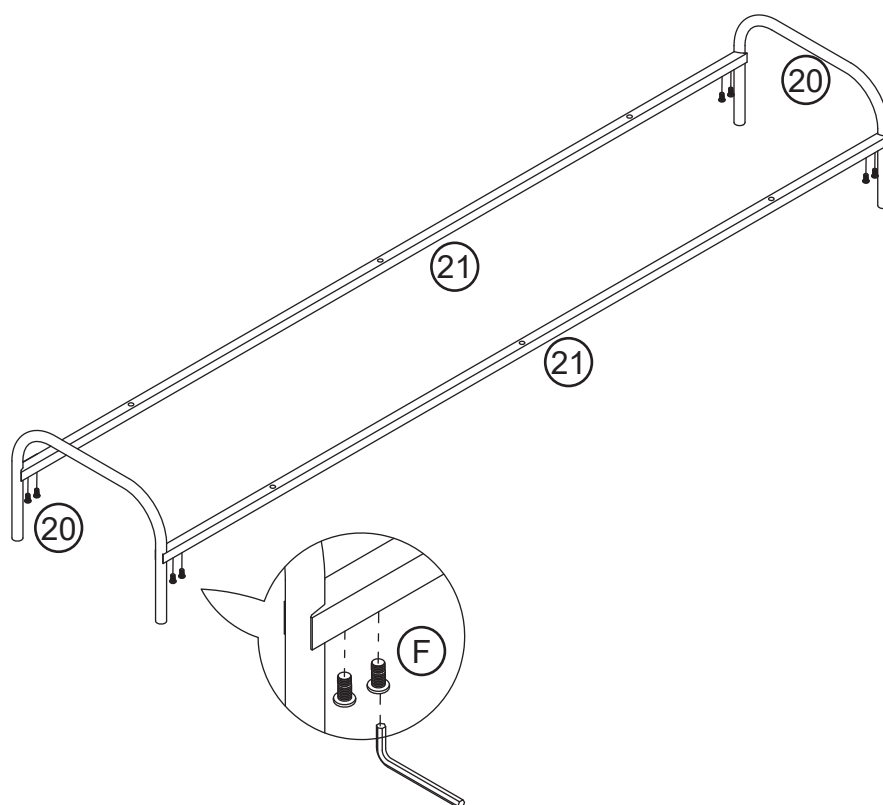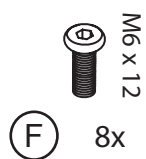



Note: Leave bolts 80% tightened.

  Attach the base to the bottom panel (2).

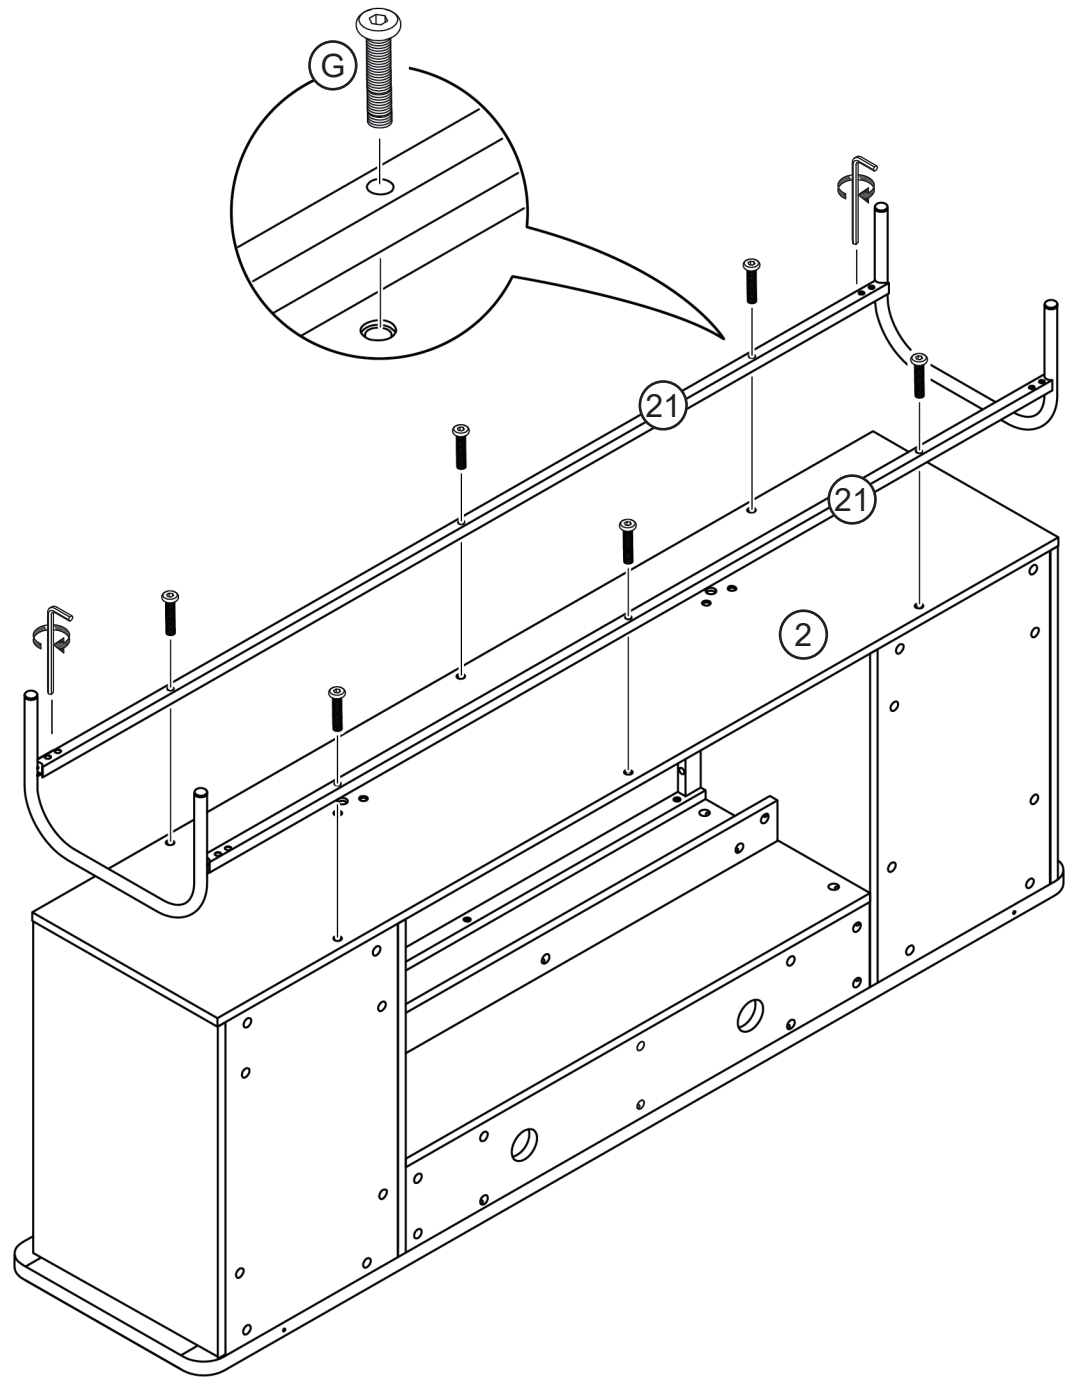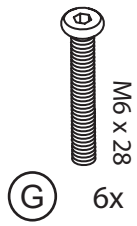


Note: Tighten all the bolts.

  Attach center legs to the bottom panel (2).

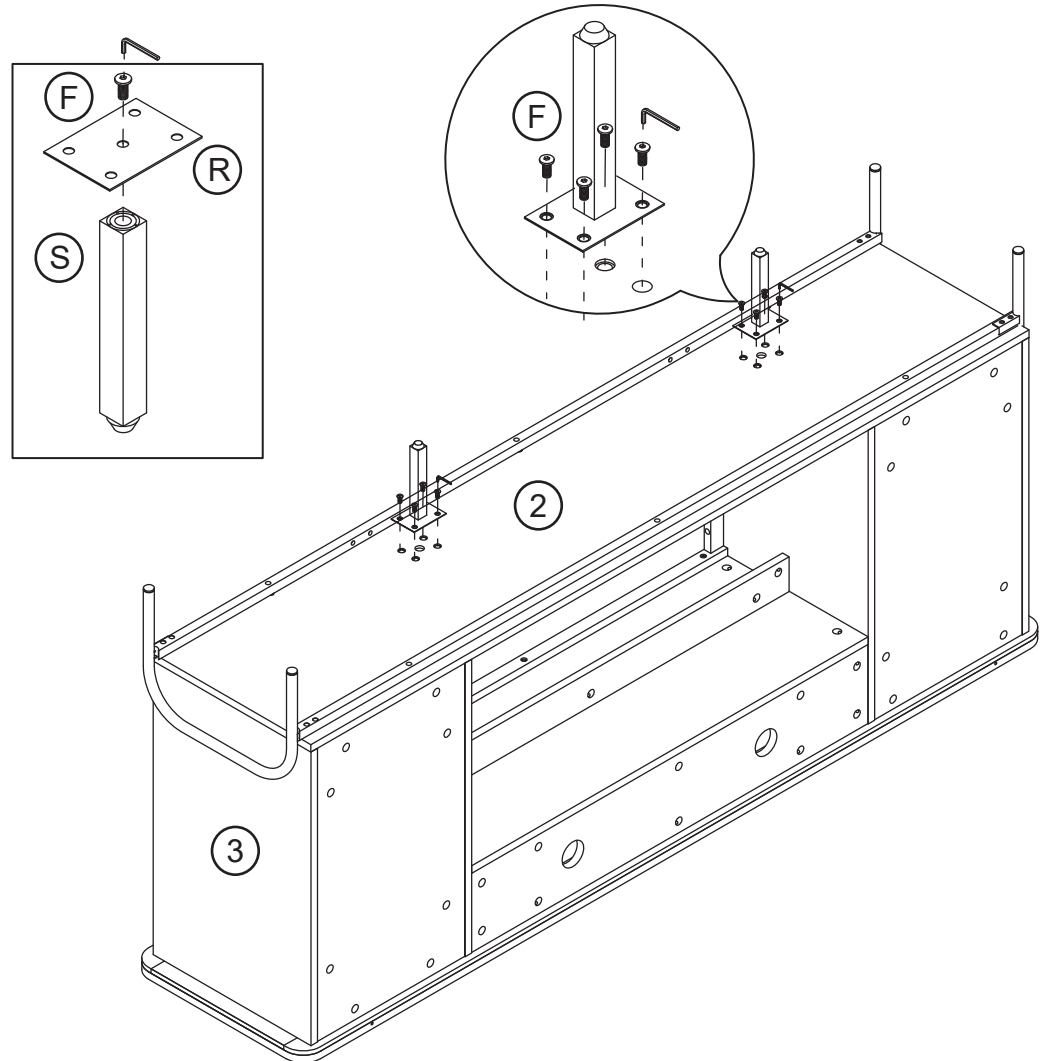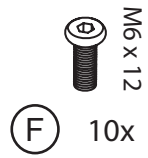

 
Attach magnetic catches to the medial panels (5, 6).

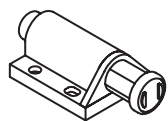

(O) 2x





 (P) 8x

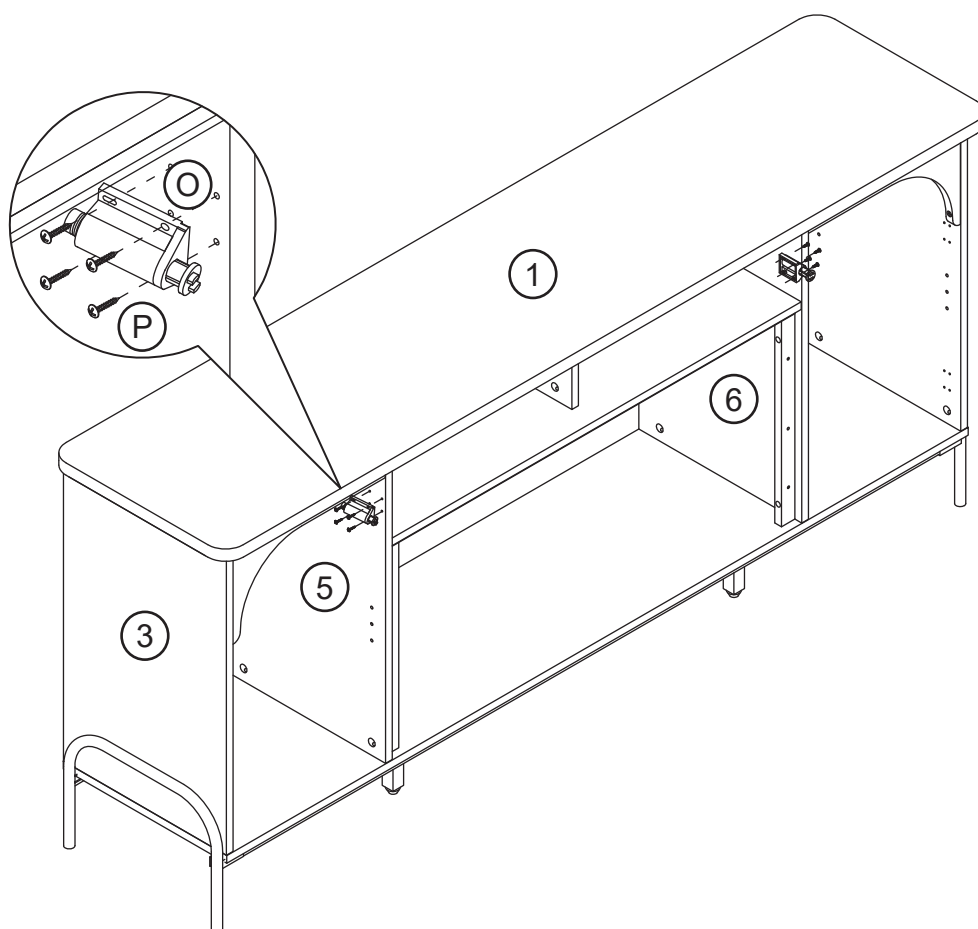



# 29

  Insert shelf pegs into the stand and put storage shelf panels (11) onto the pegs.

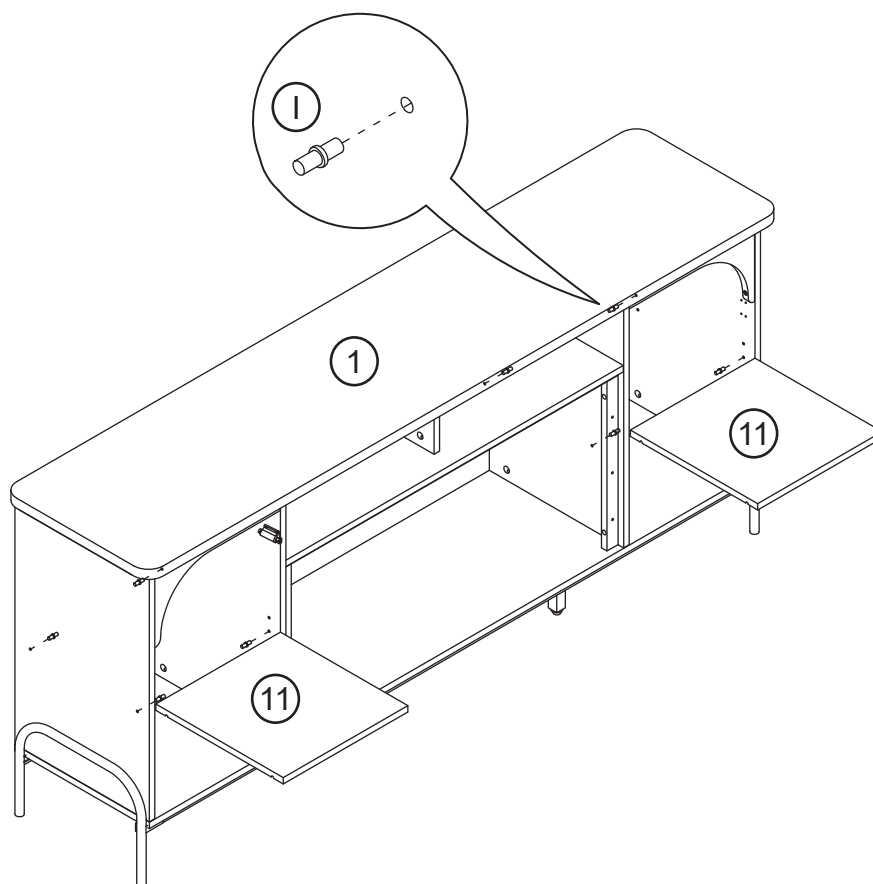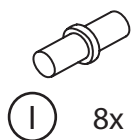


# 30

  Attach magnetic catch plates to the cabinet doors (12, 13).

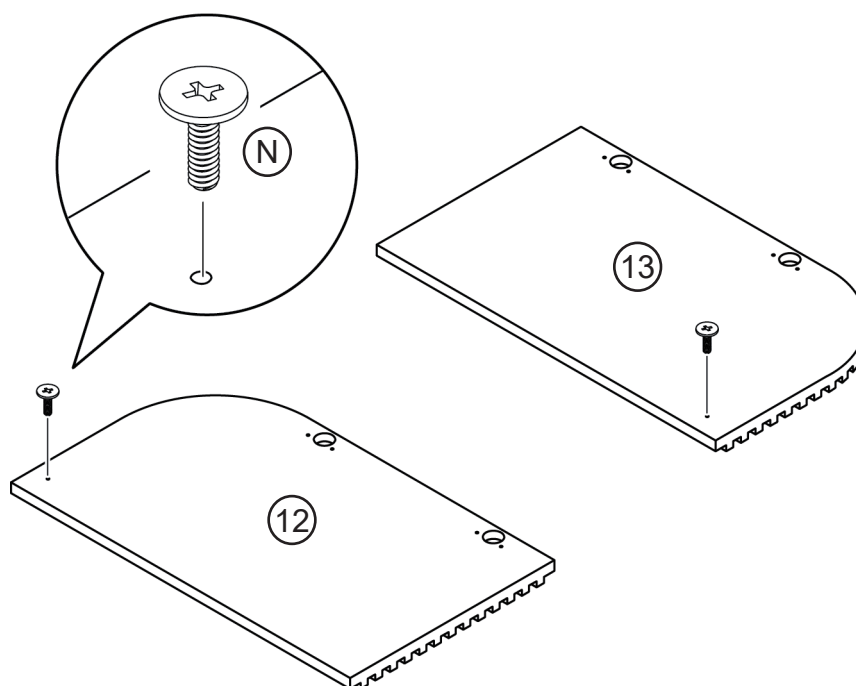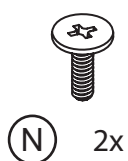

# 31

 
Attach door hinges to the cabinet doors (12, 13).

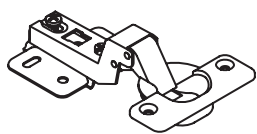

(J) 4x



 (K) 8x

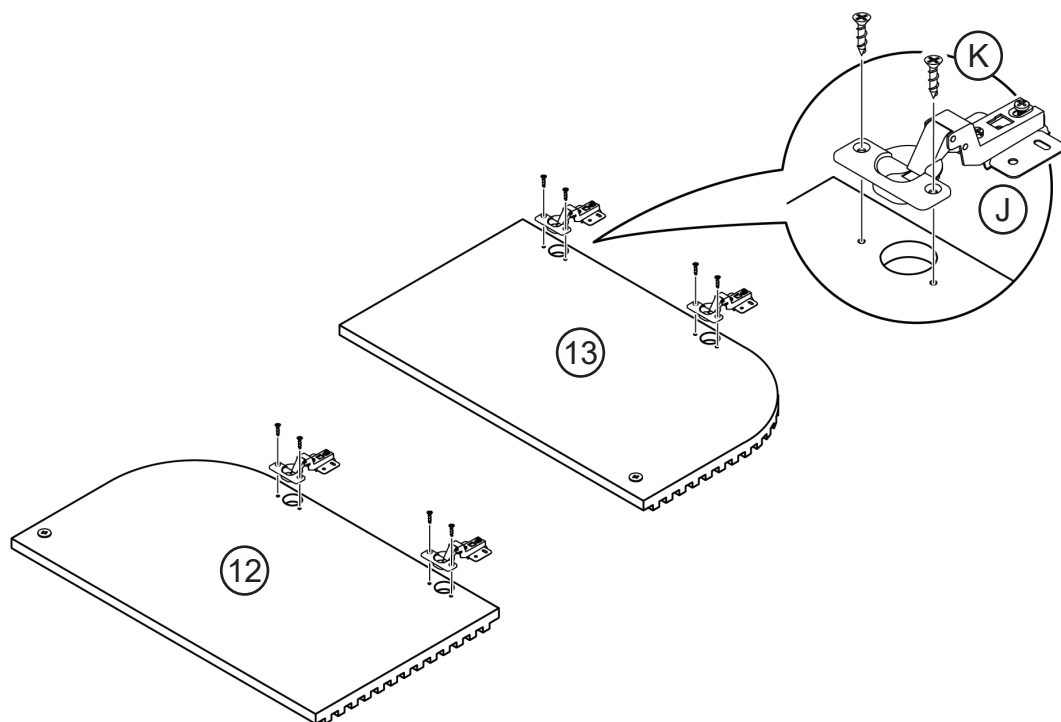


# 32

Attach cabinet doors to the stand.







 (K) 16x


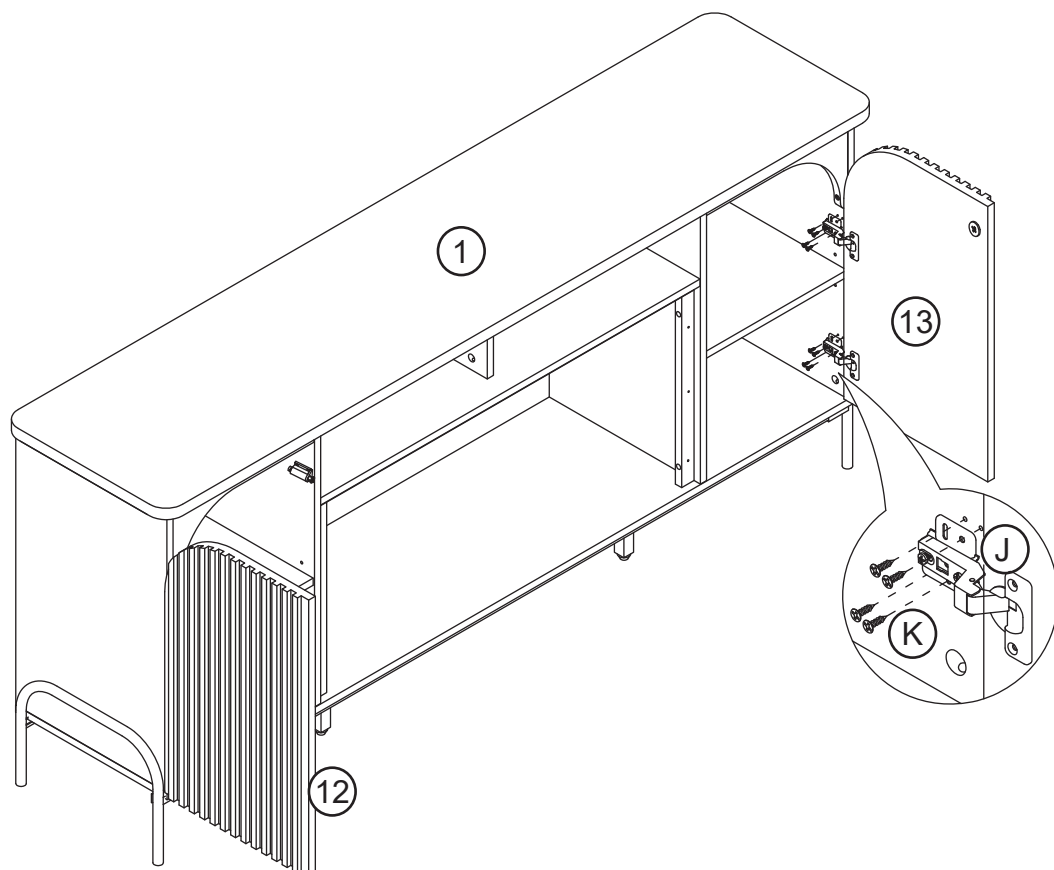




 
 
 
 
When the clearance of the door is uneven, Adjust the cabinet door according to the figure.  
If you still have trouble while adjusting the door, please contact us.

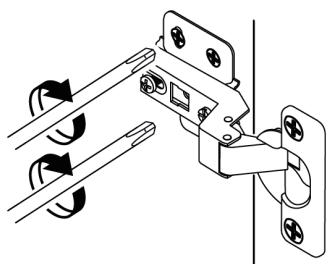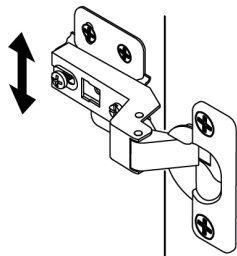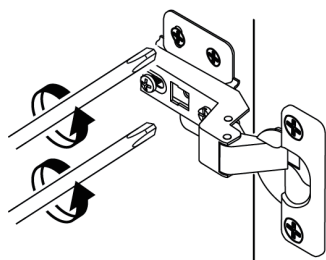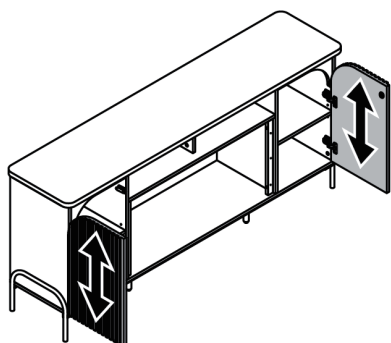

  Up and down  
adjustment by  
loosening the screws  
on the mounting  
plate.

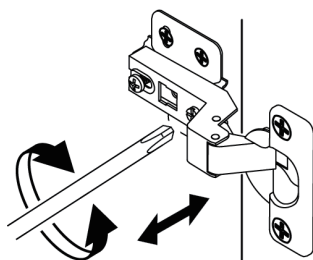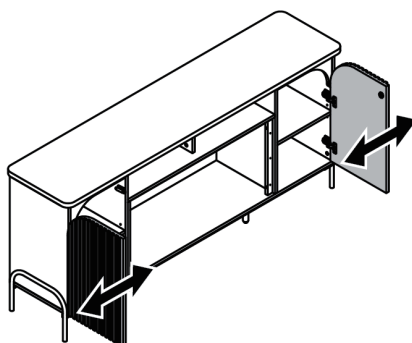


    Side to side  
adjustment using  
the front adjustment  
screw on the hinge.

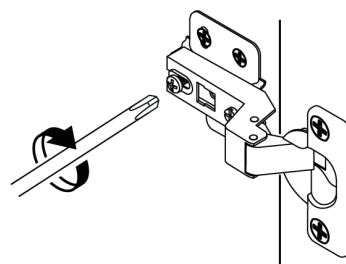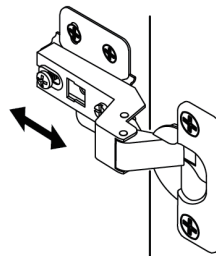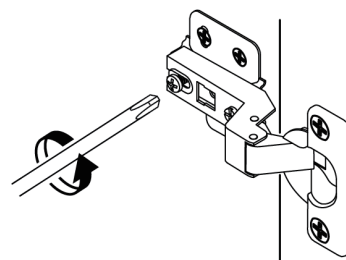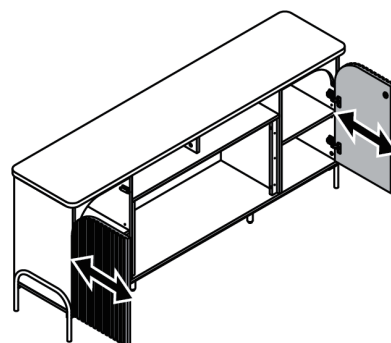


In and out  
adjustment by  
loosening the screws  
on the hinge arm.

 Rebound hinge, only need to gently press the doorpanel when opening the door.

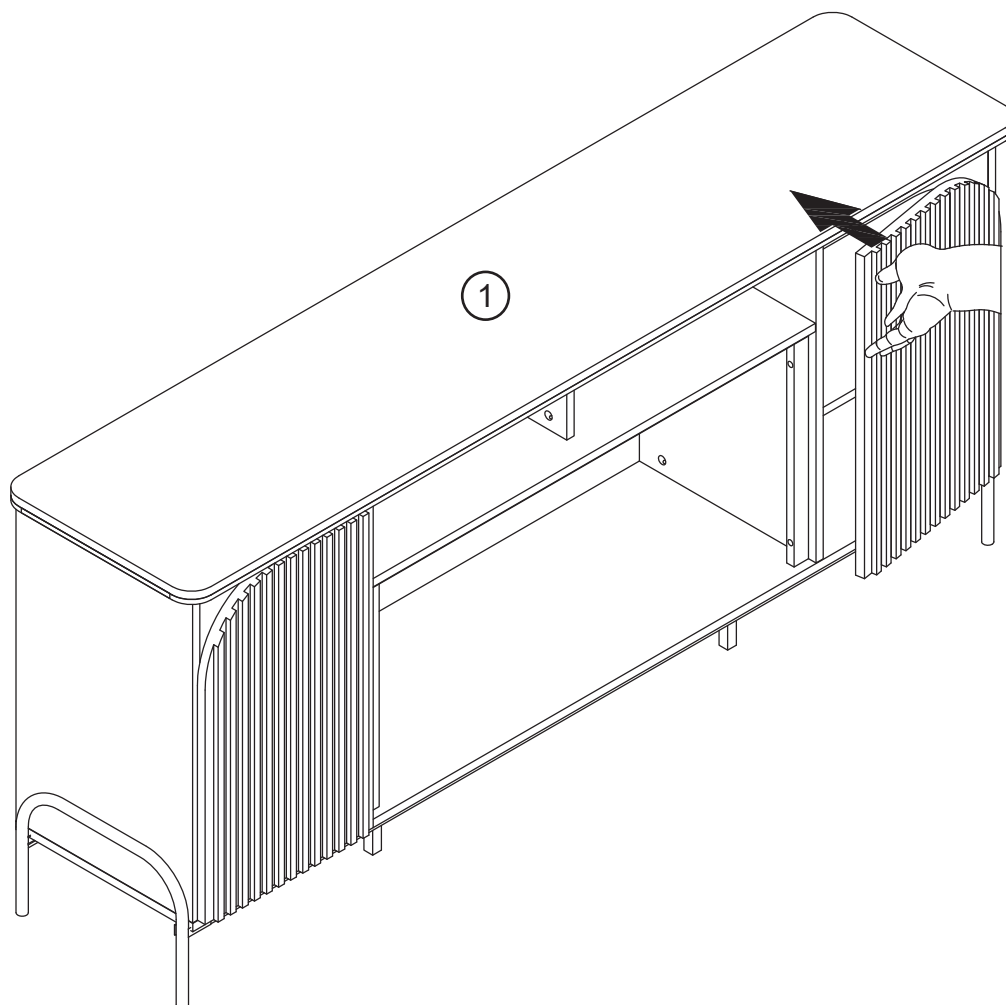

 
Install the fireplace to the stand from the front.

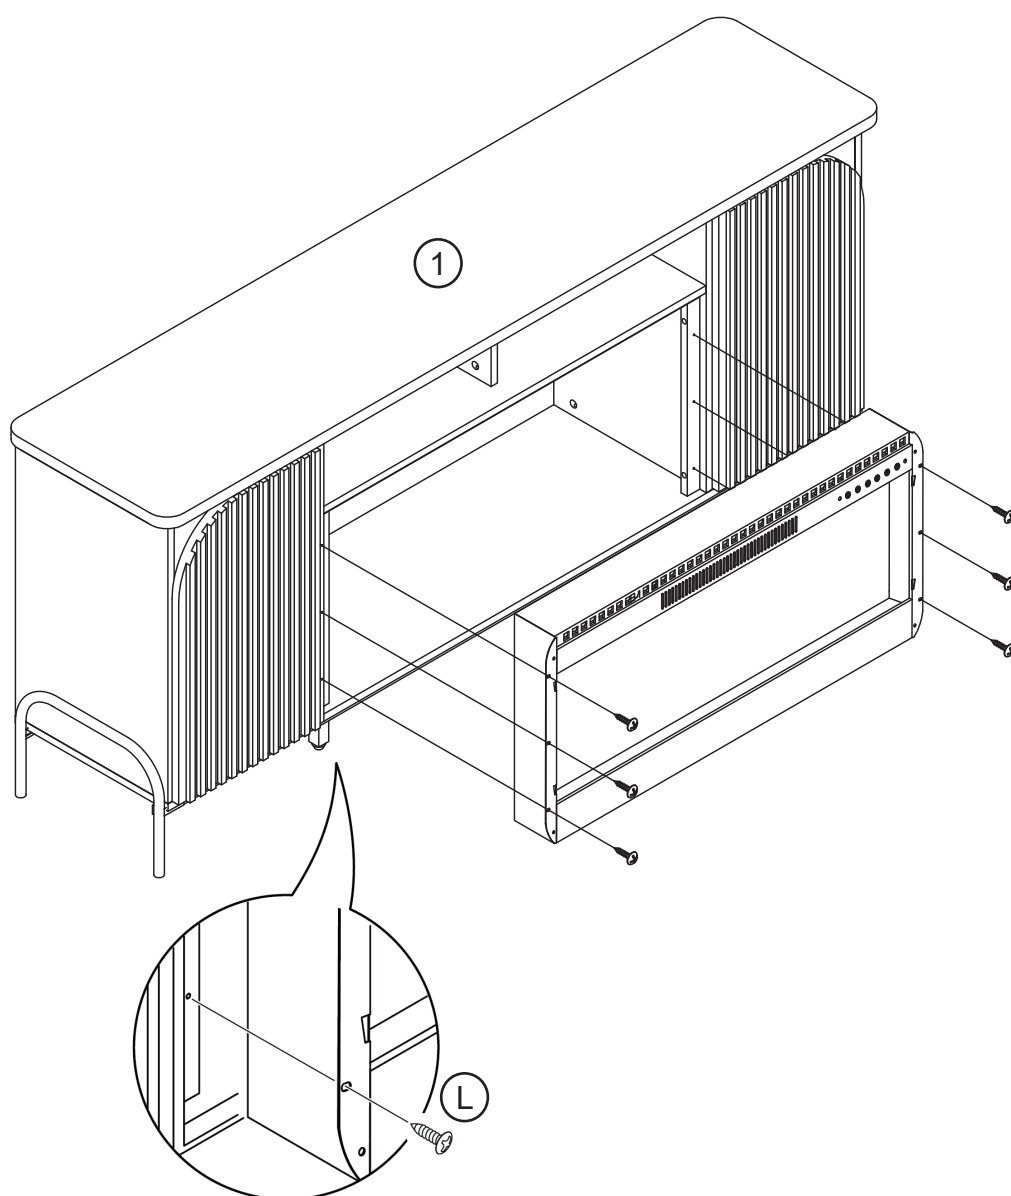

Set the unit from the front of the fireplace mantel and center it in the opening, check the alignment and attach the unit to the mantel by inserting screws through the drilled holes on the mantel.

# 35

 Place crystal rocks decoration into the fireplace.

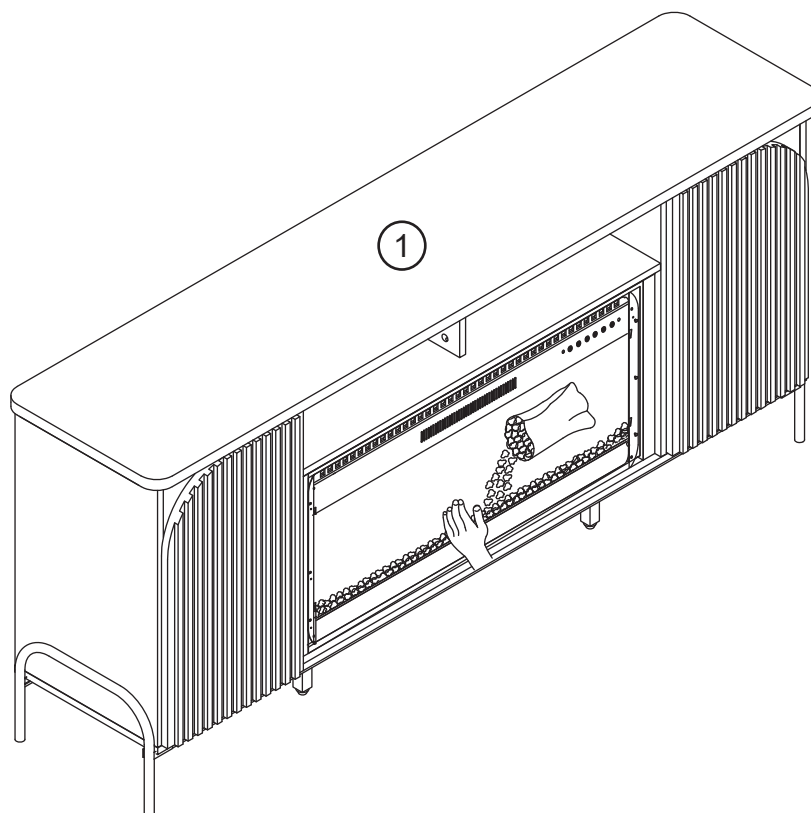


# 36

Attach the glass panel in front of the fireplace.




**CAUTION:**

Careful when handling glass to prevent injury or damage.




 
For the exact instruction, please refer to the user's manual.

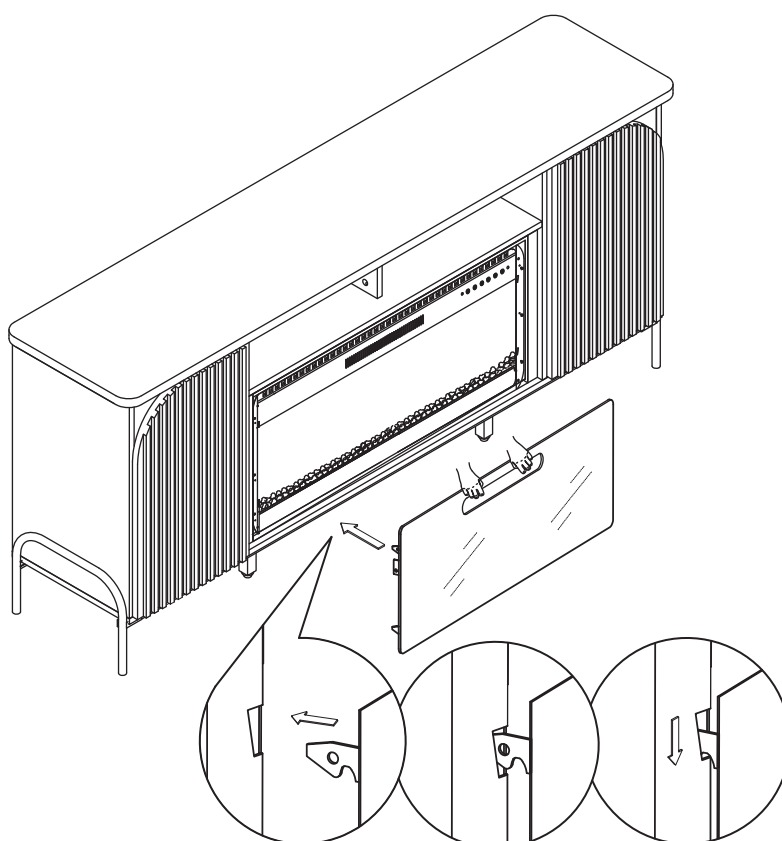

   Attach anti-tipping straps to the back of the stand.

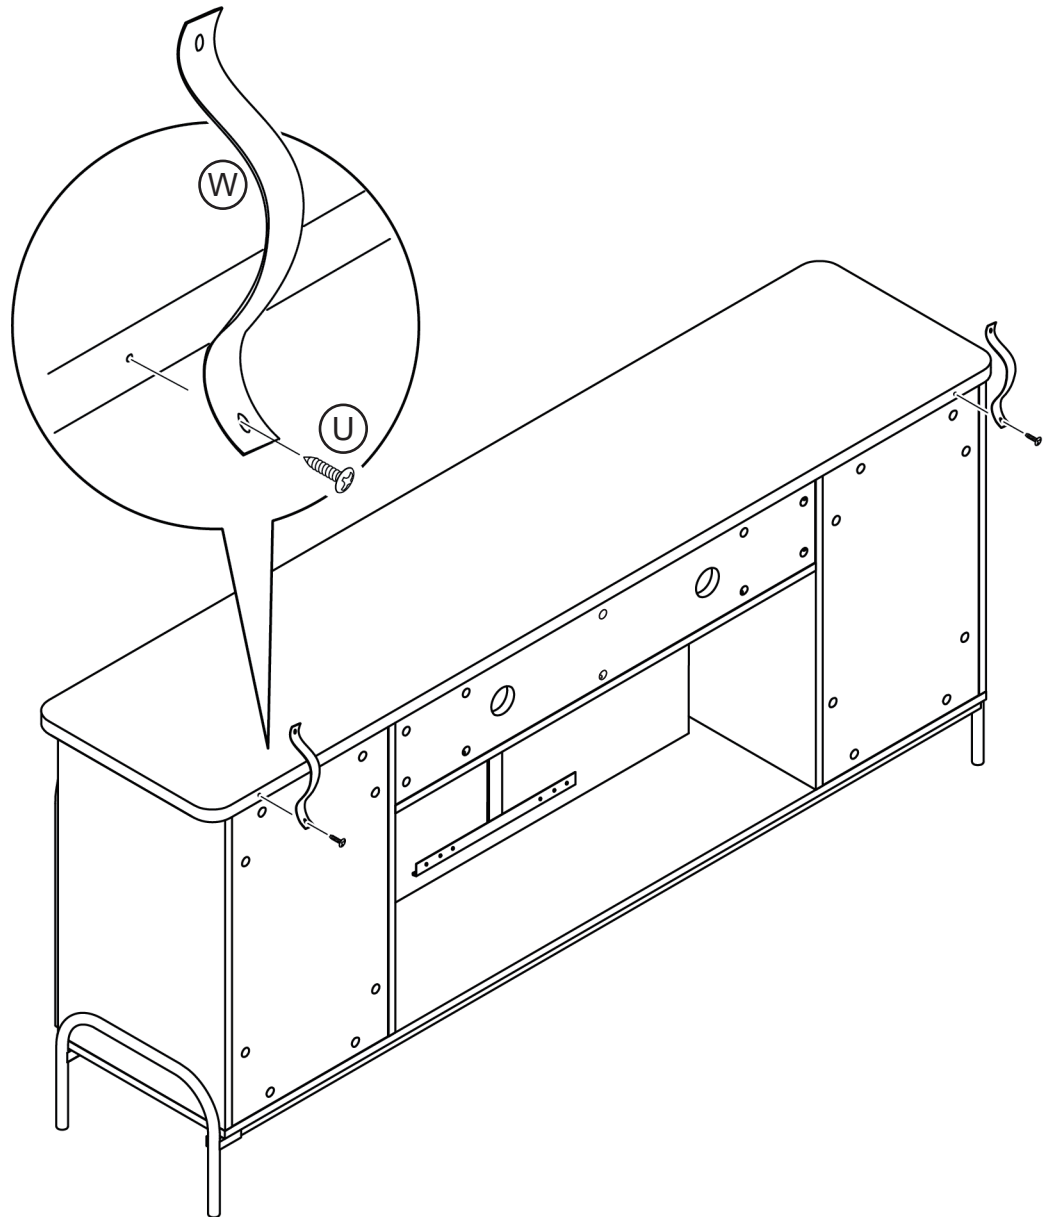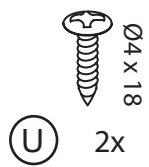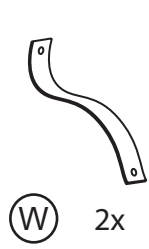

Affix the stand to a wall.

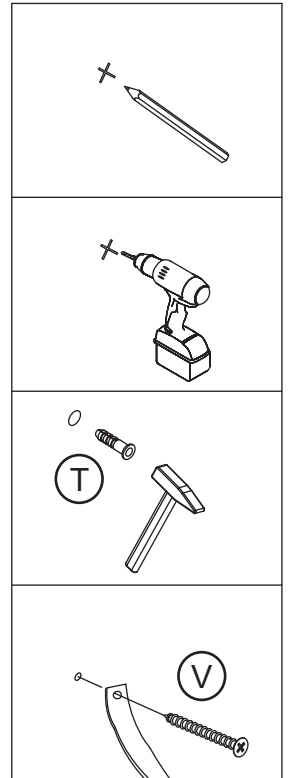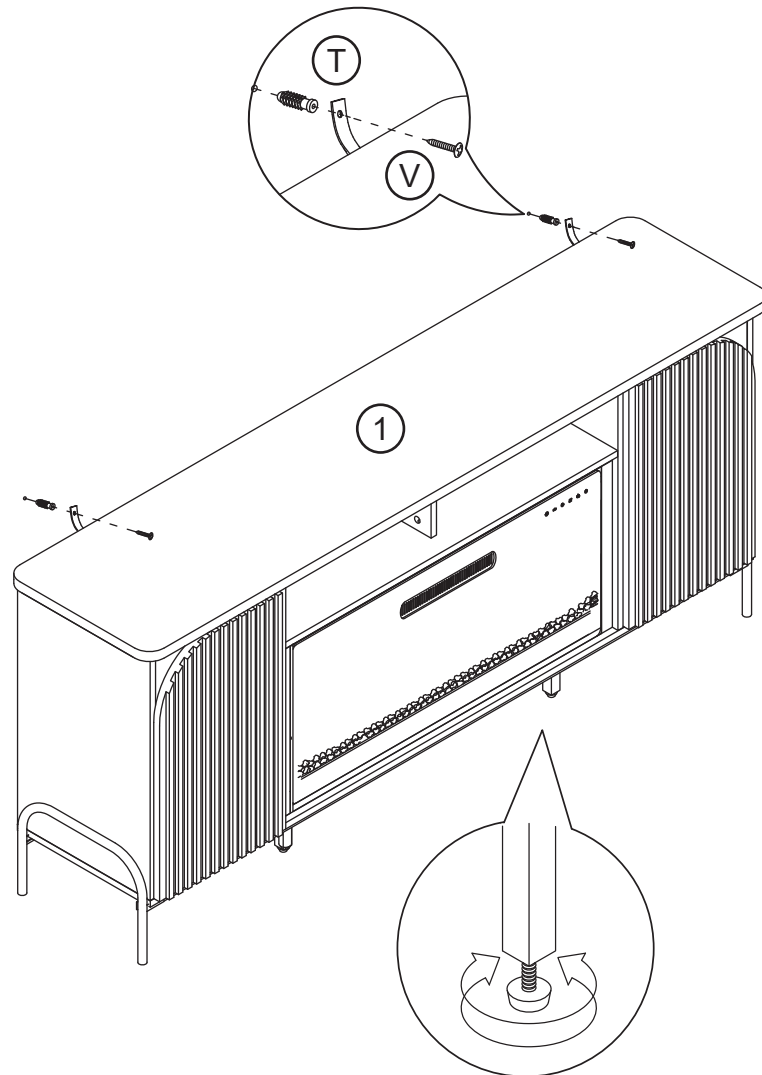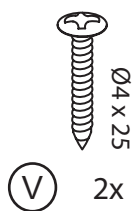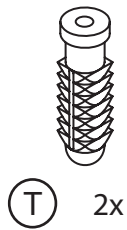    


Adjust table foot pads.  
Keeps stable even on uneven floors.

Furniture must permanently fixed to the wall stud with included anti-tipping device to prevent the furniture from tipping over.

- Mark the drill position on the wall with a pencil.
- Drill a small hole on the marked position.
- Insert a wall anchor into the drilled hole.
- Fixed the anti-tipping strap to the wall with provided screws.


## YOU'RE FINISHED!

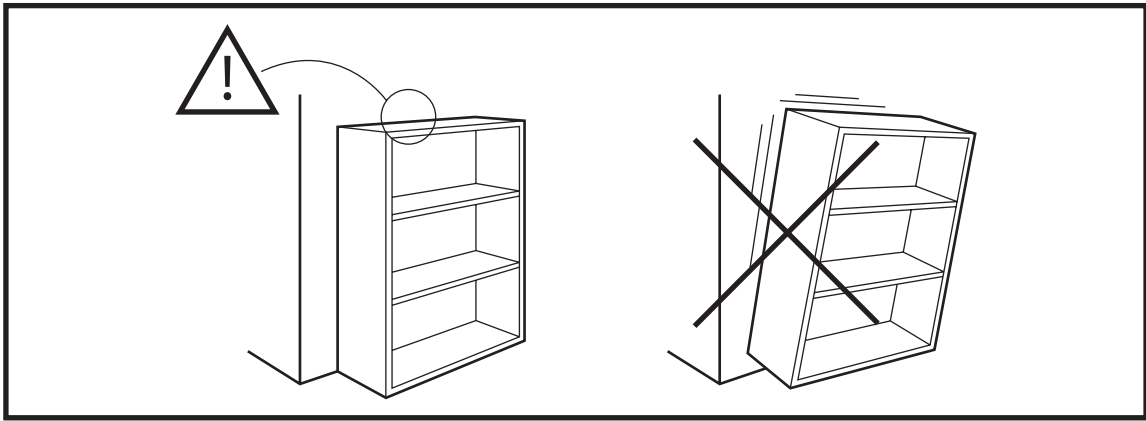 

## Warning

Serious or fatal crushing injuries may occur if the furniture tip-over. Furniture must permanently affixed to the wall with included anti-tipping device in order to prevent the furniture from tipping over.

 Different wall materials requires different types of wall anchors or screws. Use a suitable wall anchors or screws for your specific wall in order to secure the stability and load bearing capacity of the furniture. If you are uncertain about which type of device to use, please contact us or your local hardware store.

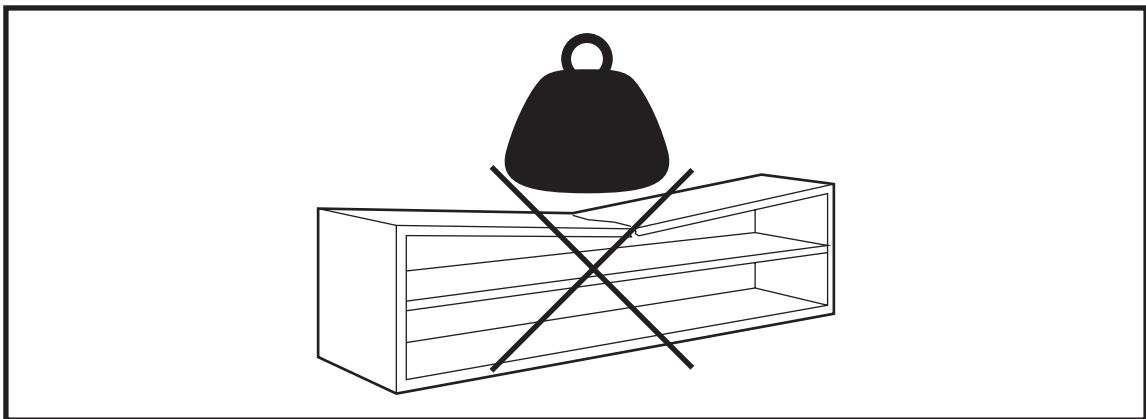

## Warning

Only place items on top of the product if they meet the recommended size and weight limits.

Climbing on, stepping on, or placing overweighted objects on the product may cause property damage and/or injuries.

Items placed onto this product must be resting on a support surface without hanging over the edges.

## WARNING

For use with televisions weighing 70lbs (31.8kg) or less. Use with heavier televisions may result in instability, causing tip over resulting in death or serious injury.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

## NOTICE

The recommended maximum width of the television is 75 inches. Do not exceed the maximum load capacity.

This product is designed for flat panel TVs only.



# BELLEZE<sup>®</sup>

## FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of longevity, please follow the recommendations in this care and maintenance guide.



### MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly.
- Check the tightness of all bolts every 2 months and tighten them if necessary.



### CLEANING

- Clean the surface of the MDF (medium - density fiberboard) with a lightly dampened cloth.
- A small amount of mild soap can be used if necessary.
- Dry the surface immediately after cleaning.

- ⚠ DO NOT use bleach or alcohol to clean the surface.
- ⚠ DO NOT apply wood treatment on parts made with MDF.

MDF will swell and distort when exposed to water damage. Make sure to dry the furniture immediately after cleaning.

## ⚠ WARNING

The manufacturer and seller are not responsible for any and all liability relating to personal injury, property damage or losses, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification or neglect of this product.





## WARRANTY

BELLEZE products come with a 1-year warranty from the date of delivery.  
**Register your product on our website to enjoy our limited lifetime warranty!**



## AFTER-SALE SERVICE



Encounter any difficulties or missing parts?



Contact us at **1-800-682-6376** or email us at **support@belleze.com**



We will send you replacement.



Hassle free!  
No need to worry about repackaging and sending your item back.

**We hope you enjoy your new BELLEZE furniture!**  
**Share your photos on Instagram and tag us: @bellezefurniture.**

---

### FOLLOW US:



@bellezefurniture

---

### CONTACT INFO:

support@belleze.com  
1-800-682-6376

---

**BELLEZE®**