 
 
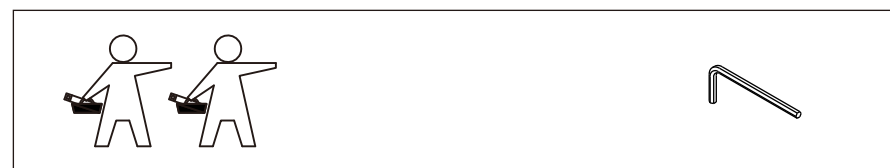 


Instruction Manual

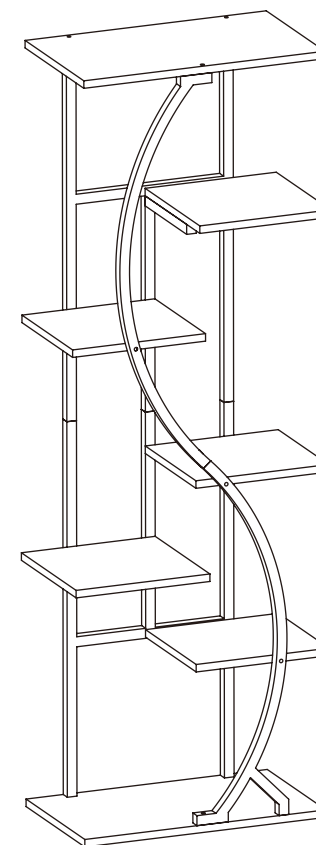

Feature and Specification

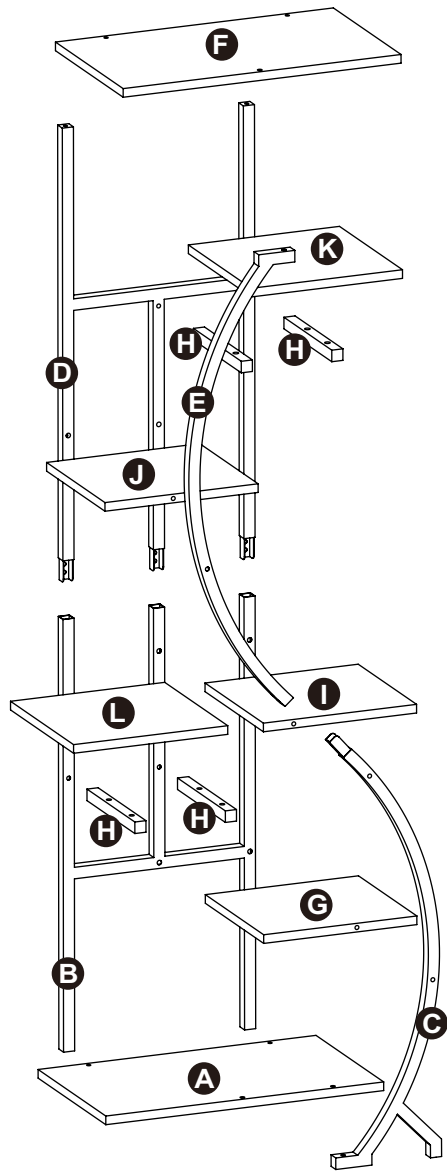


Main Parts


Ax1		Bx1		Cx1	
Dx1		Ex1		Fx1	
Gx1	Hx4	Ix1	Jx1	Kx1	
Lx1	ax9	bx8	dx2	ex8	
	 M6*35mm	 M6*30mm		 M6*10mm	
fx9	gx1	hx1	kx8	mx6	px1

Installation Diagram

 
1.

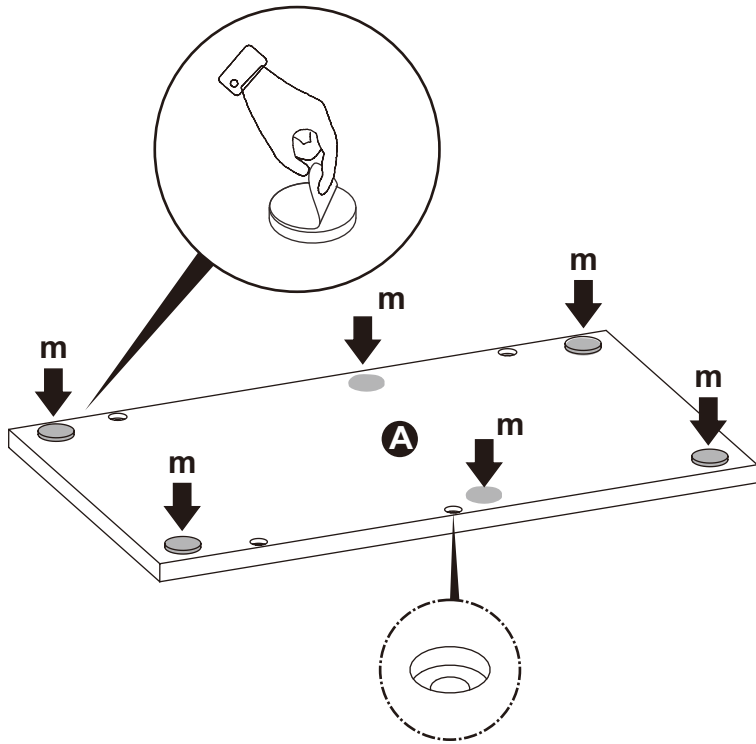

 
2.

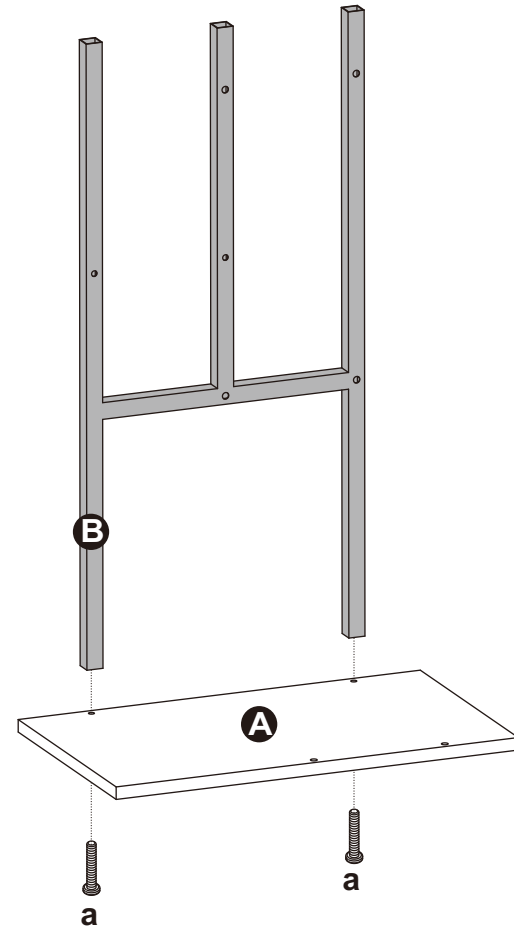

 
3.

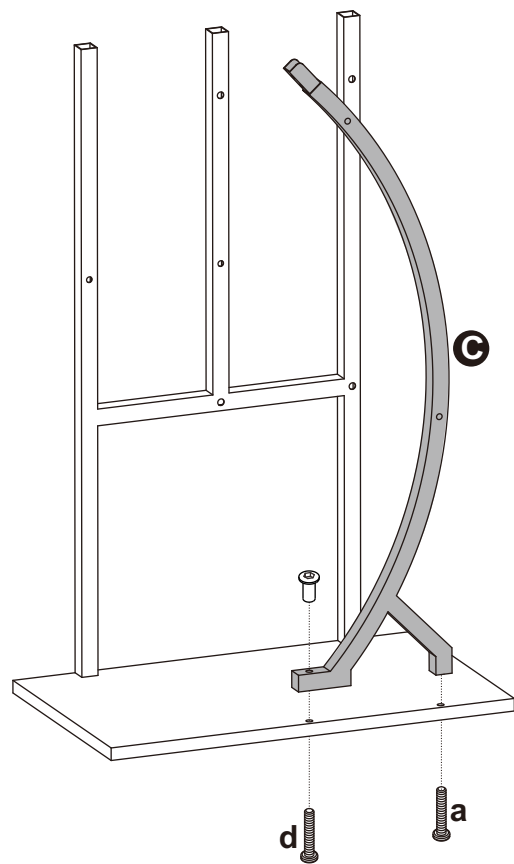

 
4.

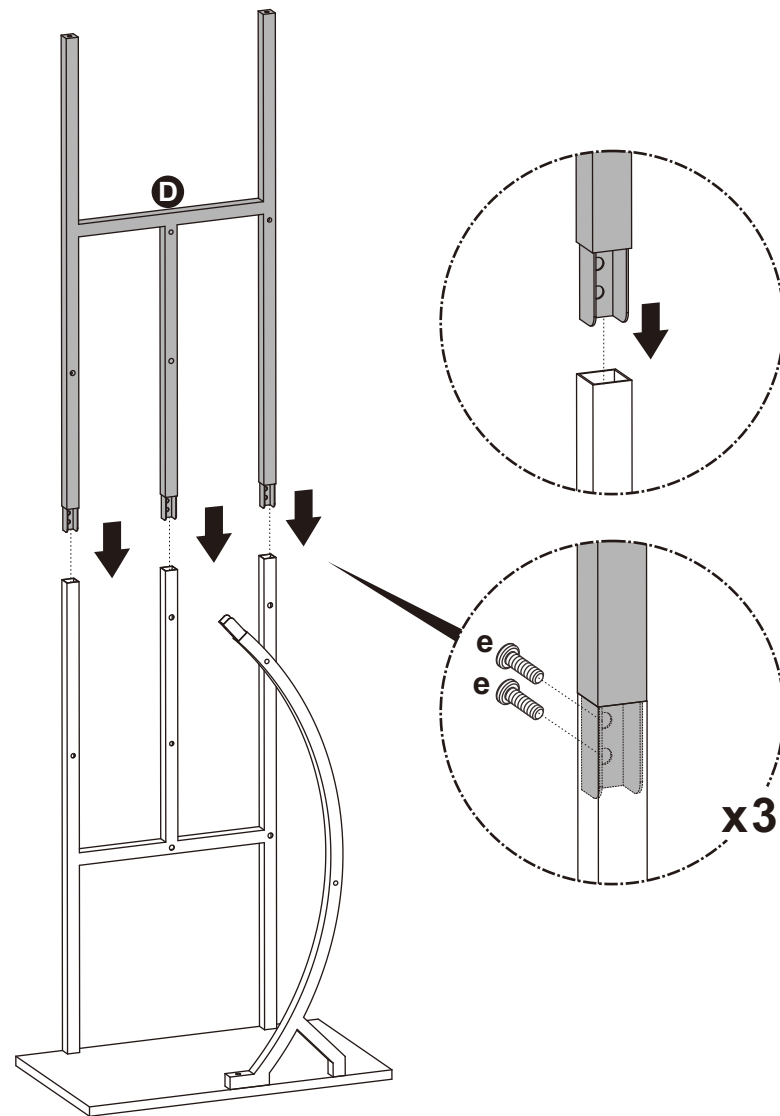

 
5.

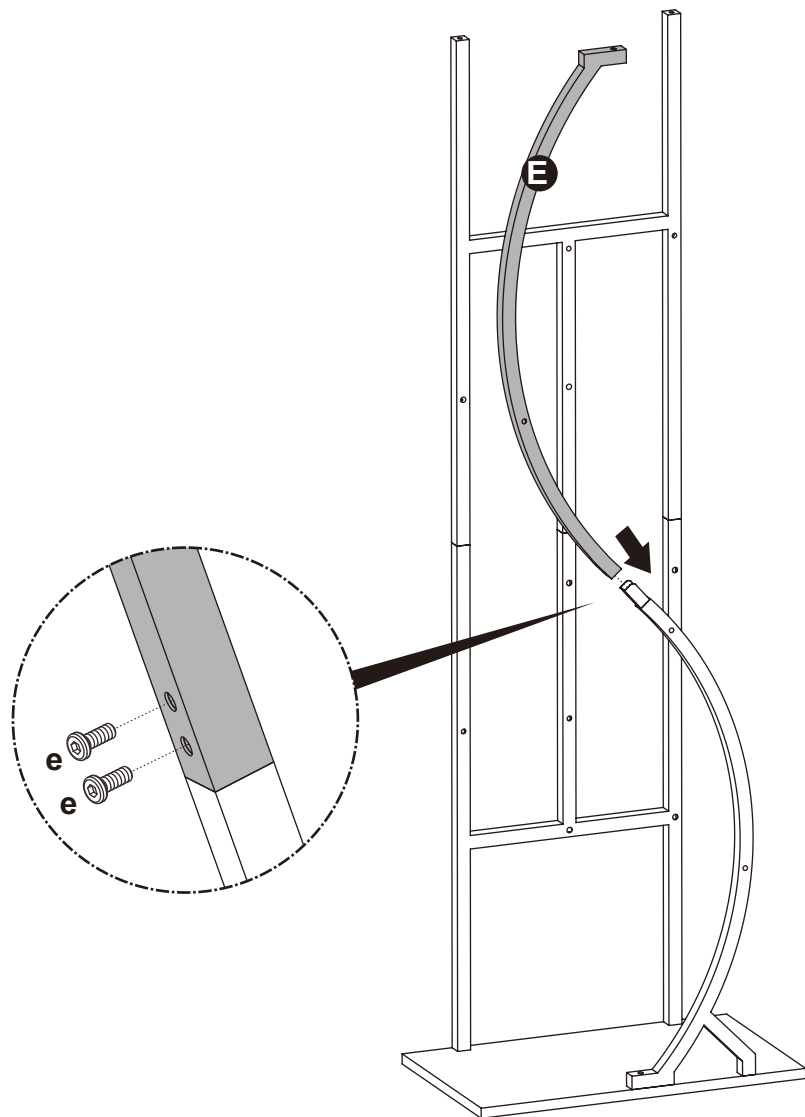

 
6.

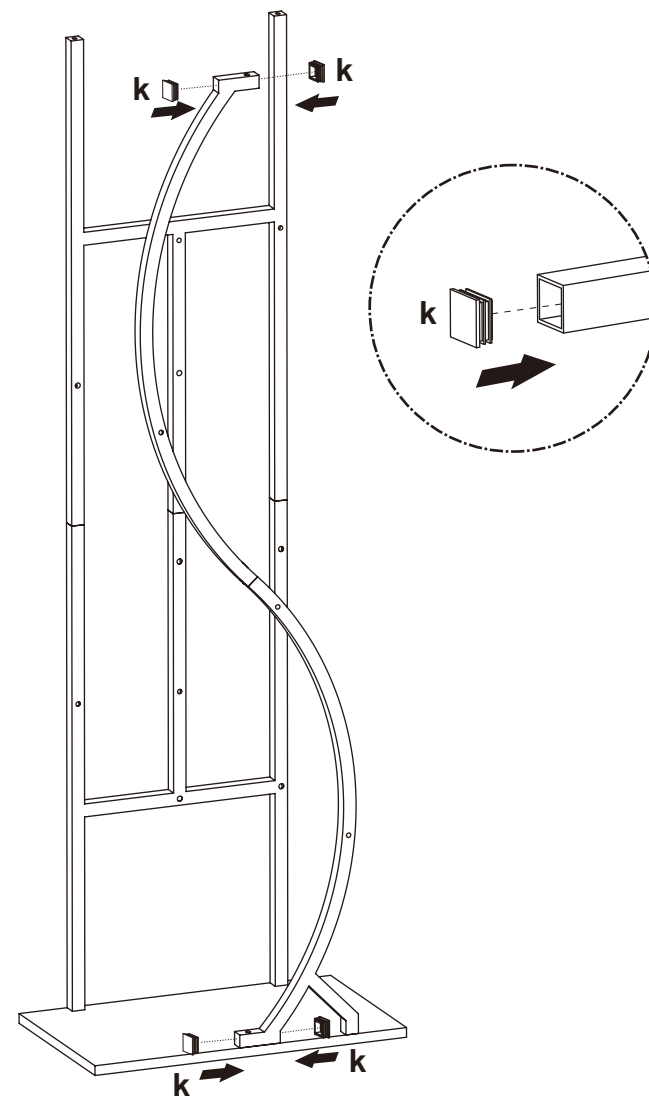

 
7.

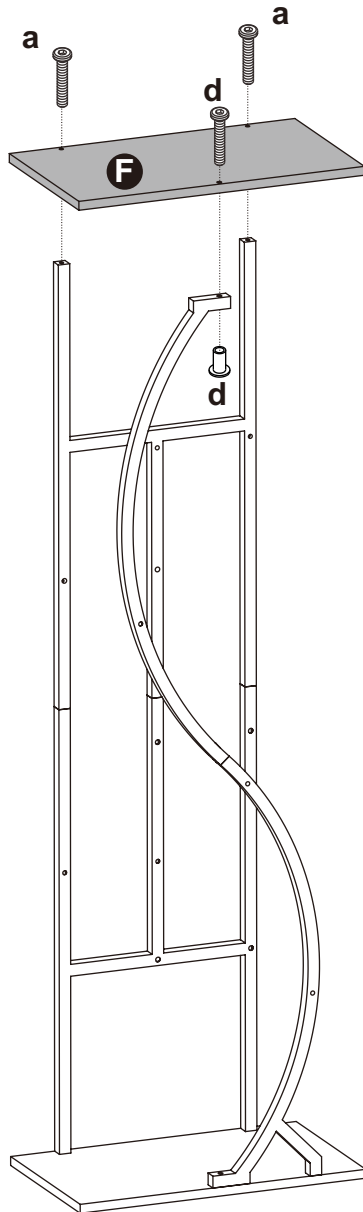

 
8.

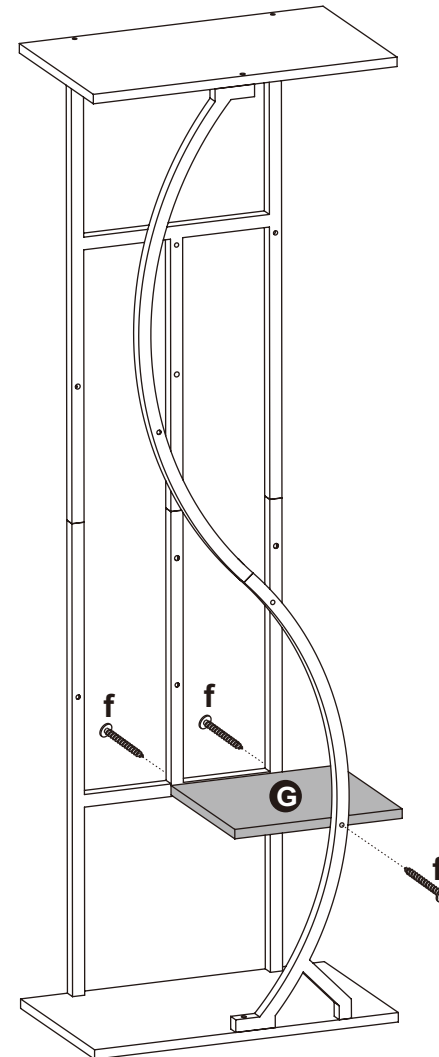

 
9.



 
10.



 
9.

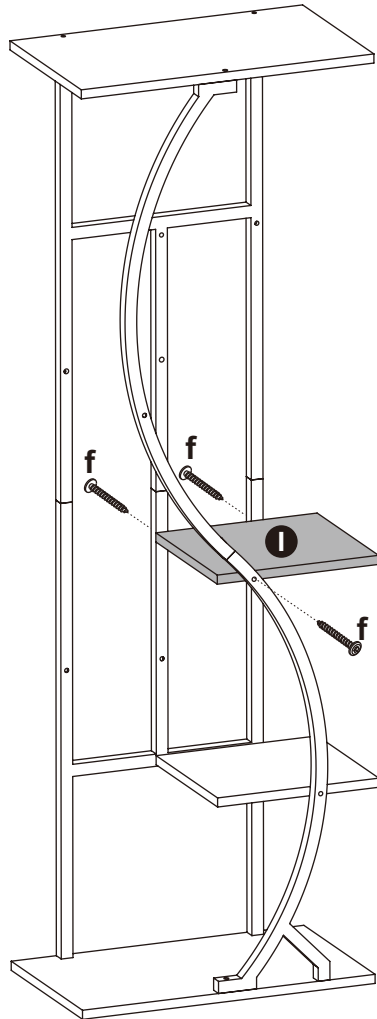

 
10.

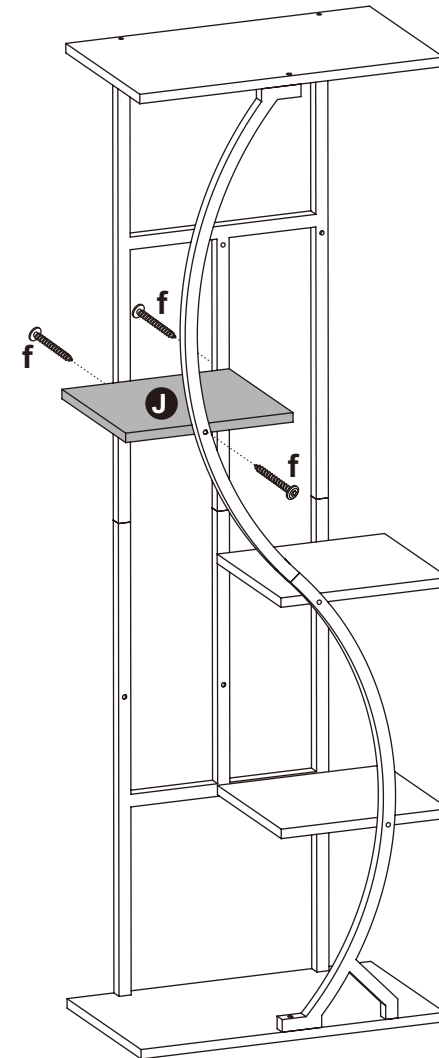

 11.




 12.






11.

 ax4

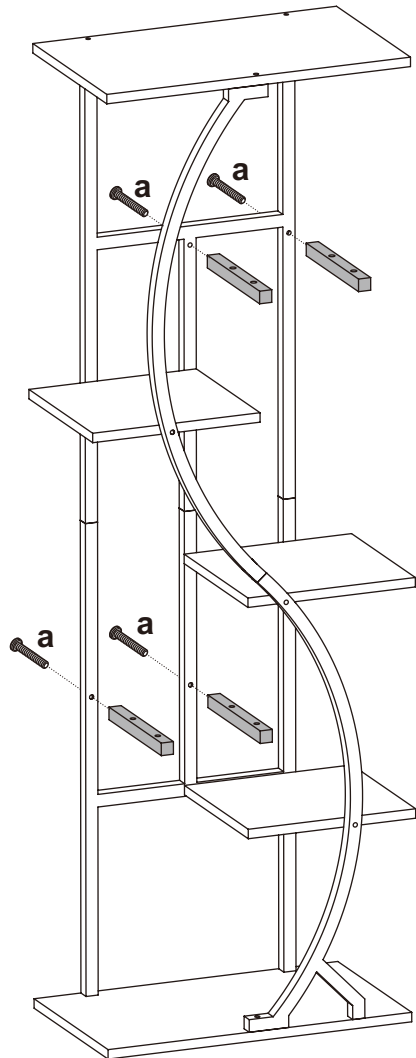


12.

 
 
 
kx4

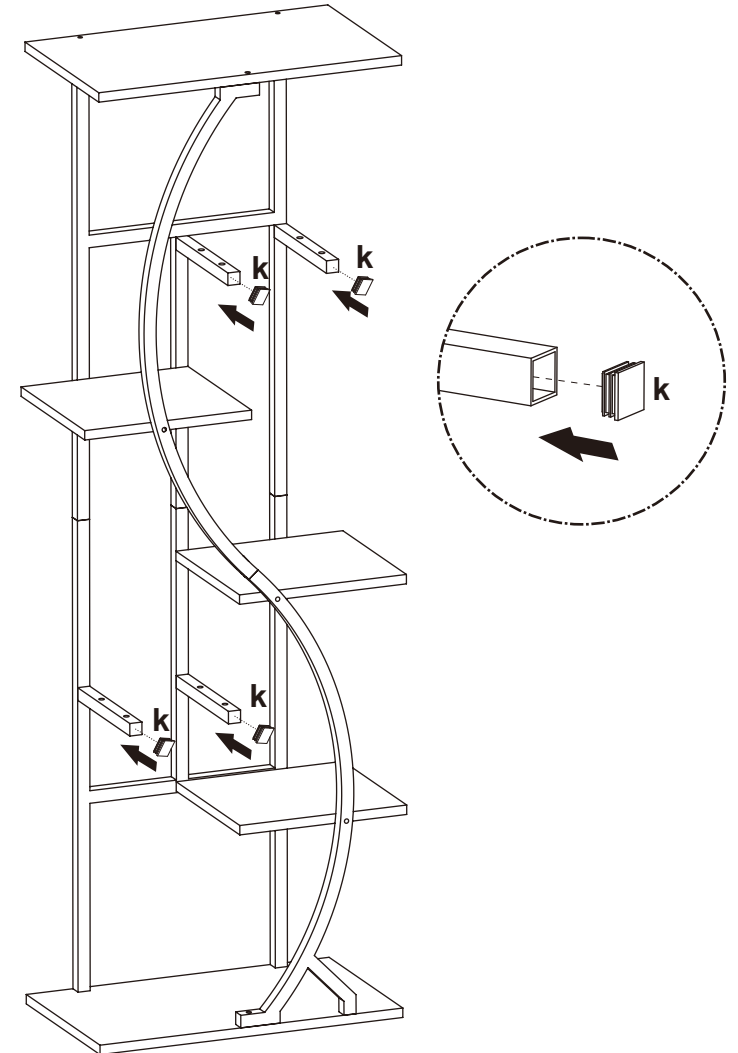

 
13.

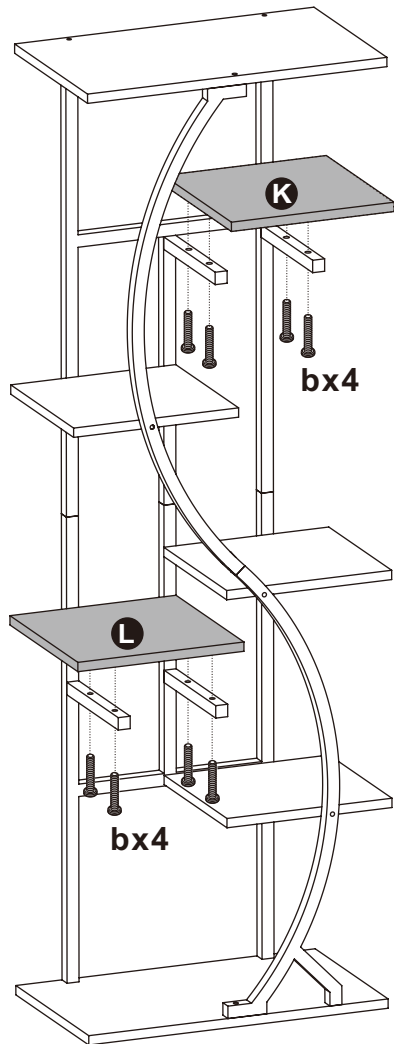

   
14.

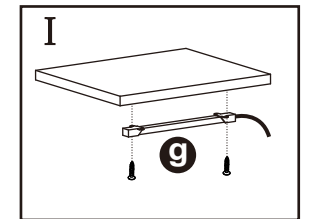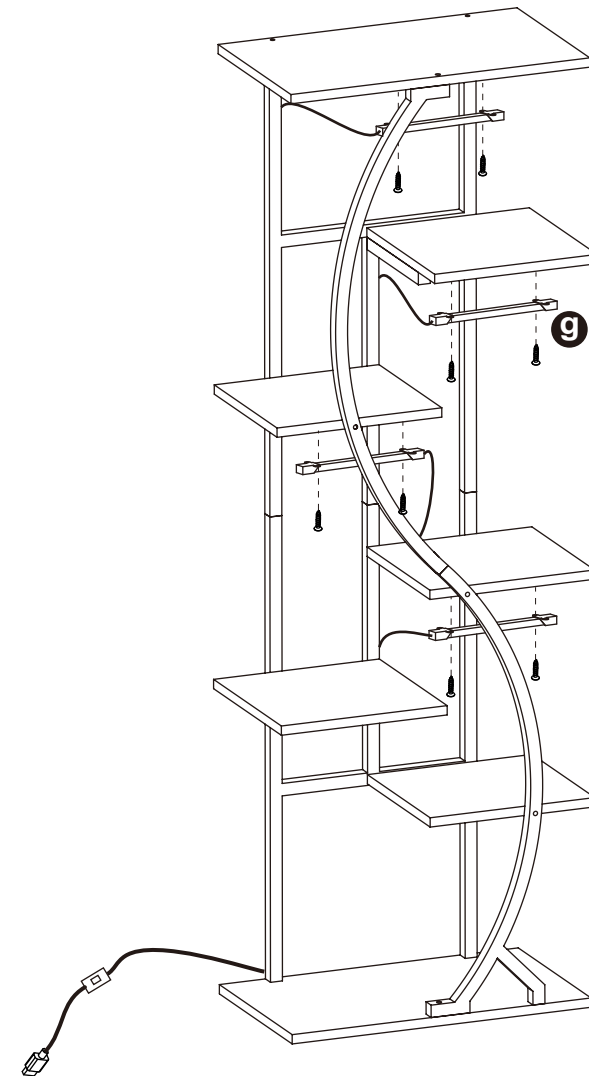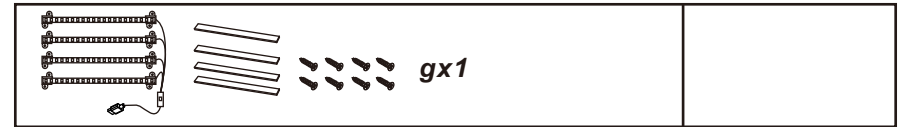


OR

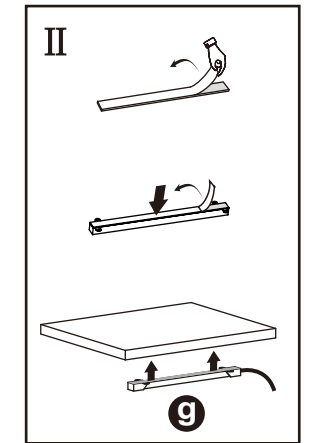 

Doublesided adhesive or screw fixation

 

 15.

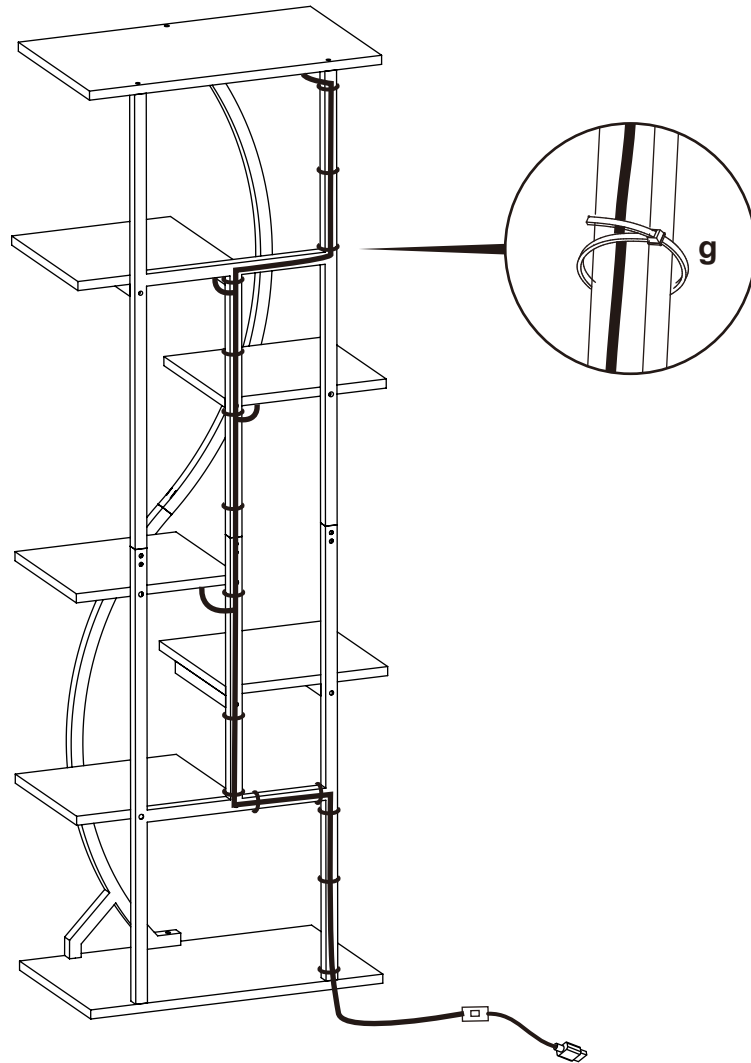

16.

