

ASSEMBLY INSTRUCTIONS

DINING CHAIR

Please read instructions carefully

Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from being scratched.

CAUTIONS: 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.

2) DO NOT OVER-TIGHTEN BOLTS AND NUTS AS IT MAY DAMAGE THE SCREW THREAD.


3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.

PARTS LIST (FOR 2 COMPLETE CHAIRS)

NO.	COMPONENT	QTY.
P1	CHAIR BACK	2
P2	CHAIR SEAT	2
P3	FRONT LEG	4
P4	SIDE STRETCHER	4


HARDWARE LIST (FOR 2 NOS. OF CHAIRS)

NO.	DESCRIPTION--	QTY.
H1	JCBC SCREW M6 X 90	8
H2	JCBC SCREW M6 X 60	8
H3	JCBC SCREW M6 X 45	2
H4	SPRING WASHER	18
H5	FLAT WASHER	18
H6	ALLEN KEY	1
H7	CSK SCREW	8
H8	LEG GLIDES	8

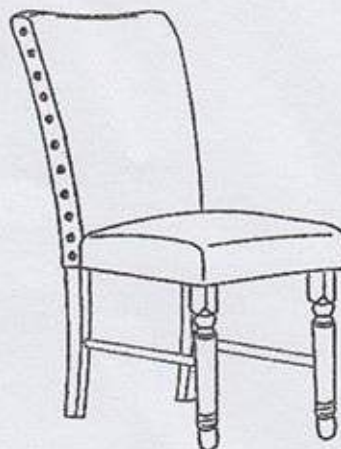


COMPLETE ASSEMBLY


STEP 1

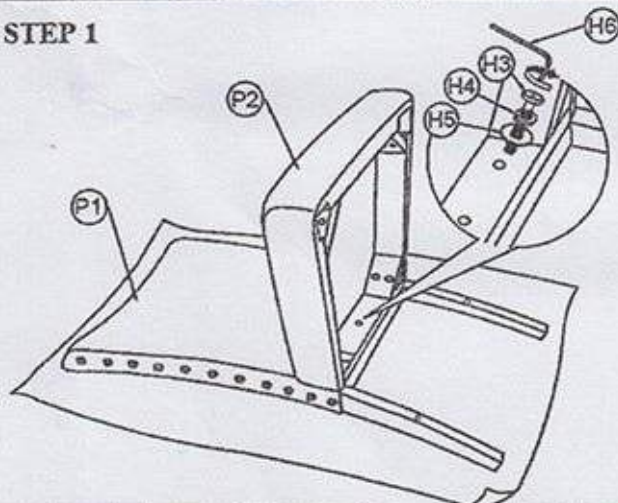


STEP 2

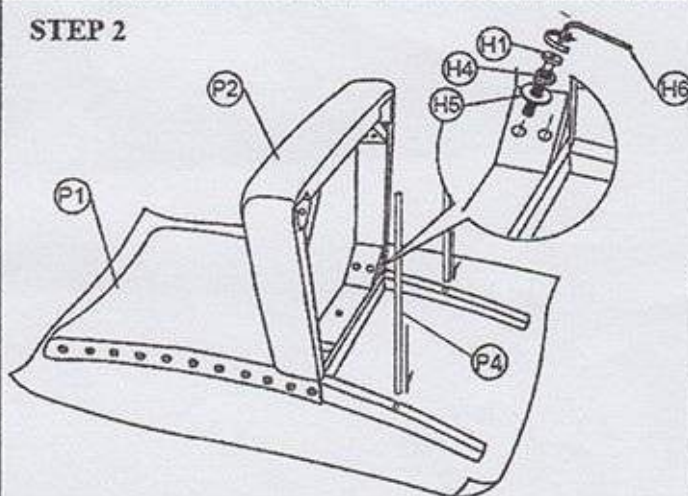

STEP 3

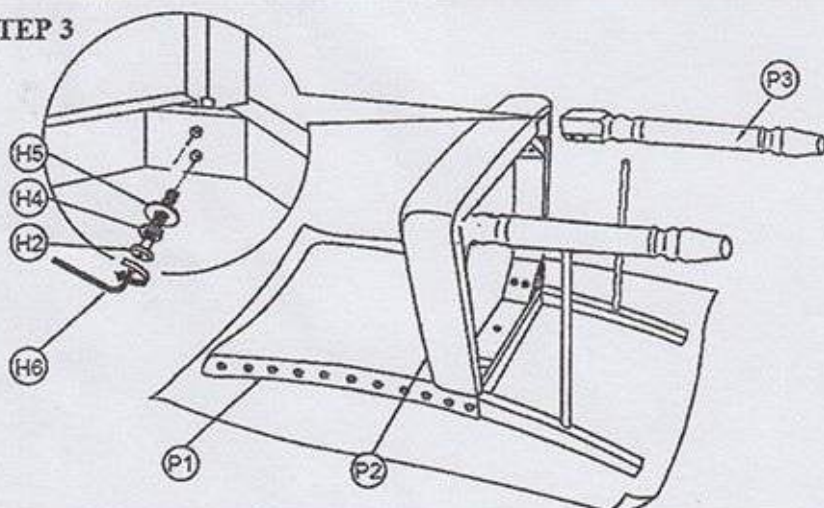

STEP 4

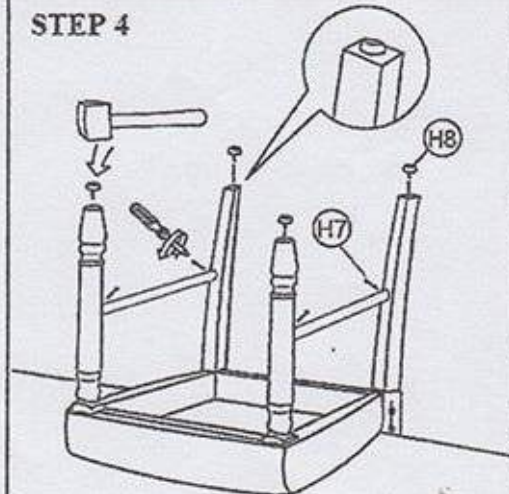

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children and animals, dispose off plastic bags immediately.

CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.

FITTINGS - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.

If any of the components are damaged or broken they should be removed from service.

Not for commercial use.