

 
INSTALLATION

Product Manual



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

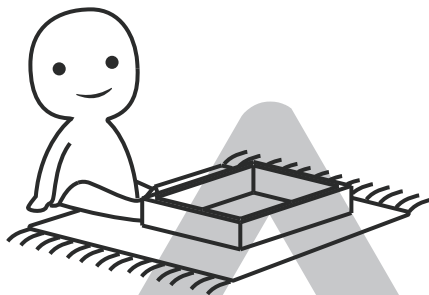


AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

 Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

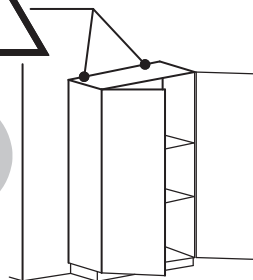

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

















Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

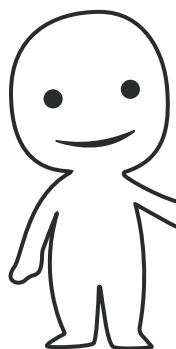


Please prepare the following tools

   

                When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

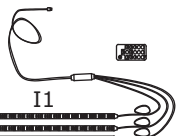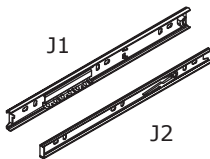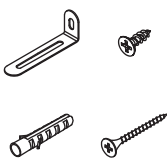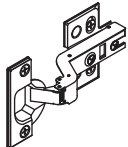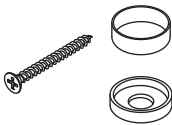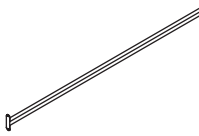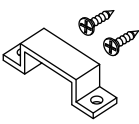A x 76  Ø 6 x 40 mm	B x 76  Ø 15 x 9 mm	C x 33  Ø 8 x 40 mm	D x 2  Ø 8 x 20 mm	E x 8  Ø 5 x 40 mm
F x 4  Ø 3.5 x 25 mm	G x 45 	H x 2 	I x 1  I1	J x 19  J1 J2
K x 192  Ø 3.5 x 12 mm	L x 2 	M x 4 	N x 6 	O x 15 
P x 19  M4 x 8 mm	Q x 2  M4 x 18 mm	R x 166  Ø 3.5 x 35 mm	S x 60 	T x 2  1168 mm
U x 50  Ø 20 mm	V x 1 	W x 12 	X x 19 	

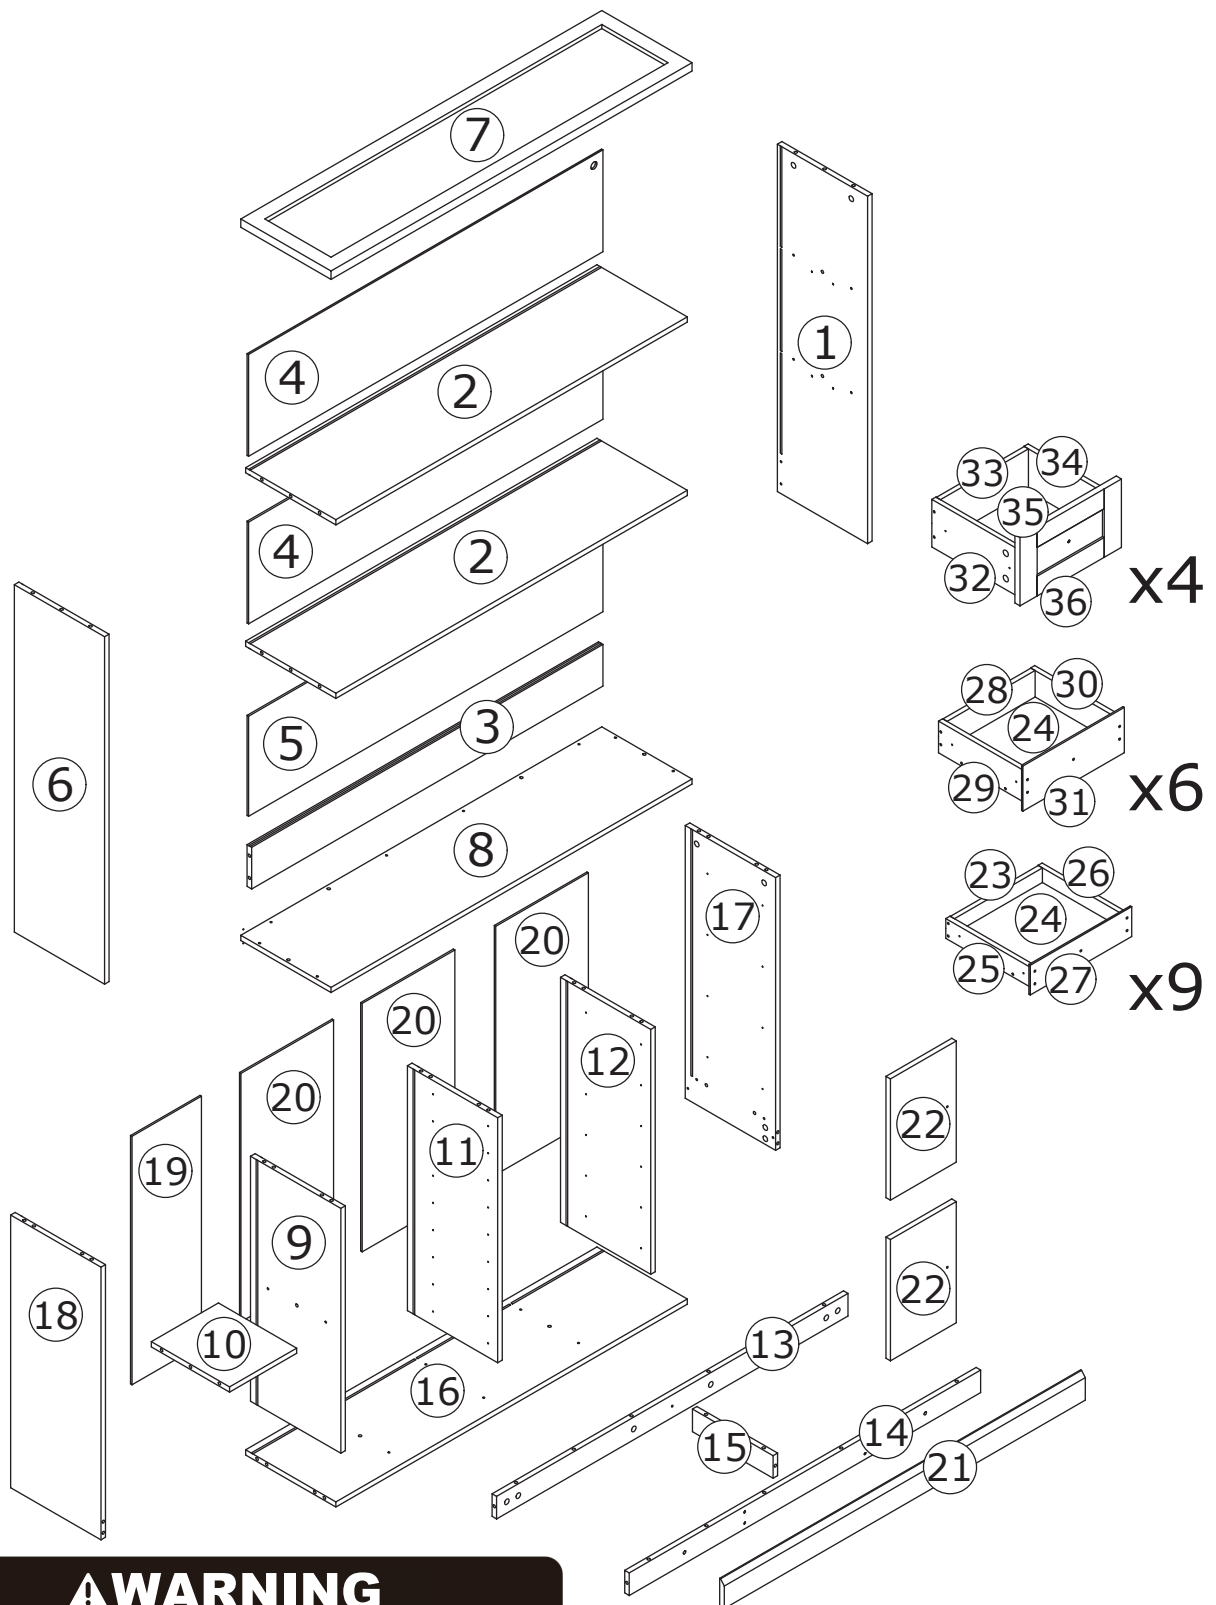 


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 
*This is a permanent label.
Do not remove!*

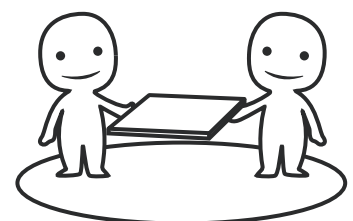




ASSEMBLED BY 2 ADULTS

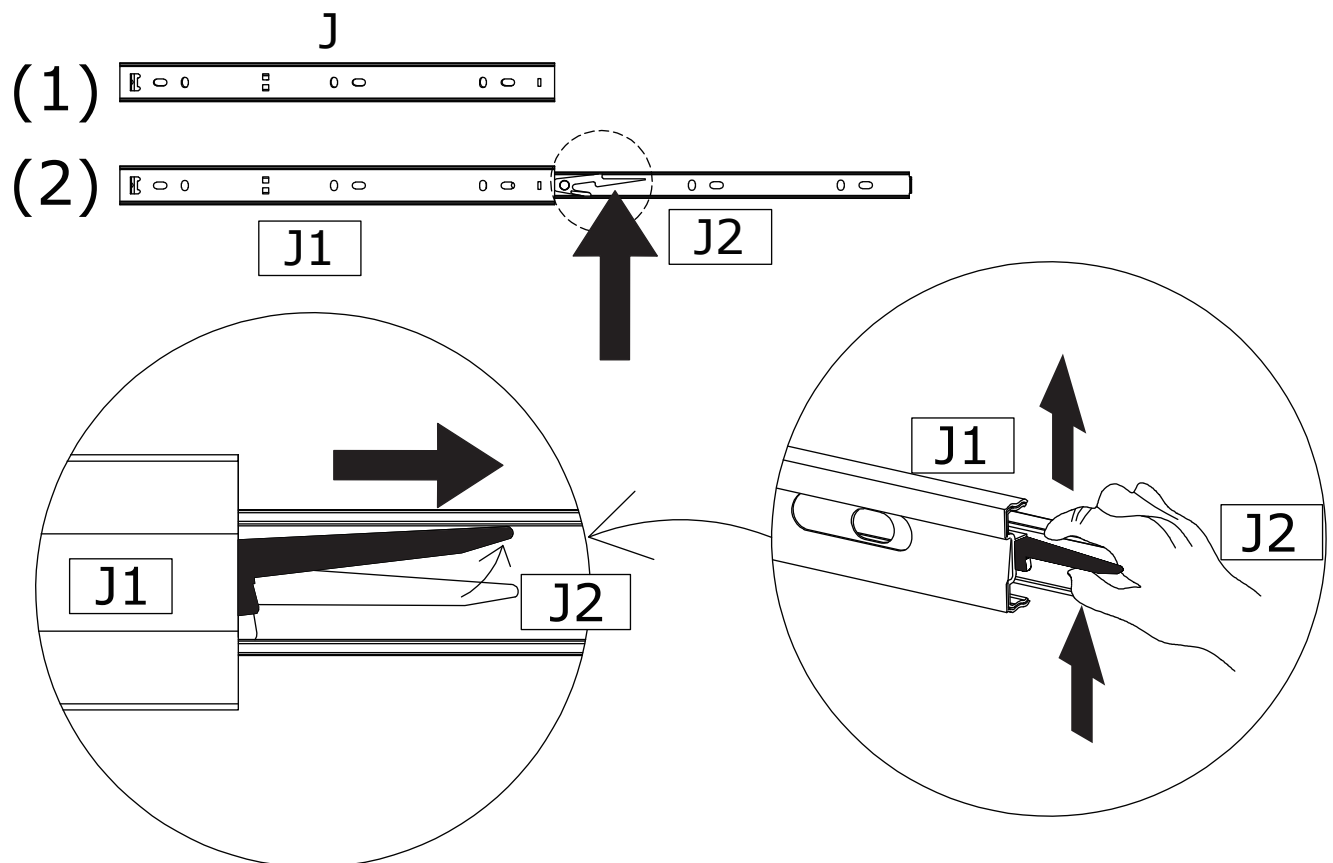 

 
Move the black paddle upward and pull out (J2) to the right.

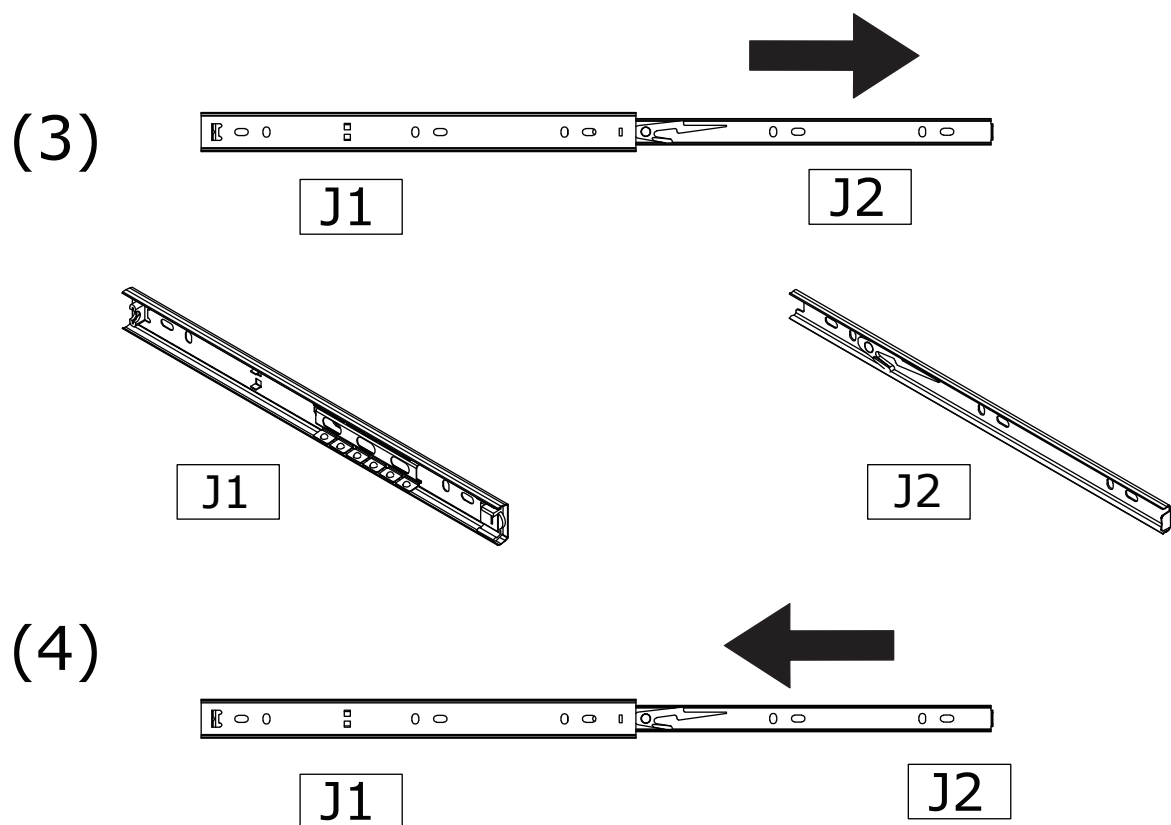

1

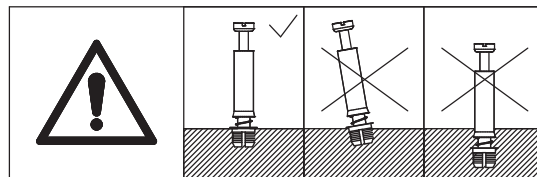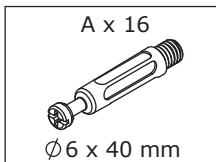   



 
Screw eccentric rod (A) onto boards 1, 6, and 7.

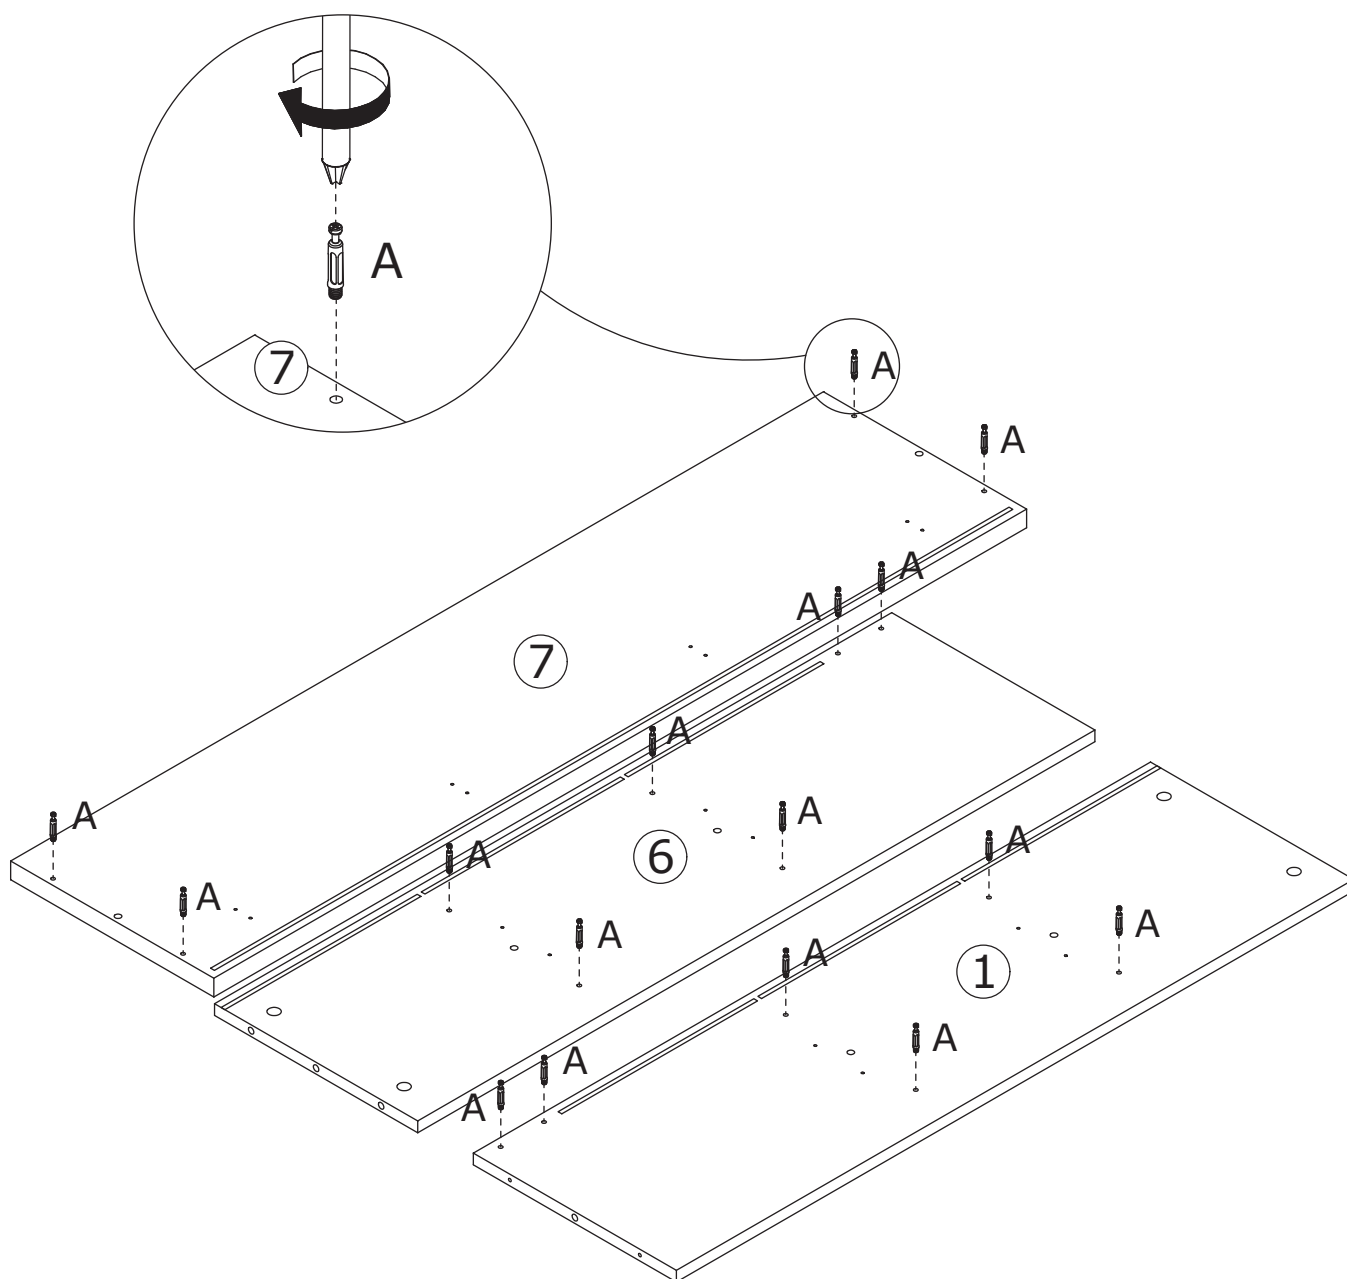

2




   Connect board 1 to boards 2 and 3 using wooden dowel (C), then tighten by turning eccentric cam (B) clockwise.

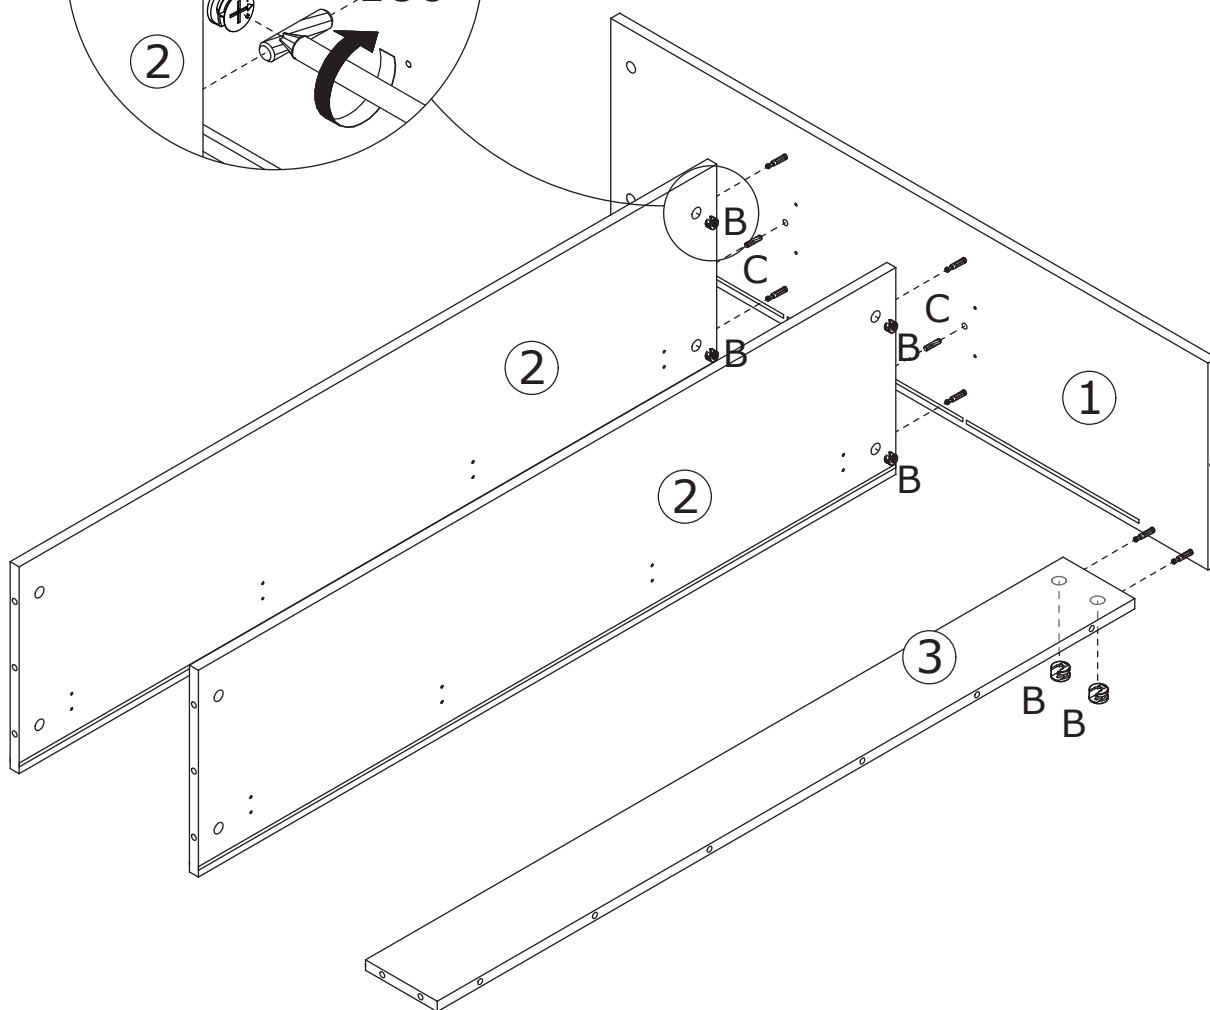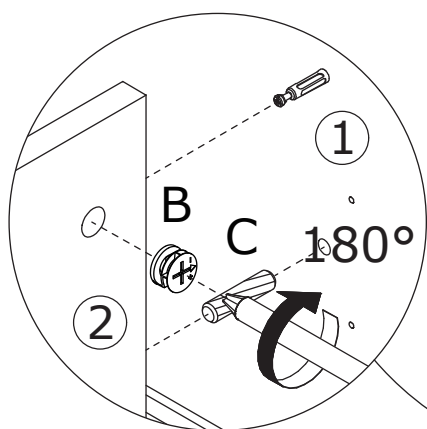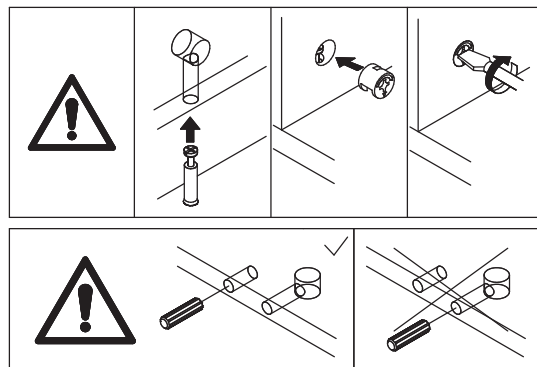

3

 Insert boards 4 and 5 into the available slots.

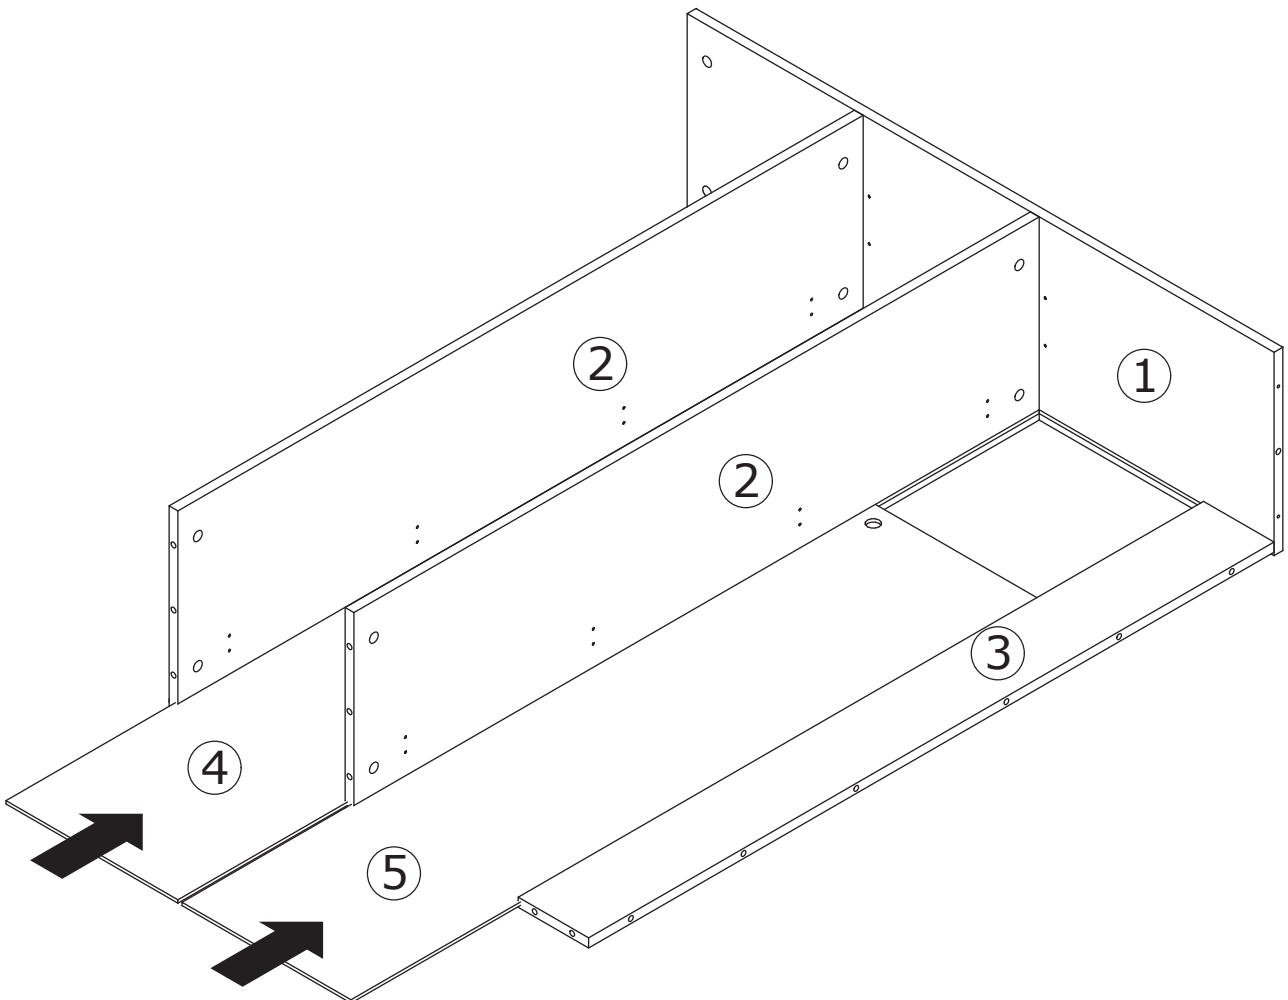


4

B x 6









Ø 15 x 9 mm

 
C x 2



Ø 8 x 40 mm

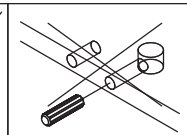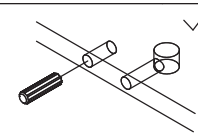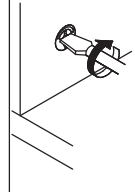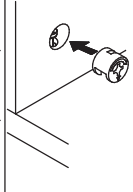      


 Connect board 6 to boards 2 and 3 using wooden dowel (C), then tighten by turning eccentric cam (B) clockwise.



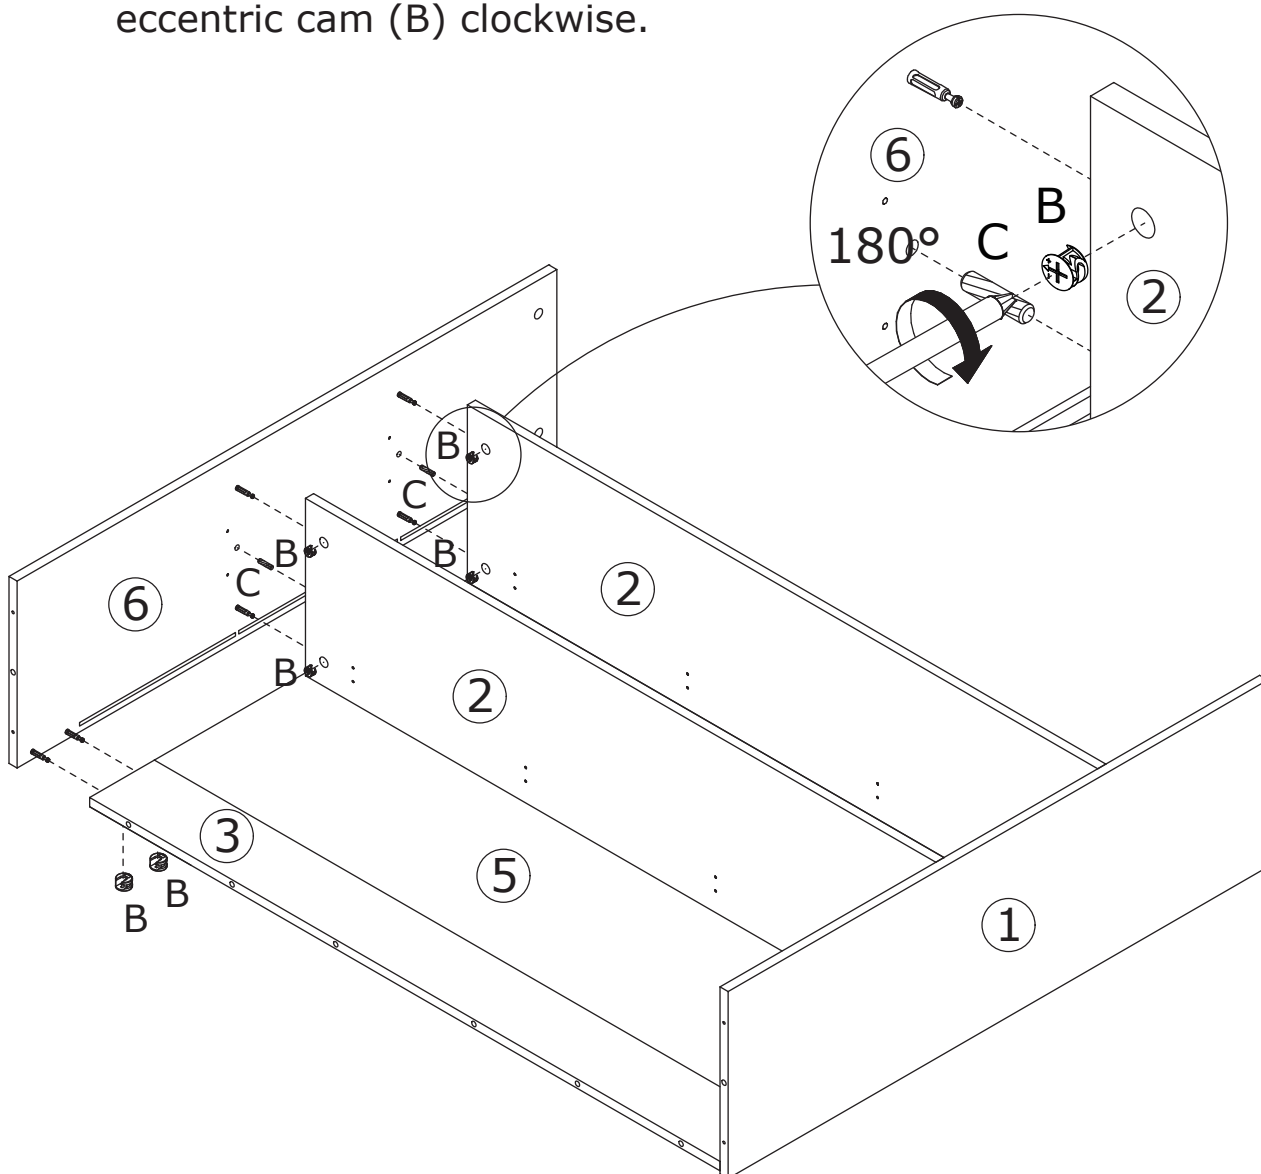


5



 
Insert board 4 into the available slots.

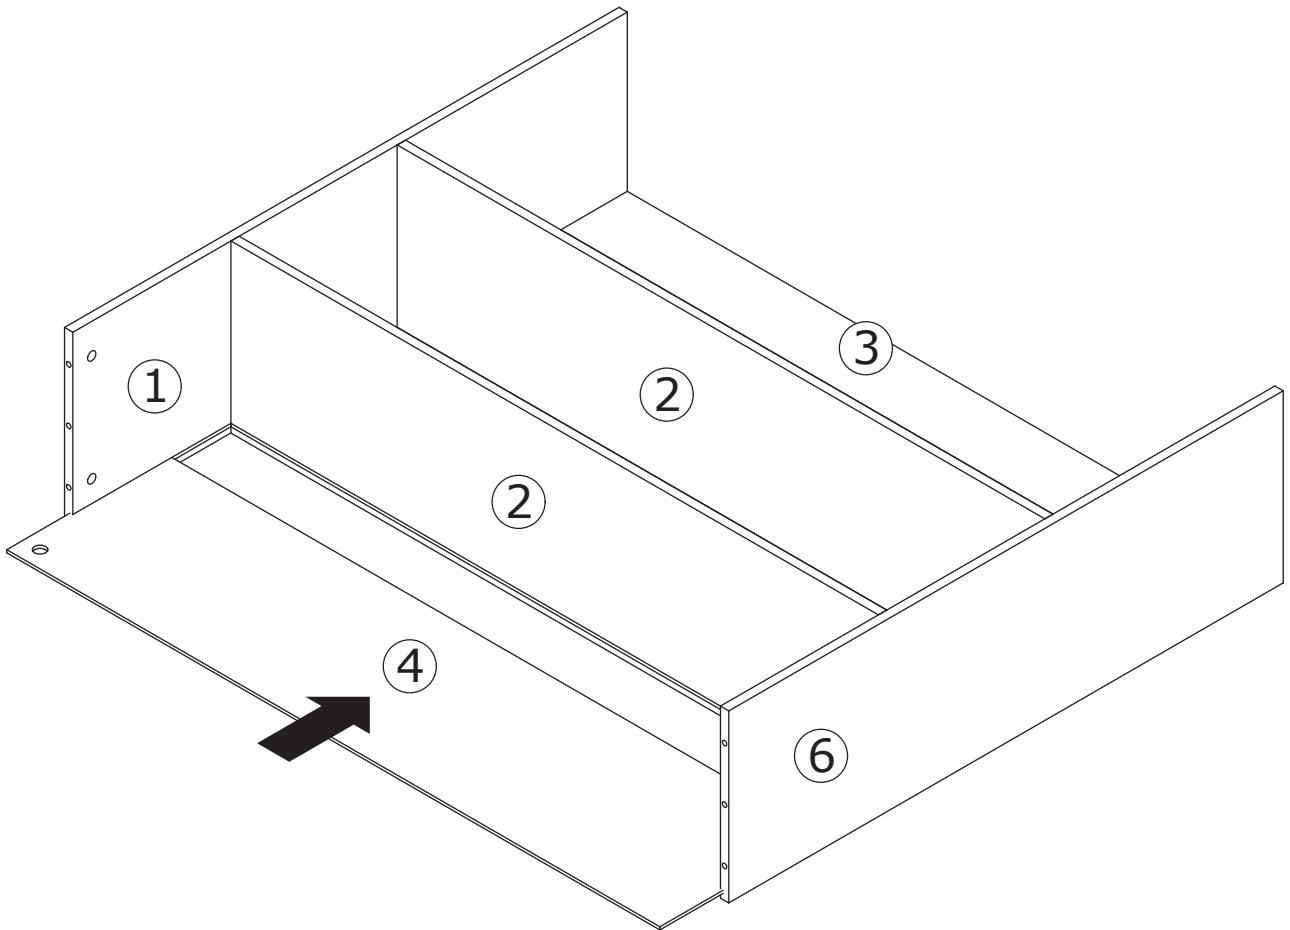

6

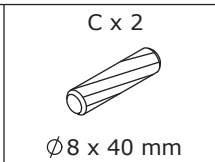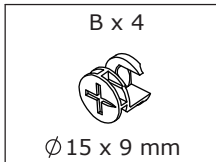   

   
Connect board 7 to boards 1 and 6 using wooden dowel (C), then tighten by turning eccentric cam (B) clockwise.

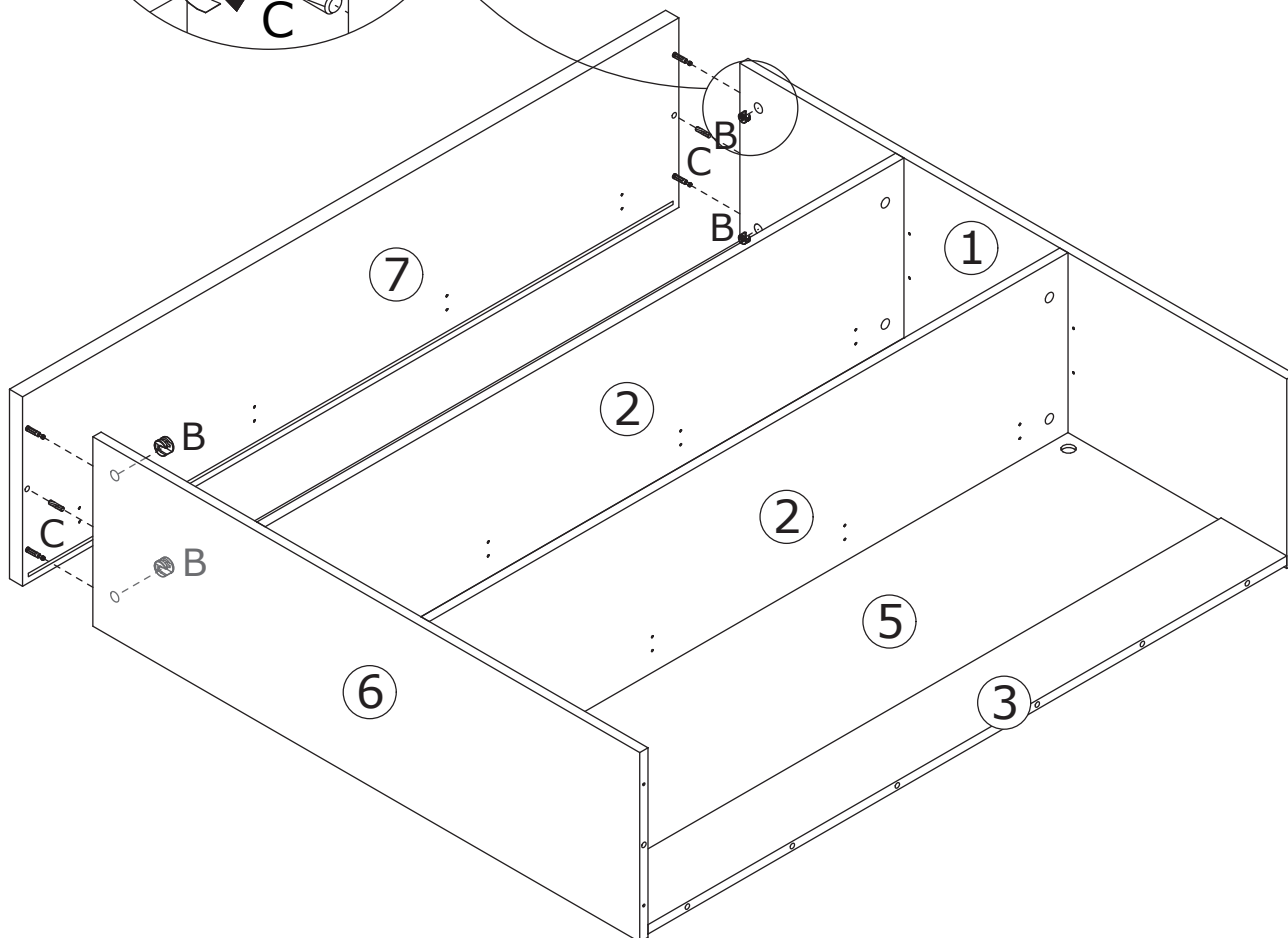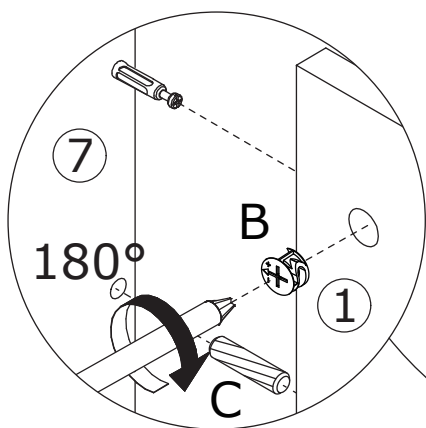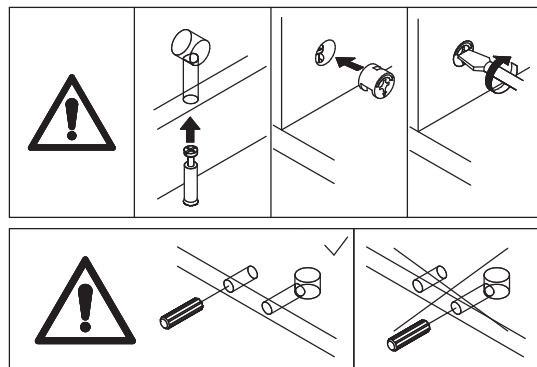


7



 
Secure iron pipe (T) to board 1 and 6 using screw (K).

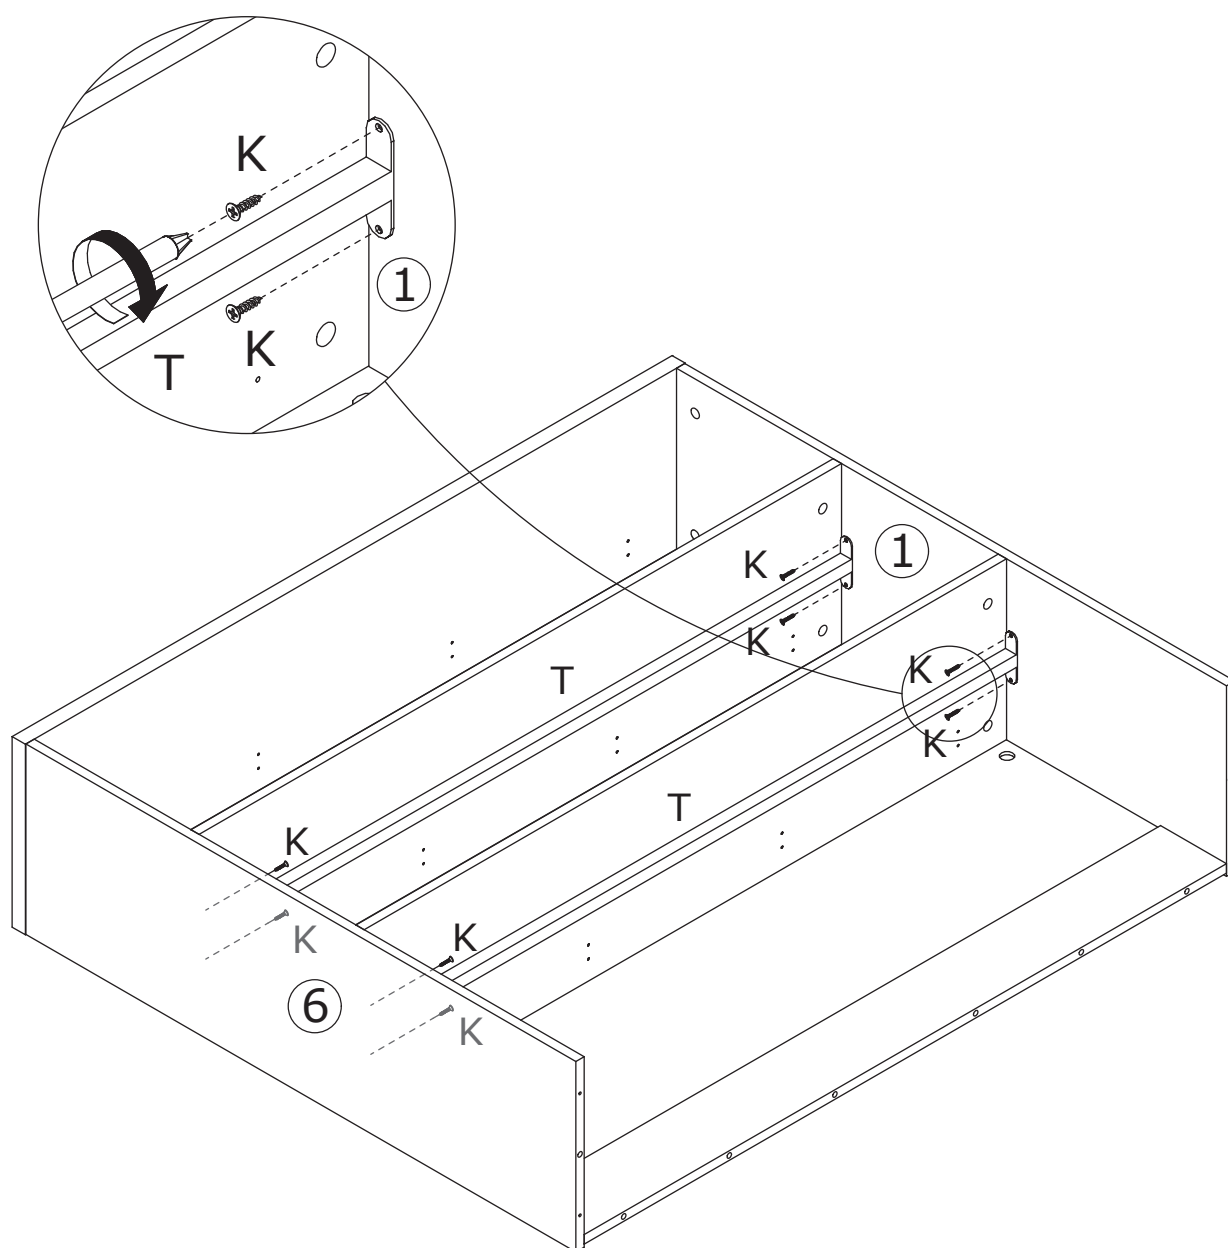




8

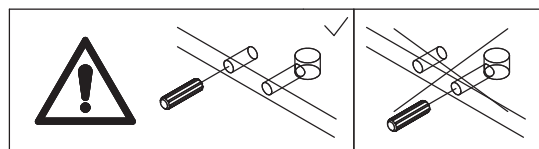 

 
Connect board 8 to boards 1, 3, and 6 using dowel (C), then secure with screw (E).

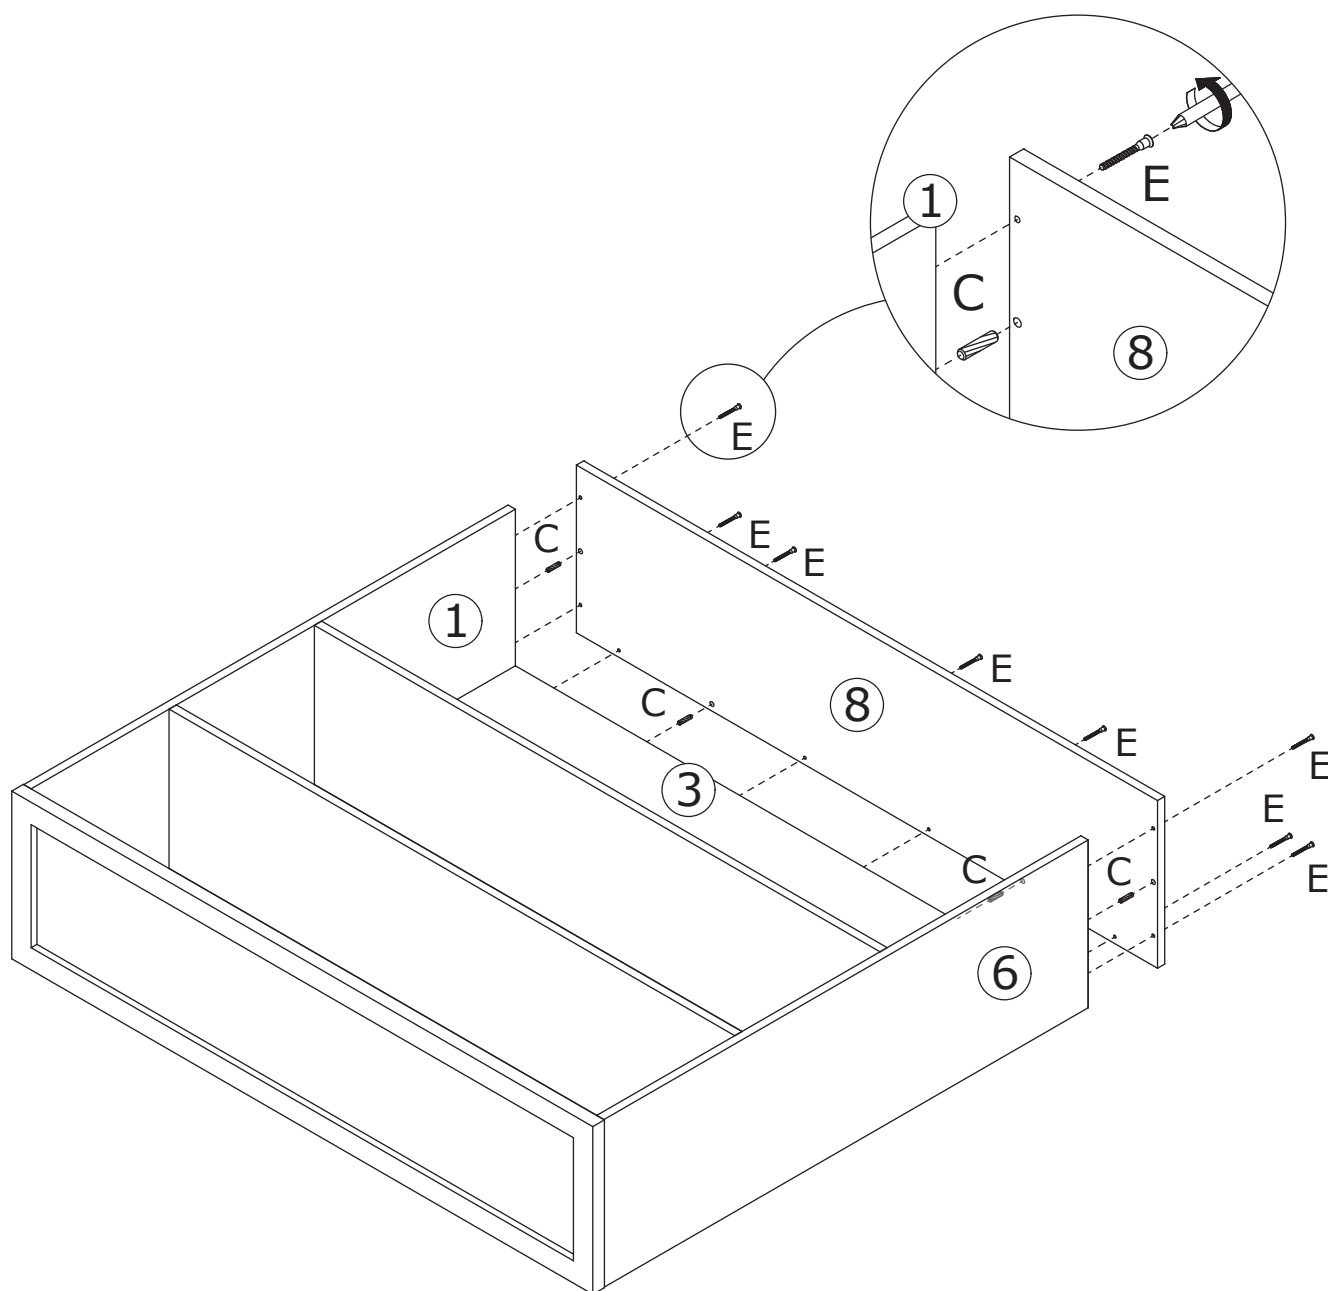

9

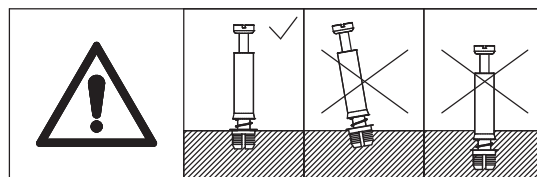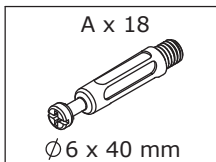   

 Screw eccentric rod (A) onto boards 9, 16, 17, and 18.

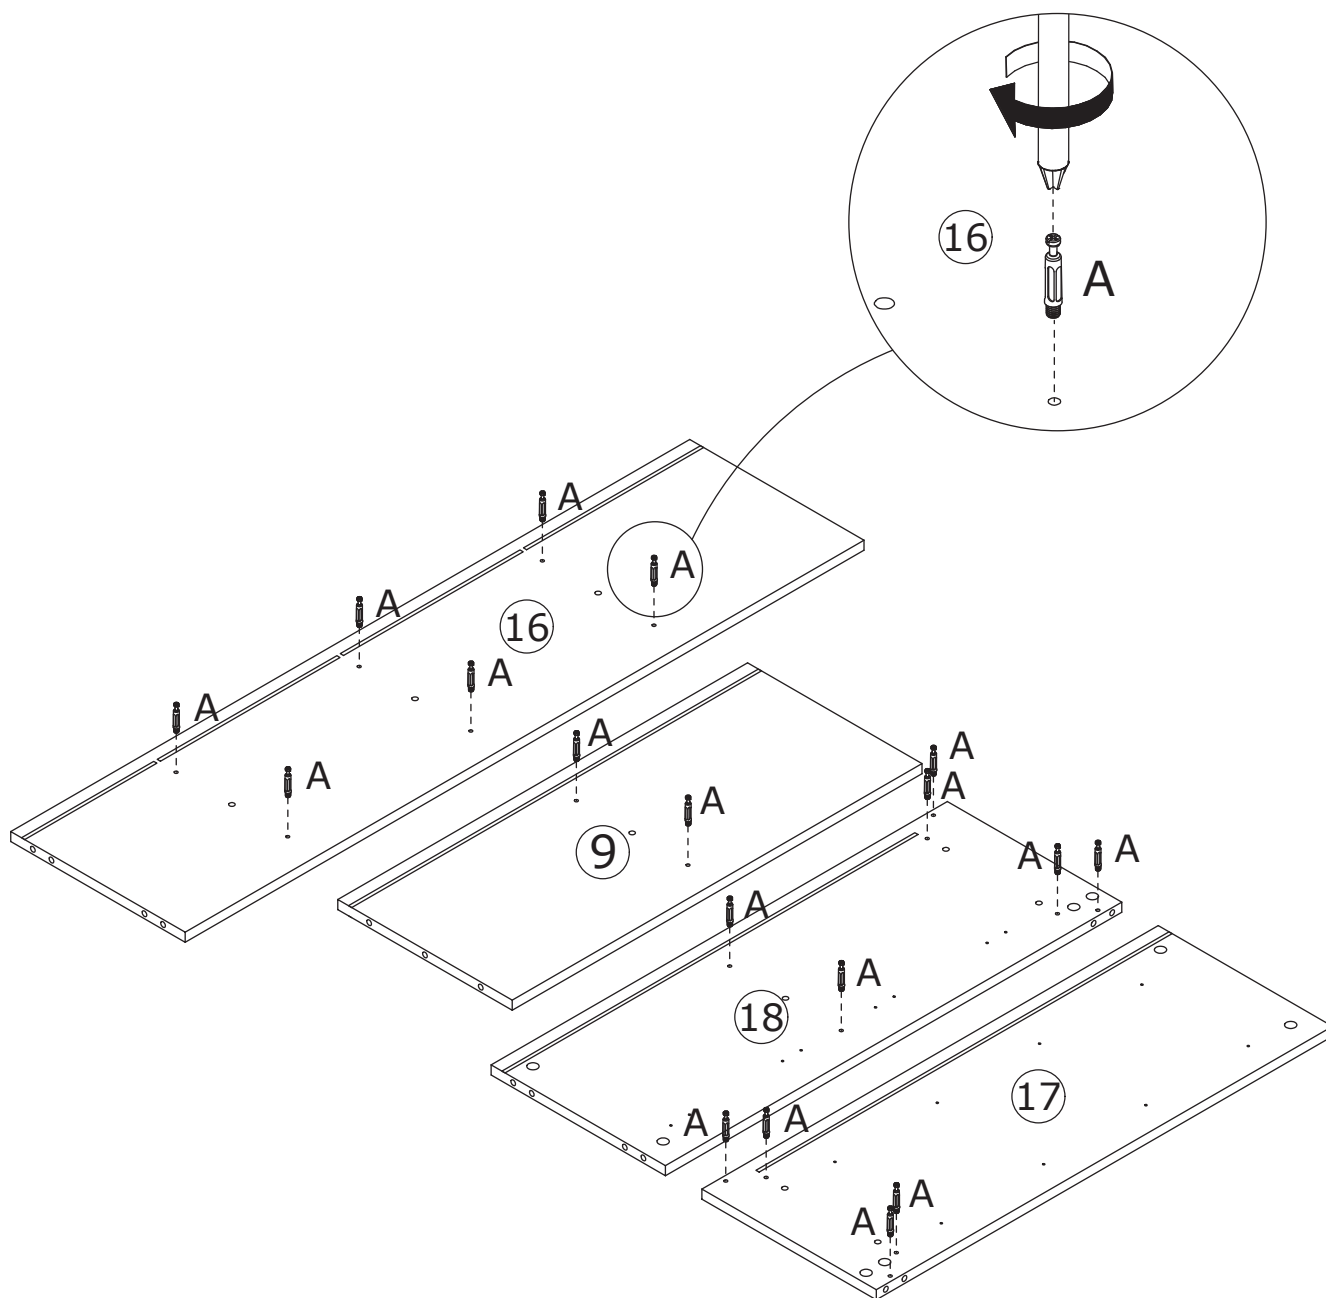


10

B x 2









Ø15 x 9 mm

 
C x 1



Ø8 x 40 mm

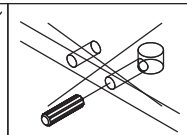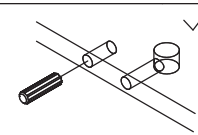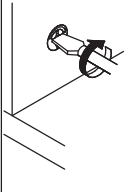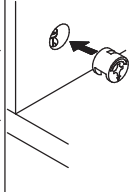      

 Connect board 9 to board 10 using wooden dowel (C), then tighten by turning eccentric cam (B) clockwise.

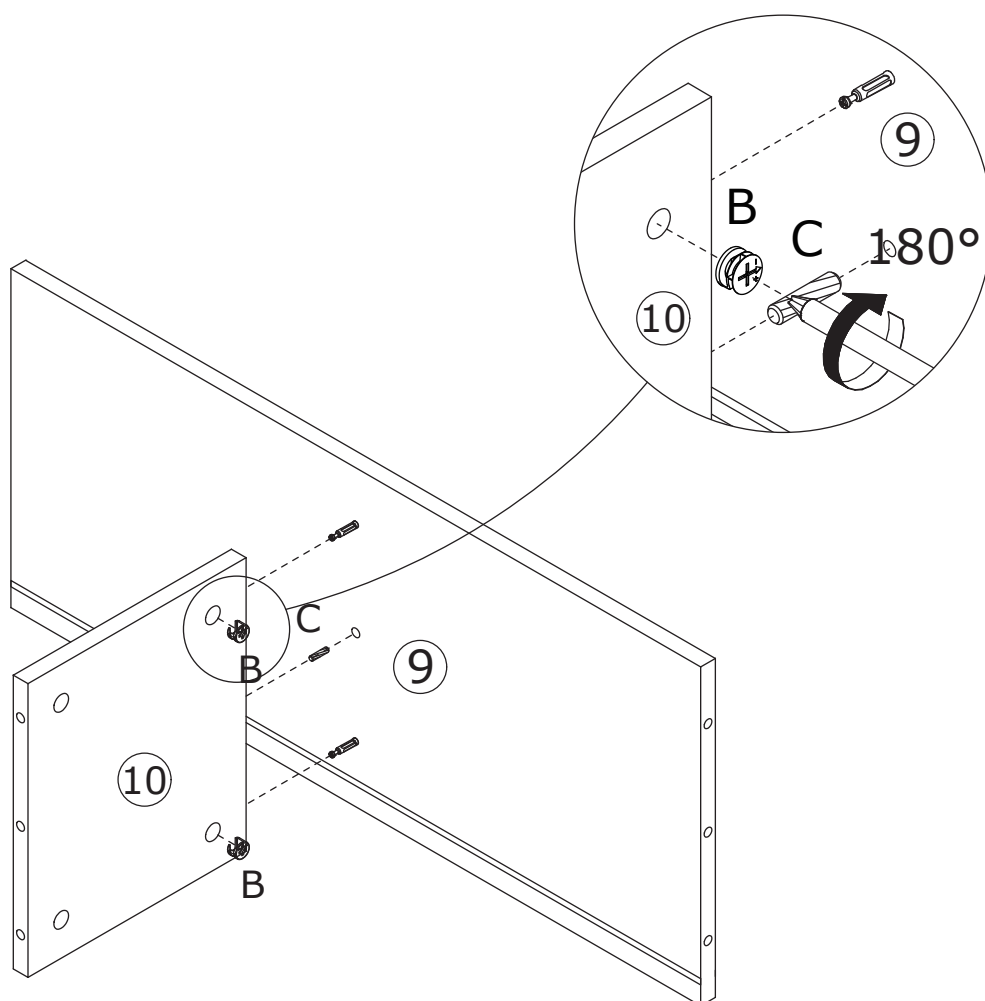


11

B x 6









Ø 15 x 9 mm

 
C x 3






Ø 8 x 40 mm

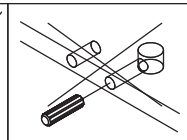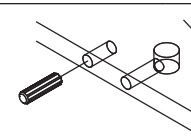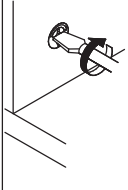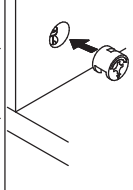      

 
Connect board 16 to boards 9, 11, and 12 using wooden dowel (C), then tighten by turning eccentric cam (B) clockwise.

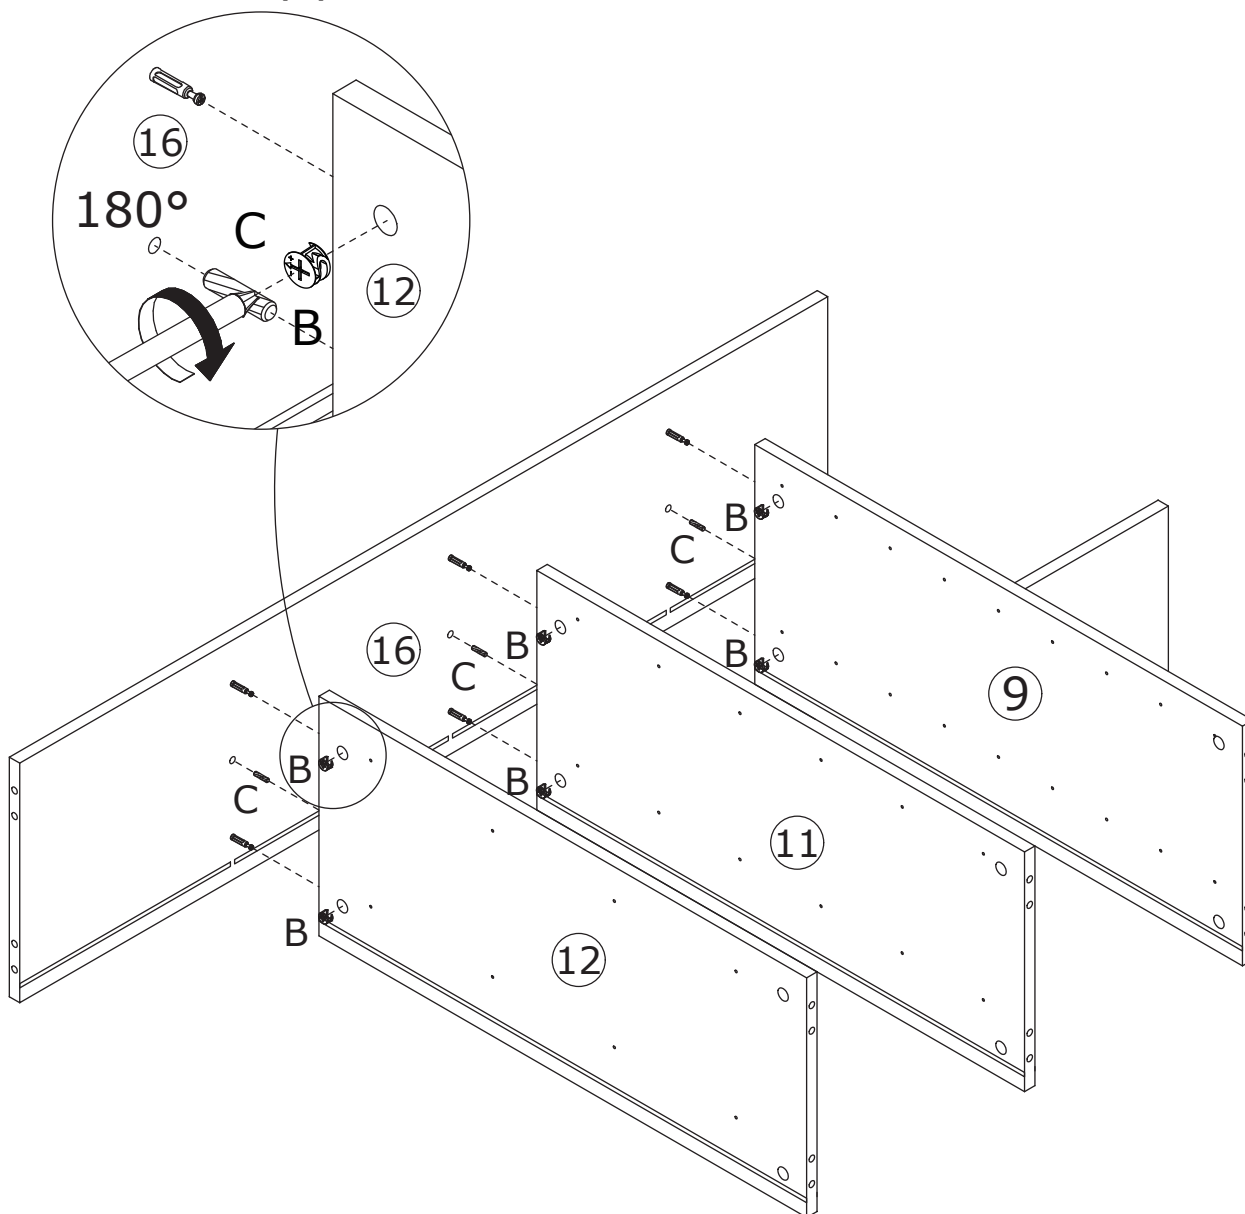

12

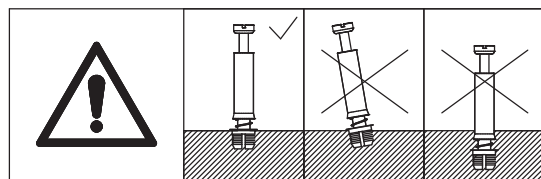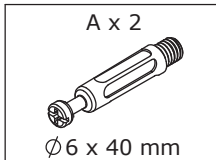   

 Screw eccentric rod (A) onto boards 13 and 14.




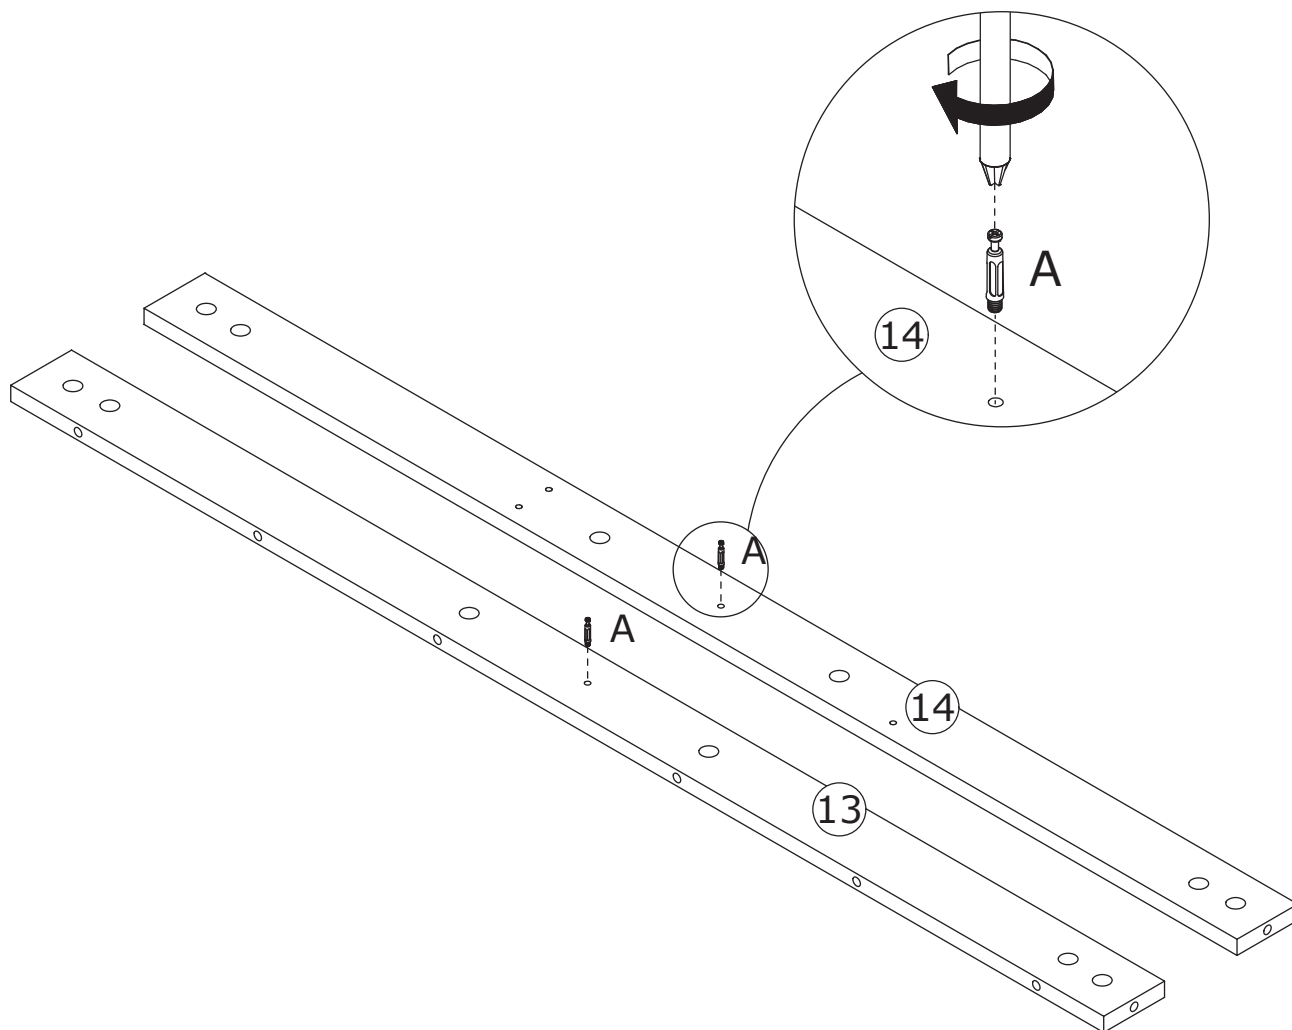


13



B x 2



  
 
 
Ø15 x 9 mm

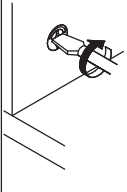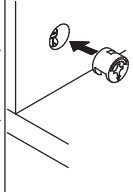

  
Connect boards 13, 14, and 15, then tighten by turning eccentric cam (B) clockwise.

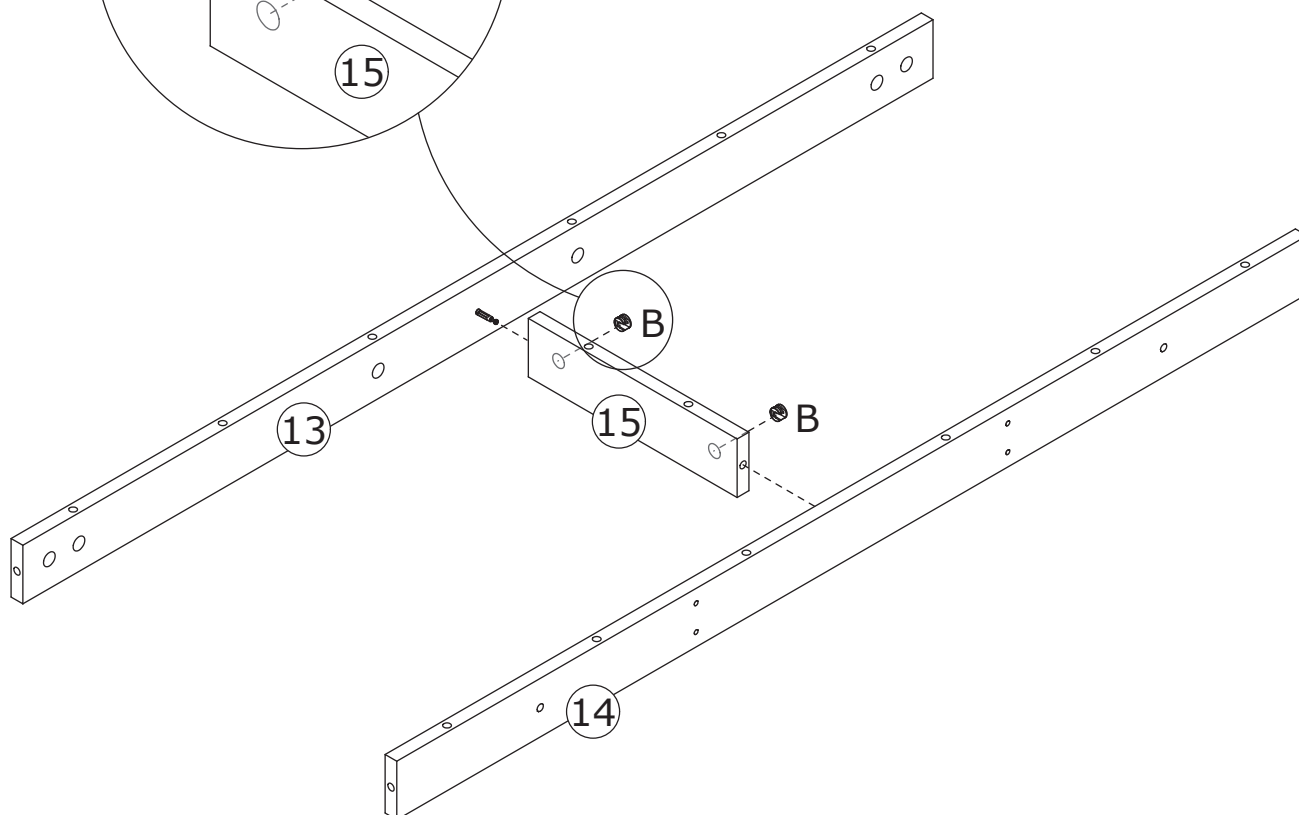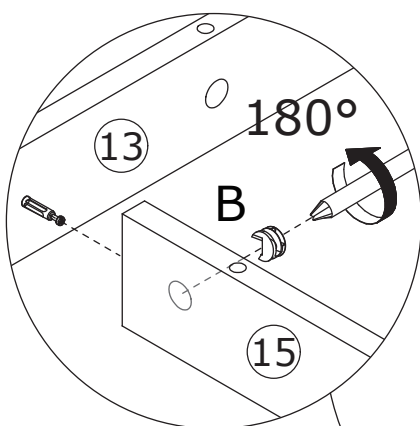

14

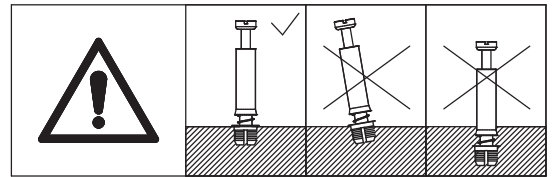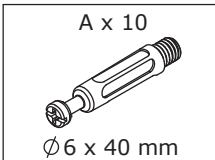   

Screw eccentric rod (A) onto board 16.

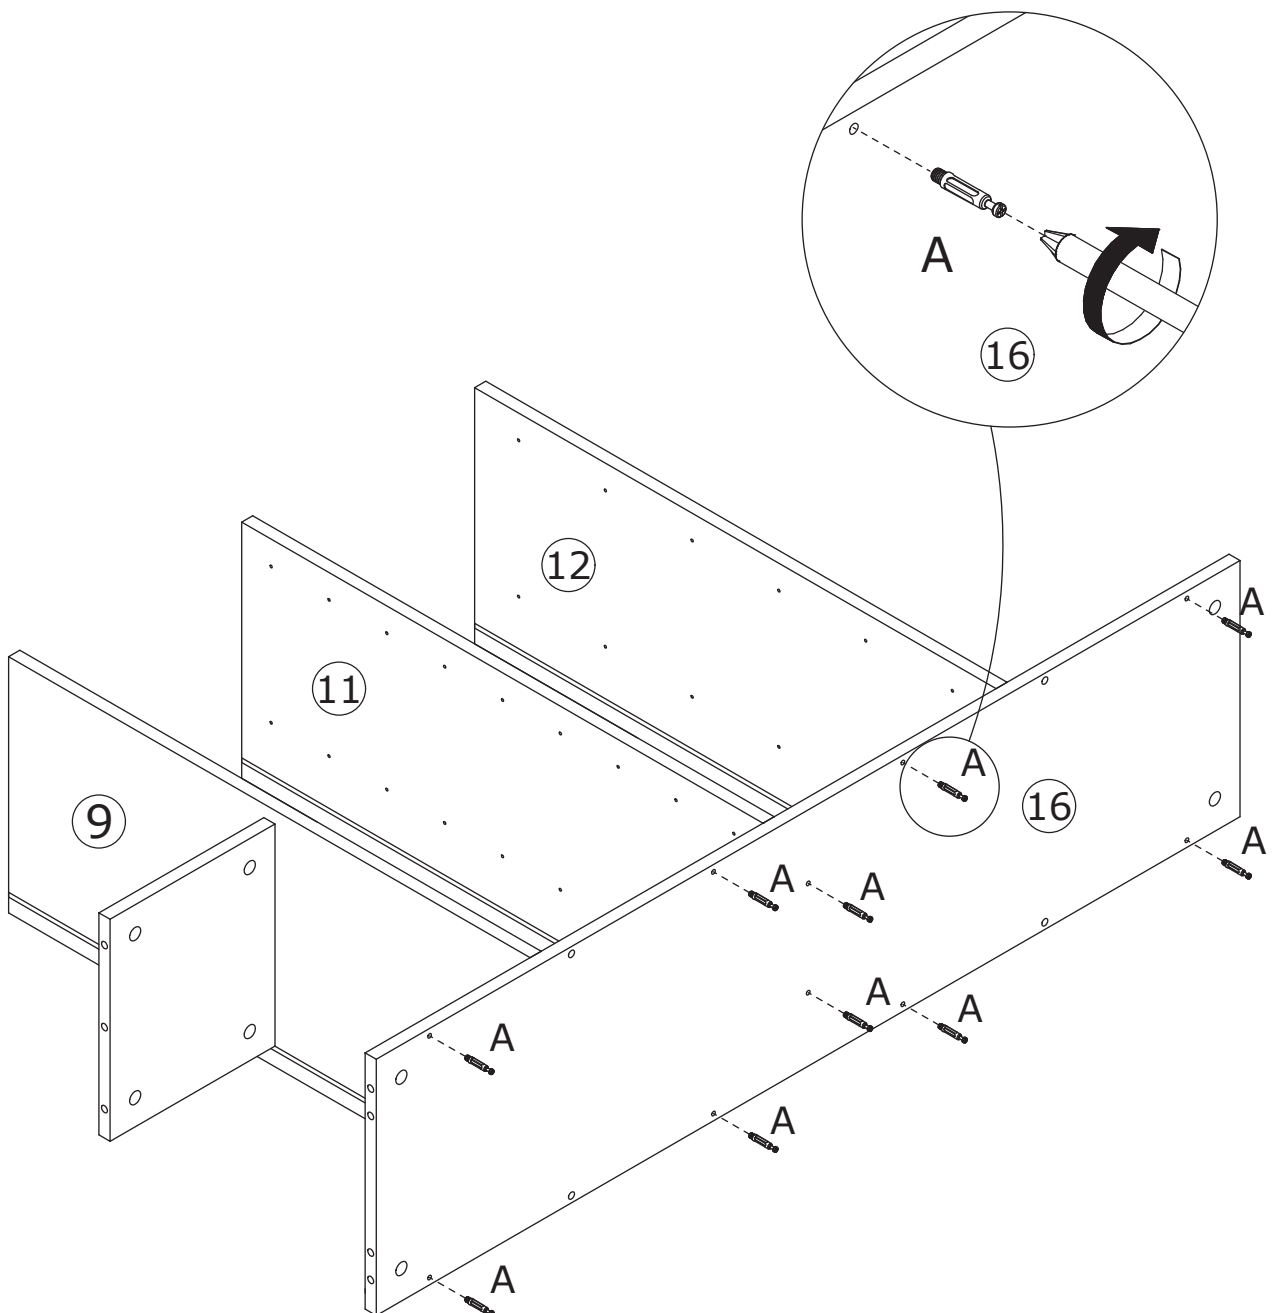 


15

B x 10









Ø 15 x 9 mm

 
C x 4



Ø 8 x 40 mm

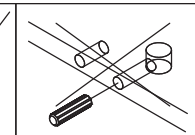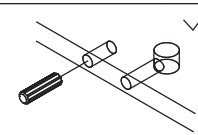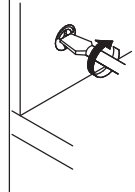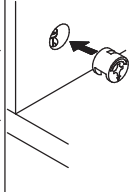      

 Connect board 16 to boards 13, 14, and 15 using wooden dowel (C), then tighten by turning eccentric cam (B) clockwise.

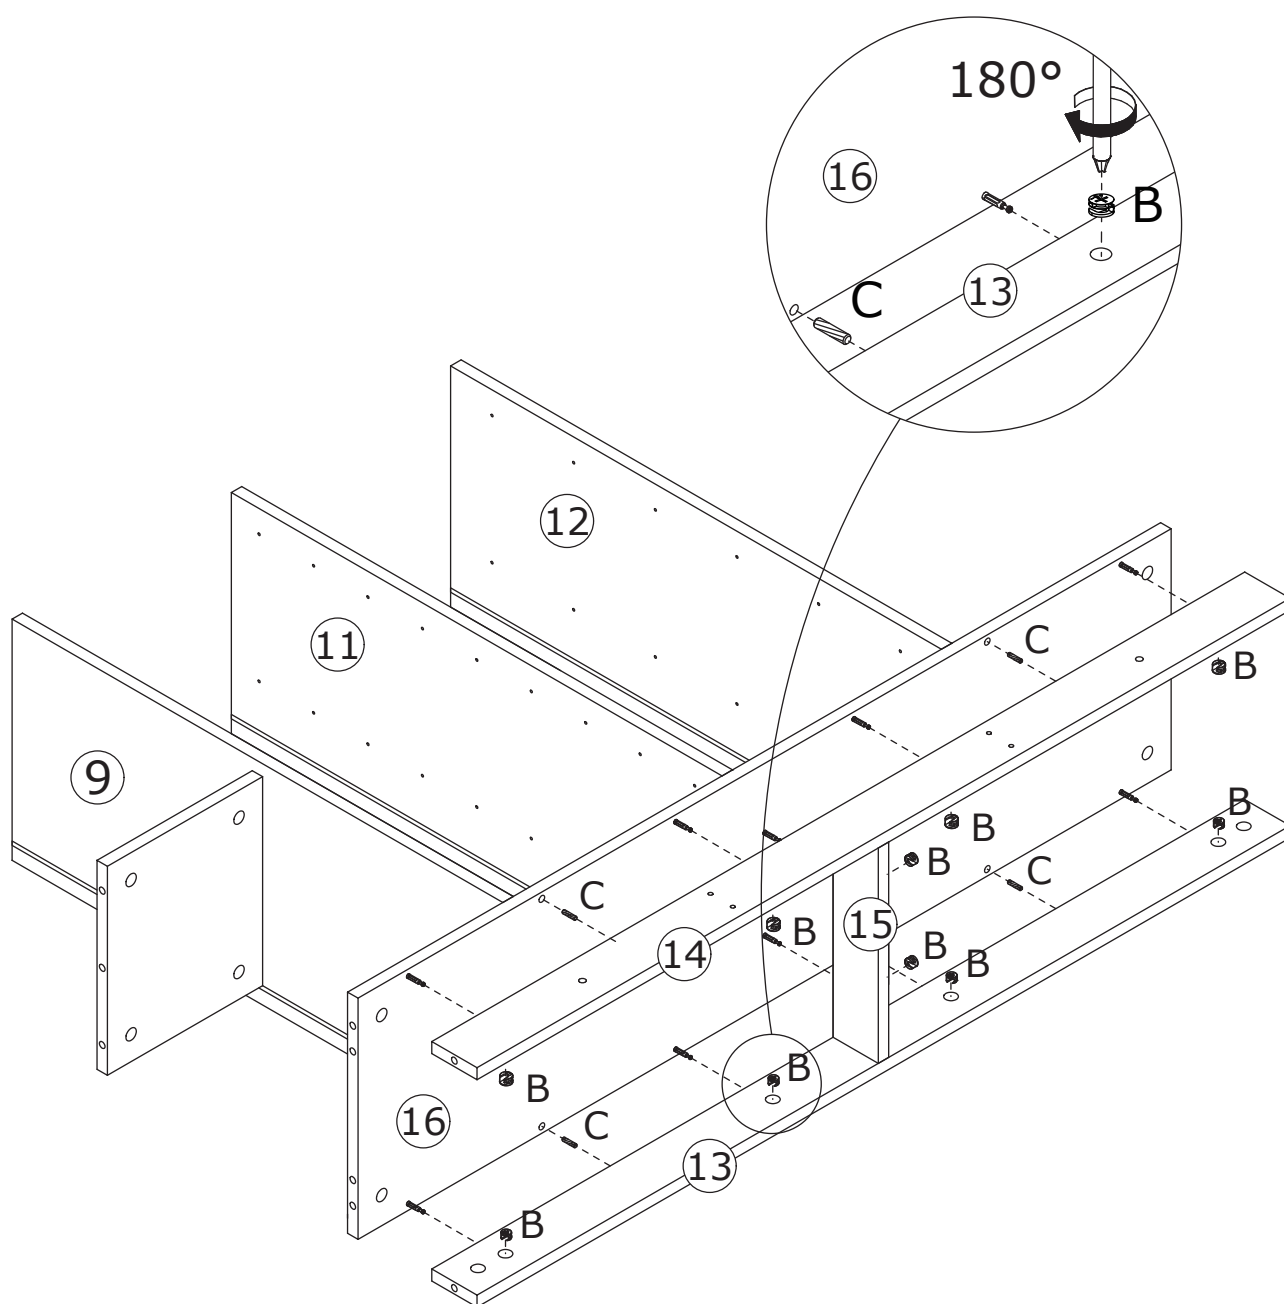


16

B x 4




Ø15 x 9 mm



 
C x 2



Ø8 x 40 mm

 

   Connect board 17 to boards 13, 14, and 16 using wooden dowel (C), then tighten by turning eccentric cam (B) clockwise.

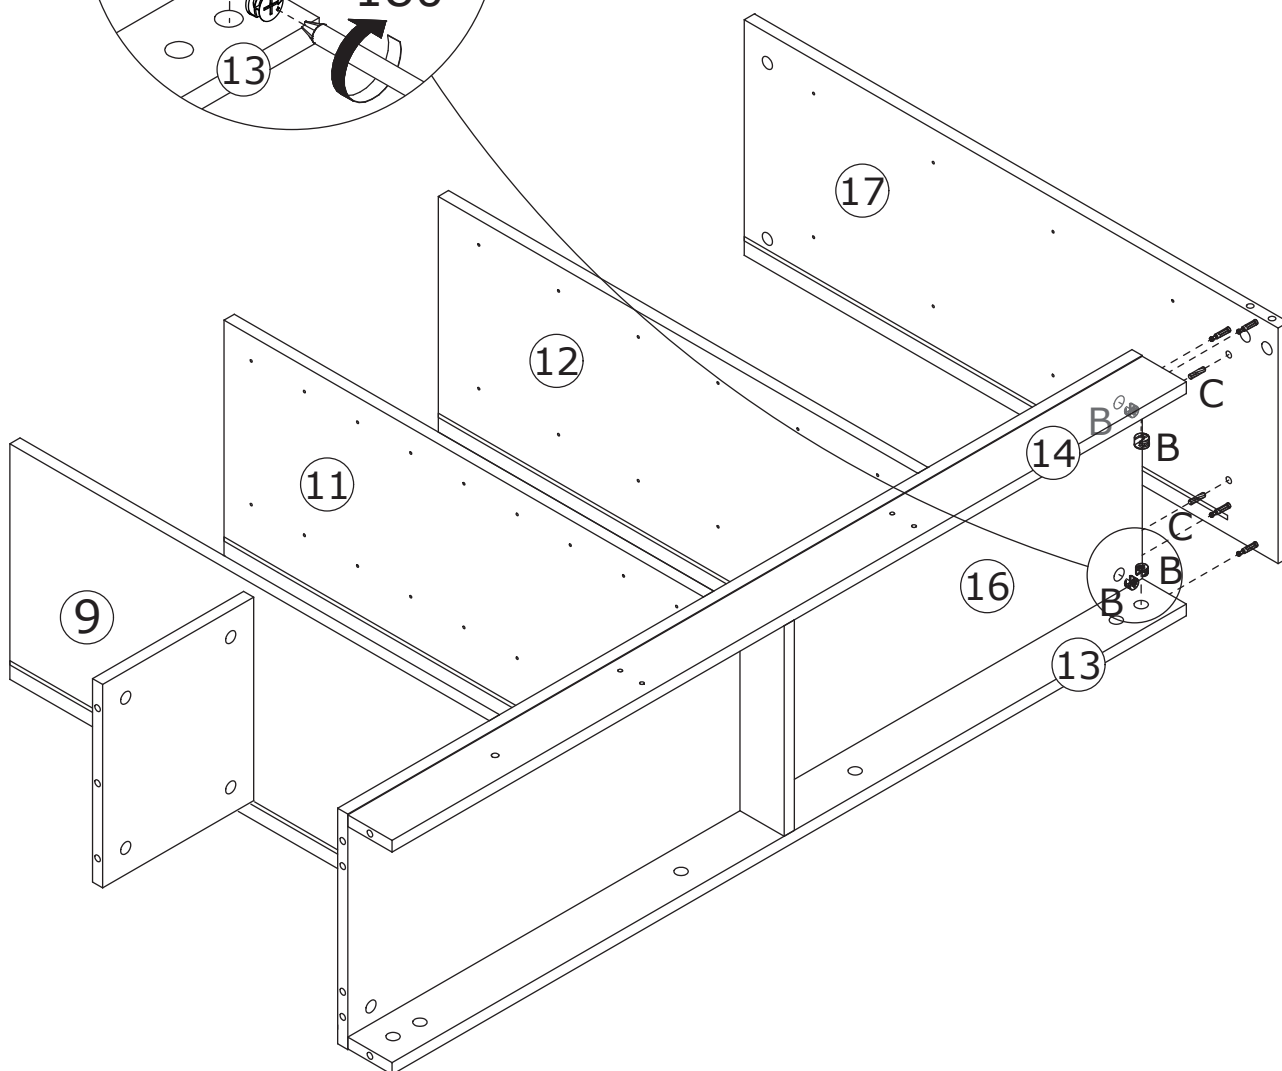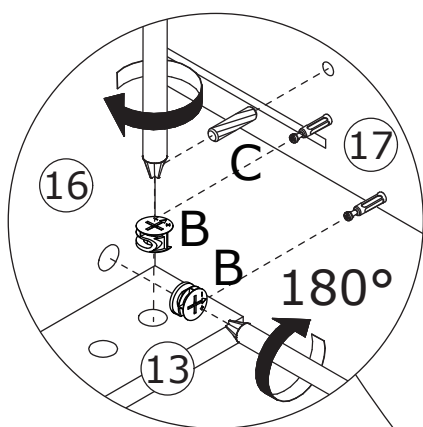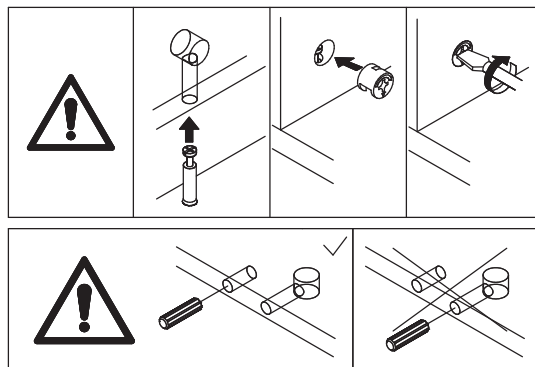


17

B x 6









Ø15 x 9 mm


 
C x 3





Ø8 x 40 mm

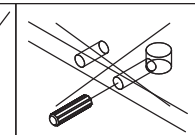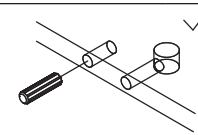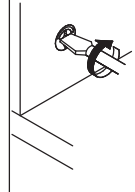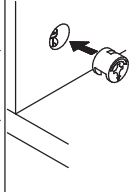      

  
Connect board 18 to boards 10, 13, 14, and 16 using wooden dowel (C), then tighten by turning eccentric cam (B) clockwise.

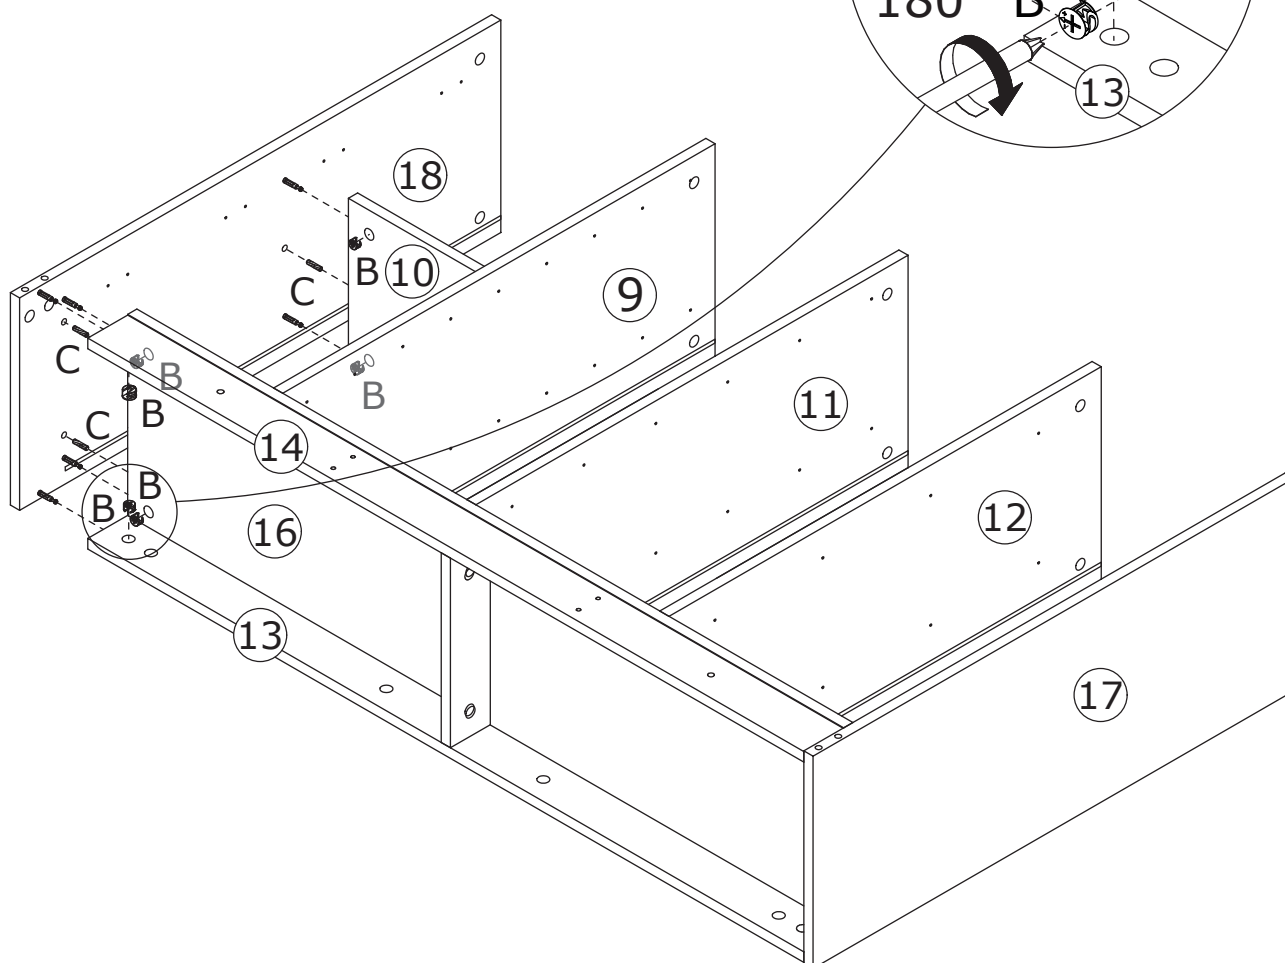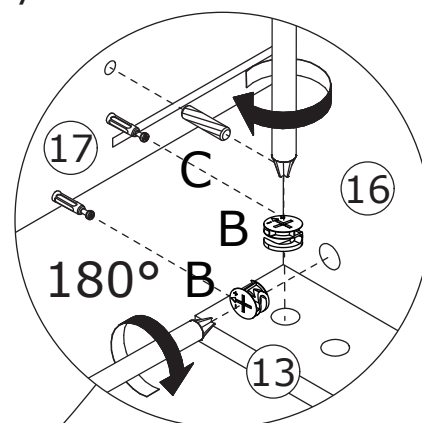

18

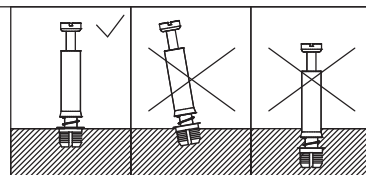  

Screw eccentric rod (A) onto board 21.

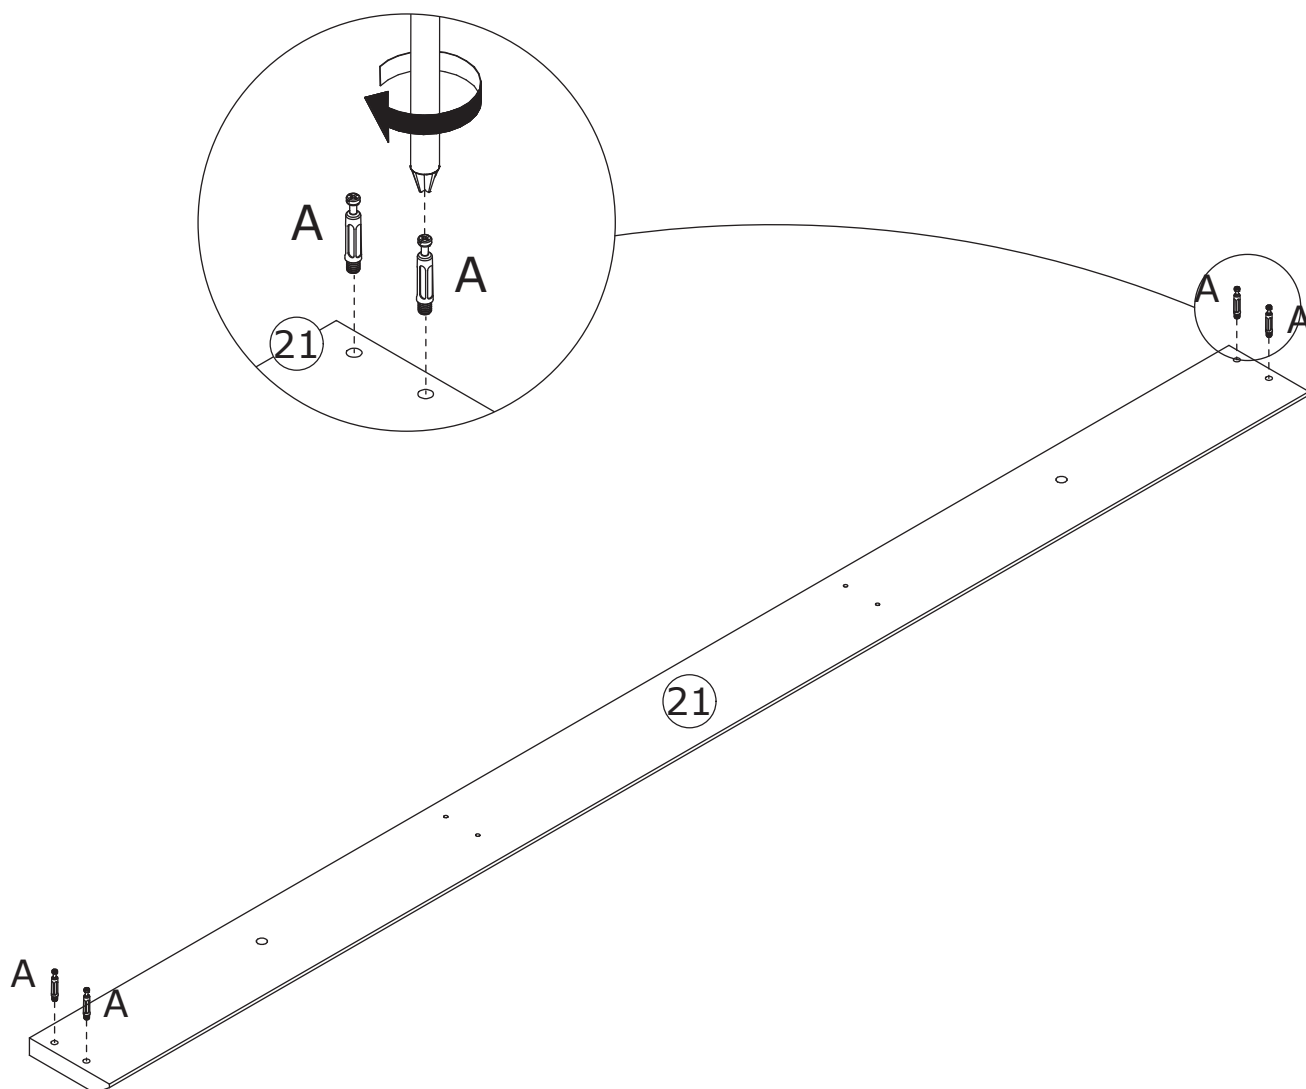 

19

B x 4



Ø 15 x 9 mm

D x 2

 


Ø 8 x 20 mm

F x 4





Ø 3.5 x 25 mm




Connect board 21 to boards 14, 17, and 18 using wooden dowel (C), then tighten by turning eccentric cam (B) clockwise.

  Secure board 21 to board 14 using screw (F).

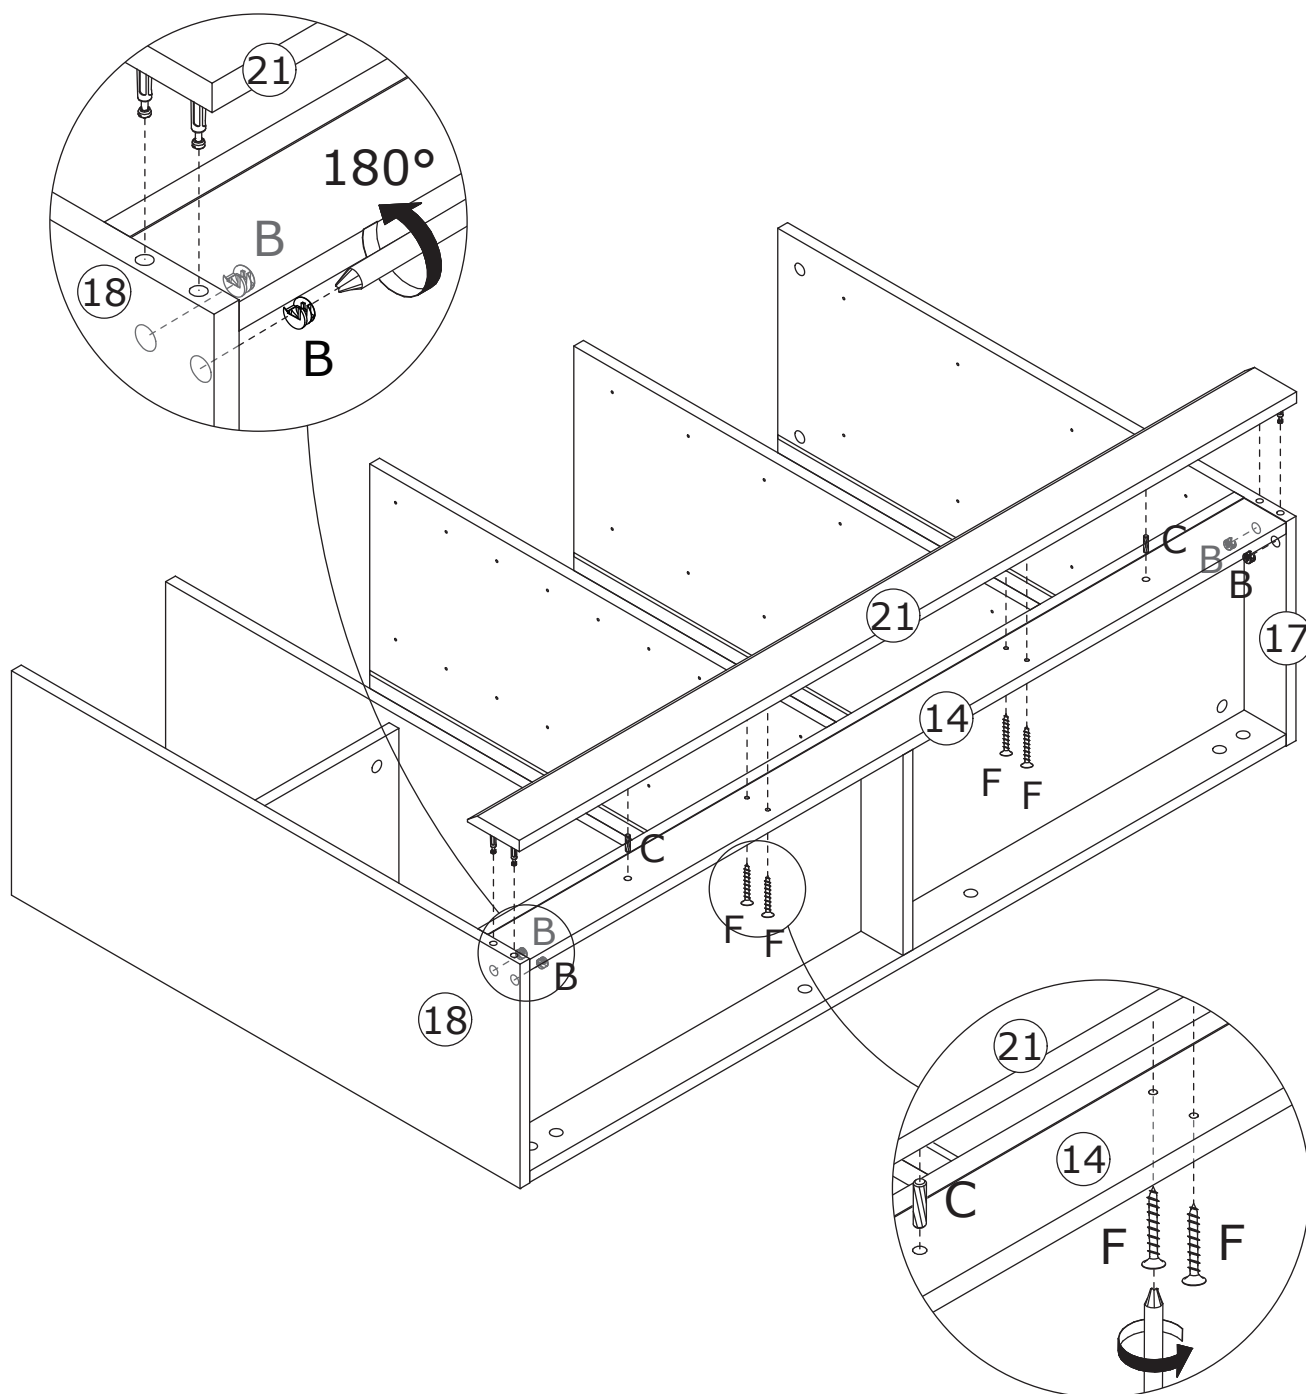
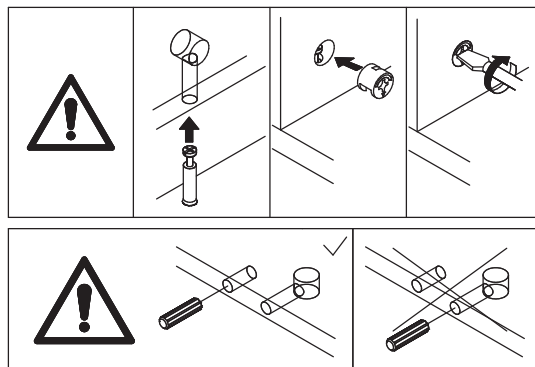


20

 
Insert board 19 and 20 into the available slots.

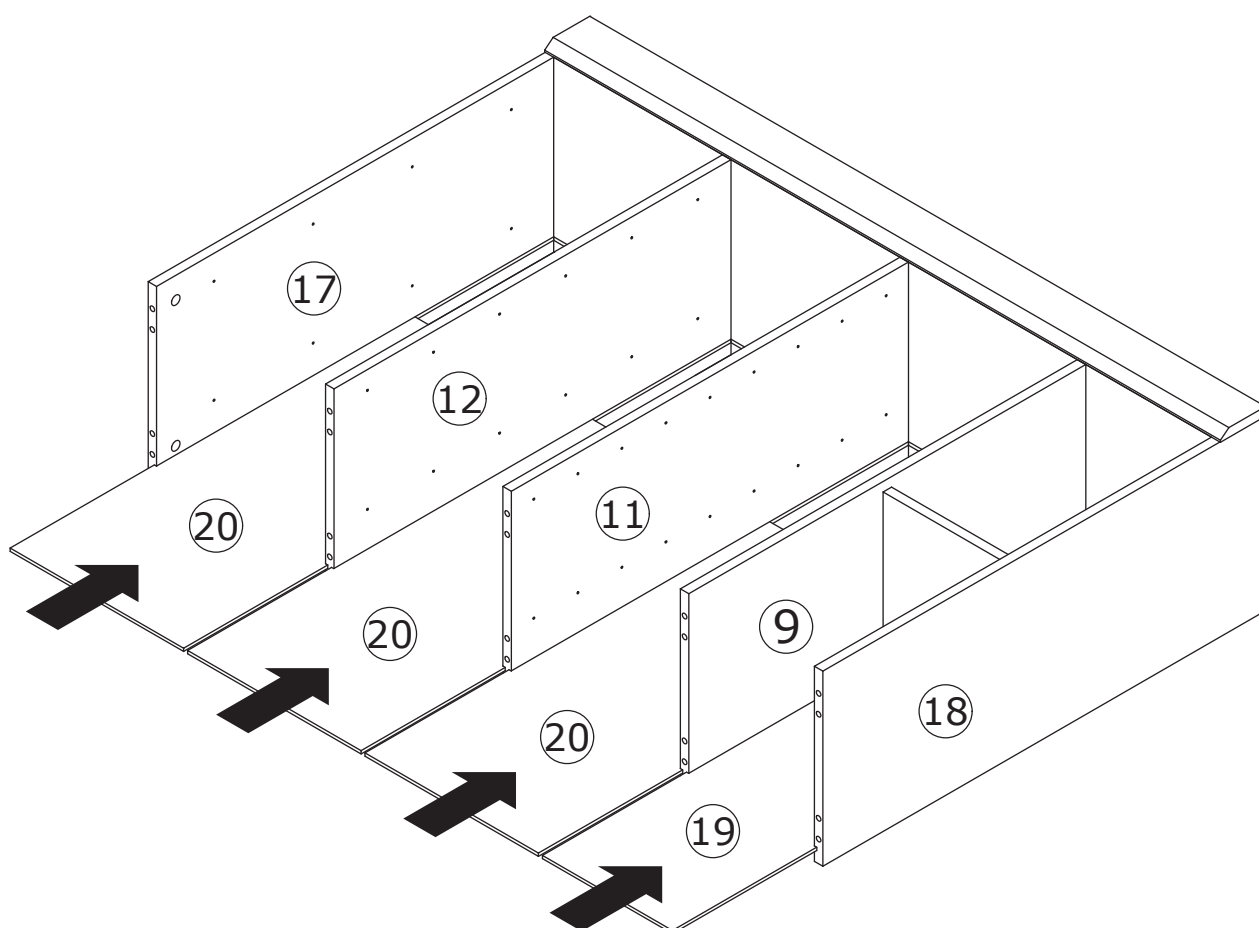



21

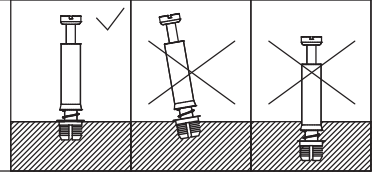  


Screw eccentric rod (A) onto board 8.

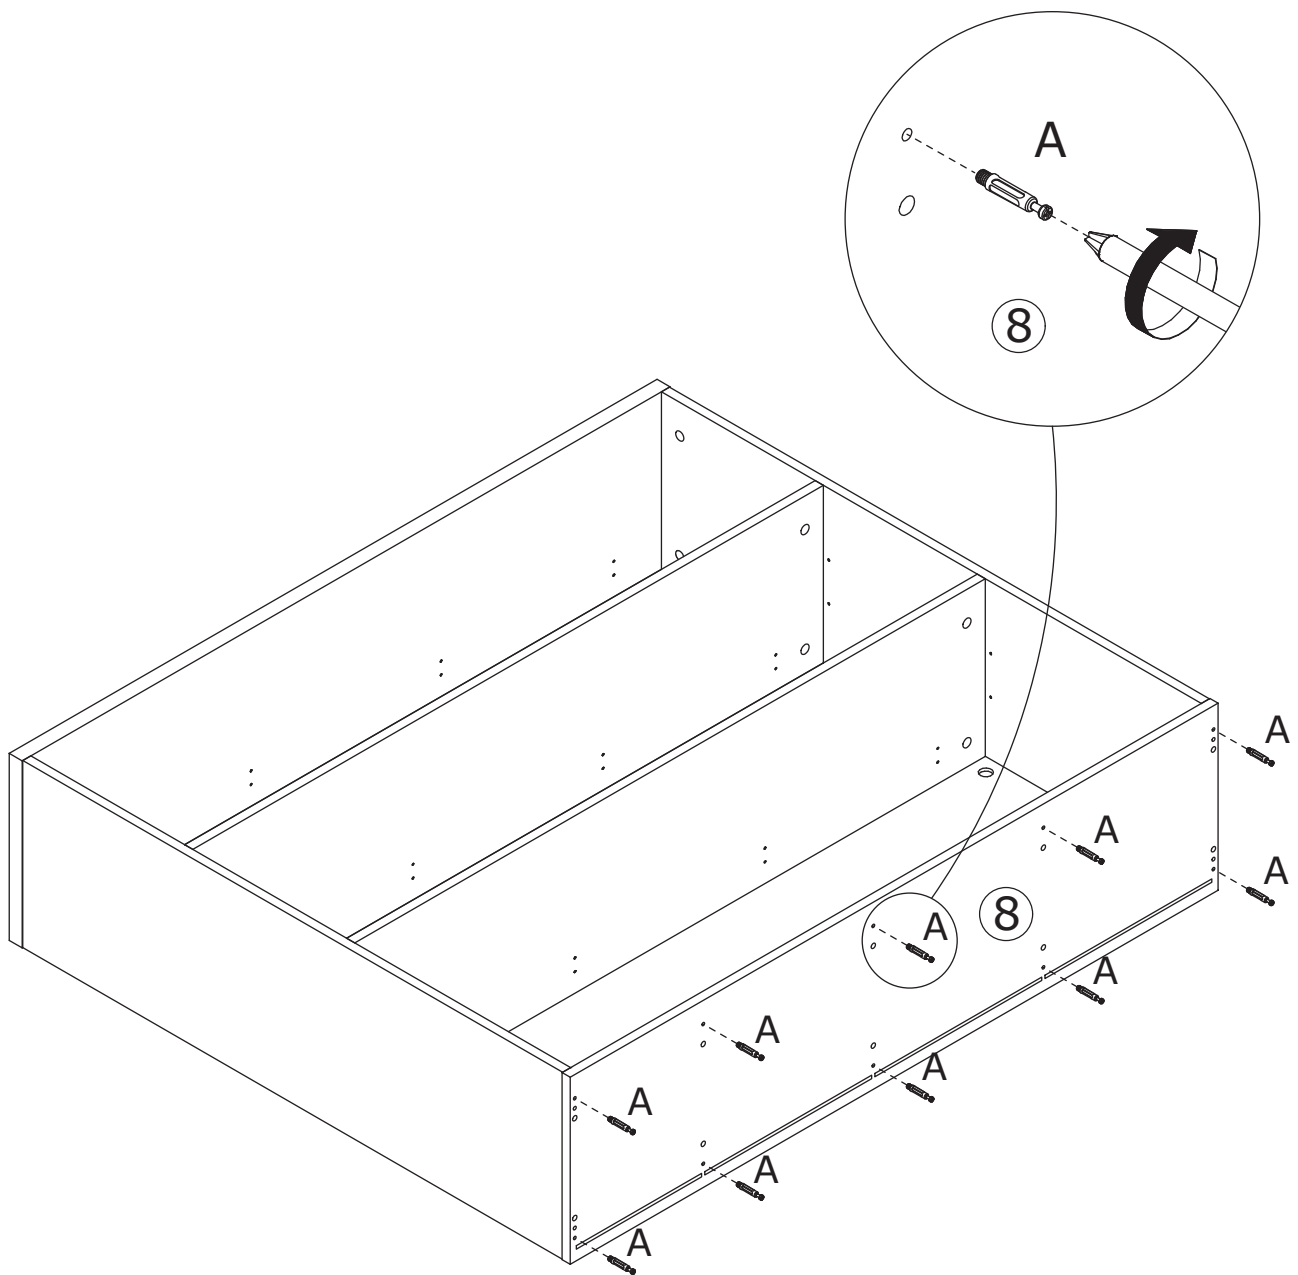 


22

  B x 10  Ø 15 x 9 mm	C x 10  Ø 8 x 40 mm	
--	--	---

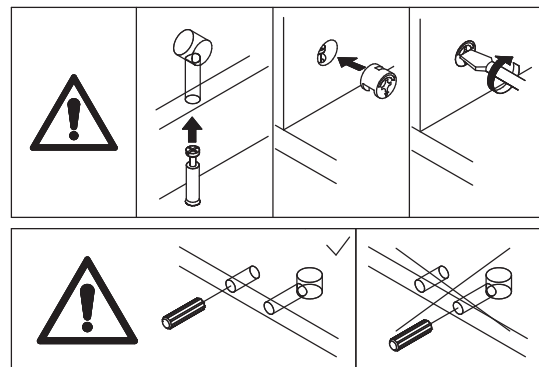 

 Connect the two assembled components using wooden dowel (C), then tighten by turning eccentric cam (B) clockwise.

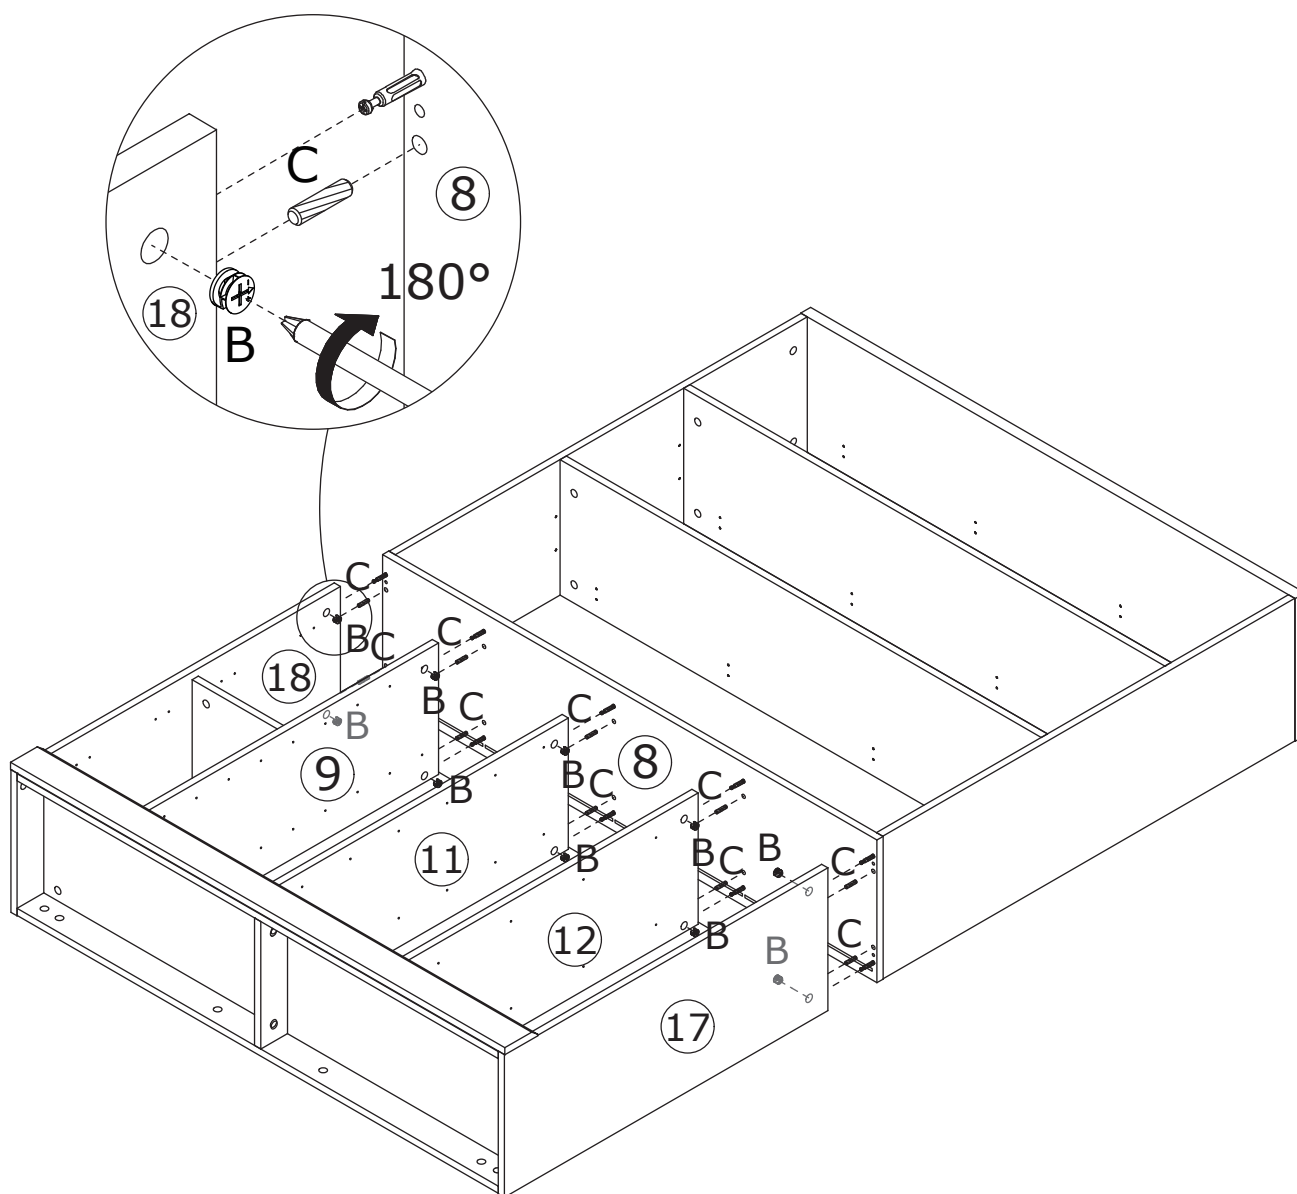



23

K x 8





Ø 3.5 x 12 mm

  H x 2





  Secure iron plate (H) to boards 1, 6, 8, 17, and 18 using screw (K).


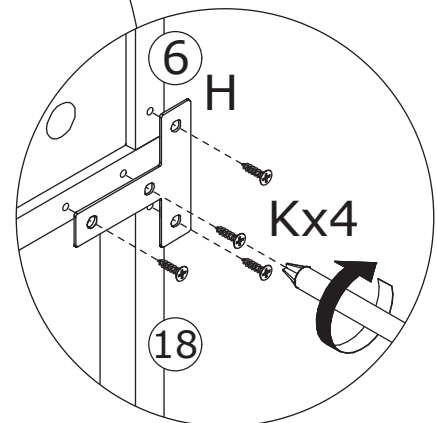
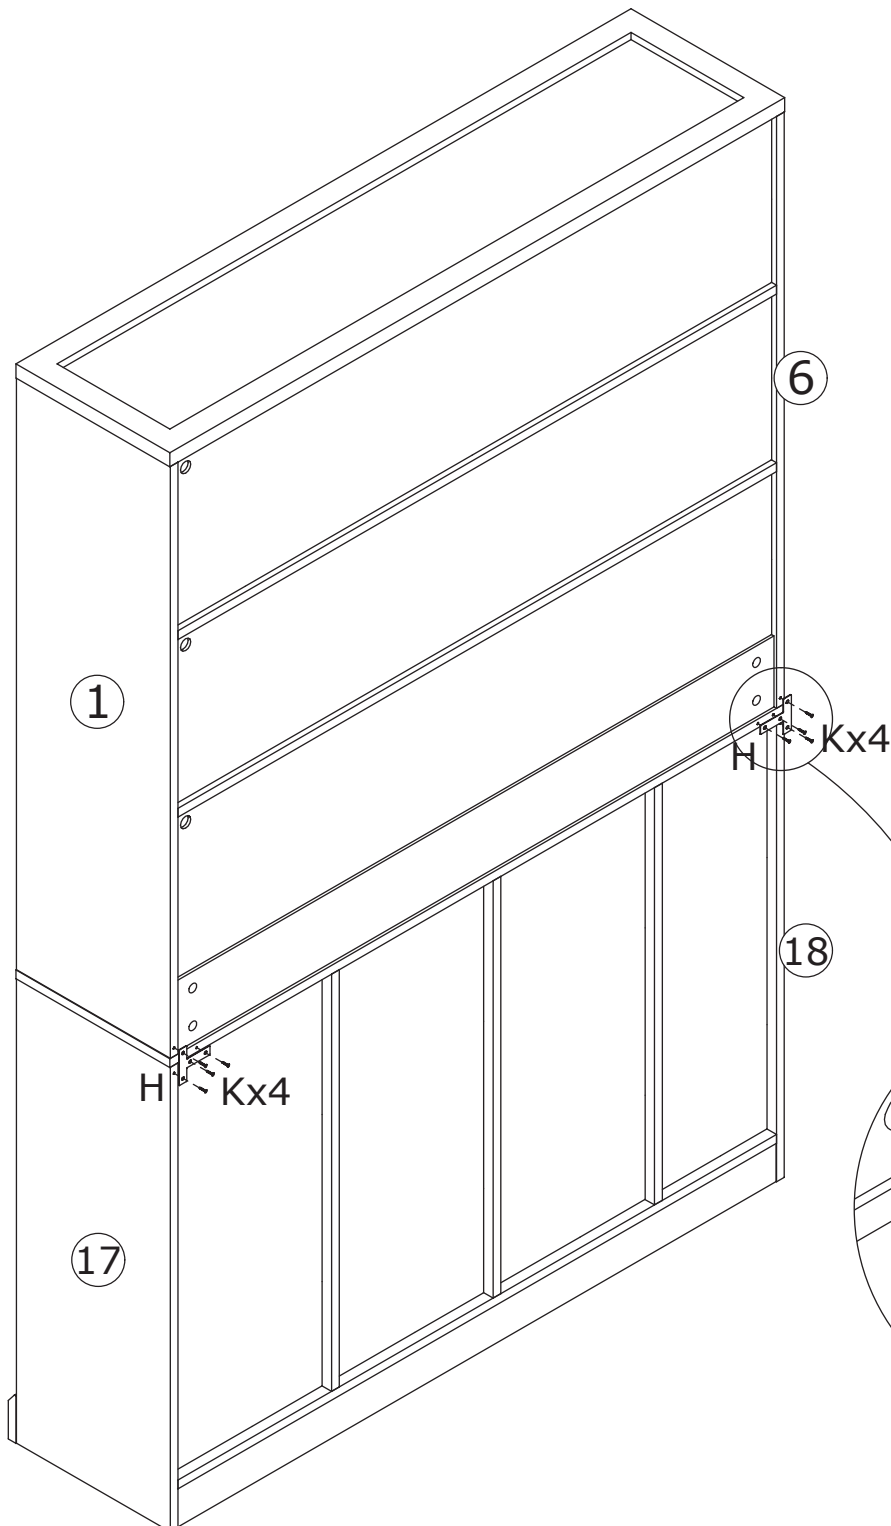


24

  
G x 45



   
Insert back panel clip (G) into slots and tighten using screws.

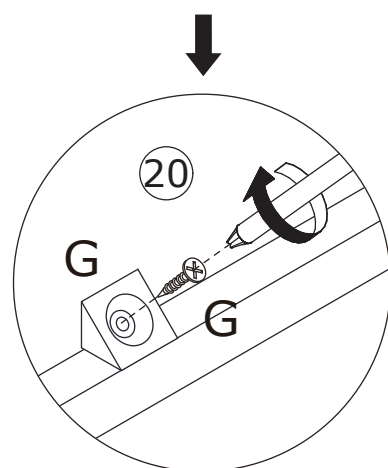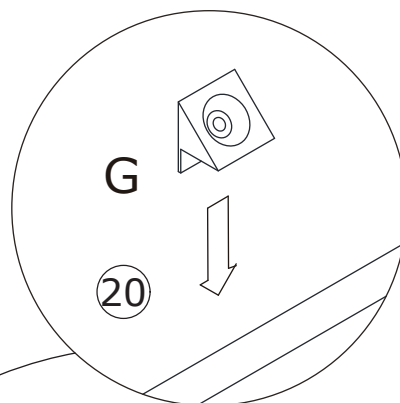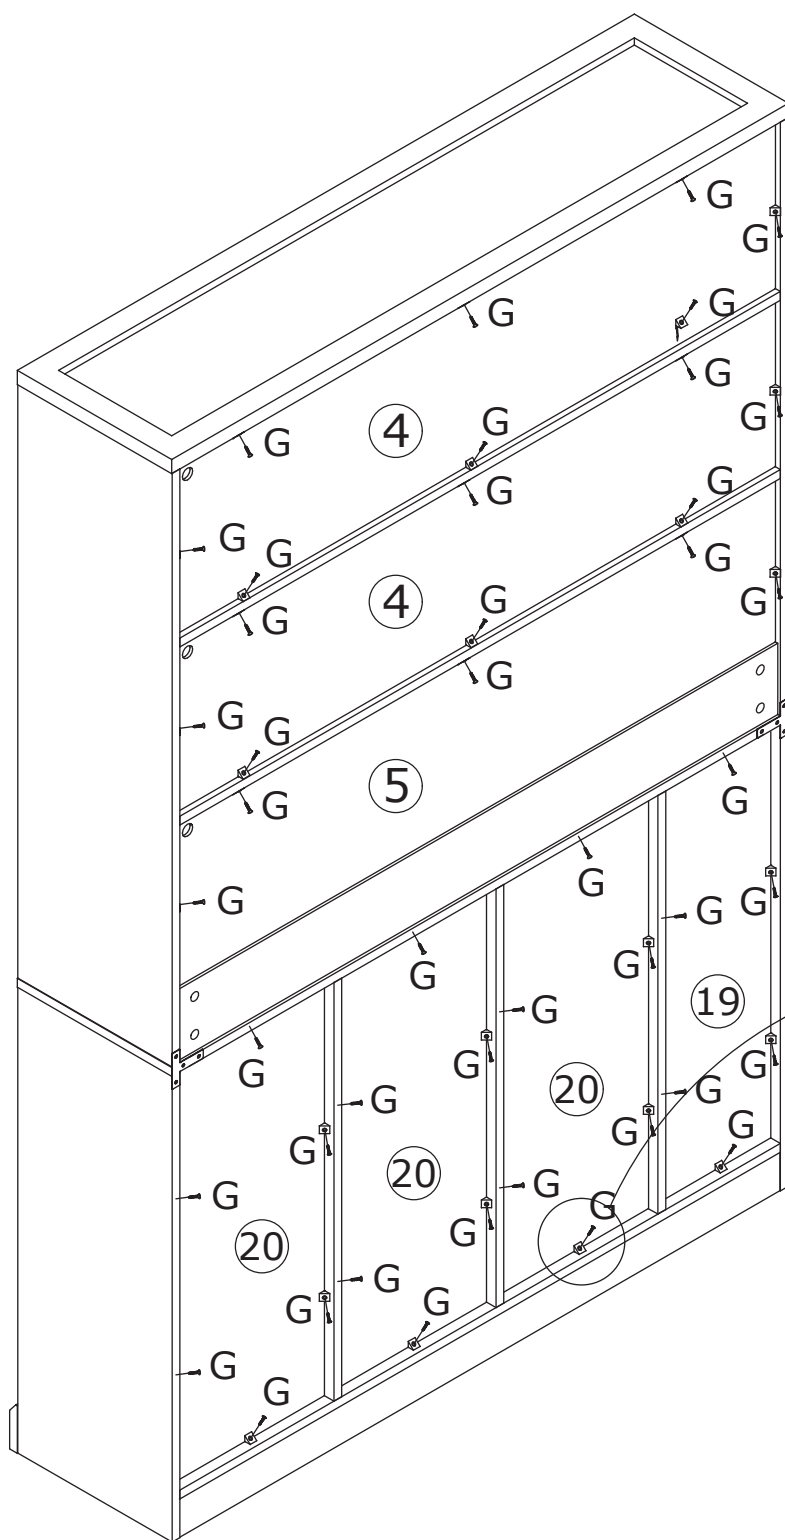




25

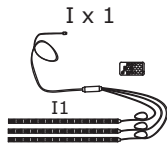 



 
Route the LED strip (I) out through the round holes on boards 4 and 5.

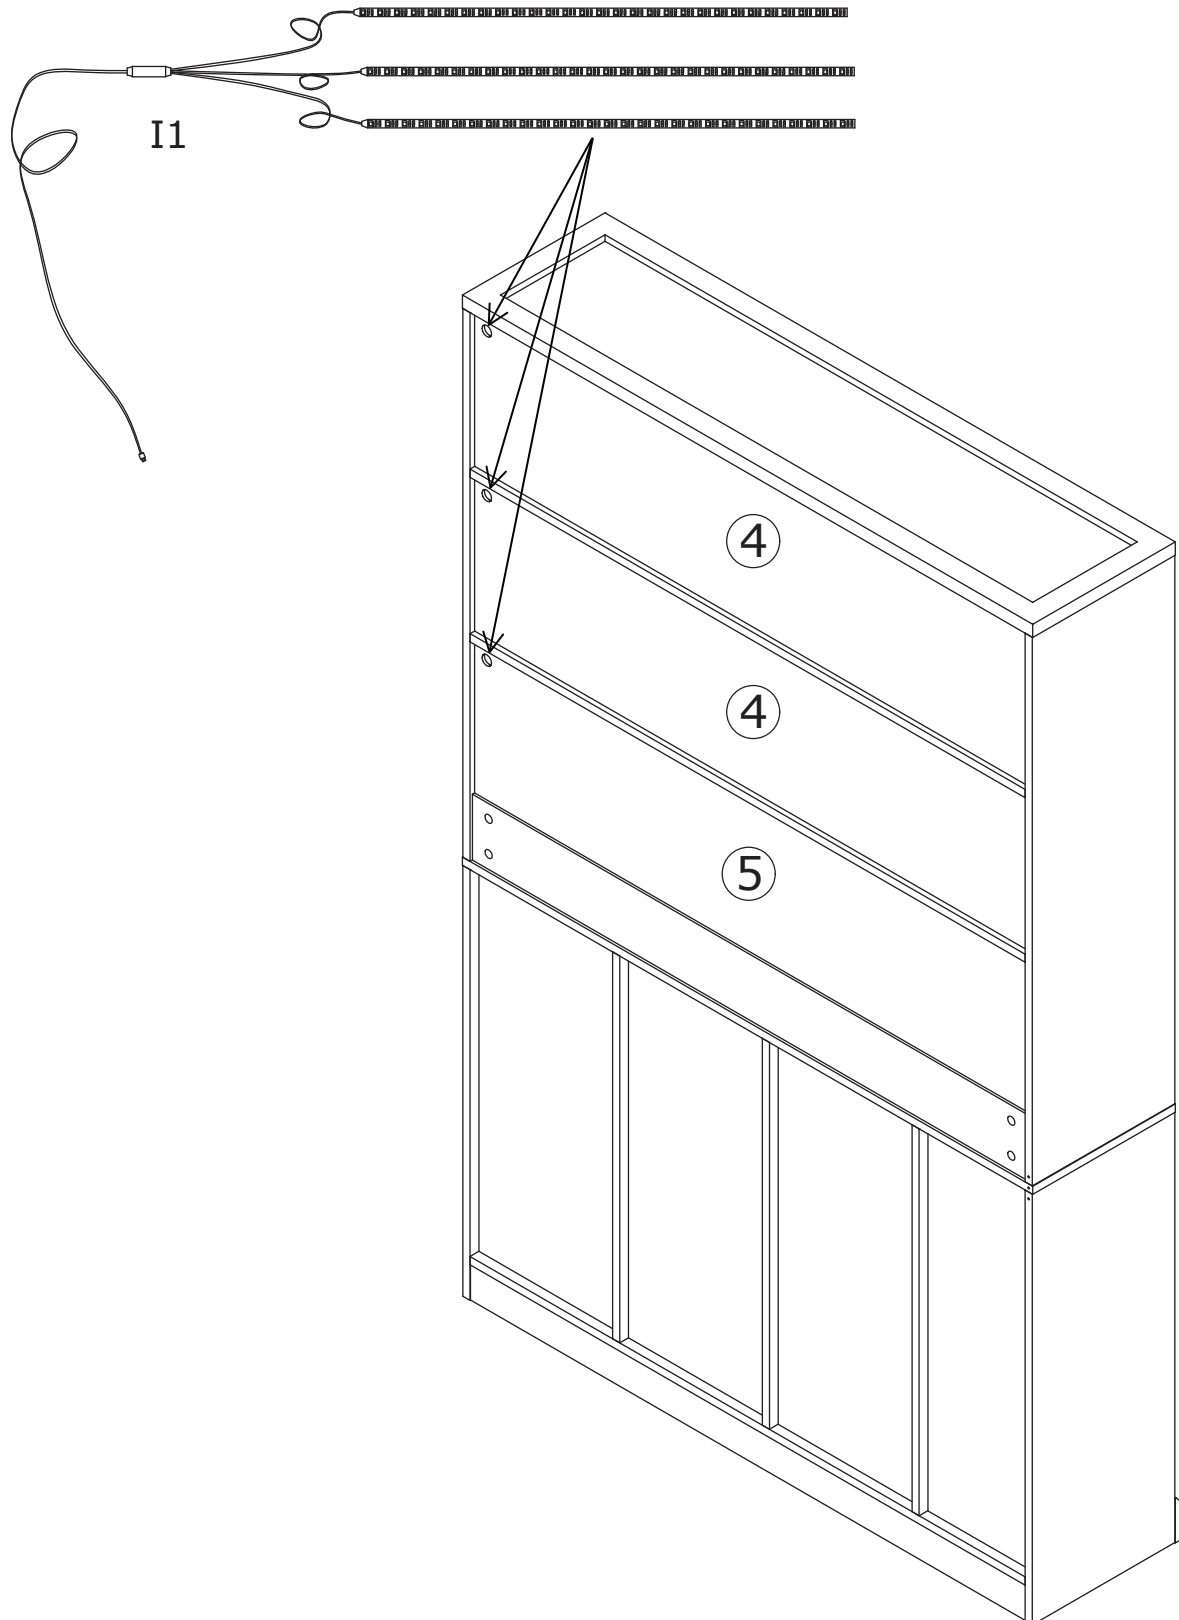



26

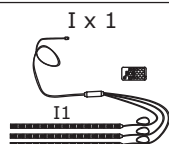   

   
Remove the protective film from LED strip (I) and attach it under boards 2 and 7. Then secure LED strip using buckle (W) as shown.

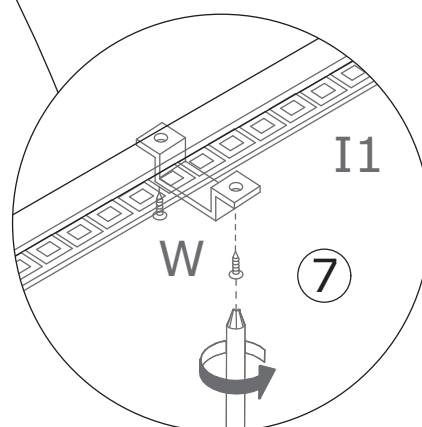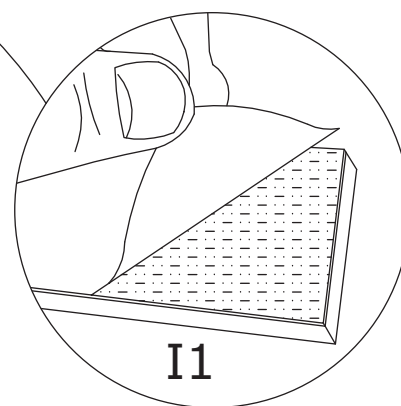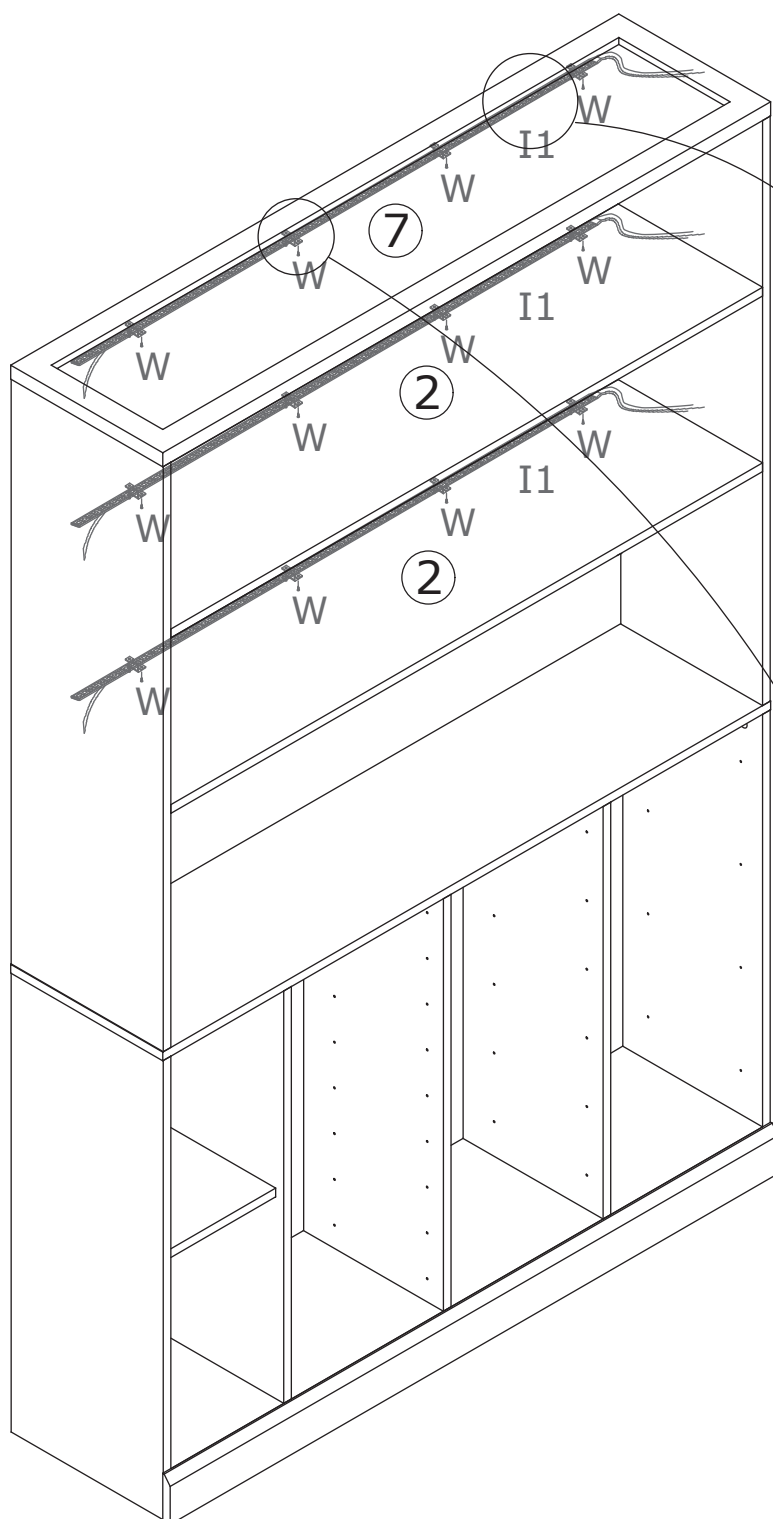


27

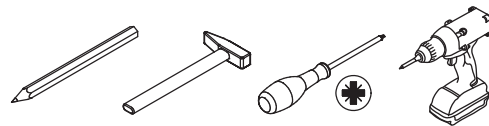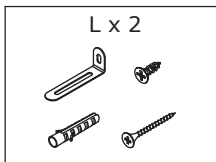  

 
If wall mounting is required, install the anti-tipping device (L) as shown.

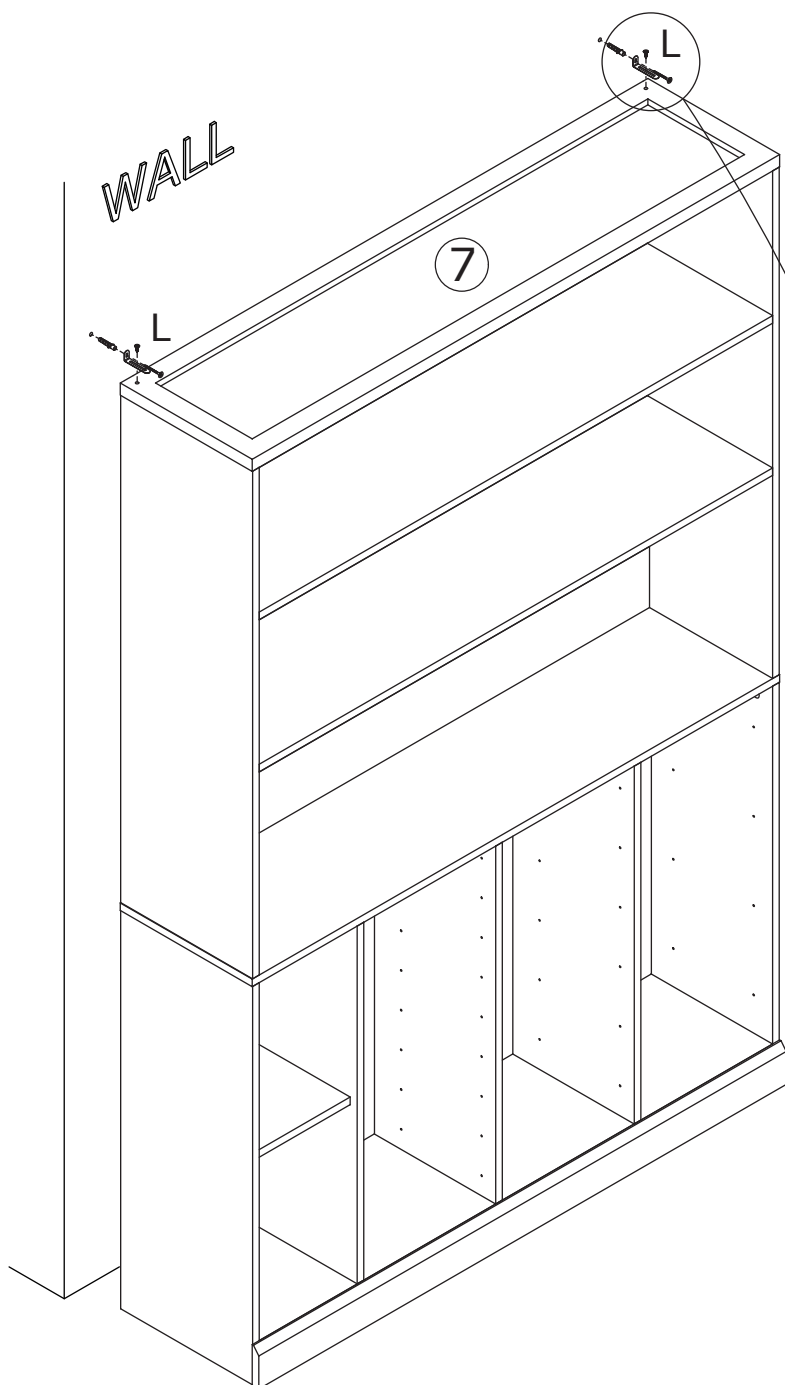

 
1.

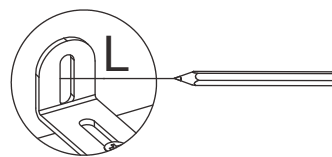


 
2.

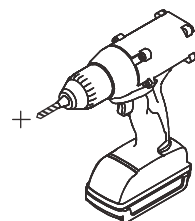

 3.

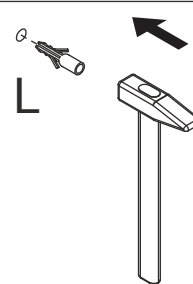


  4.

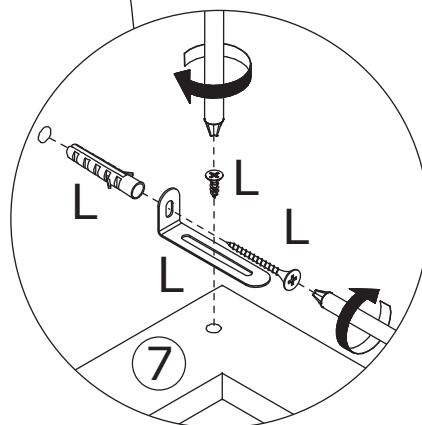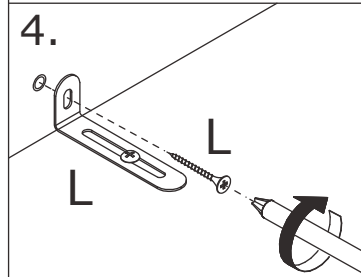

28

 
J x 19

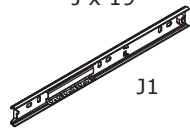

K x 38






 Ø 3.5 x 12 mm




Secure slide rail (J1) to boards 11, 12, and 17 using screw (K).

   (Note: Screws should be installed at the center position of the slide rail holes.)

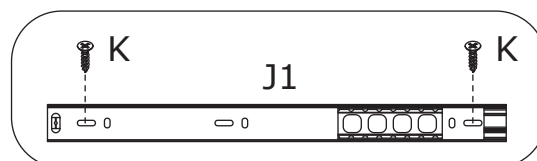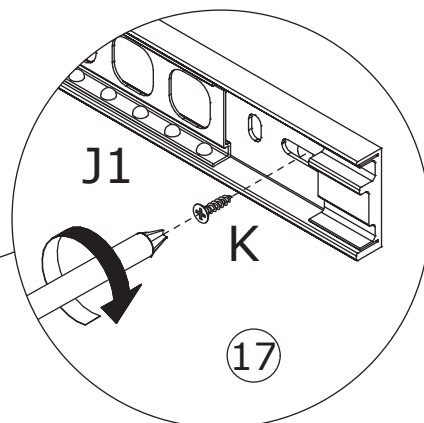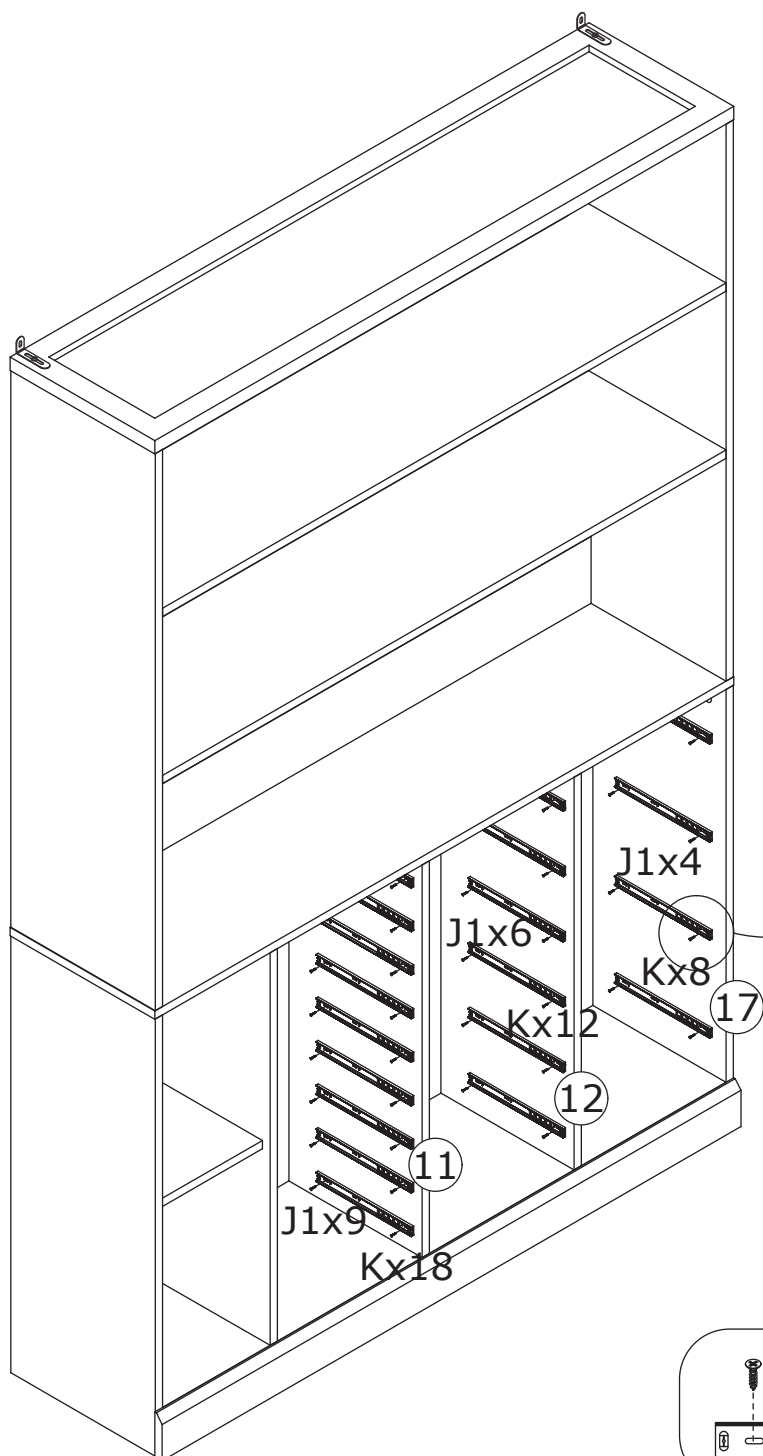

29

 J x 19

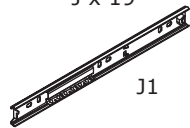


J1

K x 38





 Ø3.5 x 12 mm





Secure slide rail (J1) to boards 9, 11, and 12 using screw (K).

  
(Note: Screws should be installed at the center position of the slide rail holes.)

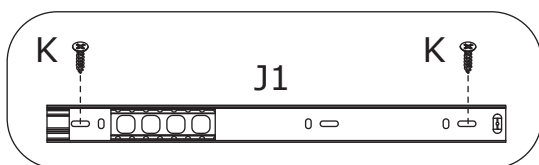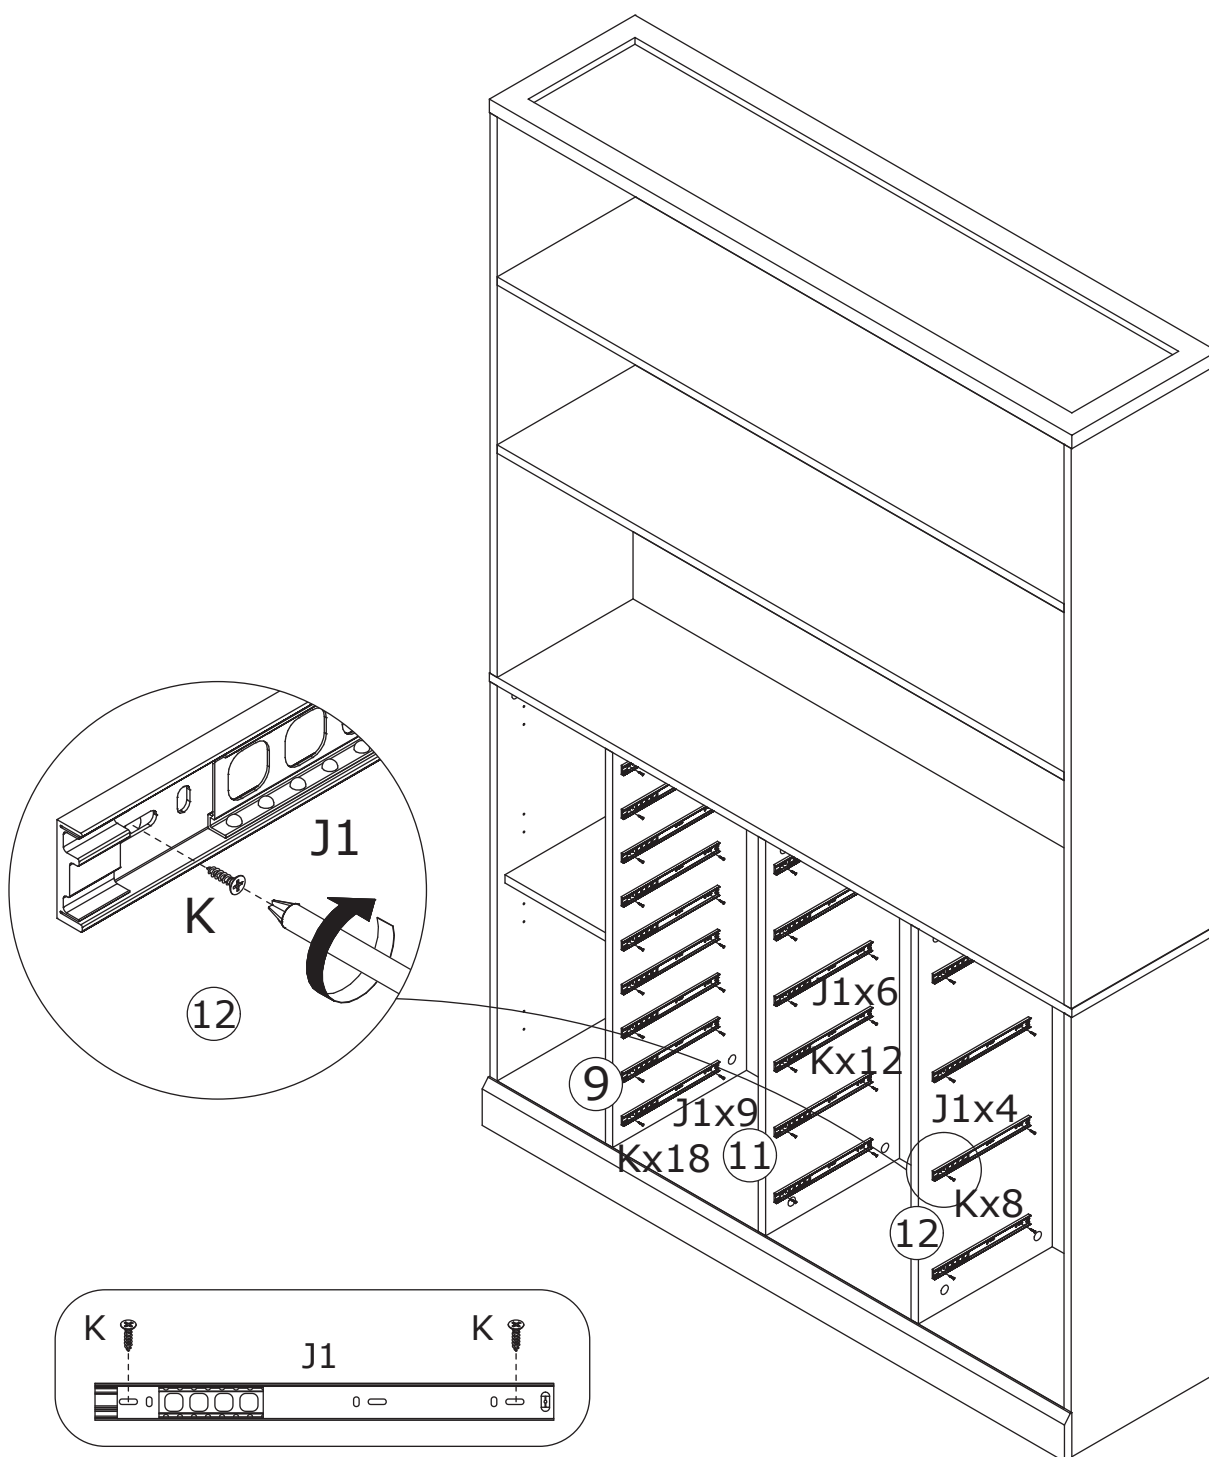

30

  K x 8  Ø 3.5 x 12 mm	M x 4 	N x 2 	Q x 2  M4 x 18 mm	
---	--	--	---	---

 Secure hinge (M) to board 22 using screw (K), and secure knob (N) using screw (Q).

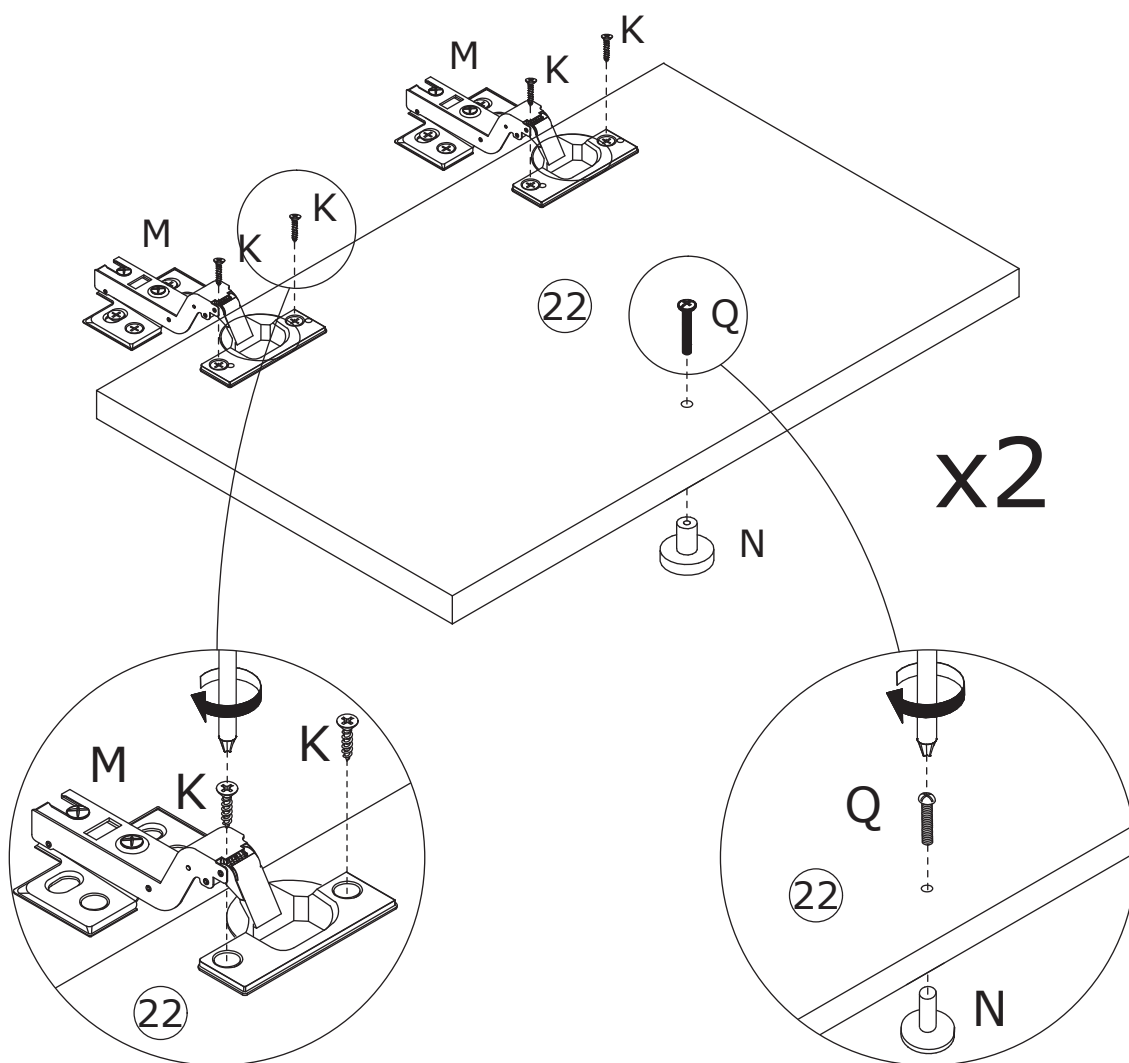


31


K x 16




 
Ø 3.5 x 12 mm



 
Secure board 22 to board 18 via hinges using screw (K)

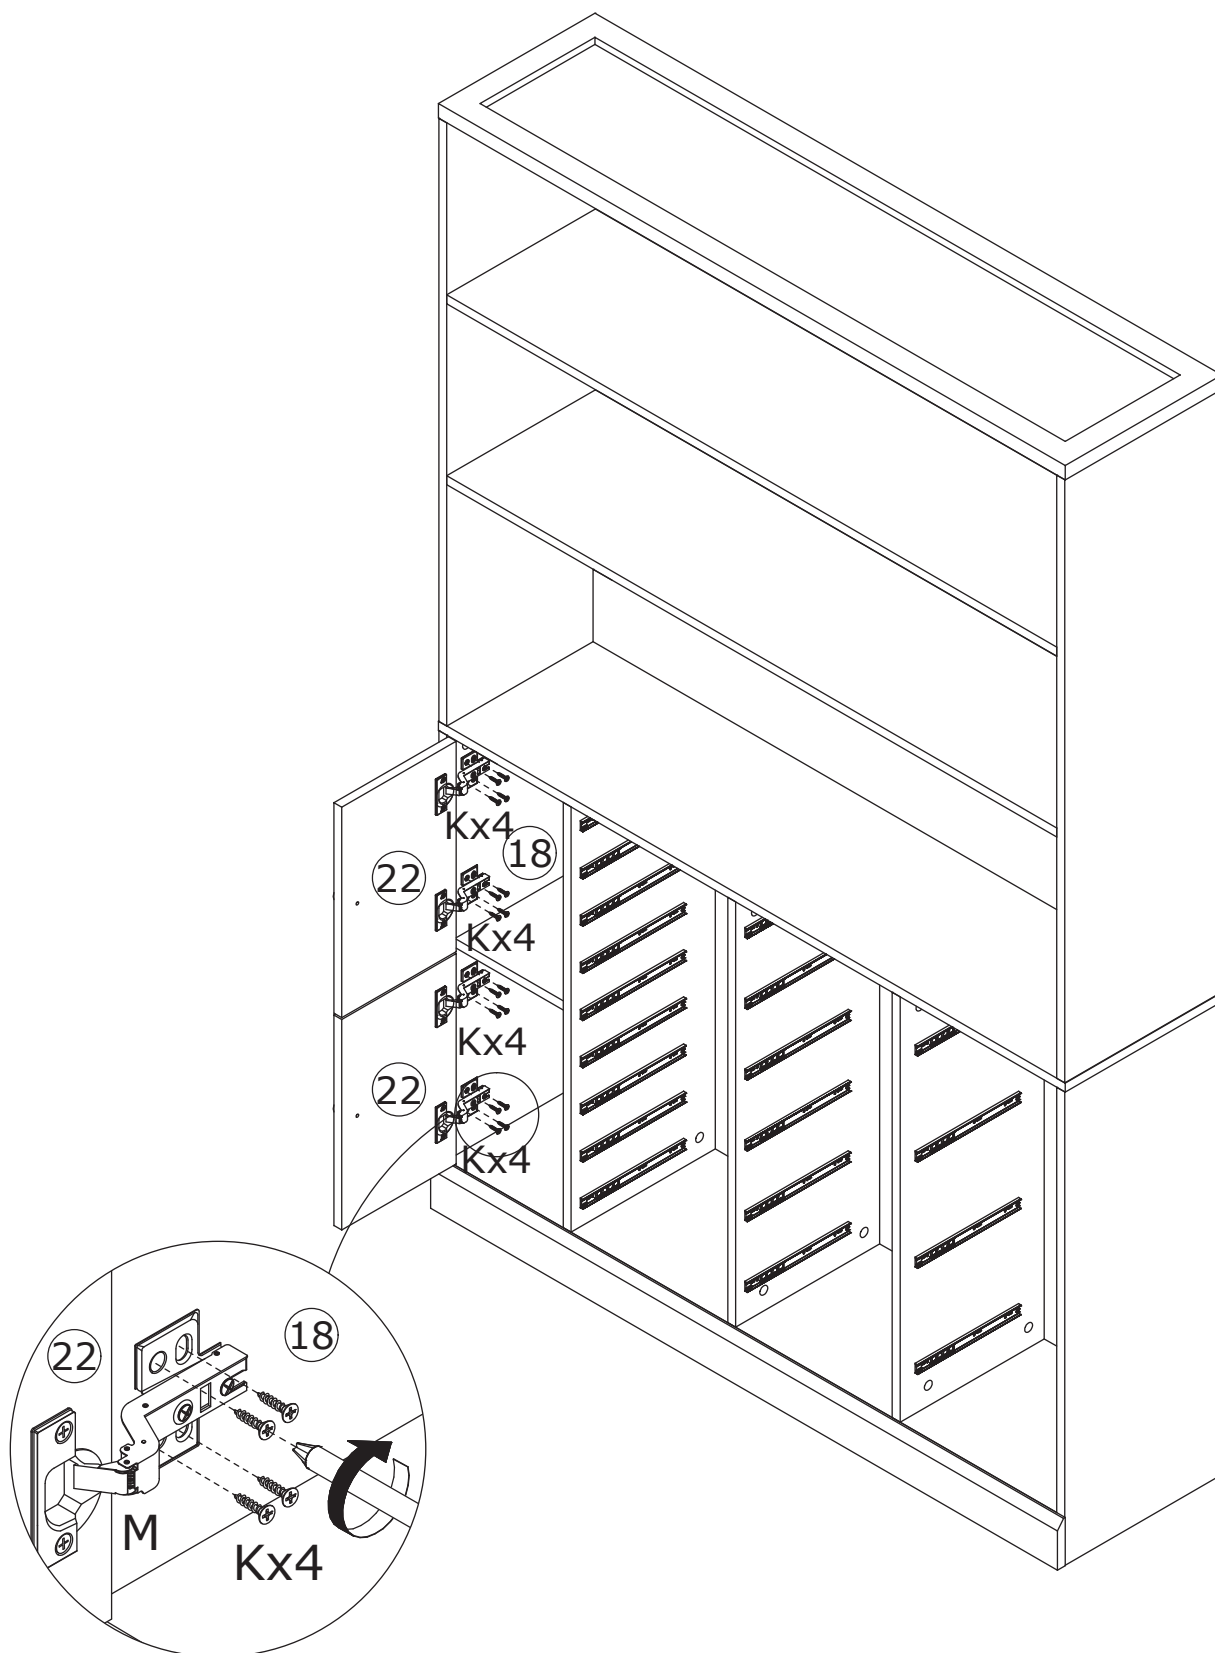



32

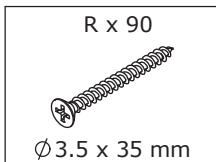  

 
Secure board 23 to board 24 using screw (R),
then secure boards 25 and 26 to boards 23
and 24 using screw (R).

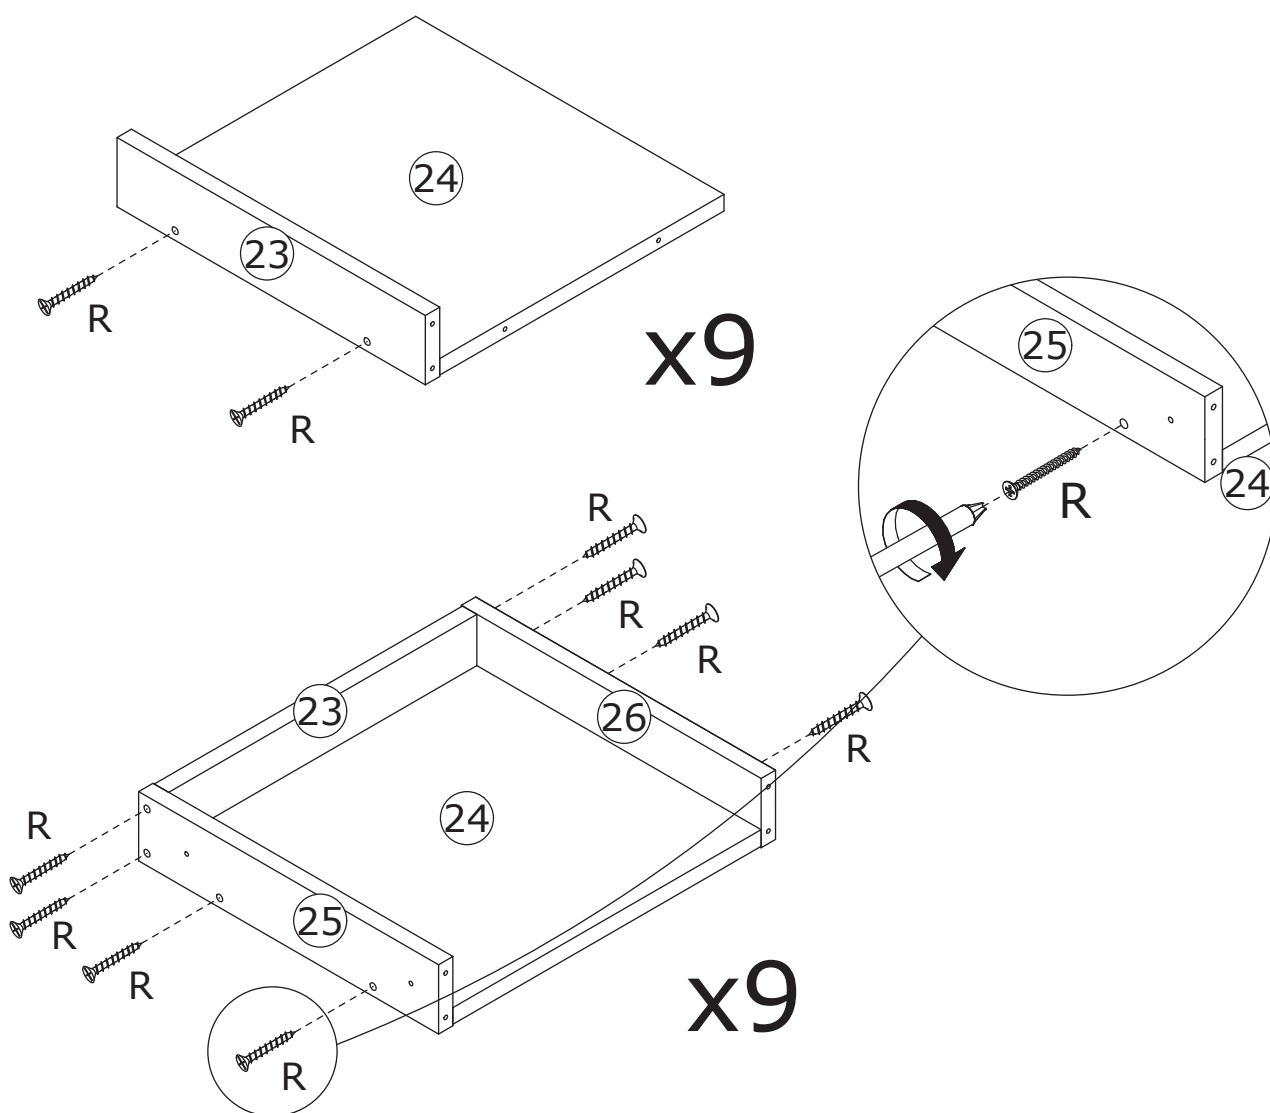



33

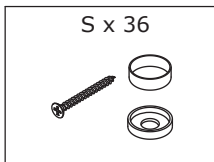  

 
Remove the protective film from both sides of acrylic board 27, then secure acrylic board 27 to boards 25 and 26 using hardware (S).

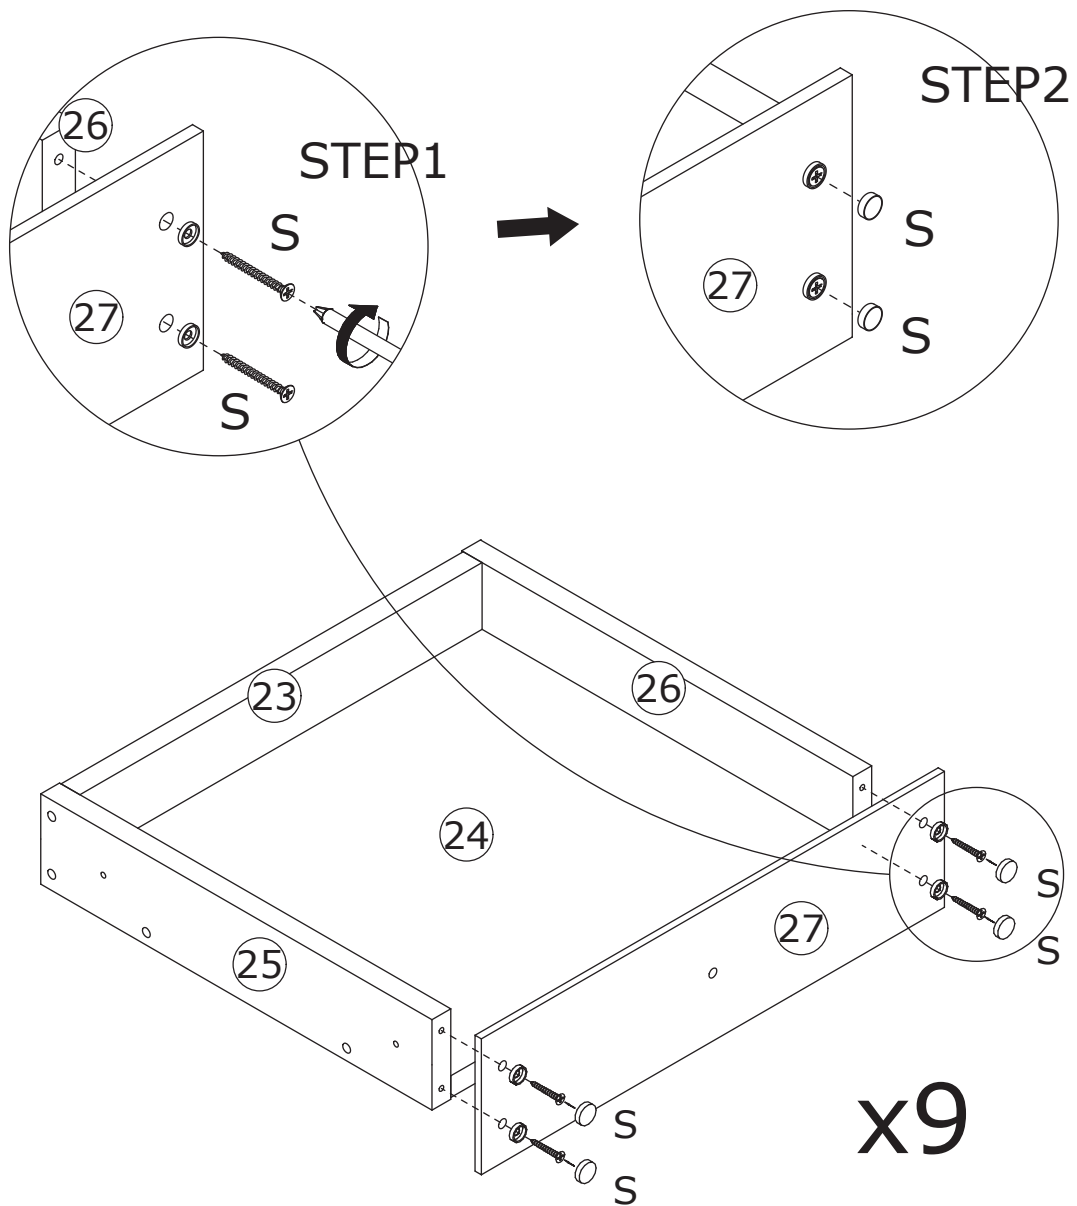



34

  J x 18  J2	K x 36  Ø3.5 x 12 mm	O x 9 	
P x 9  M4 x 8 mm	X x 9 		

 
Secure knob (O) to acrylic board 27 using screw (P) and washer (X).
Secure slide rail (J2) to boards 25 and 26 using screw (K).

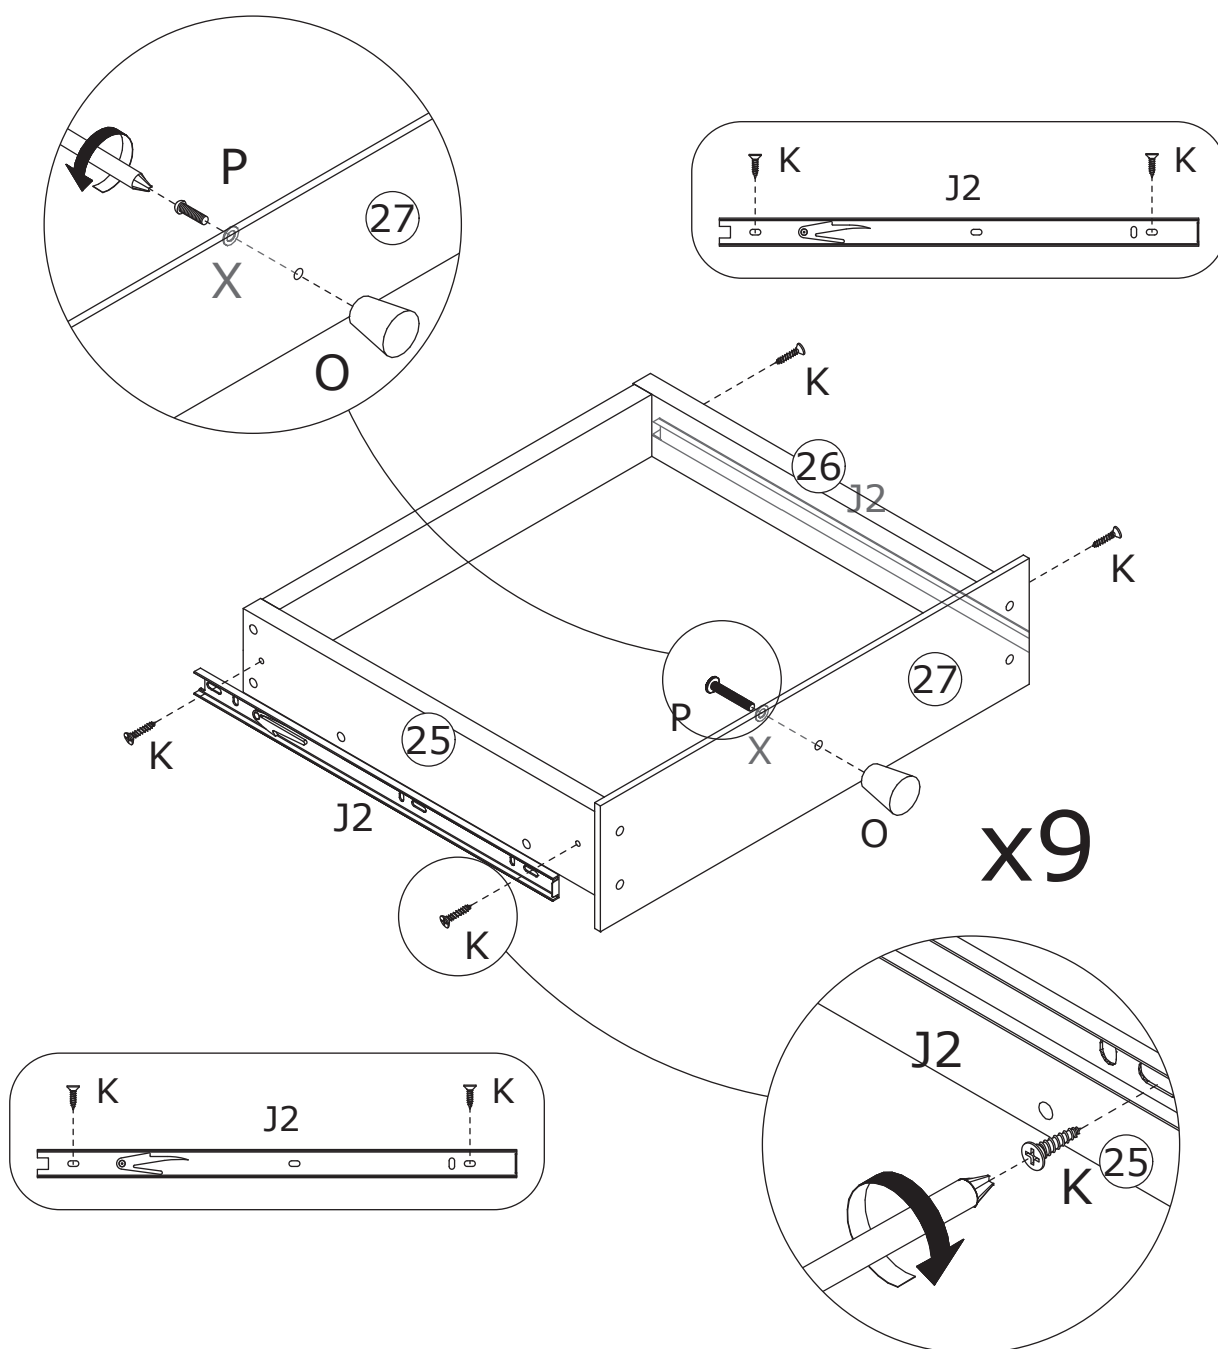



35

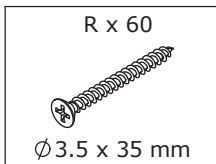  

 
Secure board 28 to board 24 using screw (R), then secure boards 29 and 30 to boards 28 and 24 using screw (R).

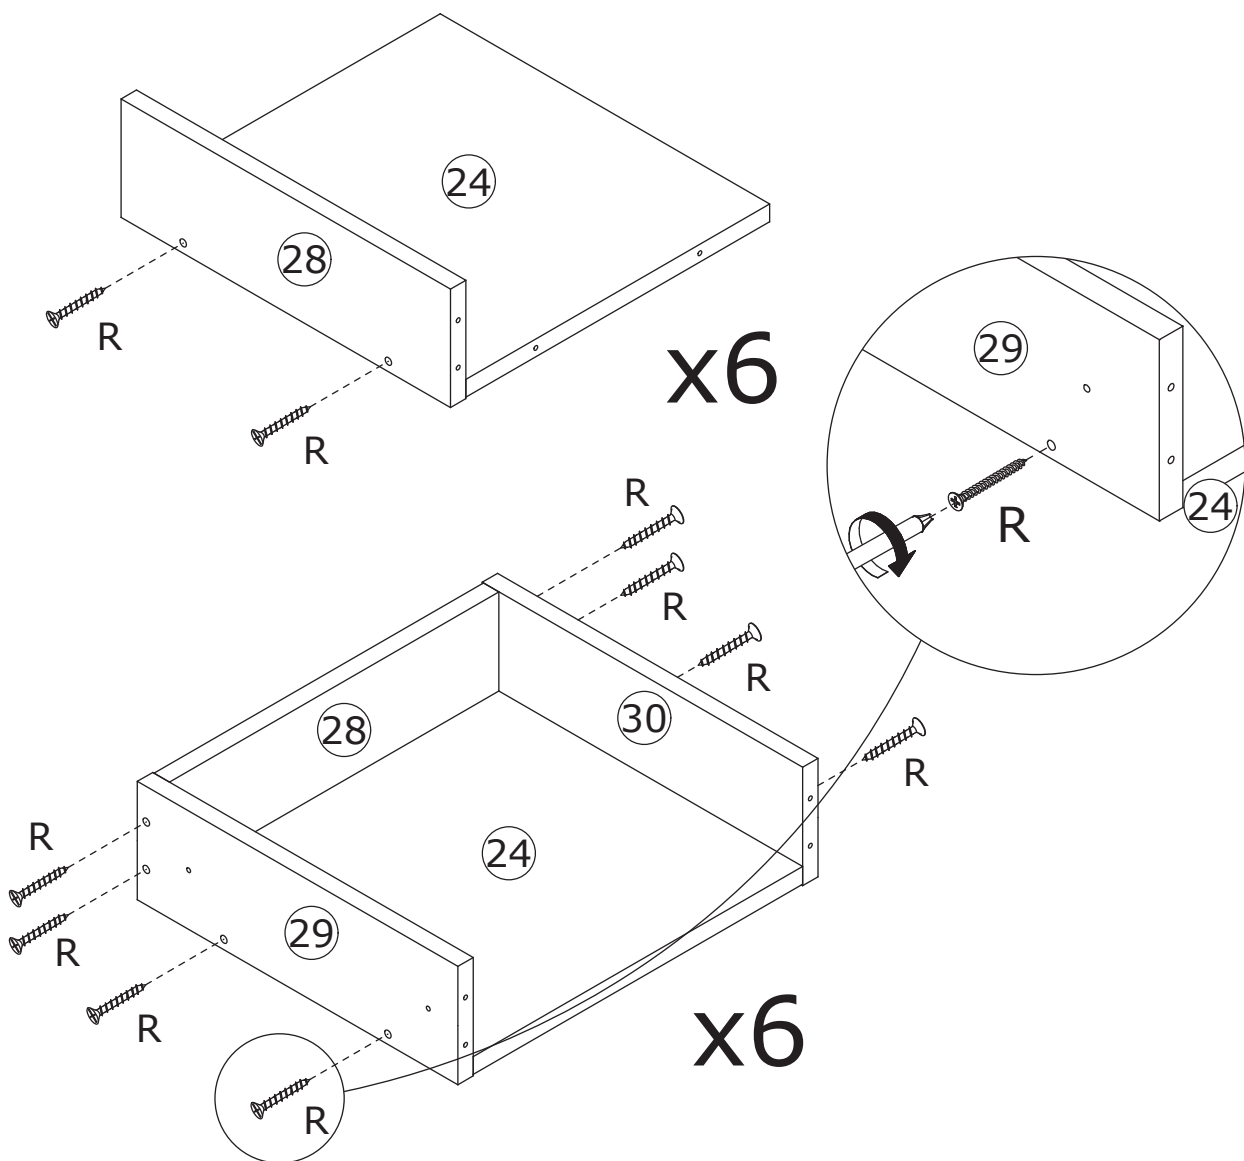



36

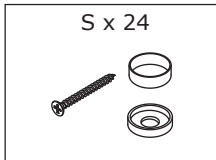  

 
Remove the protective film from both sides of acrylic board 31, then secure acrylic board 31 to boards 20 and 30 using hardware (S).

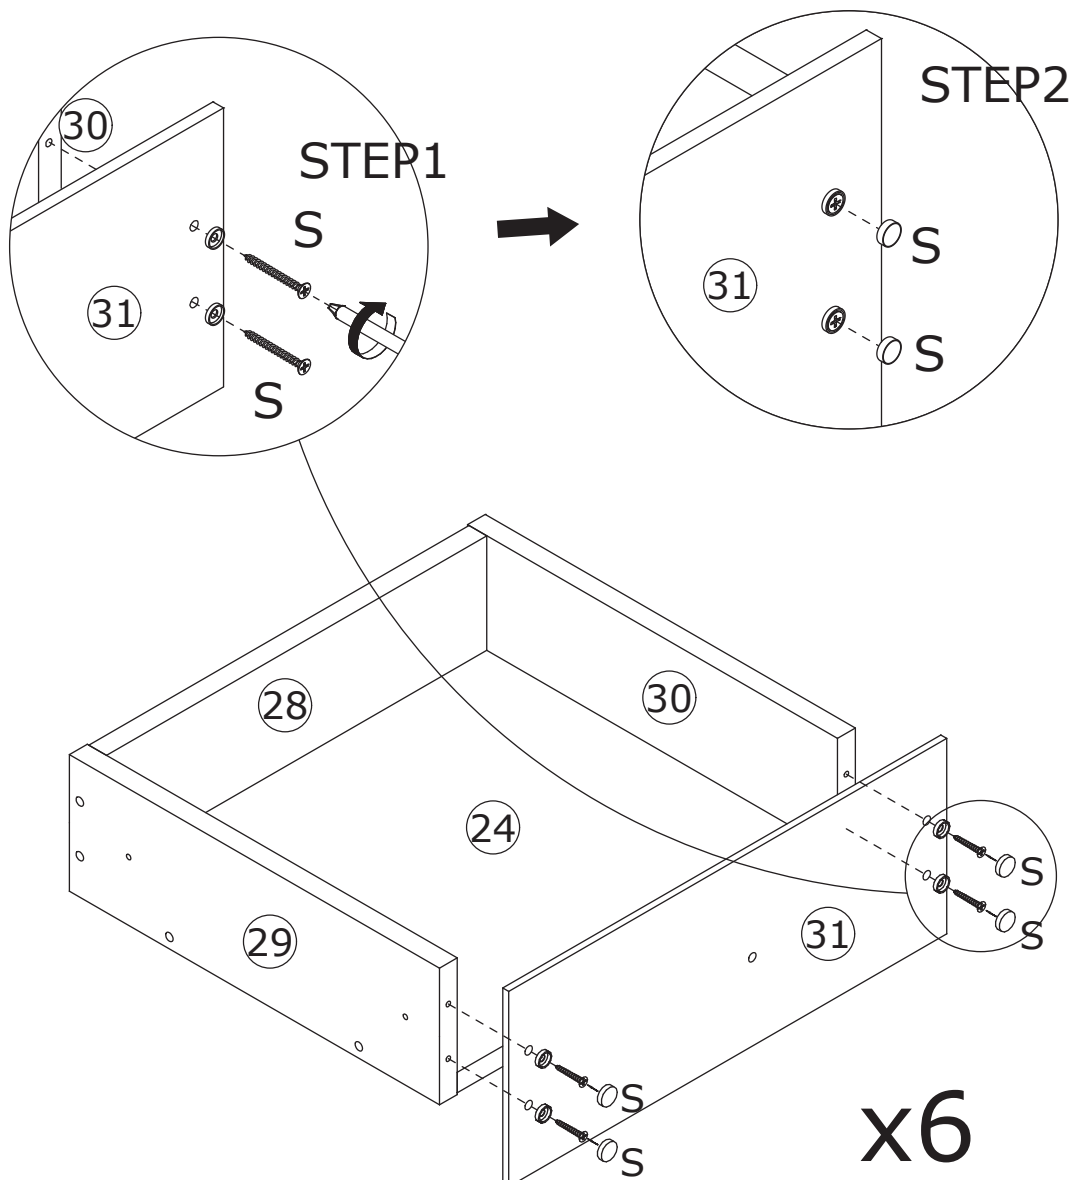

37

  
J x 12  J2	K x 24  Ø 3.5 x 12 mm	O x 6 	
P x 6  M4 x 8 mm	X x 6 		

 Secure knob (O) to acrylic board 31 using screw (P) and washer (X).
Secure slide rail (J2) to boards 29 and 30 using screw (K).

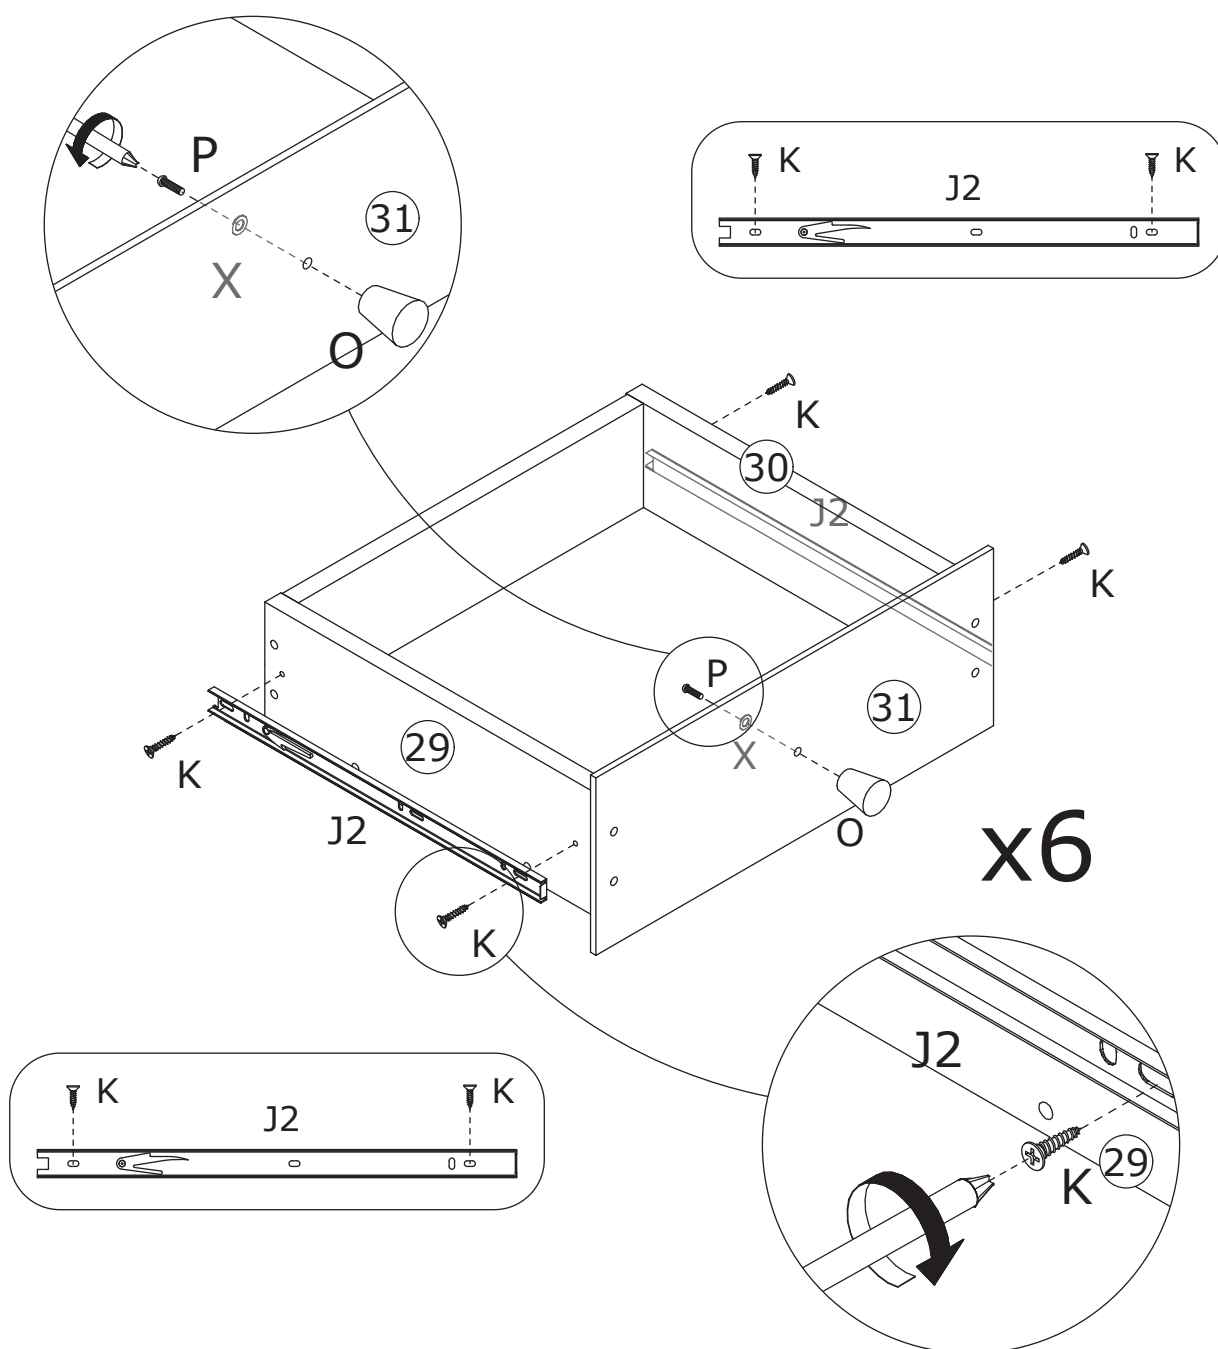


38

 R x 16
Ø 3.5 x 35 mm




 Secure boards 32 and 34 to board 33 using screw (R).

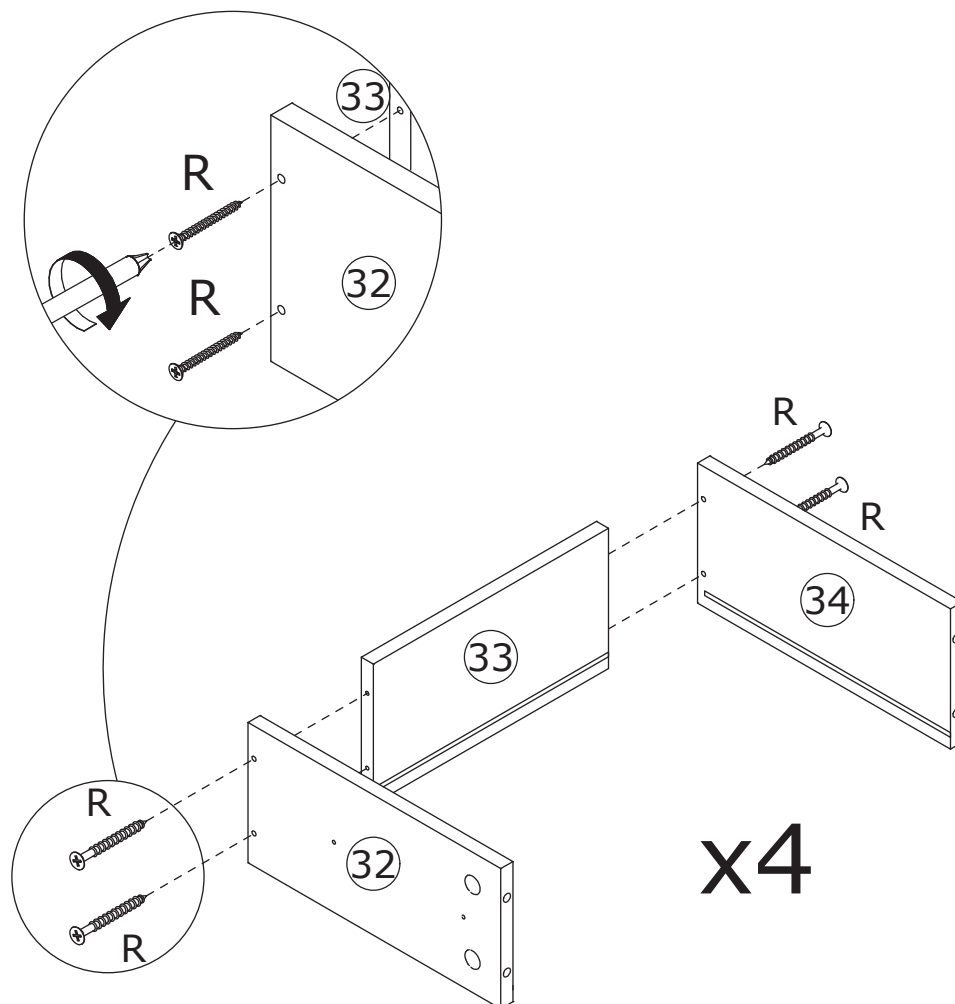

39


 
Insert board 35 into the slots.

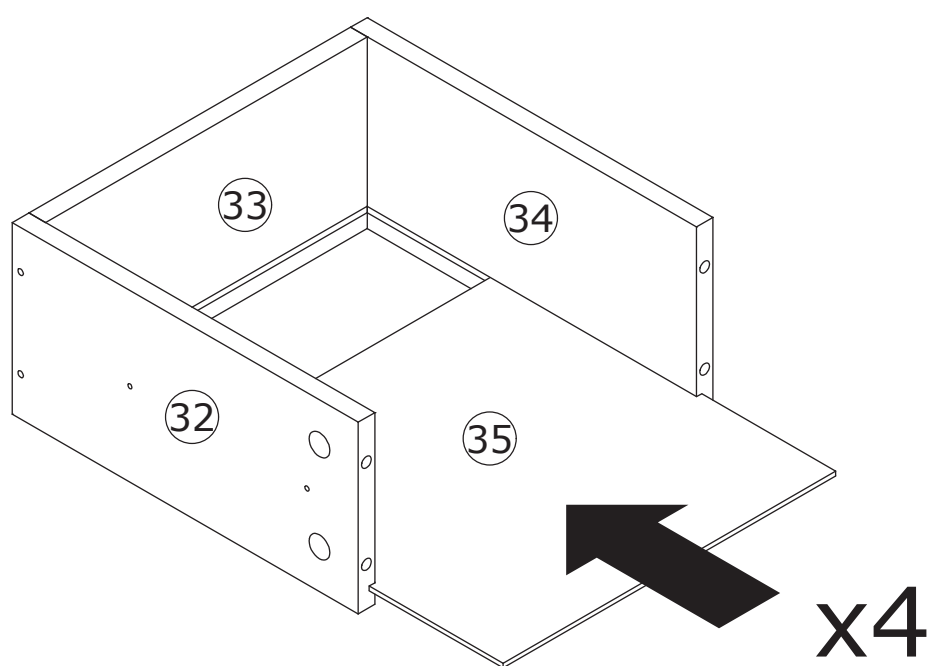


40

A x 16

   Ø6 x 40 mm

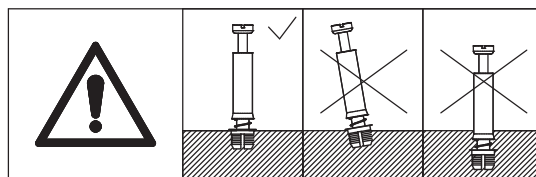

Screw eccentric rod (A) onto board 36.




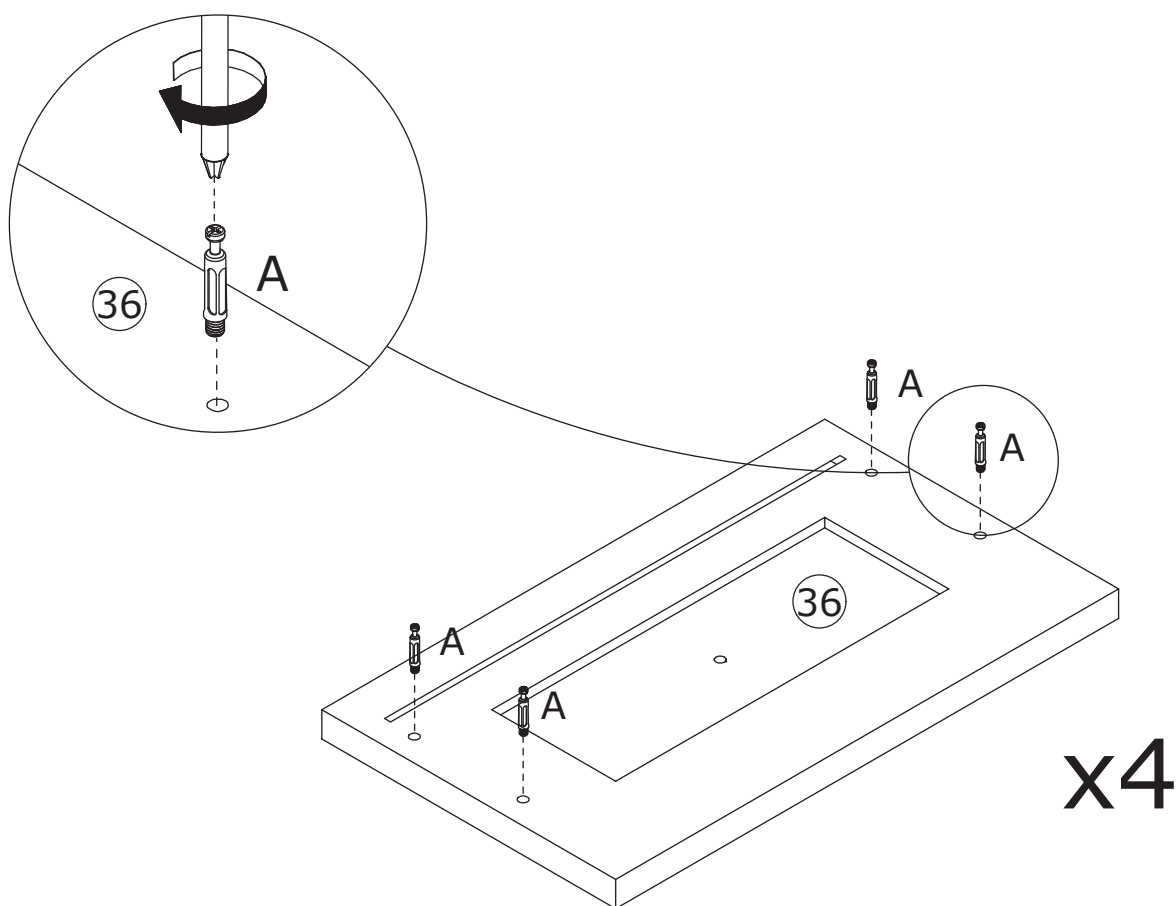 


41



B x 16



   
 
Ø 15 x 9 mm

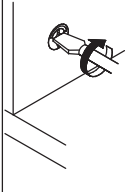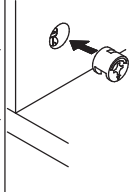

  Connect board 36 to boards 32 and 34, then tighten by turning eccentric cam (B) clockwise.

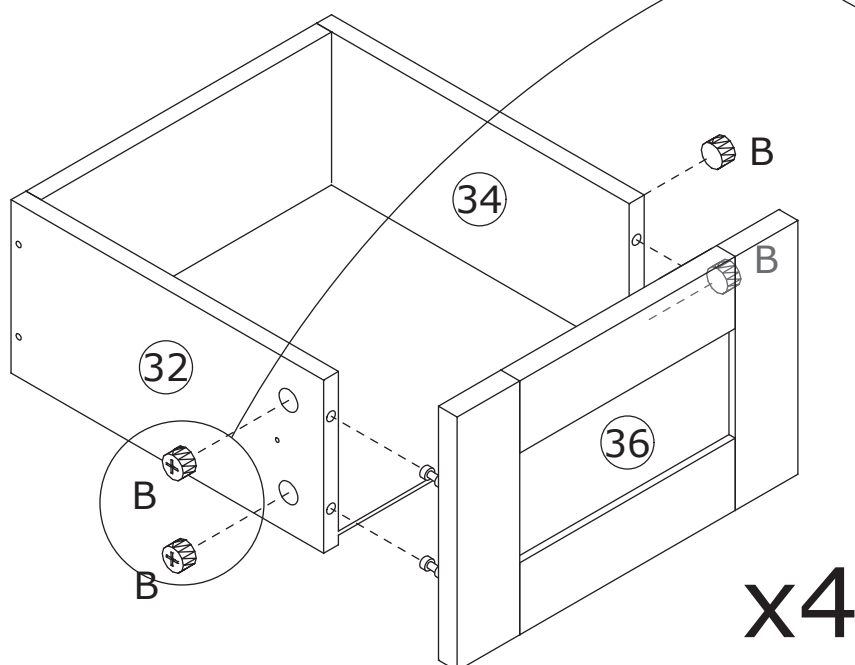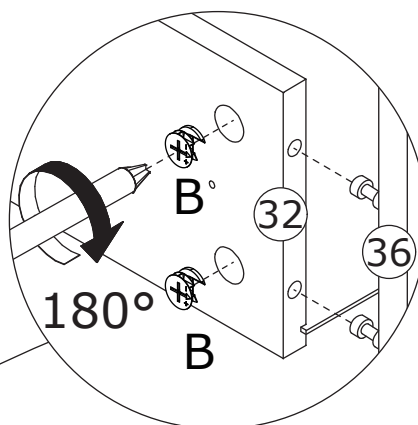


42

  $J \times 8$  J2	$K \times 16$  $\varnothing 3.5 \times 12 \text{ mm}$	$N \times 4$ 	
$P \times 4$  M4 x 8 mm	$X \times 4$ 		



remove the protective film from both sides of the acrylic board 36, and secure knob (N) to the acrylic board using screw (P) and washer (X).

 Secure slide rail (J2) to boards 32 and 34 using screw (K).

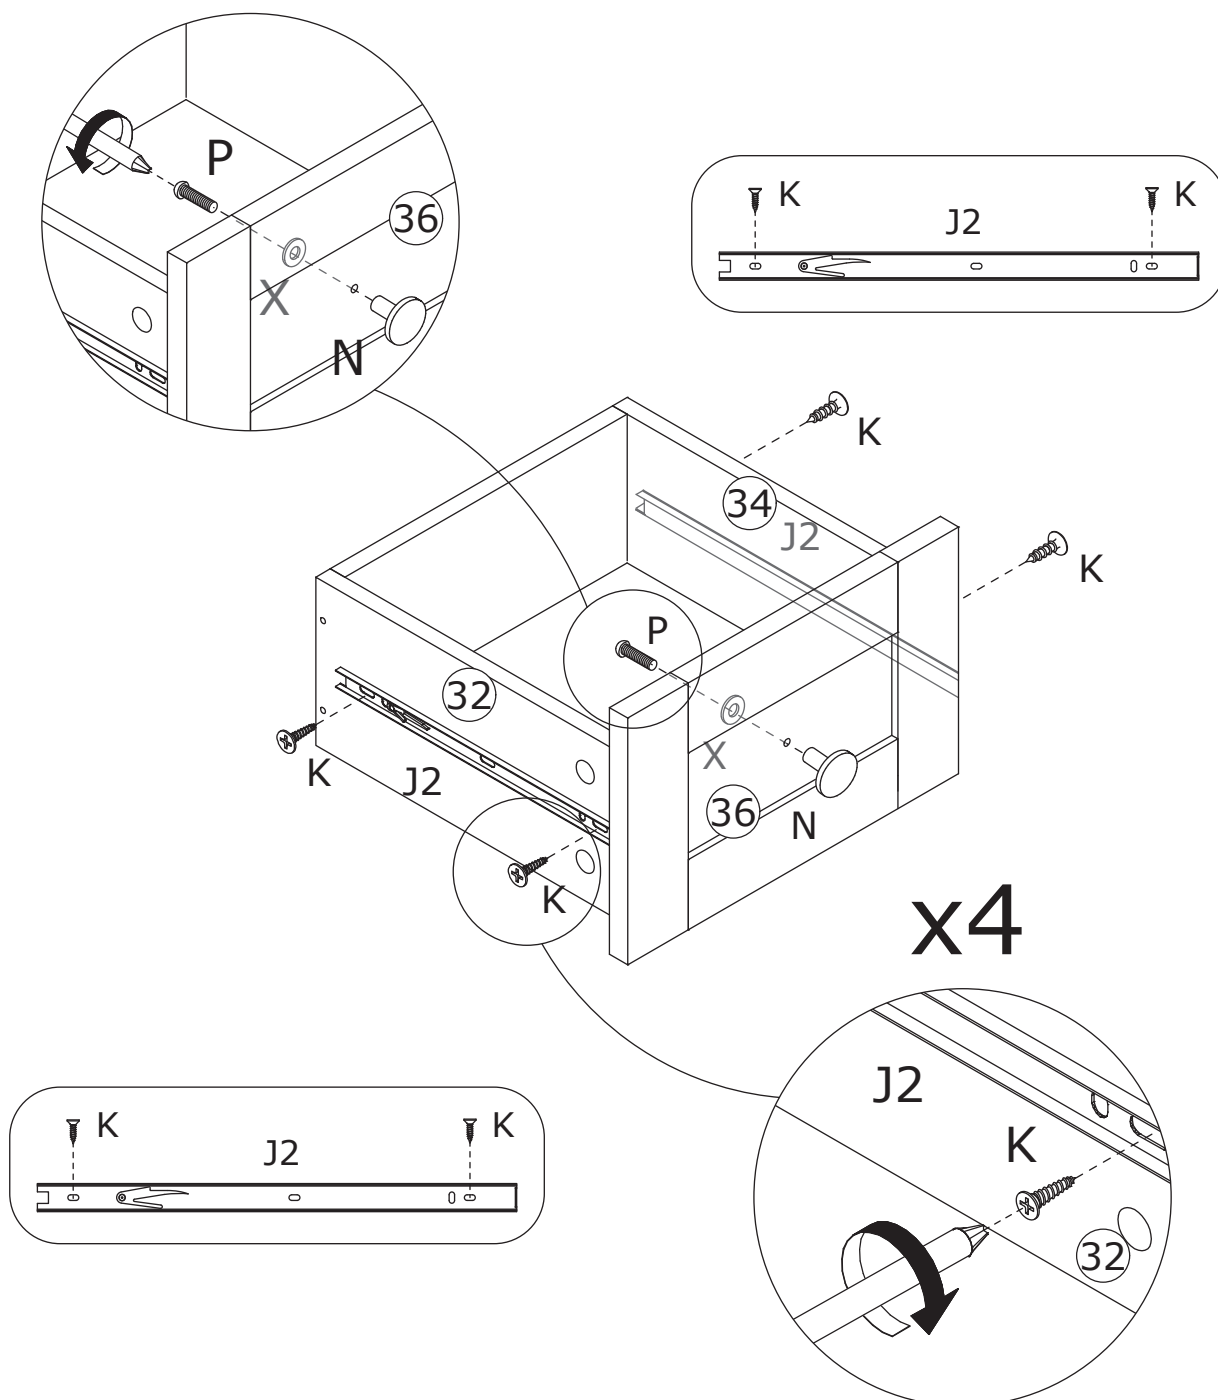

43

  Insert the assembled drawers into the unit.

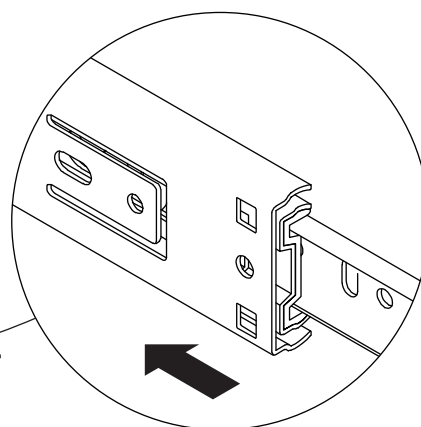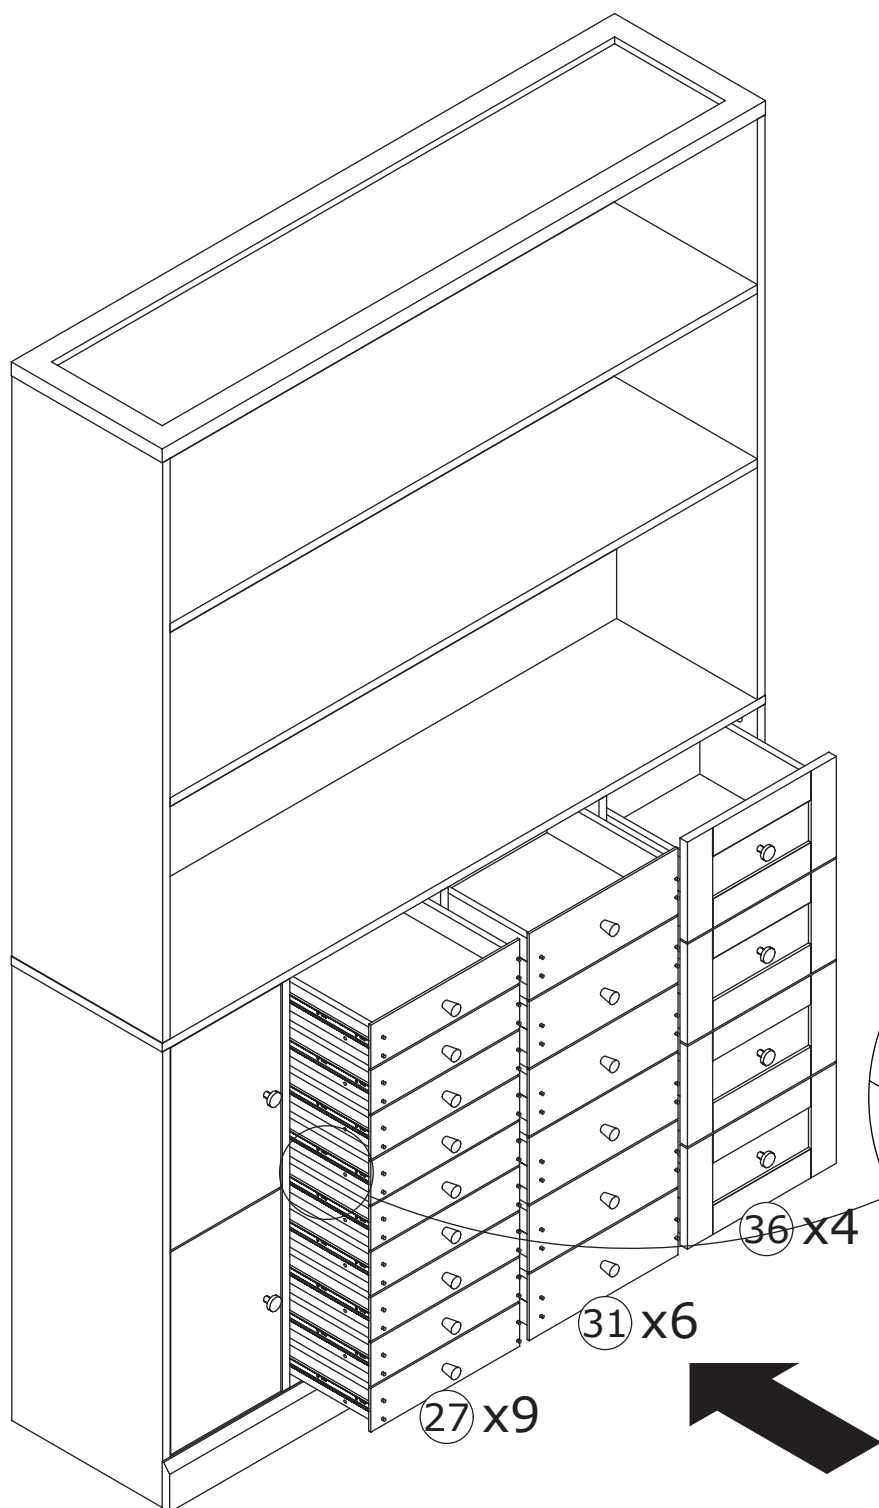

44

U x 50



 
 
 
Ø 20 mm

 
 
 
V x 1

 


If necessary, cover exposed screw holes with hole sticker (U), and use cable ties (V) to manage the excess power cord of LED strip.



Note: For safety and environmental reasons, the remote control for the LED strip does not come with batteries; users need to install batteries themselves.

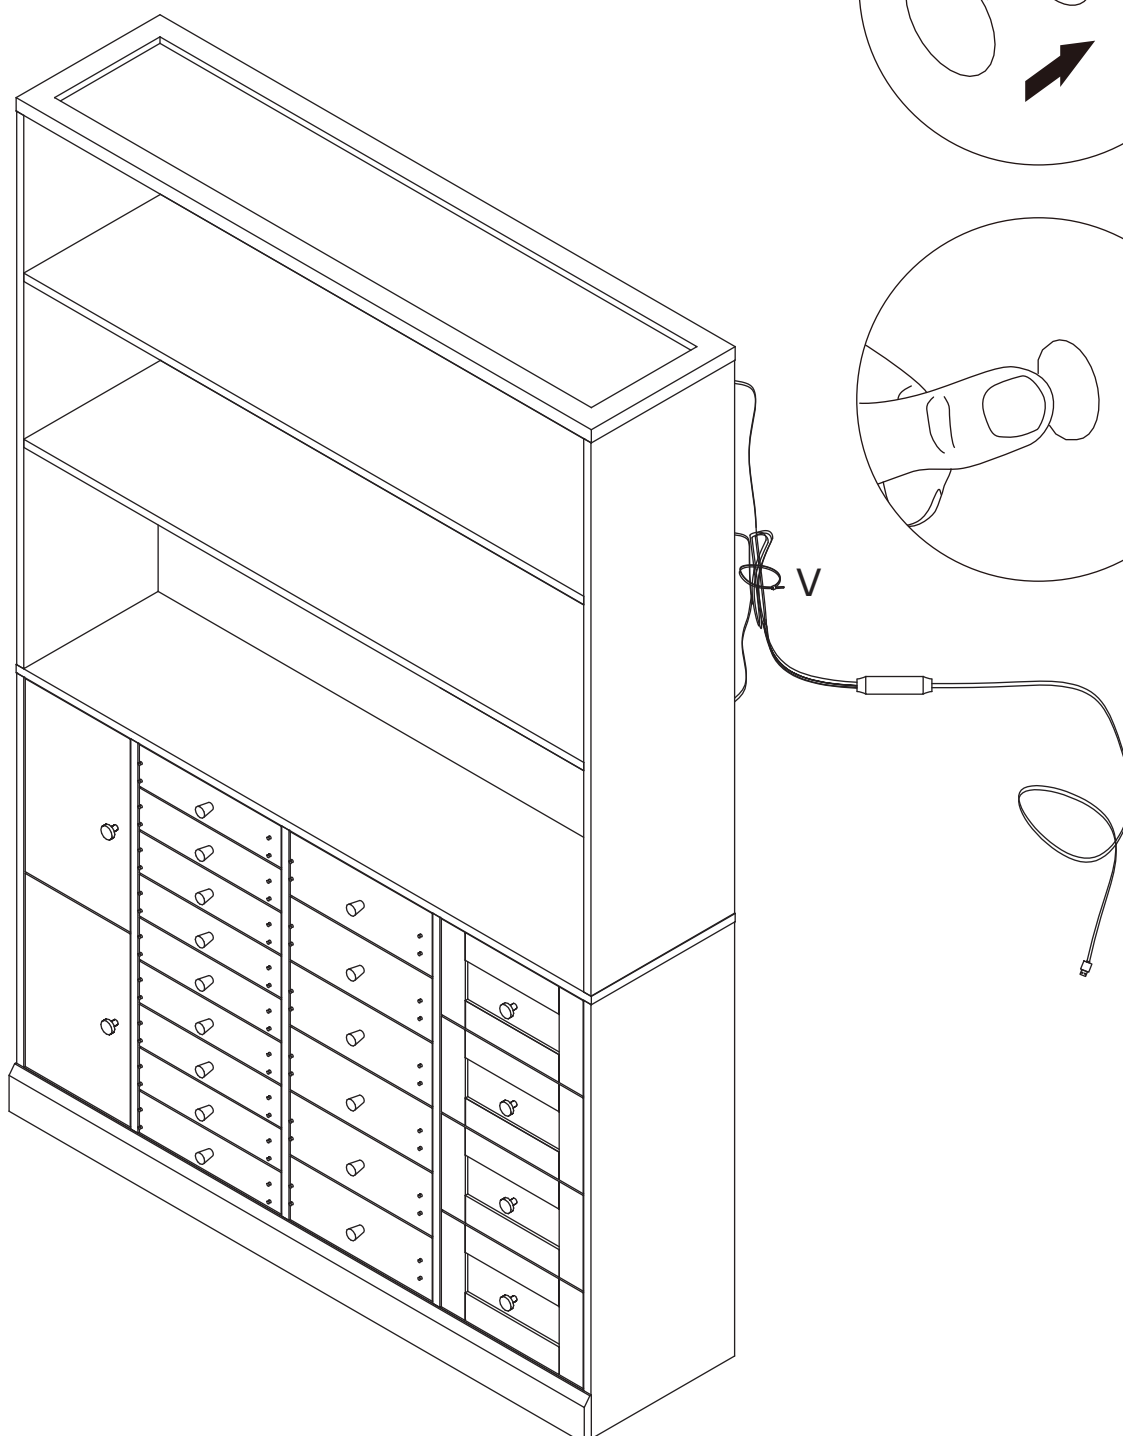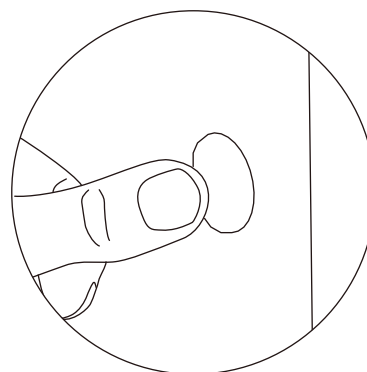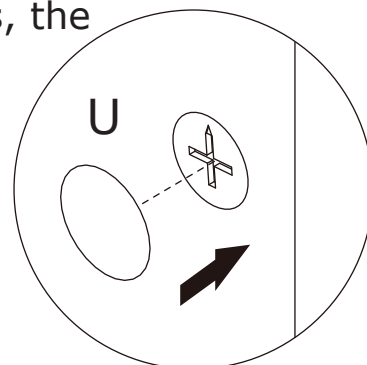

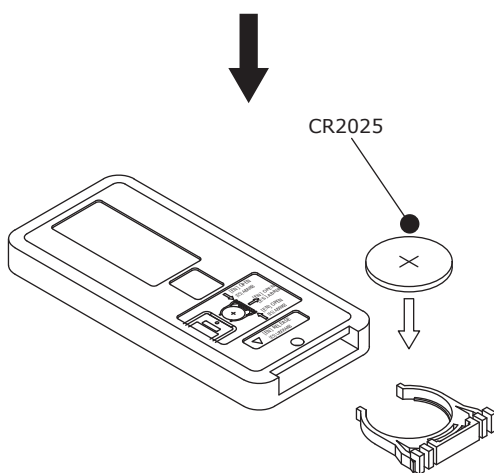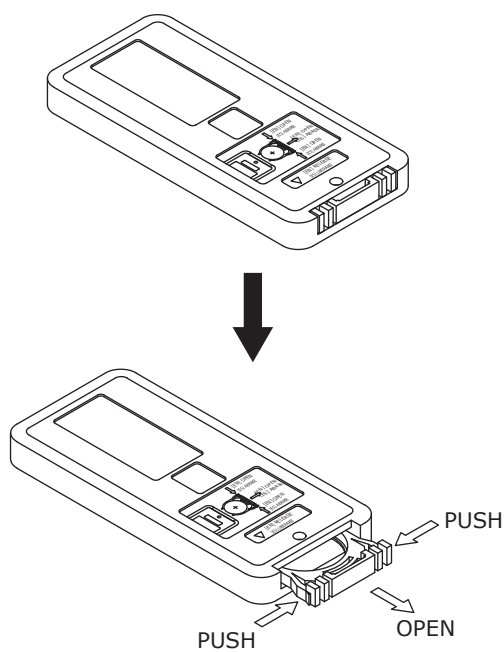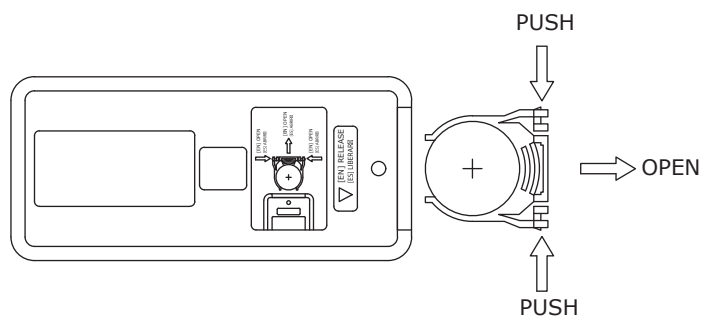





 
 
If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

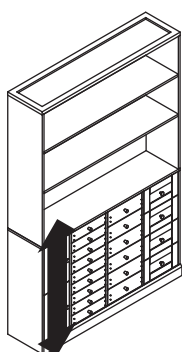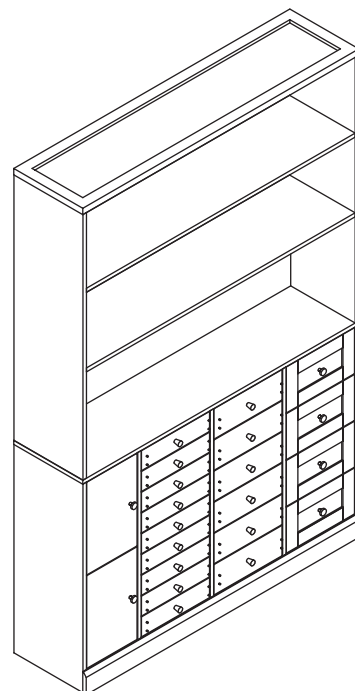


I

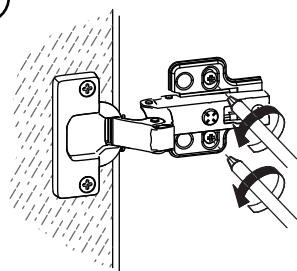 






II

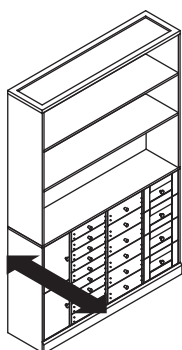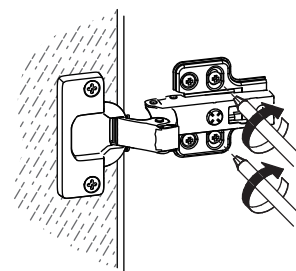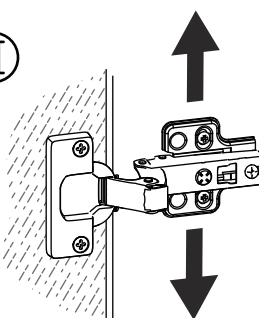   

I

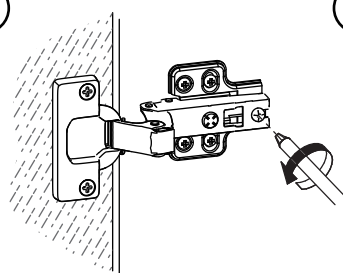 

II

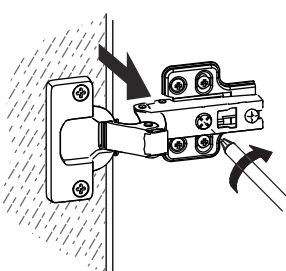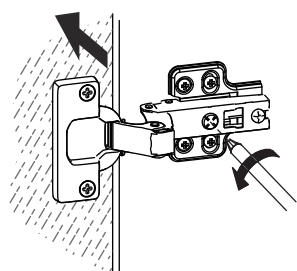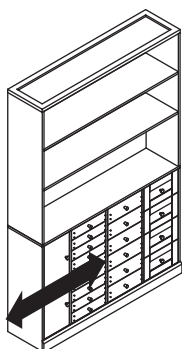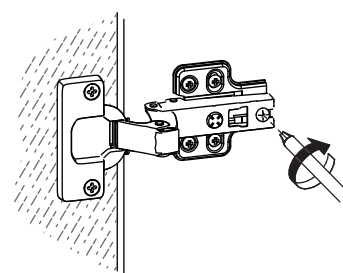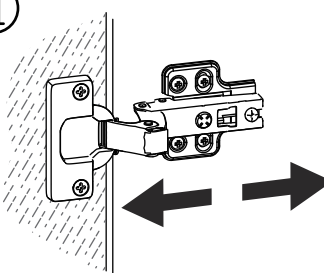     

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.