







# ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION

## CONSOLE TABLE


**Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.**

| Parts key |        |                 |
|-----------|--------|-----------------|
| No        | Q'ty   | Description     |
| 1         | 1 Pc   | Storage Box     |
| 2         | 4 Pcs  | Leg             |
| 3         | 3 Pcs  | Drawer Complete |
| 4         | 3 Sets | Drawer Glide    |
| 5         | 2 Pcs  | Shelf           |
| 6         | 4 Pcs  | Floor Glide     |
| 7         | 3 Sets | Pull w/Screw    |
| 8         | 3 Pcs  | Drawer stop     |
| 9         | 1 Set  | Anti-Tip Kit    |

| Hardware Kit |   |        |
|--------------|---|--------|
| No           | Description   | Q'ty   |
| A            |  Bolt Ø7.8 x 60          | 16 pcs |
| B            |  Lock washer Ø8.5        | 16 pcs |
| C            |  Flat washer Ø8.5        | 16 pcs |
| D            |  Allen key               | 1 pc   |
| E            |  Pull                    | 3 pcs  |
| F            |  Wooden Screws Ø4 x 20mm | 6 pcs  |

### STEP 1:

- Carefully lay the Storage box upside down on a smooth flat surface to prevent scratches.
- Affix each Leg assembly to Storage box as shown in illustration.
- Insert a Bolt (A) with Flat washer (C), Lock washer (B) through holes in wood corner of Storage Box. Do not fully tighten.

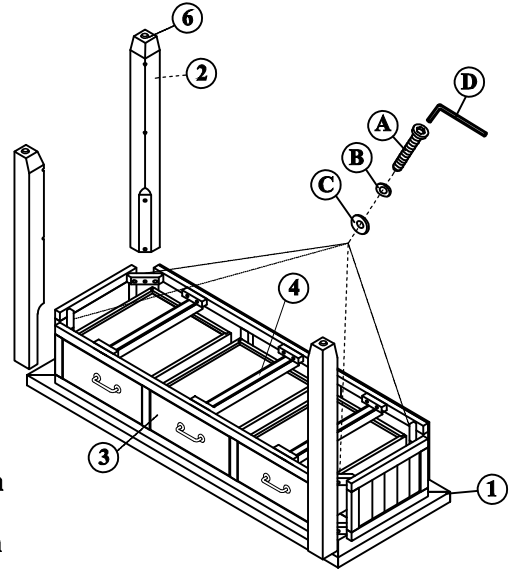

### STEP 2:

- Insert the Shelf into designated locations as shown in illustration.
- Insert a Bolt (A) with Flat washer (C), Lock washer (B) through holes in wood corner of Shelf. Fully tighten all bolts with Allen key (D).
- Carefully turn Sofa/Media Table upright.

