




 
 

 

 

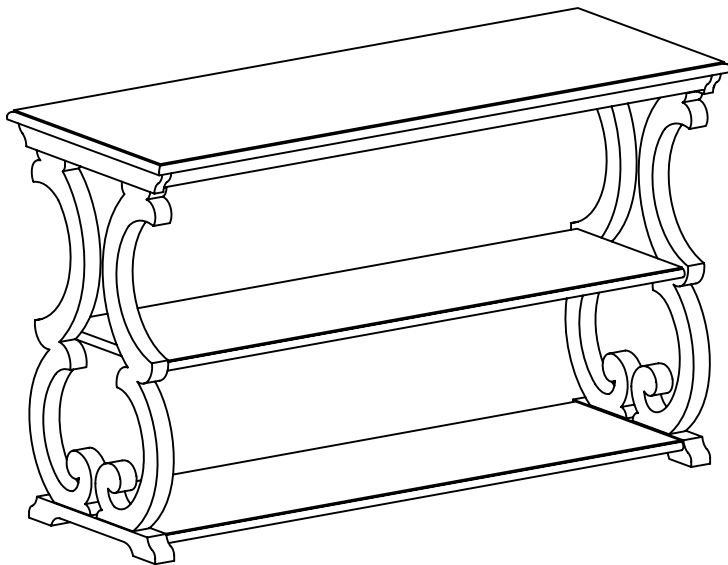


# ASSEMBLY INSTRUCTION


## SOFA TABLE

<b>A</b> Table Top	<b>B</b> Right Leg	<b>C</b> Left Leg	<b>D</b> Shelf
			
1PC	2PCS	2PCS	1PC
<b>E</b> Bottom	<b>F</b> Allen Wrench 4mm	<b>G</b> Bolt 1/4", 5/8"	<b>H</b> Lock Washer 1/4"*11mm
			
1PC	1PC	8PCS	20PCS
<b>I</b> Flat Washer 1/4"*16mm	<b>J</b> Angle Iron 30*18*20mm	<b>K</b> Bolt 1/4", 1-3/4"	<b>L</b> Dowel Ø8, 30mm
			
20PCS	4PCS	12PCS	4PCS




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Attached Shelf (D) to the Leg (B & C) . Use Bolt (G), Lock Washer (H) and Flat Washer (I), on holes of Angle Iron (J). Turn the Allen Wrench (F) in Bolt (G).  
Attached Leg (B & C) to the Top (A) . Use Bolt (K), Lock Washer (H) and Flat Washer (I), on holes of Leg (B & C). Turn the Allen Wrench (F) in Bolt (K).

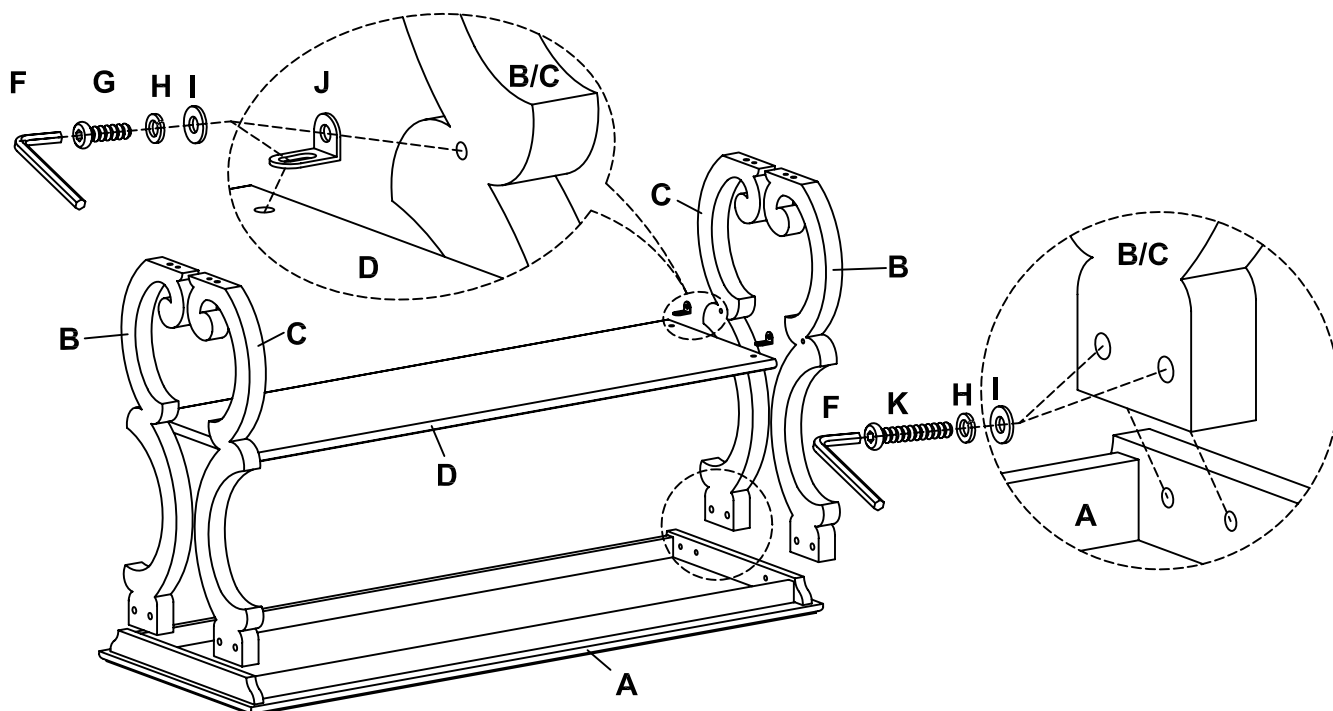

- 2** Attached Bottom (E) to the Leg (B & C) . Use Bolt (K), Lock Washer (H) , Flat Washer (I), and Dowel (L) on holes of Bottom (E). Turn the Allen Wrench (F) in Bolt (K).

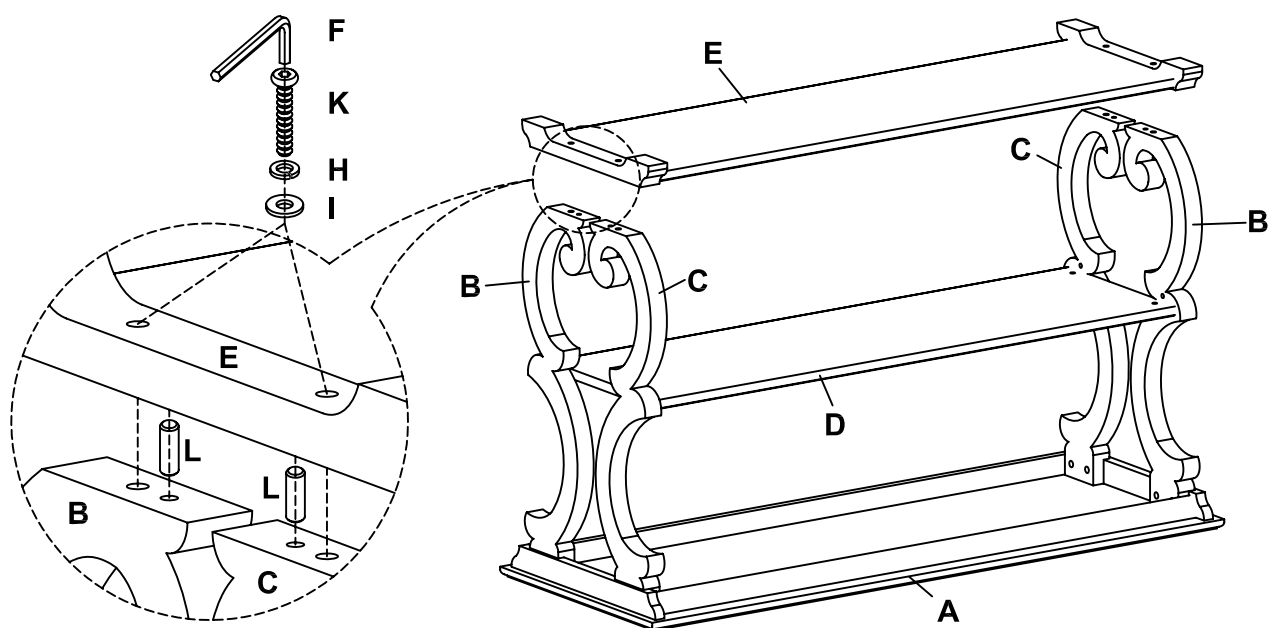

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.