 


Operation Manual of TP-020LH Bladeless Fan


Heating + Cooling + Air Purification Fan

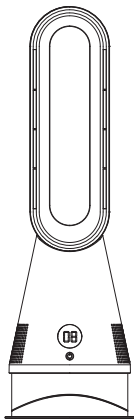

Made In China



1 Product Introduction

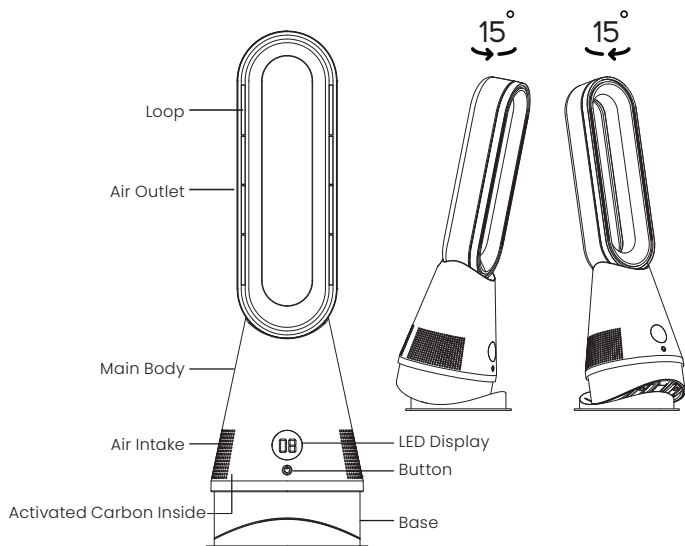

Basic Parameters

Product Name: Heating + Cooling + Air Purification Fan

Model: TP-020LH

Noise Level: < 56dB

Rated Voltage: 110v

Sleep Mode Noise: <32dB

Rated Power: 1300w

Timing Range: 0-9h

Weight: 2.75kg

Air Volume: 560 L/s


Product Size: 62.5x19.5x19.5cm(25x7.7x7.7inch)

Cord Length: 1.8m(6ft)


2 Function Introduction of Remote Control

Due To Battery Police, We Provide one of 2 Versions of Remote Controller.
The actual remote control is subject to the received

● Version 1: CR2025 Button Battery

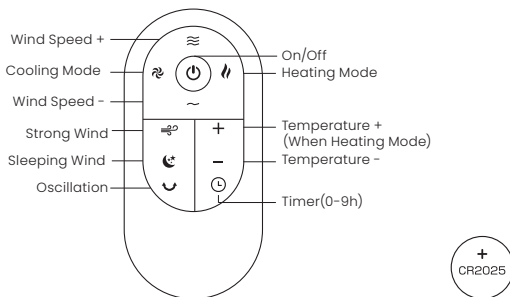

● Version 2: AAA Battery

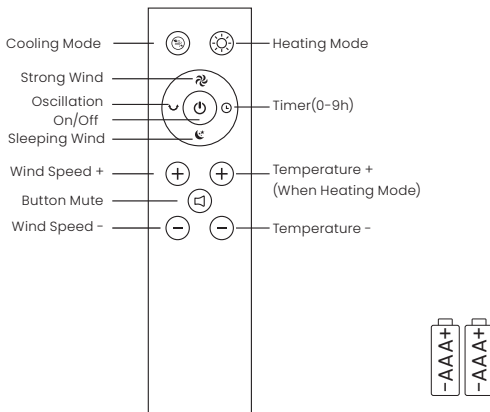

3 Activated Carbon Filter


- How Often We Should Change Filter?

We Suggest 6-12 Months or 2 Years If You Wash It.


- How To Change Filter?




1) Unplug The Power Outlet

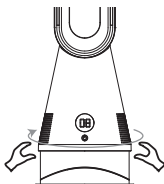

2) Open The Main Body Clockwise

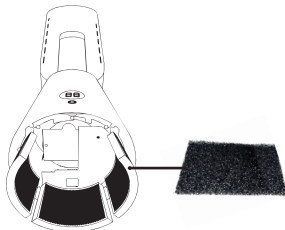

3) Replace New Filter

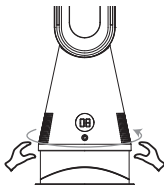


4) Close The Main Body Anticlockwise

4 Operating Instructions of Heating Mode

- Heating Temperature: 20°-35° (68°F-95°F)
When Setting Temperature > Ambient Temperature, Heating Is Working;
When Setting Temperature < Ambient Temperature, Heating Stop.
- Tip-Over Protection:
When the heater is tipped over, it will shut off automatically.

5 Introduction To Button Operation

- Short Press : Short Press To Power On;
Adjusting Fan Speed, When Power On.
- Pressing 0.5-2.5 Seconds To Start or Stop Oscillation, When Fan Is Working.
- Pressing More Than 2.5 Seconds To Power Off, When Fan Is Working.
- Pressing More Than 4.0 Seconds To Start Heating Mode Directly,
When Fan Is Power Off.

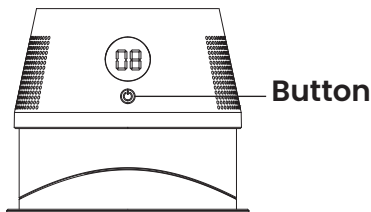

6 Cautions

Please Place The Fan In A Horizontal Position and Do Not Place It In An Unstable Place. If There Is A Slope Soft Surface To Avoid Damage or Failure Caused By Overturning of Fan, Please Do Not Use In Hot and Humid Places (Such As Bathrooms and Kitchens).



In Use, It Is Necessary To Avoid The Air Inlet Being Blocked. Please Use It Far Away From The Place with Curtains To Avoid Objects Blocking The Air Inlet and Causing The Machine To Fail To Work.

Do Not Place Objects within 1 Meter Before The Air Outlet, Other Wise The Blowing Effect Will Be Weakened.

7 Battery Installation Method and Trouble Shooting

1) Before Using The Remote Control, Take Off The Insulating Sheet At The Rear of The Remote Control Before Using It.

2) Battery Installation Method: (As Shown In The Figure) Press and Hold The Buckle To Open The Slot Cover To Place The Battery (Pay Attention To The Battery Direction) and Replace The slot Cover.

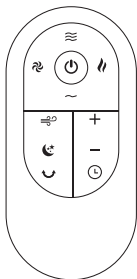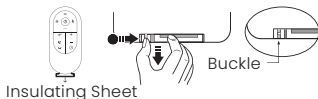

3) Attention (Battery): Do Not Charge This Battery. Please Put It Out of The Reach of Children. If Swallowed, please Consult A Doctor In Time.

⚠ If You Do Not Use The Remote Control for A Long Time, Please Remove The Battery.

8 Cleaning and Maintenance

- Be Sure To Unplug The Plug and Cut Off The Power Supply Before Maintenance.



During Maintenance, Please Do Not Touch or Splash Water To Wipe The Surface Of The Fan, Which May Cause Water Ingress and Damage. Please Do Not Use Banana Water, Gasoline, Alcohol, Bleach or Metal Objects To Wipe The Fan, Which May Cause Surface Discoloration or Scratch The Machine.

- Object Surface


Please Gently Wipe The Surface Of The Bladeless Cooling and Heating Fan with A Dry Soft Cloth. If The Surface Is Dirty, It Can Be Diluted with Neutral Detergent and Wiped with A Soft Cloth; Wipe with Dry Soft Cloth After Wiping.

- Air Inlet and Outlet

Please Use A Soft Brush or Vacuum Cleaner To Clean The Dust At The Air Inlet and Outlet. Too Much Dust May Affect The Use Effect. Please Clean It In Time When There Is Less Dust.

- Remote Control

Please Gently Wipe The Surface of The Remote Control with A Dry Soft Cloth. If It Is Not Used for A Long Time, To Avoid Battery Consumption, Please Take Out The Battery In The Remote Control

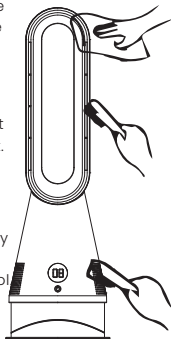

- The Power Plug

Please Clean The Power Plug with A Dry Soft Cloth.

- Method of Storage

The Bladeless Cooling and Heating Fan Can Be Put Into A Plastic Bag After Maintenance; Please Avoid Places with Vibration and Electrical Appliances with Cooling/Heating Functions; Please Avoid Placing It In A Place with Direct Sunlight, High Temperature and Humidity; Please Keep It Out of The Reach of Young Children.



9 Important Safety Instructions



In order To Avoid Personal Injury Caused By Fire and Electric Shock, Please Observe The Following Requirements. please Follow The Relevant National and Local Electrical Regulations.

- This Product Is Only Suitable for Indoor Use, Not for Outdoor Use.
- Non Full Time Personnel or Unauthorized Repair Personnel Are Not Allowed To Repair or Modify This Machine By Themselves.
- Before Plugging In The Power Supply, Please Check Whether The Rated Voltage Indicated On This Product Is Consistent with The Voltage In Your Home.
- When The Machine Is In Normal Use or Idle, It Should Be More Than 1.5 Meters Away From The Fire Source and Kindling, and Avoid Direct Sunlight.
- It Is Forbidden To Use Near Flammable, Explosive, Easily Deformed, Discolored or Deteriorated Objects. It Is Forbidden To Use It In Places with Serious Dust.
- It Is Forbidden To Use It In Places Where Hanging Objects Are Easy To Fall, or Where It Is Easy To Be Impacted or Placed In Unstable Places.
- It Is Forbidden To Plug (Unplug) The Power Cord Plug To Replace The Power Switch On and Off.
- It Is Forbidden To Use This Machine As Heat Preservation and Heating Equipment for Animals and Plants.
- To Avoid Overheating, Do Not Cover The Heater.
- It Is Forbidden To Insert Fine Wire or Other Foreign Matter Into Any Foreign The Machine To Avoid Electric Shock.
- Do Not Use This Product If It Falls or Has Obvious Signs of Damage.
- Never Immerse The Machine In Water.
- Do Not Use The Machine Against or Under The Power Socket.
- It Is Forbidden To Share Sockets with Other High-Power Electrical Appliances; It Is Forbidden To Move The Machine Body By Pulling The Power Cord Directly.
- Because The Machine Is Covered or Incorrectly Placed, It May Cause Fire Hazard, So It Is Not Allowed To Use This Product with a Programmer Timer or Any Other Device That Can Automatically Turn On The Power.

※ The Product Content Has Been Reviewed and Proofread, But The Possible Printing Errors and Omissions Are Not Excluded. Please Understand!