 



Assembly Instructions

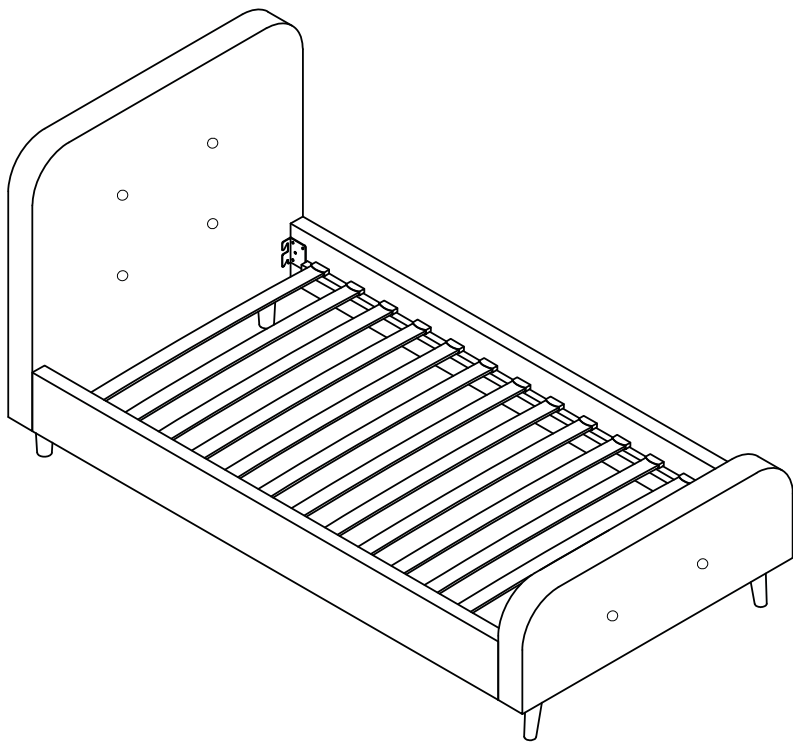

 
ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required For Assembly:

Allen Wrench



Wrench




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

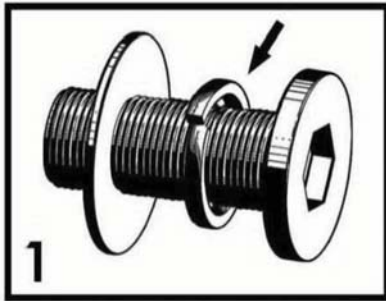


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

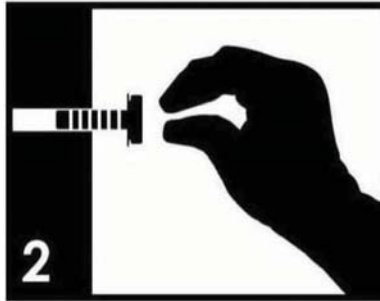


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

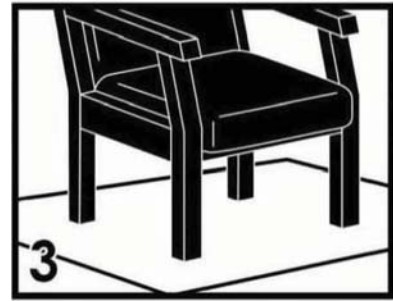


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

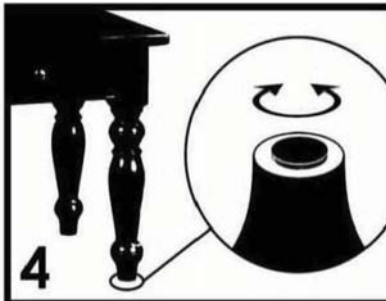

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

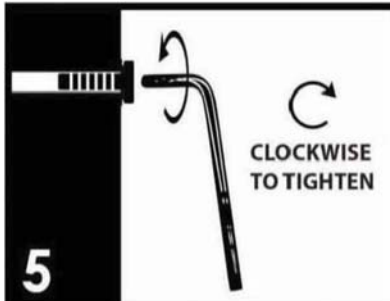


Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

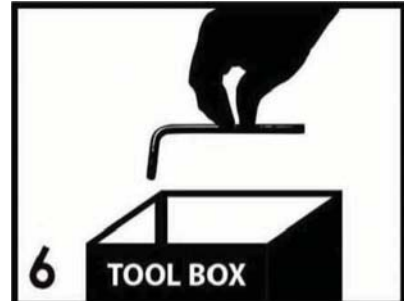

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

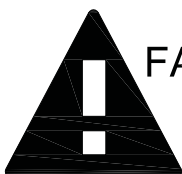

FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

 
 

 

 
ALL RIGHTS RESERVED.









Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Parts List




	#1 x 1pc Headboard
	#2 x 1pc Footboard
	#3 x 2pcs Side Rail
	#4 x 13pcs Slat
	#5 x 2pcs Front Leg
	#6 x 2pcs Rear Leg

 Hardware List

   	#A x 8pcs Bolt Ø5/16"*1-1/2"
	#B x 8pcs Lock Washer
	#C x 8pcs Flat Washer
	#D x 1pc Allen Wrench
	#E x 8pcs Screw Ø8*1-1/2"
	#F x 26pcs End Cap



#E x 8pcs

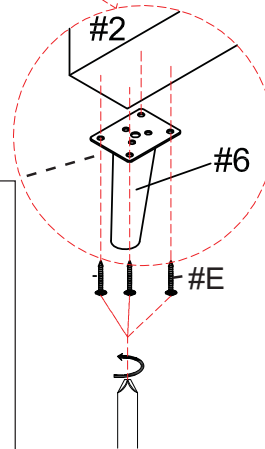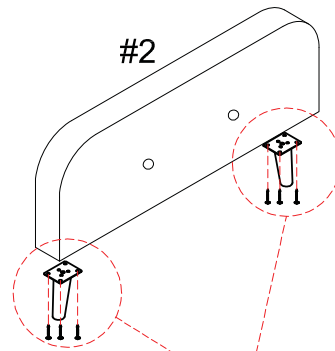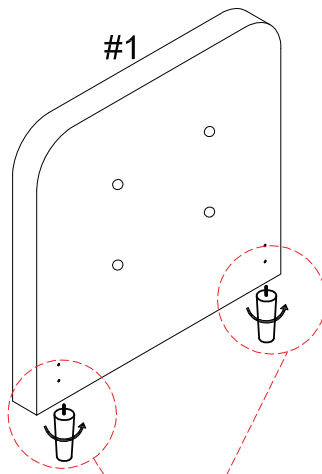   


1. Insert the threaded ends of the front legs (#5) into the holes at the bottom of the headboard (#1). Turn right to tighten.

2. Align the rear legs (#6) to the bottom of the footboard (#2). Then insert 4 screws (#E) into each leg and secure using a screwdriver.



#A x 8pcs
#B x 8pcs
#C x 8pcs

 1. Prepare 8 bolt assemblies by first inserting a lock washer (#B) onto the bolt (#A) then a flat washer (#C) onto that same bolt (#A).

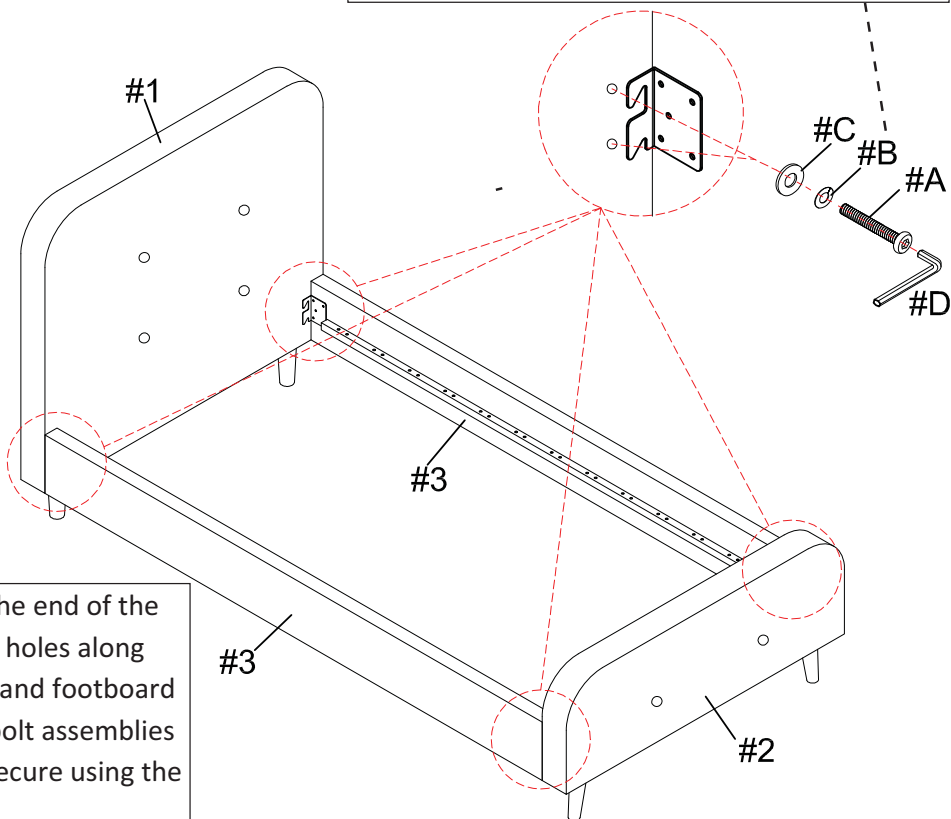


2. Align the hooks at the end of the side rails (#3) to the holes along the headboard (#1) and footboard (#2). Then insert 2 bolt assemblies into each end and secure using the Allen wrench (#D).




#F x 26pcs

 1. Place the end caps (#F) onto the side rails (#3), then insert the slats (#5) into those end caps. Make sure the curved side is upward.

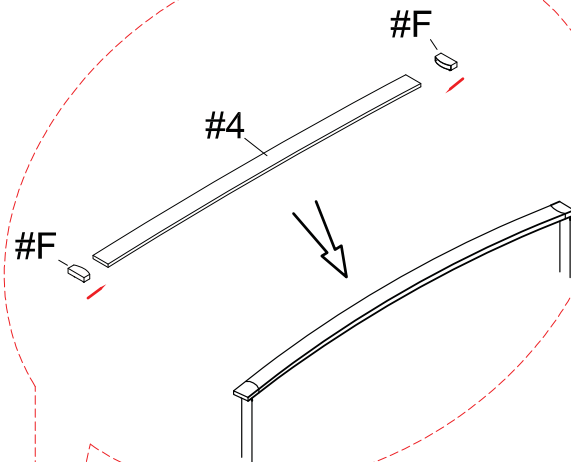

 2. Apply the slats onto the side rails (#3).

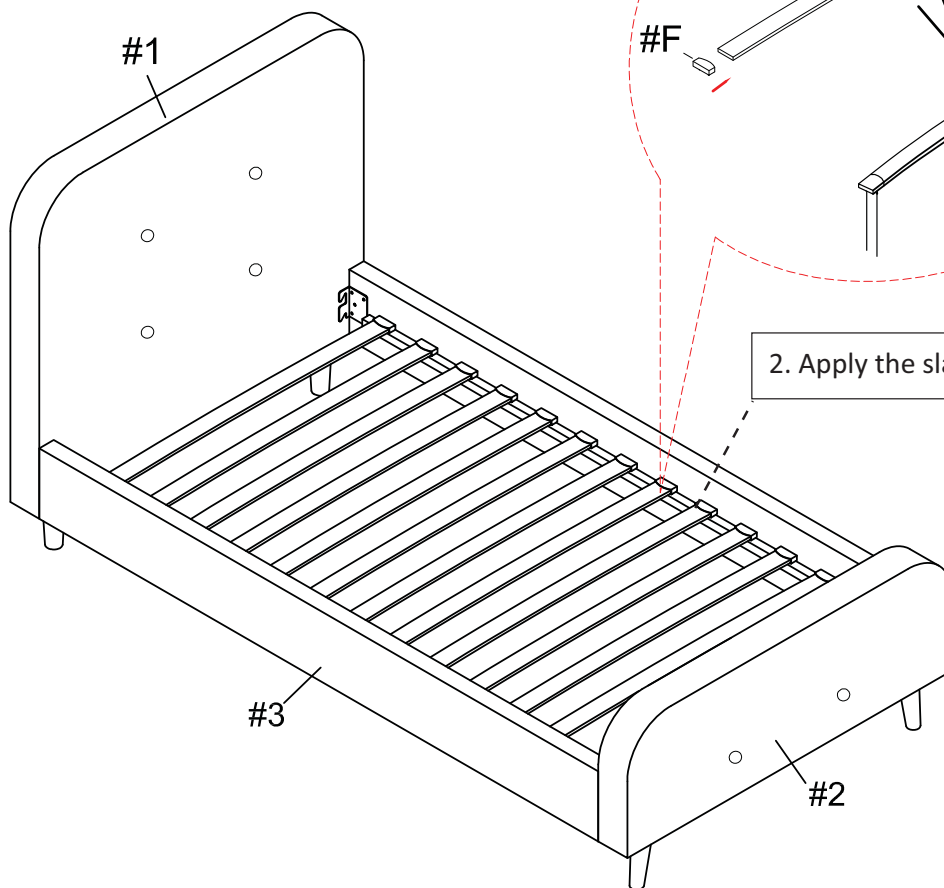

ASSEMBLY IS COMPLETED