 


Model #TPGAZ17-018

USE AND CARE GUIDE

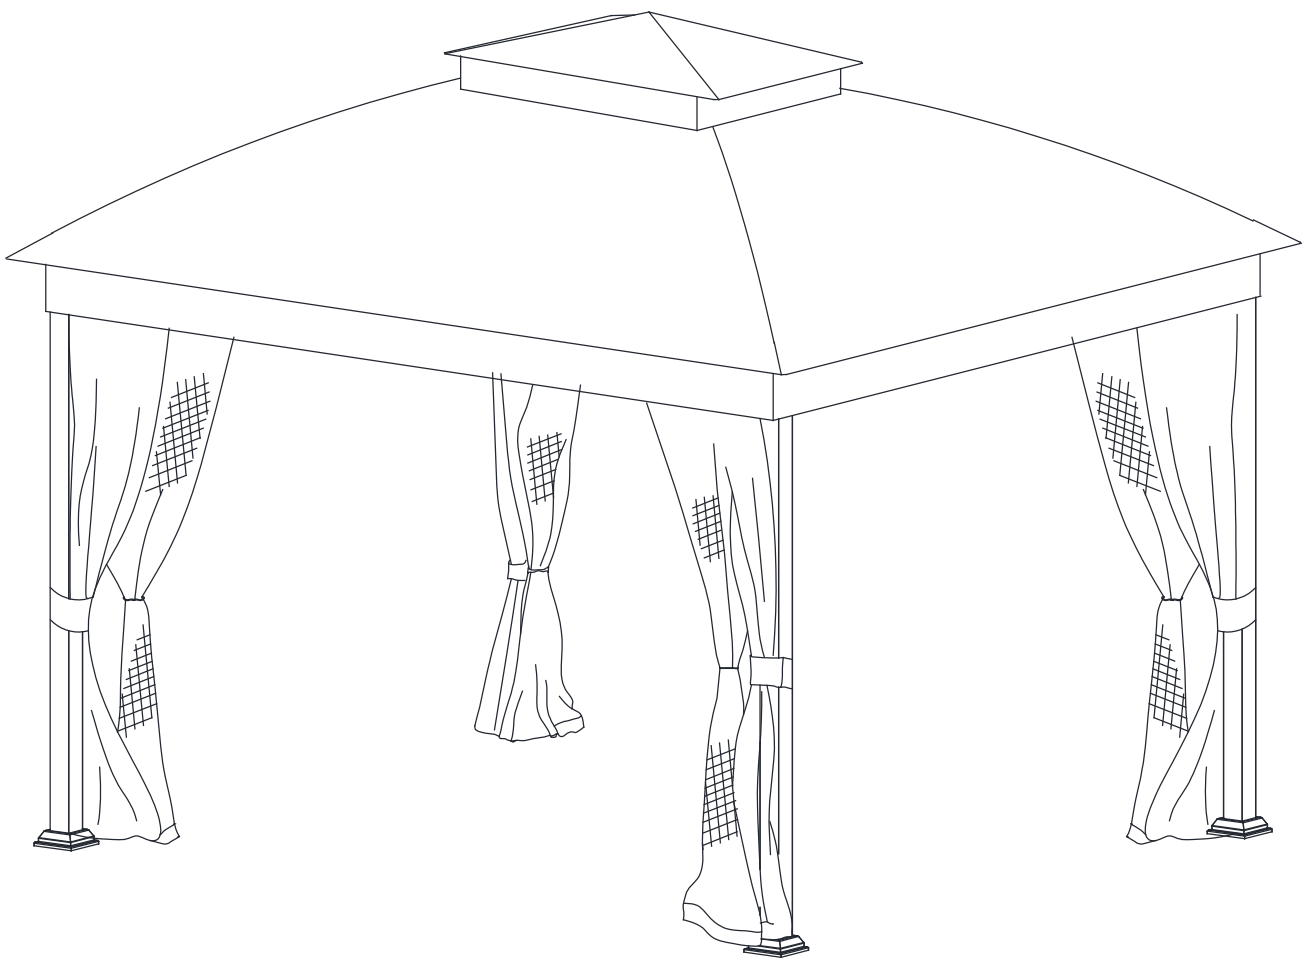

Important Safety Instructions



WARNING! To reduce the risk of serious injury or damage to equipment, read all following safety instructions before assembling and using the gazebo. Failure to follow these warnings may result in serious injury or death.

- Keep all children and pets away from assembly area. Children and pets should be supervised while gazebo is being assembled.
- The assembled gazebo should be located at least 6 feet (2 m) from any obstruction such as fence, garage, house, overhanging branches, laundry lines or electrical wires.

Consult with local municipal office for specific requirements

- This product is for domestic outdoor use (providing shade) only.
- Install the gazebo on level ground. Stakes are provided to secure the gazebo to the ground. Do not assemble the gazebo on sandy, muddy or loose soil, as stakes do not have enough holding power in these types of soil. If you wish to secure the gazebo to a wood deck or concrete surface, use anchors suited to these surfaces (anchors not included).
- Some parts may contain sharp edges. Wear protective gloves if necessary during assembly.
- This unit is heavy. DO NOT assemble this item alone. Make sure you have the help of at least 3 people for safe assembling or moving the gazebo.
- Check all nuts and bolts periodically for tightness and when required, tighten them again.
- While this gazebo is manufactured to withstand winds through only the supplied ground stakes, in areas subject to frequent severe weather, securing the gazebo to a deck, concrete patio or footings should be considered.
- Remove accumulated water on the roof immediately, or disassemble the gazebo in order to avoid damages.
- Snow must be cleared off regularly throughout the winter season.
In order to avoid damages, use a plastic snow shovel to remove snow and ice buildup from roof and keep away from falling debris.
- ALWAYS DISASSEMBLE the gazebo before experiencing heavy wind conditions, as it is semi-permanent construction and not designed to withstand harsh weather, including high wind, or heavy rain and snow.
- Please check your state and local regulations prior to installing the gazebo. Some jurisdictions may require permits for installation and use. Some special procedures may be valid in your area.

CAUTION

- DO NOT use or enter the gazebo under harsh weather (e.g. thunderstorms, high winds, hail, heavy snow etc.). In these conditions, it might tip over and could cause serious injury to bystanders. Any damage or injury caused by these conditions is not covered by the warranty.
- DO NOT install the gazebo adjacent to trees or a sloped roof. Snow and ice may slide onto the gazebo and cause it to collapse.
- DO NOT use or enter the gazebo if there exist any of the following or of similar conditions:
 1. visible movement of support members, roofing panels or sagging roofline.
 2. creaks or audible noise from the gazebo.
 3. cracks, fractures or malformation of support member or roof panels.
 4. damaged or missing fasteners.
- DO NOT hang any weights on the roof frame.
- DO NOT use ladder leaning against the gazebo or climbing onto the roof.
- Keep away from heat or flame source.
- If the gazebo will not be used for a long period of time (e.g. during winter time), disassemble and store it in a clean, dry location.

PREPARATION

Required for Assembly:



Hammer



Screwdriver



Safety goggles



Gloves



Hardhat



Stepladder

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Arrange manpower of 4 or more when assembling or moving the product.

Estimated Assembly Time: 90 - 120 minutes.

Maximum load for the roof hook: 50lbs.

CARE AND MAINTENANCE

- Our steel components for gazebo and garden accessories are treated with rust inhibiting paint that protects it from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur if these protective coatings are scratched. This is not a defect and thus not covered by the warranty.

To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint.

Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint.

Surface rust can also be easily removed with a very light application of regular cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping onto deck or patio and caused damaging stains, which may be difficult to remove.

This can be prevented if the above-mentioned measures are taken to keep the product from oxidizing.

- Do not use bleach, acid, or other abrasive cleaners on the roof or frame parts.
- Keep user manual for future reference.
- Keep the original packaging to store the gazebo.

Warranty

1 YEAR WARRANTY FOR FRAME, FABRIC AND ELECTRONICS


WHAT IS COVERED

We guarantee 1 year for the whole gazebo from the date of purchase that the frame, fabric and electronics will be free from manufacturing defects.


WHAT IS NOT COVERED

This warranty does not cover the damage caused by commercial use, acts of nature, fire, freezing, and abusive use. Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered.

HARDWARE INCLUDED









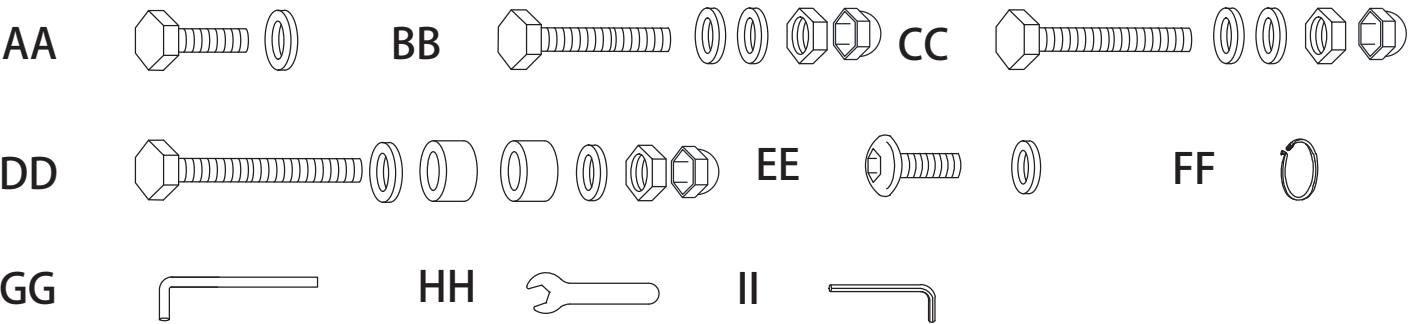






NOTE:Hardware not shown
to actual size.

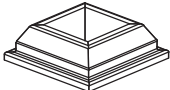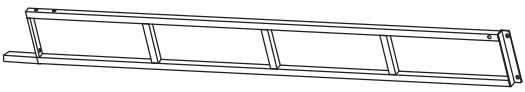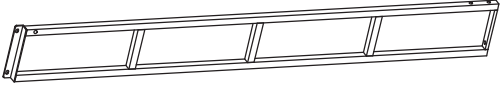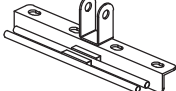





Pre-Assembly (continued)

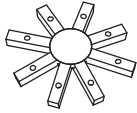Package Contents


ITEM	DESCRIPTION	QTY	ILLUSTRATION
A	Post	4	
B	Base Plate	4	
C	Base Cover	4	
E	Short Left Beam	4	
F	Short Right Beam	4	
G	Connector	4	
G1	U-shape Connector	4	
H	Long Top Bracing	4	
H1	Long Support Connecting Tube	4	
I	Short Top Bracing	4	
J	Central Device	1	
K	Hook	1	
L	Short Net Tube	16	

Pre-Assembly (continued)

Package Contents

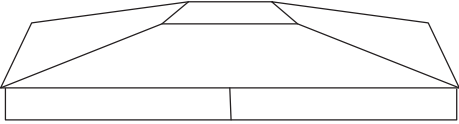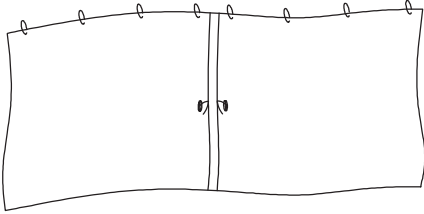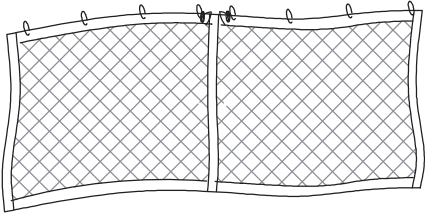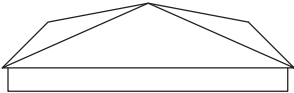M	Big Canopy	1	
N	Curtain	4	
O	Mosquito Net	4	
P	Small Canopy	1	

Step 1

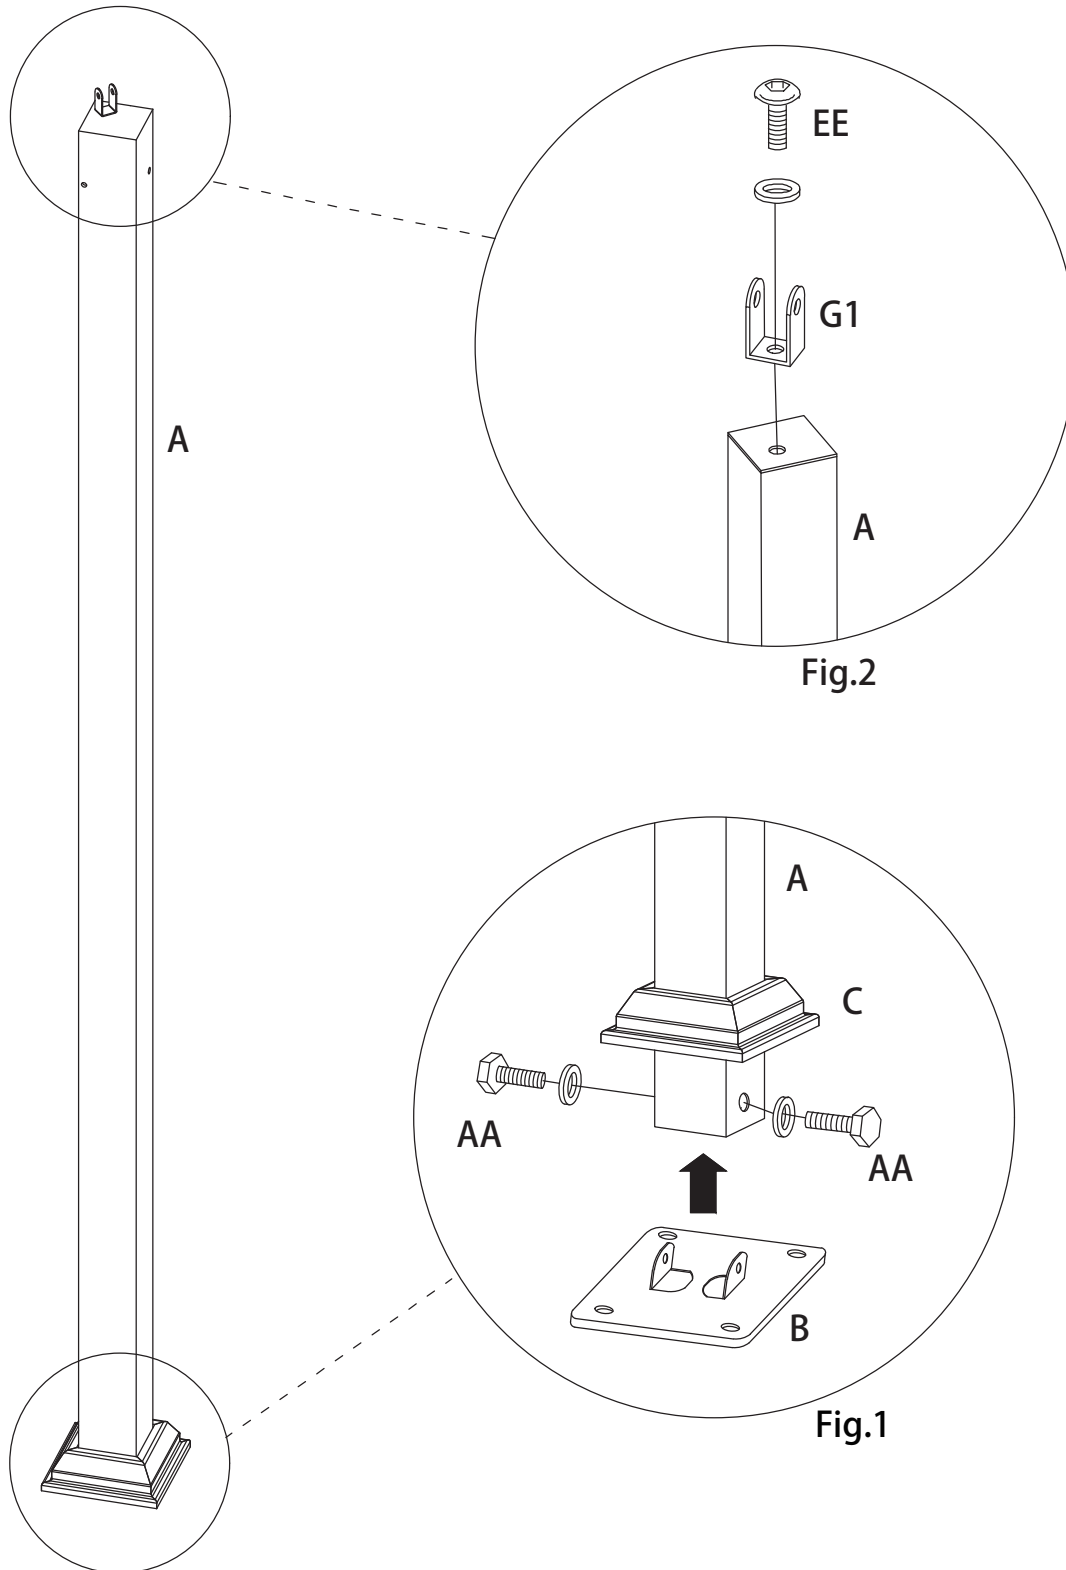

1.1.Insert the Base Cover (C) into the post and then connect the base plate(B) with Bolts (AA) ;
See Fig.1

1.2.Screw the U-shape connector (G1) onto the Post (A) and screw the Bolt (EE),
taking care not to tighten the bolt. See Fig.2

Step 2

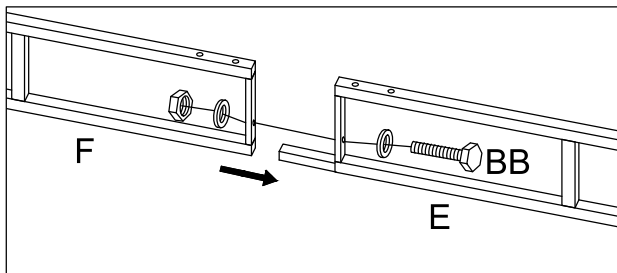
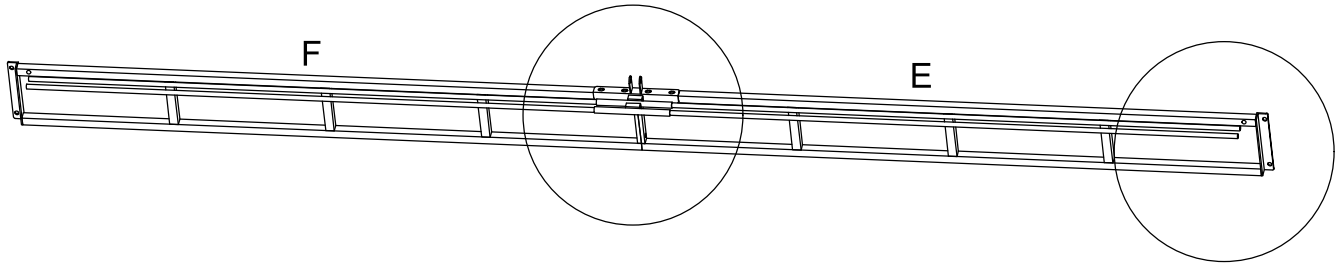


Fig.3.1

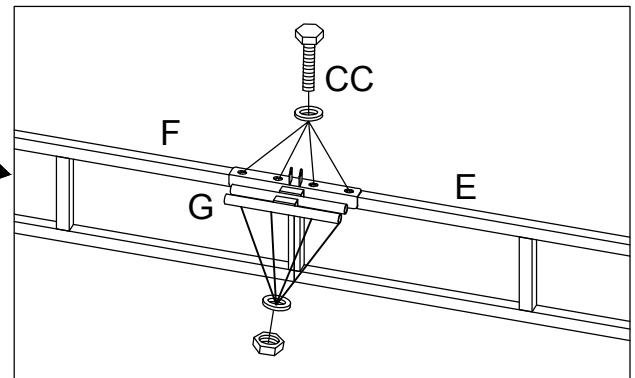


Fig.3.2

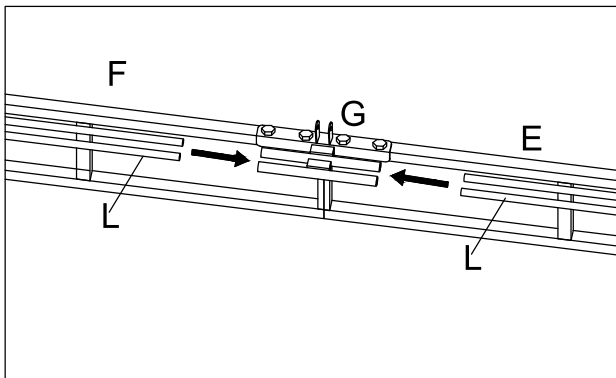


Fig.3.3

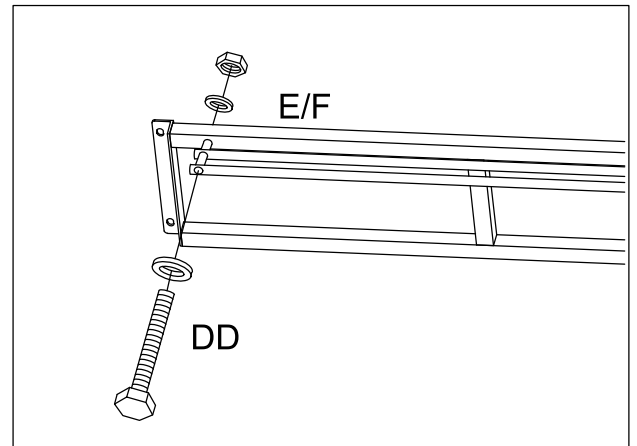



Fig.3.4

2.1.Insert the Short Right Beam (F) into the Short Left Beam (E) and screw the Bolt (BB).See Fig.3.1

2.2.Connect the Connector (G) to the Beam (E/F) and tighten it with Bolts (CC), See Fig.3.2.


2.3.Insert one end of the Short Net Tube (L) into the Connector (G) and Connect the other end of the Beam (E/F) with Bolt (DD), See Fig.3.3-Fig.3.4.

Step 3

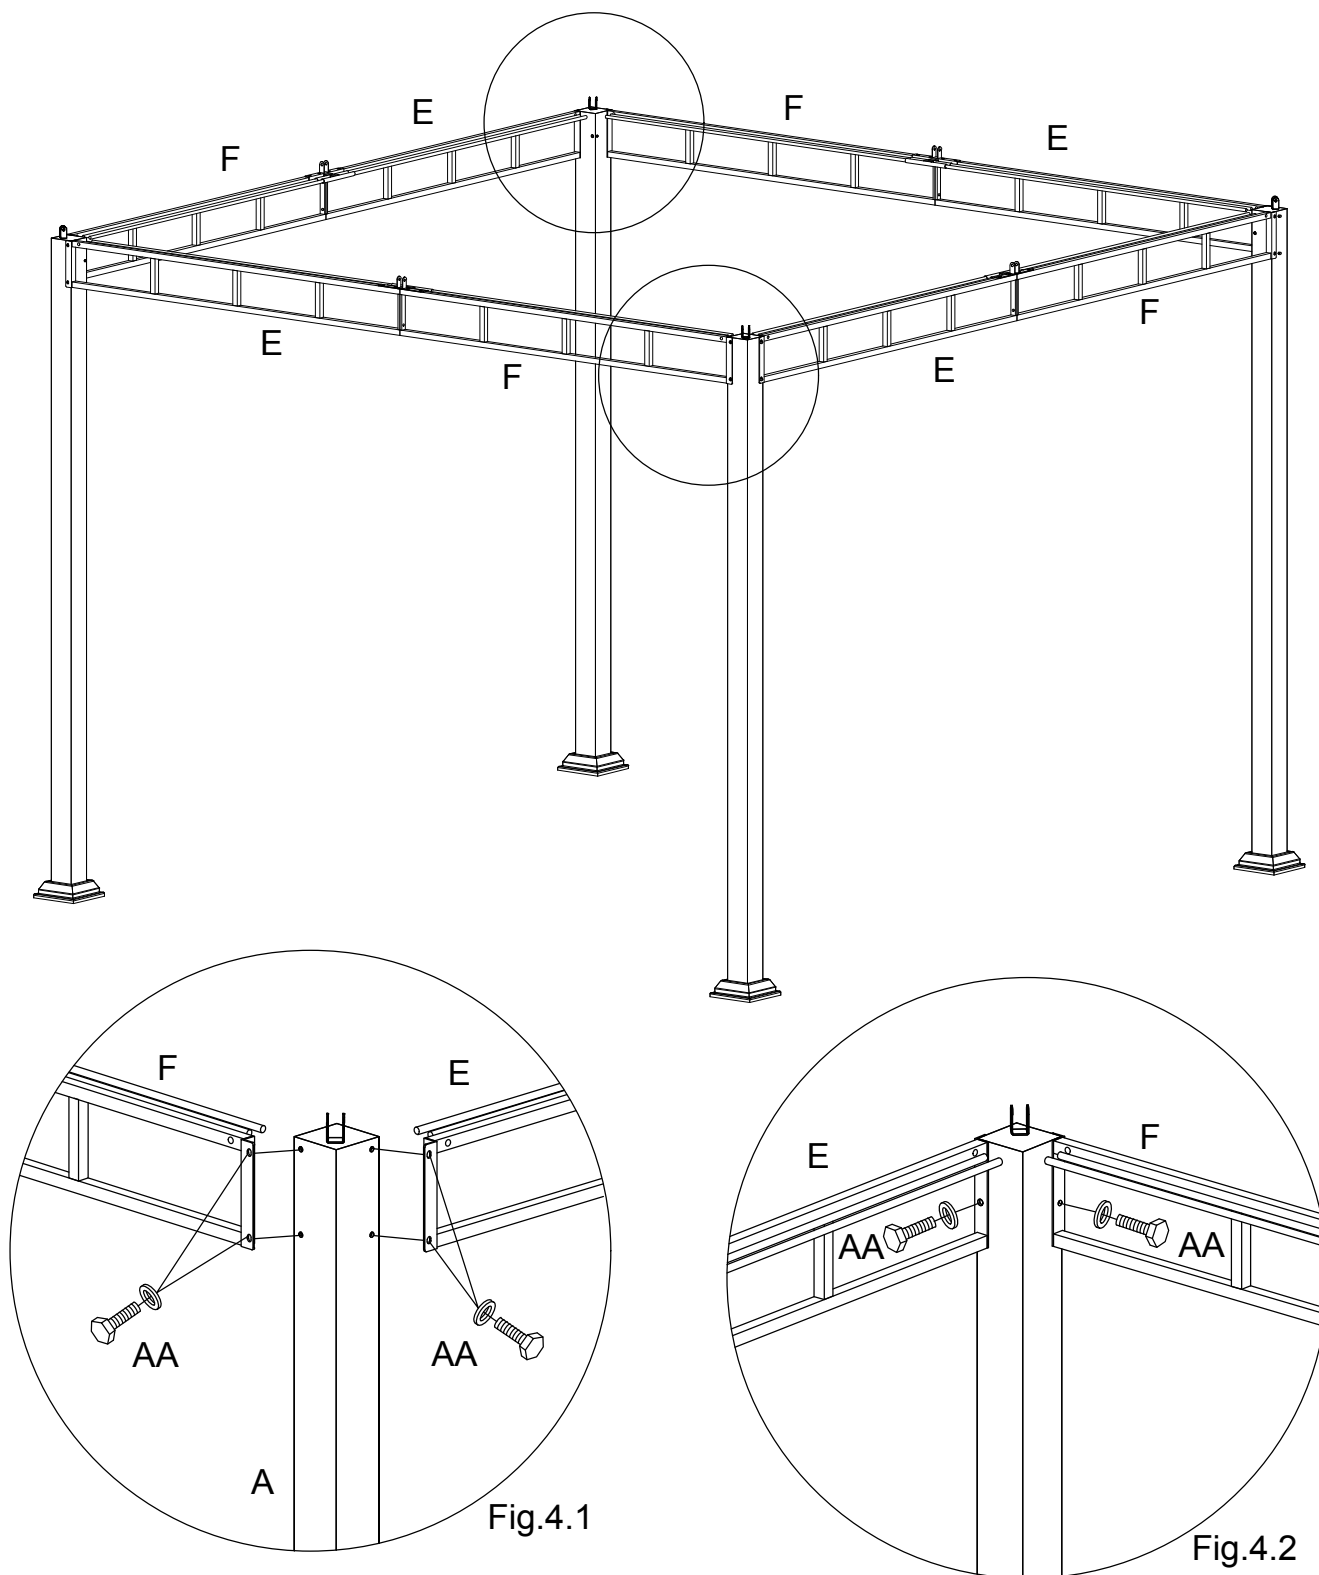

3.Connect the assembled beam to the Post (A) and tighten it with Bolts (AA), See Fig.4.1-Fig.4.2.

Step 4

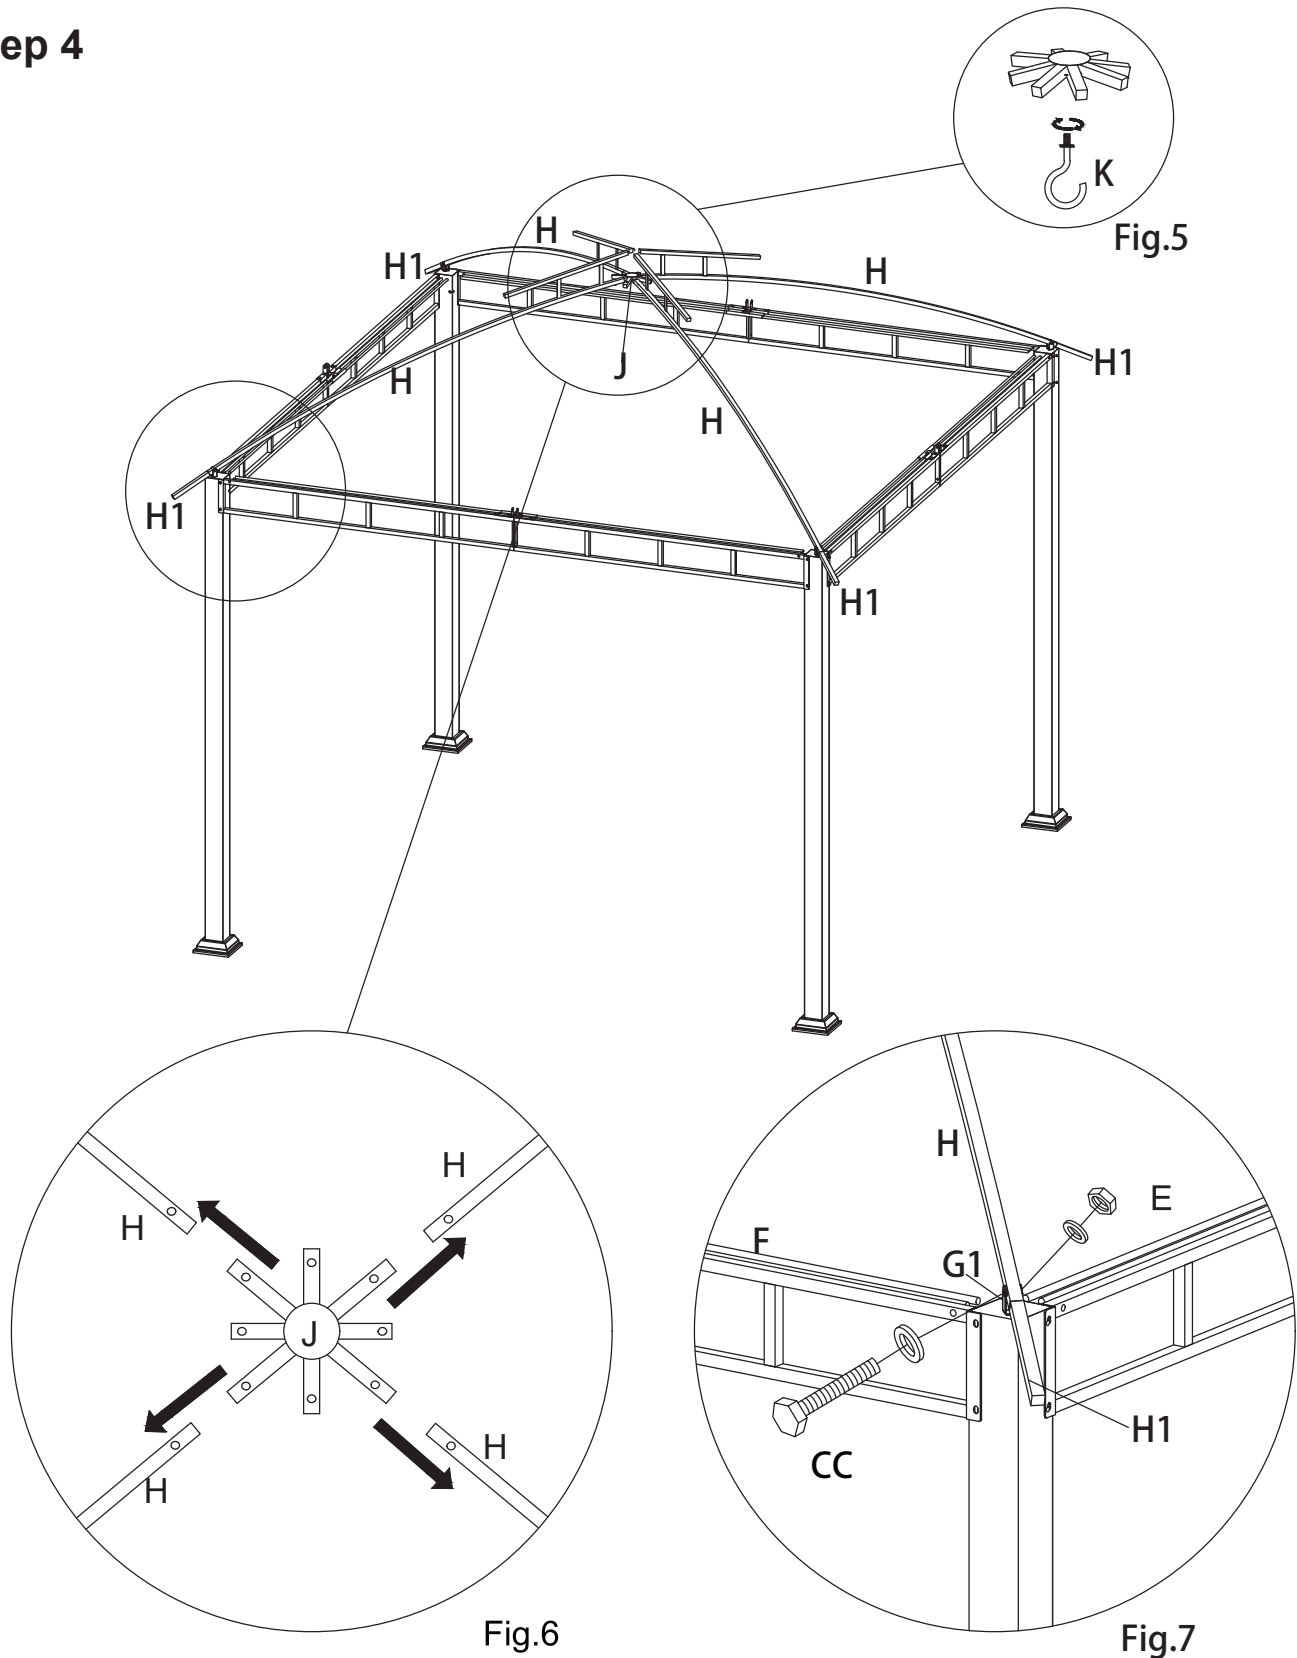

4. Screw the Hook (K) onto the Center Device (J), then insert the center device (J) into the Long Top Bracing (H).
Attach the other end of the Long Top Bracing (H) to the Long Support Connecting Tube (H1), then attach the Long Top Bracing (H) and the Long Support Connecting Tube (H1) together to the U- shape connector (G1) with Bolts (CC)

Step 5

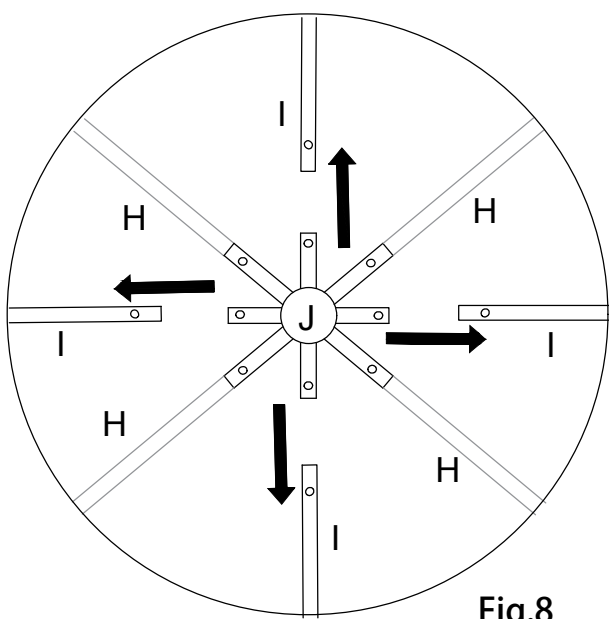
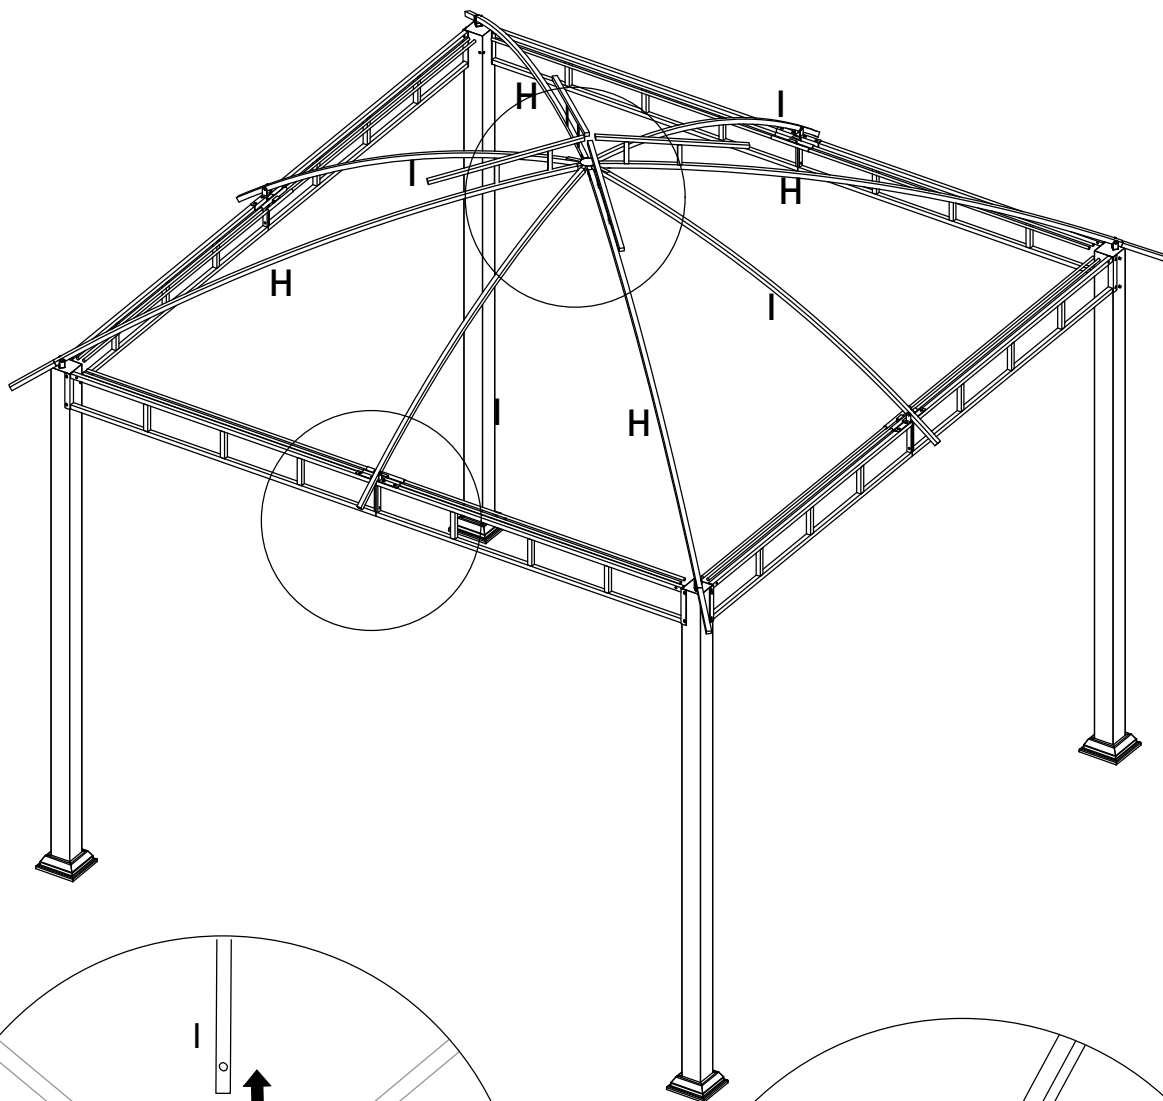


Fig.8

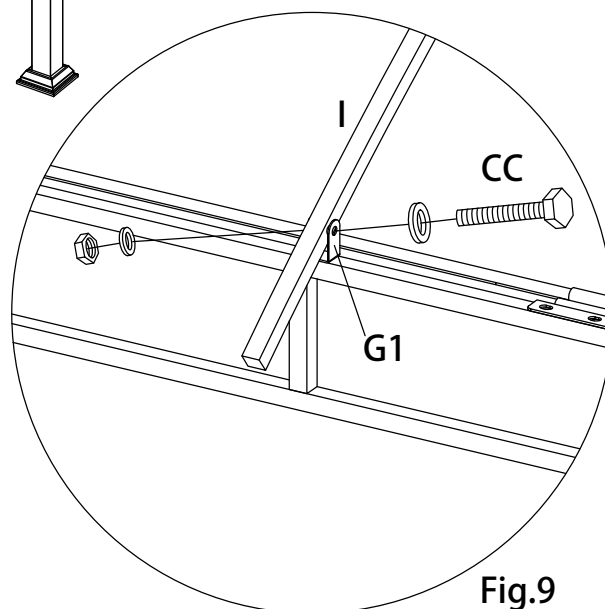


Fig.9

5.Insert the Central Device (J) into the Short Top Bracing (I) and connect the other end to the U-shape Connector (G1) and tighten with the Bolt (CC), See Fig.8-Fig.9.

Step 6

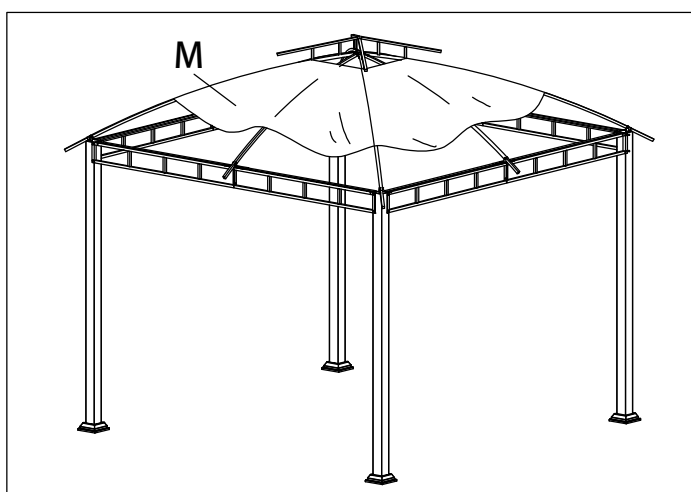


Fig.10





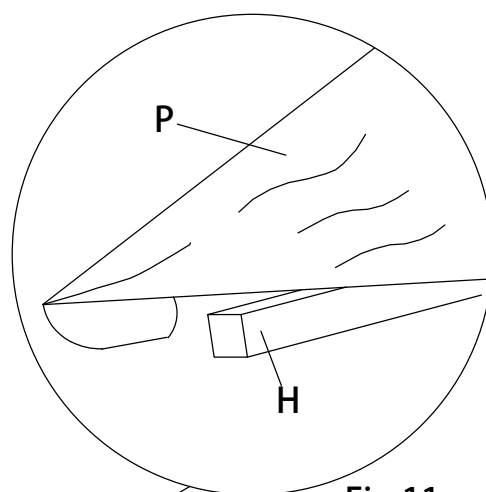


Fig.11

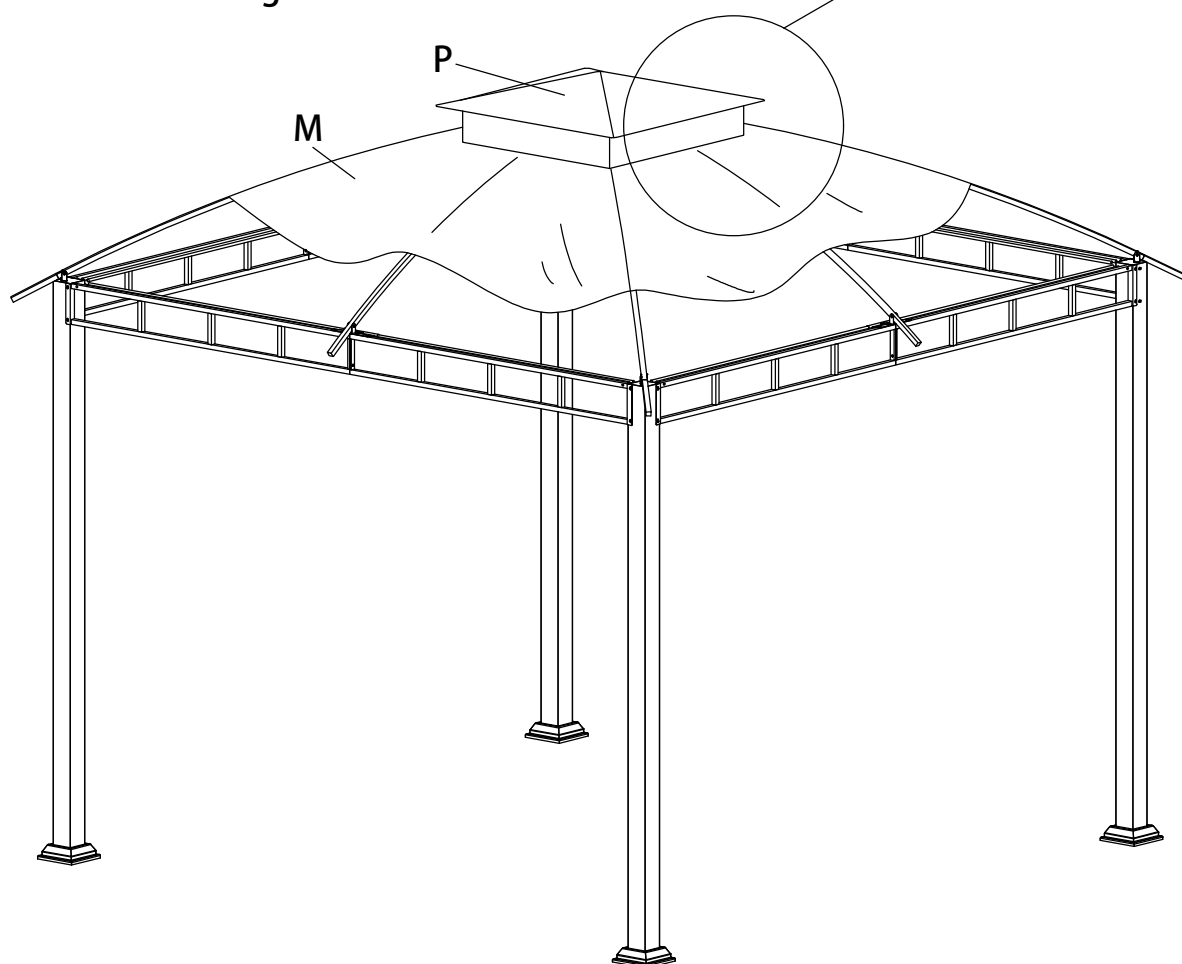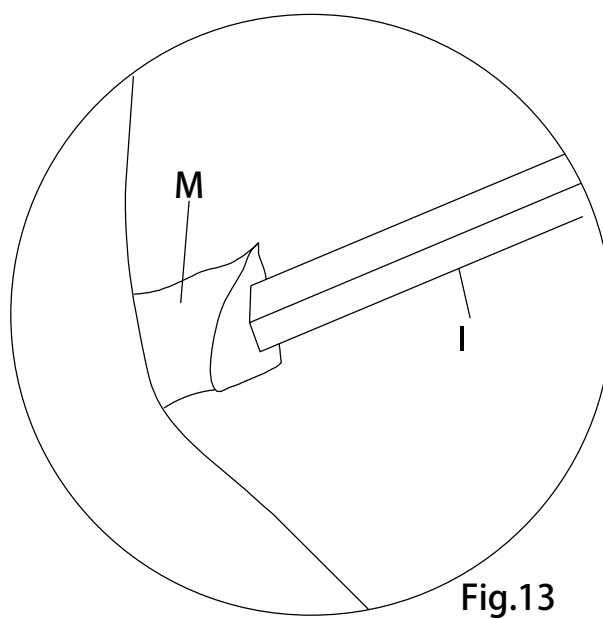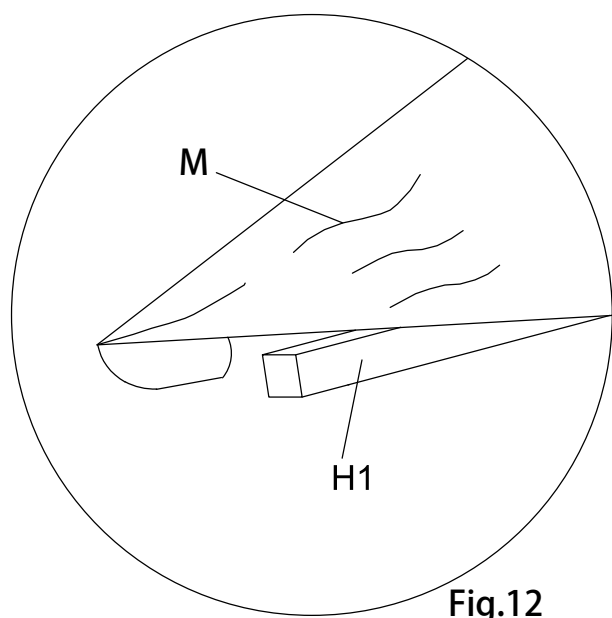

6.Place the Big Canopy (M) onto the frame of the gazebo .At this stage, DO NOT ENFOLD and drage the Conopy (M) , Put the Small Canop (P) onto the small top.see Fig.10-Fig.11.

Step 7

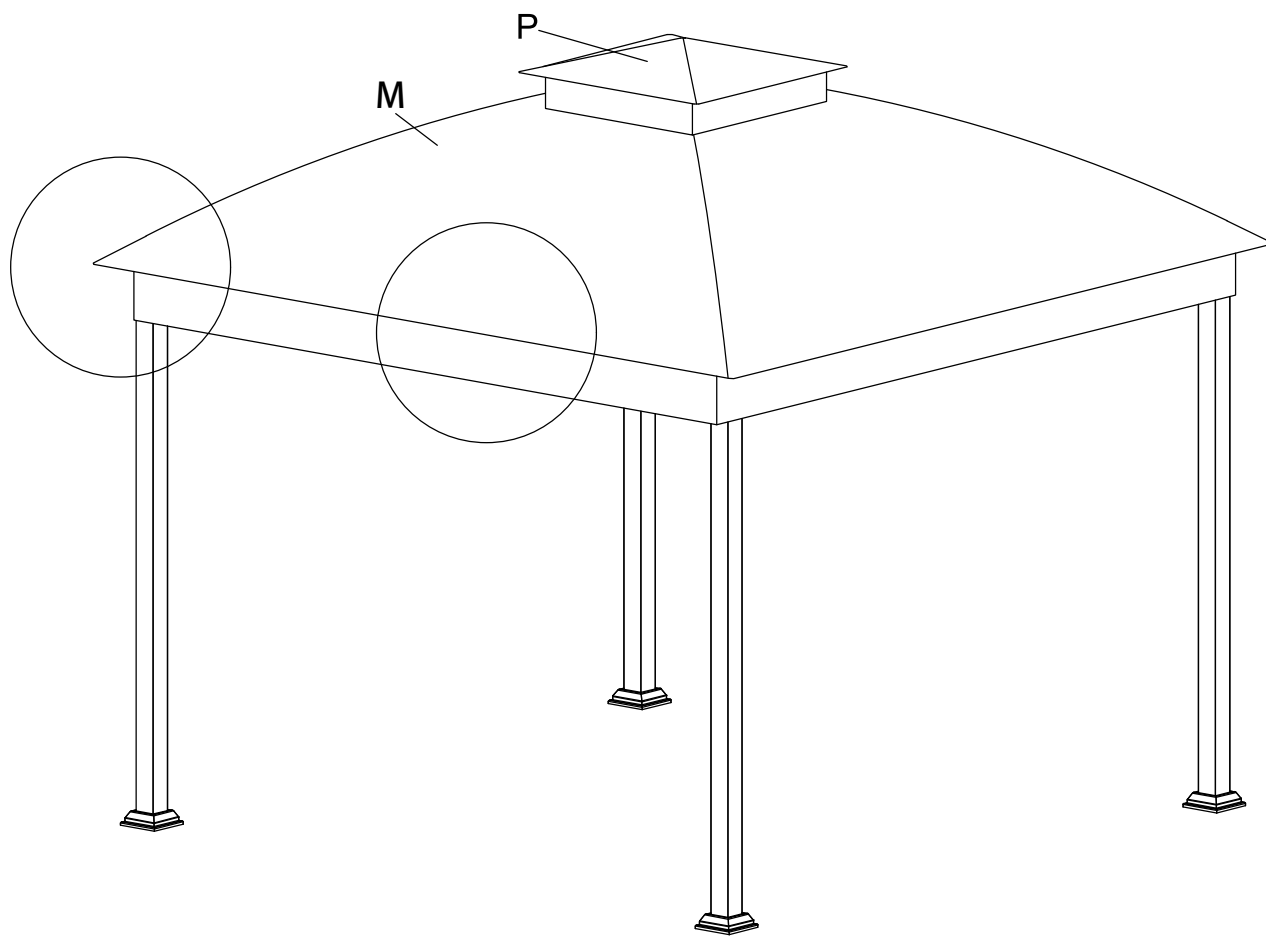

7.Finish stretching the Big Canopy (M), See Fig.12-Fig.13.

Step 8

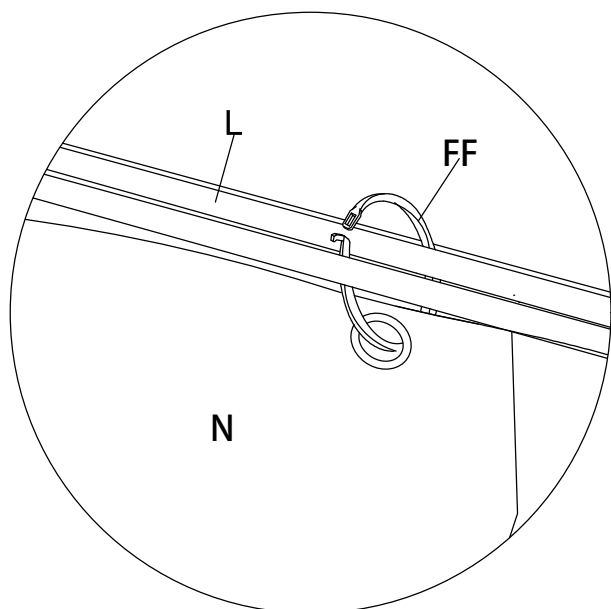
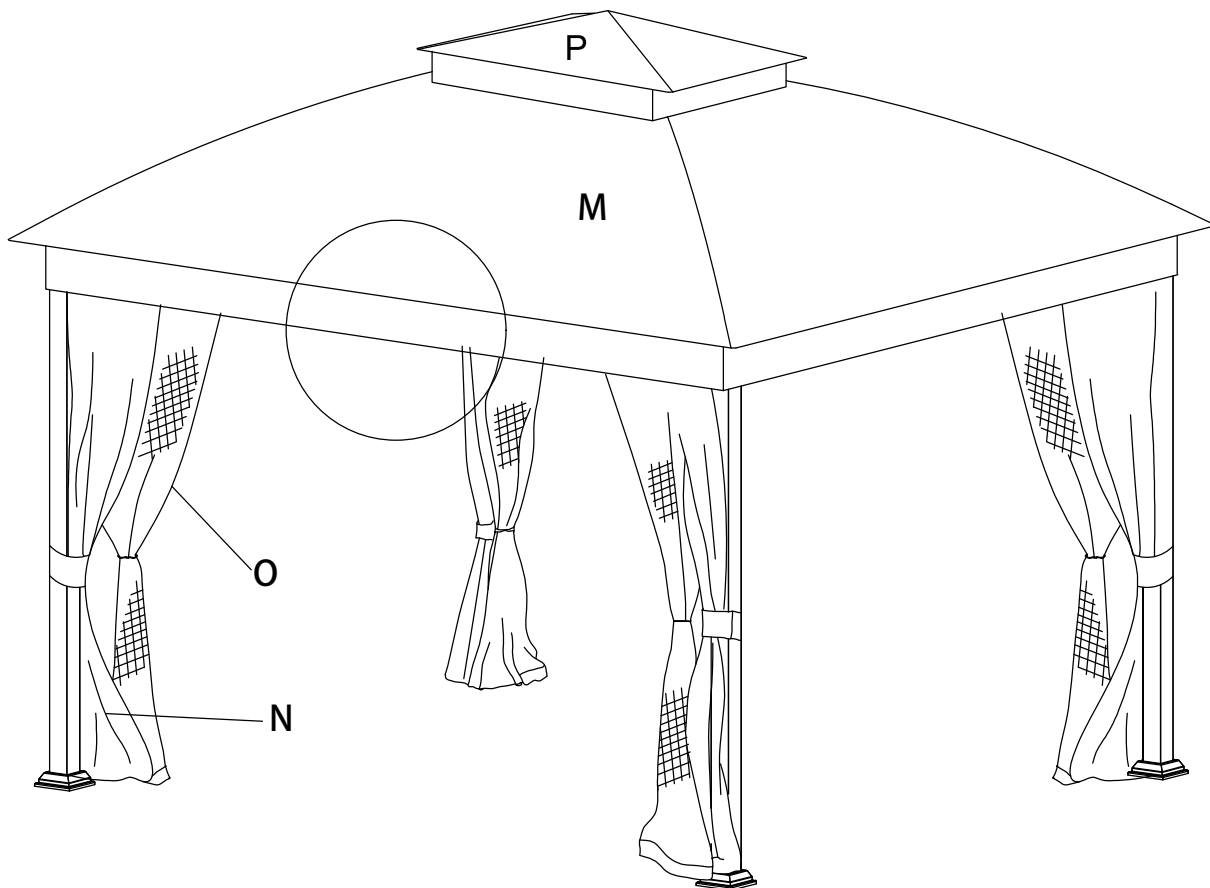


Fig.14

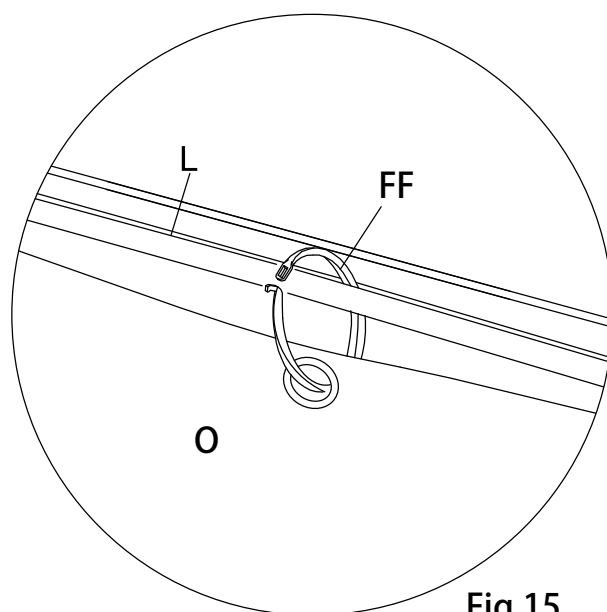


Fig.15

8.Hang the Curtain (N) and the Mosquito Net (O) on the the net tube with hanger (FF) ,
See Fig.14- Fig.15.

Step 9

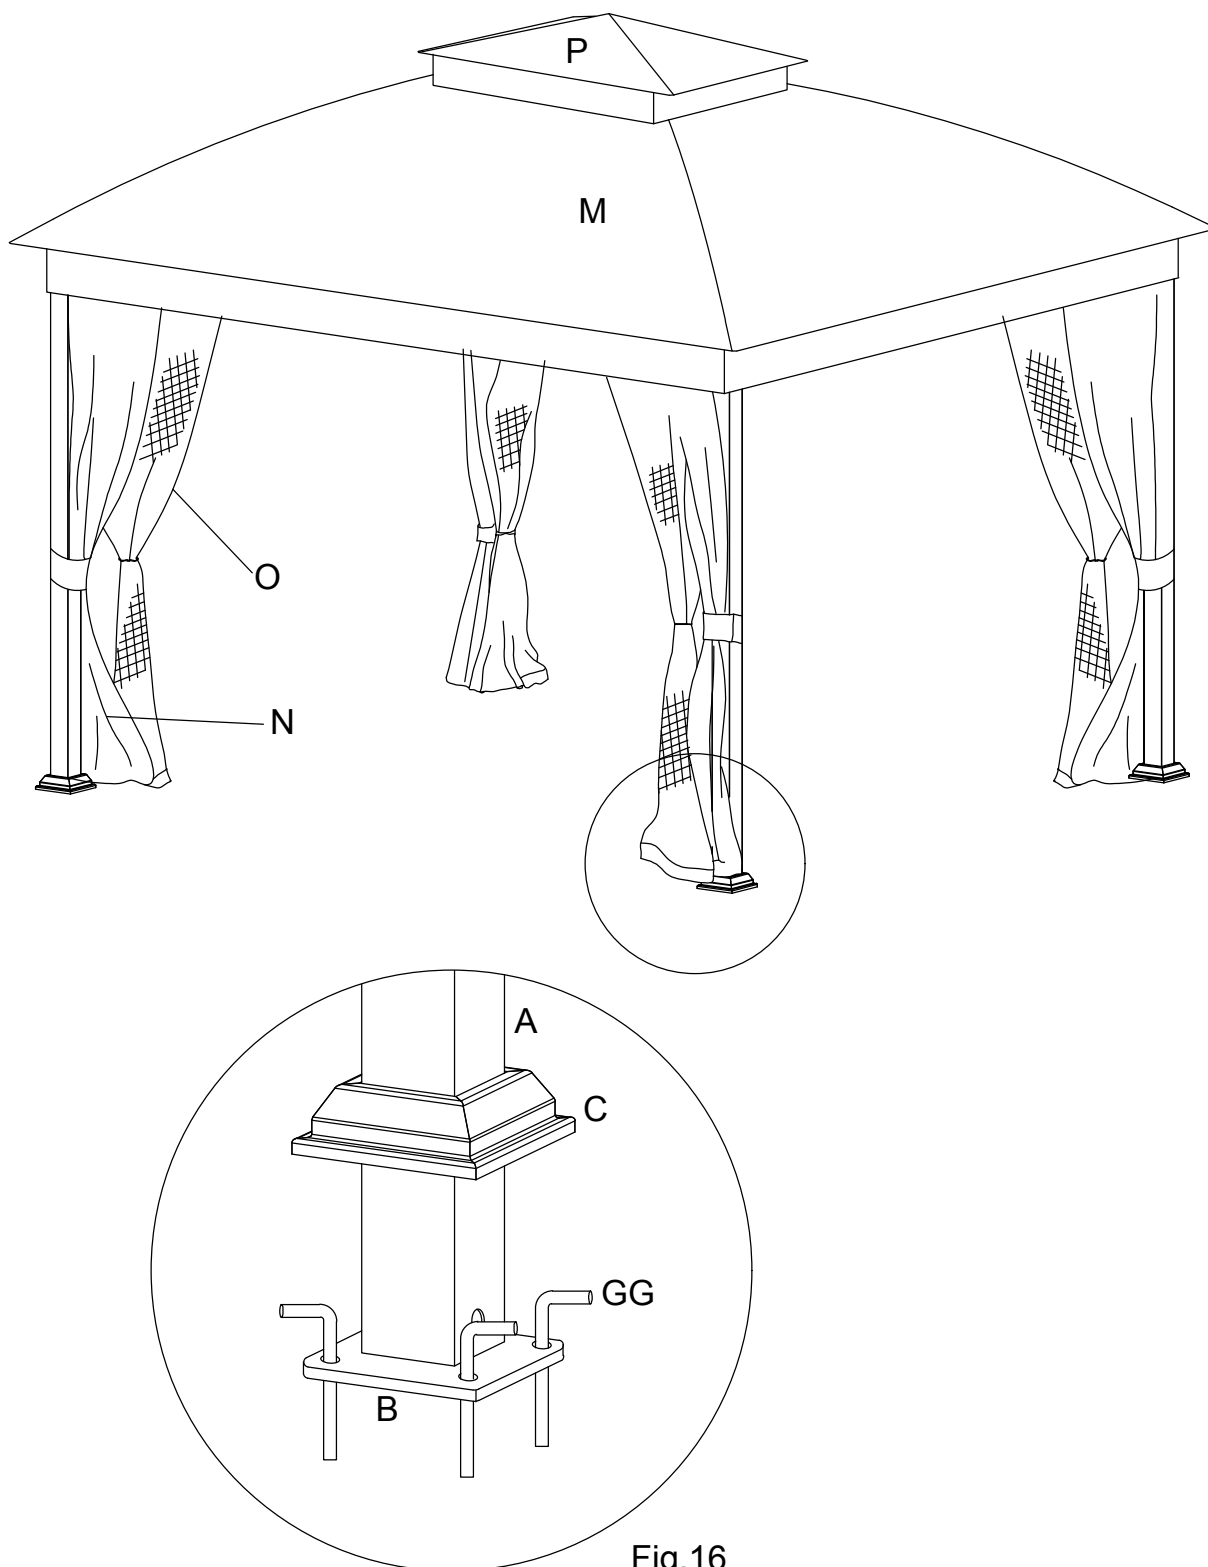


Fig.16

9.Insert the Stake (GG) into the ground through the Base Plate (B), See Fig.16.