


Kids' Sofas

User Manual

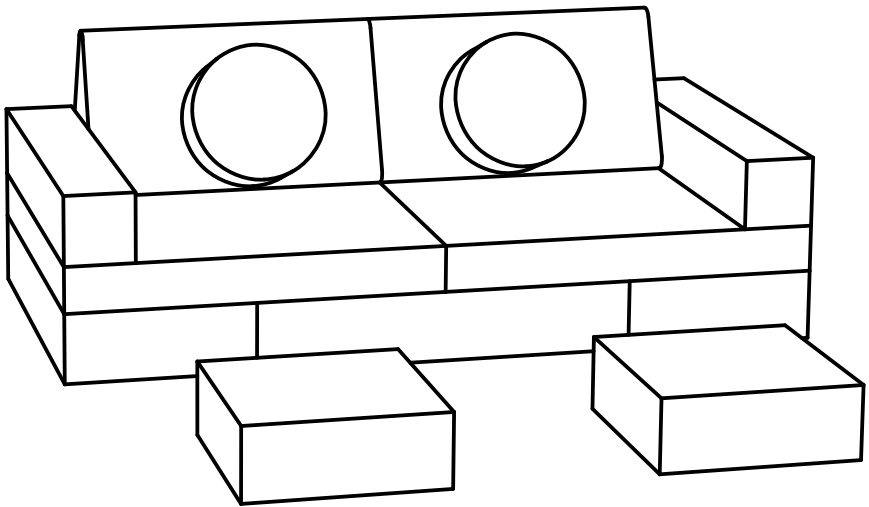


This soft play set has been compressed for shipping and packaging reduction.

UNPACKING & ASSEMBLY

- 1.Cut open the fabric bag containing the play set, taking care not to cut the product. Once opened separate out all parts of the product and allow them to decompress.
- 2.Pull fabric away from foam gently and smooth out any wrinkles with your hands.The product may require leaving over night to fully expand back to its full size.The foam shape has memory retention so you can reshape it back to its original shape (please allow 72 hours for it to settle).
- 3.Once fully expanded adjust the fabric covering until it is fat fitting to the foam.

WARNING! KEEP AWAY FROM FIRE

- Warning. Not suitable for children unable to stand unaided.
- Warning. This product is not intended for use as a play pen.
- Warning. Not to be used by children under 36 months.
- Use under adult supervision. DO NOT leave child unattended.
- Please read and retain this information for future reference.
- Remove all packaging components before giving to a child.

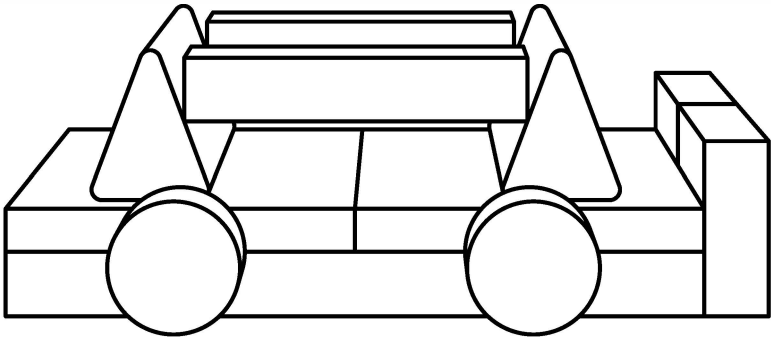

WARNING! NEVER LEAVE CHILD UNDER 3 YEARS OF AGE UNATTENDED WHILE USING THIS TOY. Do not expose to extreme heat. Always use this product with adult supervision.

PACKAGING MATERIALS: Please discard all packaging attachments immediately upon opening as they may present a suffocation and/or strangulation hazard to infants and small children. These packaging materials may include plastic bags, ribbons, safety pins, tape, plastic tags and other materials used in packaging. Please retain these instructions for future reference.

CARE INSTRUCTIONS: Outer cover machine washable 30°. Do not bleach. Do not tumble dry. Dry fat. Iron low - without steam. Do not dry clean. Remove cover by unzipping and removing foam inner.

CONTENTS: 100% polyester

Outer
Cover:



Made in China



CPC

Children's
Product Certification