

COSTWAY[®]



USER'S MANUAL
SAFE

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.




Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

CAUTION: Do not keep the keys in the safe.

1. OPEN THE SAFE

To open the safe for the first time, remove the small plastic cover ('B', see diagram 1) on the front panel, insert the key into the key hole and turn it counter clockwise, at the same time, turn the doorknob ('A', see diagram 1) clockwise to open the safe.

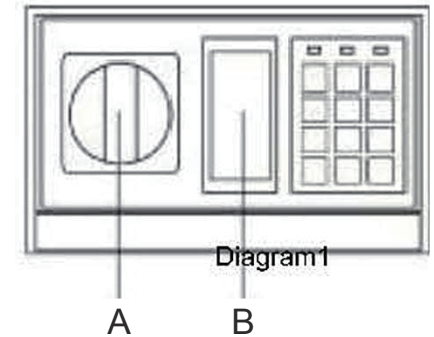

2. INSTALL THE BATTERIES

The safe requires 4xsize "AA" (1.5V) batteries. Open the safe, push the battery cover plate "D" (see diagram 2) on the back of the door and install the batteries. Ensuring the batteries are fitted with the correct corresponding polarity. Use of alkaline batteries is recommend.

3. PROGRAMMING THE CODE

- A. With the safe door open, press the red button "C" (see diagram 2) on the back of the door near the hinge, release it and you will hear two beeps. The yellow light will be on at the same time.
- B. Now press from 3 to 8 numbers that you wish to use as a combination, and confirm by pressing the letter "A" or "B" within 15 seconds. The safe "beeps" twice and the yellow light will go off, your personal code is now set.
- C. Write down your new combination immediately and check whether your new combination has been programmed or not on conditions of the safe door open.

4. USING YOUR SAFE

To open the safe, enter your personal code followed by the letter "A" or "B", you will hear a beep and the green light will be on, then turn the doorknob in clockwise direction to open the door within 5 seconds.

If you or an intruder uses the incorrect group of numbers, it will not open. If the incorrect combination is used 3 times consecutively, you must wait for 20 seconds before reattempting.

If again the incorrect combination is selected 3 times, you must wait approximately 5 minutes before reattempting access.

5. BATTERY REPLACEMENT WARNING

If the batteries are low, the red light (in the middle of the number panel) will warn you immediately. To test the batteries, just input your personal numbers to open the door. If the batteries are low, the red light will be on. If nothing happens, it means that the batteries are in order.

6. REPLACING THE BATTERIES

The safe requires 4xsize "AA" (1.5V) batteries. Open the safe, push the battery cover plate "D" (see diagram 2) on the back of the door and replace the 4 PCS old batteries. You must reprogram the code, using the above third step. Use of alkaline batteries is recommended.

7. OVERRIDE INSTRUCTION TO OPEN THE SAFE

For your Convenience, we have engineered a manual override System for your safe. If you forget or misplace your combination, remove the small central plate on the front panel ("B", see in diagram 1), insert the key into the keyhole and turn it in a counterclockwise direction, then turn the knob ("A", see in diagram 1) in a clockwise direction towards the right. This will manually open your safe at any time.

8. INSTALLING THE SAFE

To reduce the risk of theft of the safe, it can be secured to floor, wall or in a cupboard. For your convenience, there are holes (diameter 8mm) on the back and in the bottom; therefore it can be fixed by the expansion bolts.

CAUTION: The safe should be placed vertically when installing the safe.

Please refer to diagram 2 for reference:

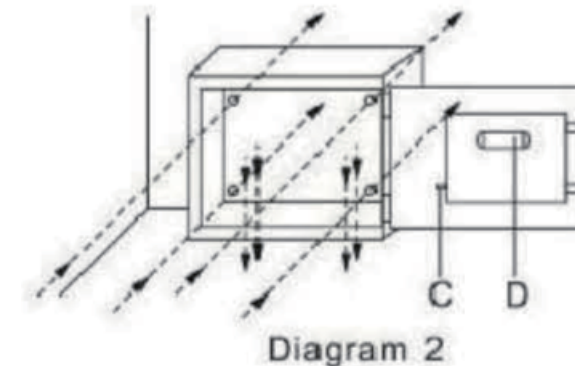


Diagram 2

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us!
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

