 


Assembly Instructions

Water Fountain

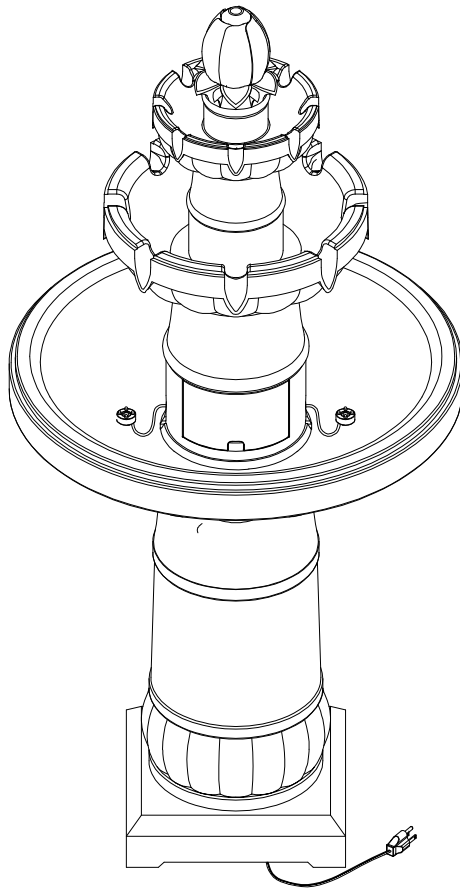

⚠ WARNING! RISK OF ELECTRICAL SHOCK!

This pump is supplied with a grounding conductor and grounding type plug. To reduce the risk of electric shock, be certain that it is connected to a properly grounded, grounding type receptacle.

Always disconnect power supply before manipulating fountain.

Connect only to a grounded outdoor power outlet of 120V- 60Hz.

Do not attempt to repair a damaged pump/power cord. Ask for a replacement pump/cord from the manufacturer.

To avoid possible injuries do not tamper with pump/cord assembly.

Must be used only with the pump AND/OR transformer AND/OR adapter provided.

Be careful not to spill water onto the plug of the pump. DO NOT allow the pump to run dry!

⚠ WARNING!

To reduce the risk of electrical shock, use pump only on self-contained fountains no larger than 5 feet (1.5 m) in any dimension.



Precautions:

Excessive weight or pressure on any of the fountain sections may cause it to tip or fall over. Keep pets and children away from any of the fountain sections. Do not place any items, such as potted plants, on the edge of the bowl. If the entire fountain falls into the water accidentally, turn off **the circuit breaker** immediately before manipulating. Do not operate the fountain if the pump has been dropped or has a damaged power cord or plug.

If the plug or your wall receptacle gets wet due to water dripping down the power cord or for any other reason, do not remove the plug from the wall outlet until the circuit breaker is turned off.

NOTE: Periodically change the water. Clean the fountain water basin, the pump's outlet nozzle and the water tube for dirt and debris with a damp cloth if necessary. Keep the power cord away from high temperatures or heat sources.

Use only an UL or ETL approved extension cord of the correct rating to avoid overheating.

Do not use attachments, which are not provided by the manufacturer, since they may cause an unsafe condition.

This fountain pump is not intended for commercial use.

 
ASSEMBLY INSTRUCTIONS:

ARTICLE / ITEM: 5206


- Place base on a clean level area outdoors. Do not place on or near surfaces that may be damaged by water.
- Fountain needs to be located near a GFCI (Ground Fault Circuit Interrupter) outdoor electrical outlet.
- To prevent back injuries, please ask for assistance when lifting.

Assembly:


1. Set the fountain on a surface that will not be damaged by water.
2. Locate the hose inside the fountain body. Connect it to the pump.
3. Connect the wires from the lights to the wires from the pump.
(Its important to screw until sealed otherwise water will leak into the fittings)
4. Insert pump into the body of the fountain. Make sure the hose is not kinked.
5. Fill with water and plug in.

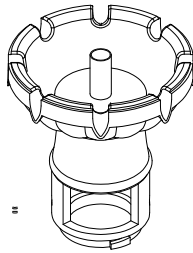


Middle Pedestal*1

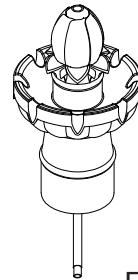 

Fountain Top*1

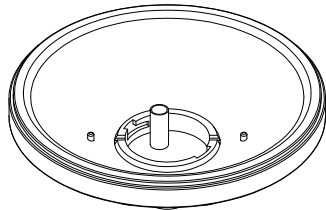 


Basin*1

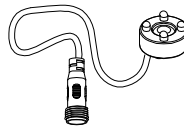 


Light*2



 Cap*1

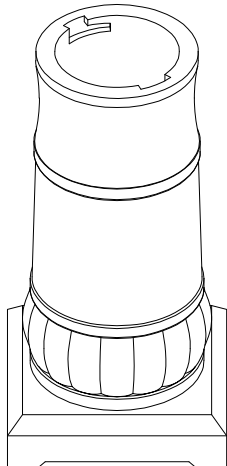

Base*1

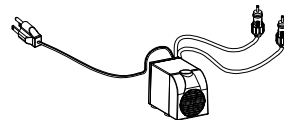 


Pump*1




Pump house Cover*1

 
1.

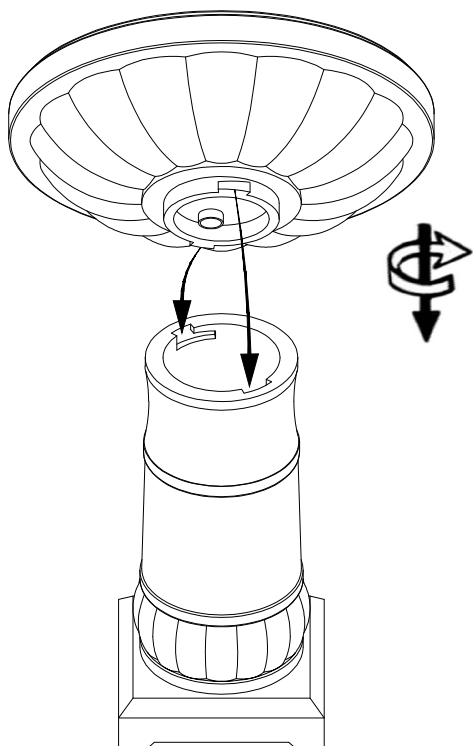

 
2.

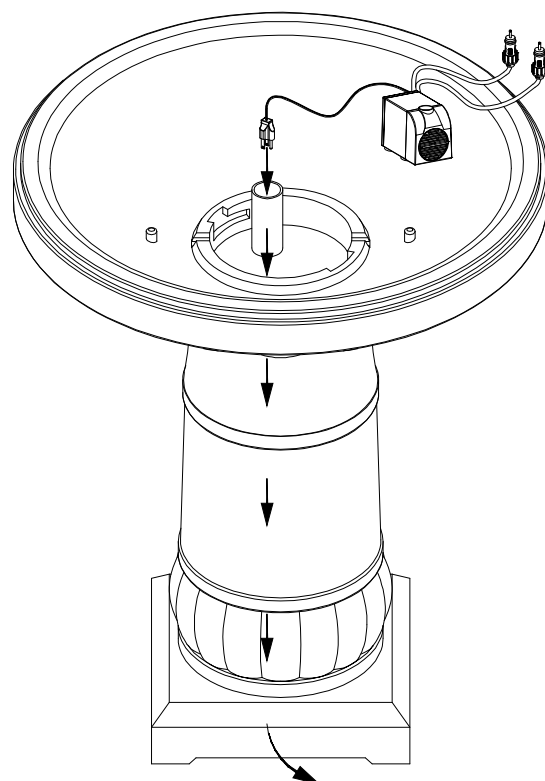

 
3.

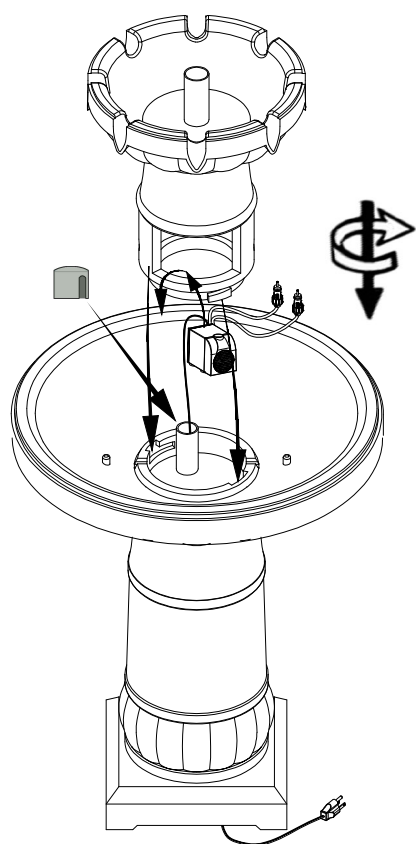

 
4.

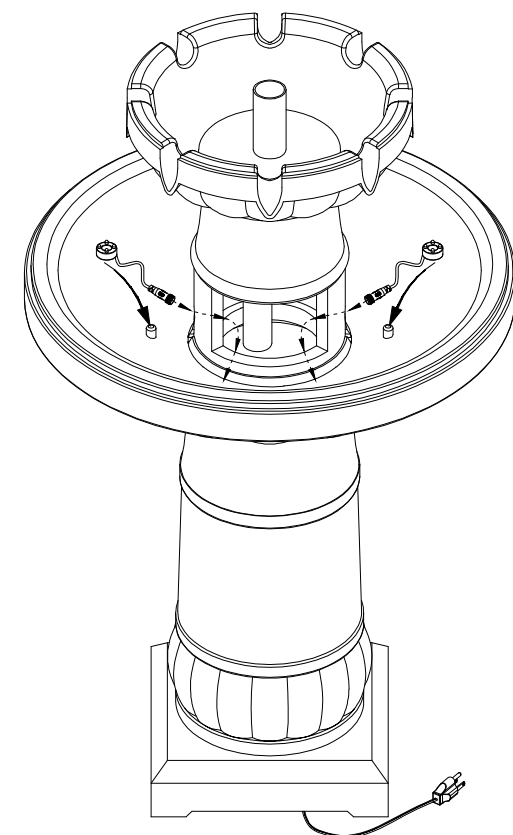

 
5.

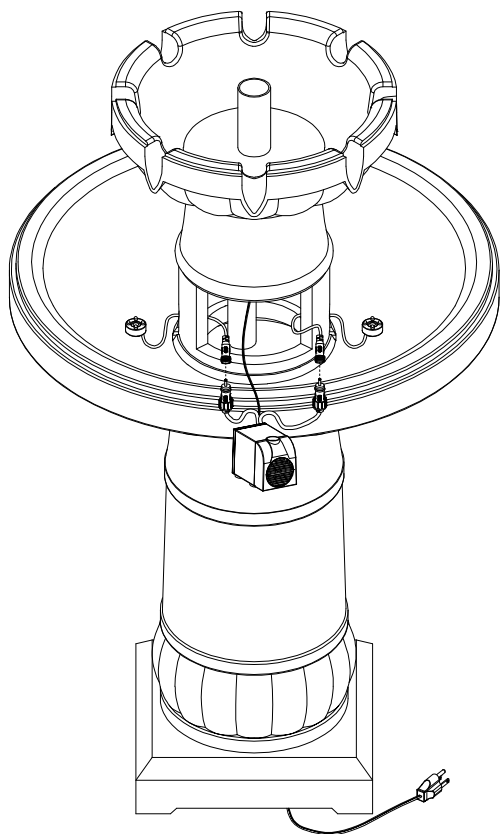

 
6.

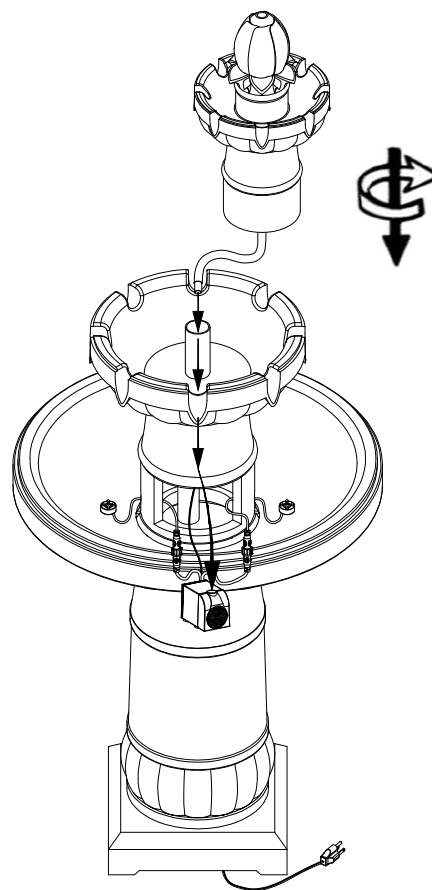

 7.

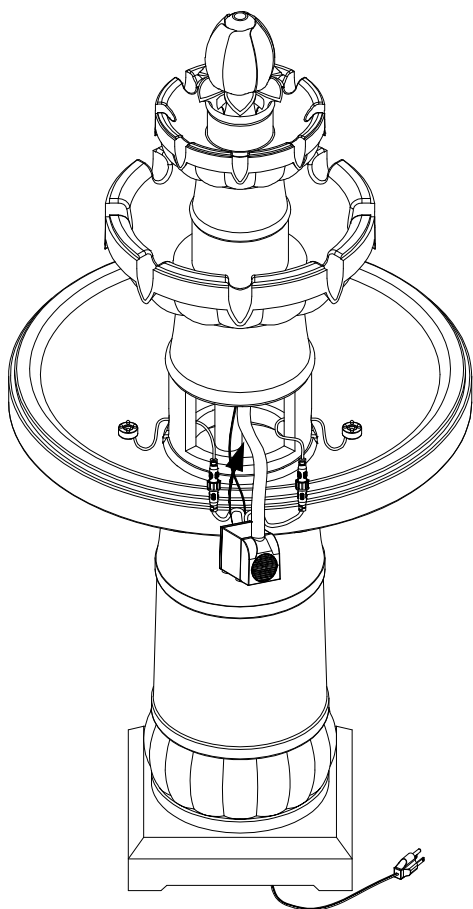

 8.

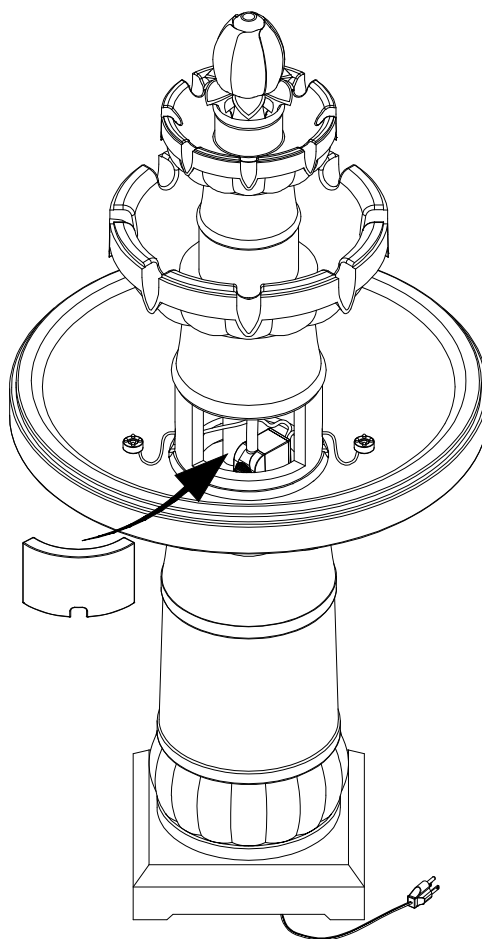

General Information:

- Pump model number: A (120V AC ~60Hz 0.10A)
- The pump is cETLus Listed.
- Power cord is 6ft (1.83 m) long.

Troubleshooting:

- If water does not flow out of unit, disconnect the power supply and verify that there are no kinks in the hose. Shake the pump a little while underwater.
- Make sure there is enough water in the fountain. Fill to within 1-2 inches below the rim of the base (Fountain - Lower Section).
- Connect and disconnect the power a few times. The pump should function.
- Wait a while in order to allow the water to circulate properly.

Care and Maintenance:

- In order to preserve the beauty and the life of this item, it is highly recommended to cover with a canvas type waterproof material or store in a covered area for the winter.
- Keep the water clean at all times.
- Remove all forms of debris.
- Never run the pump dry.
- Verify water level frequently to compensate for evaporation during the summer. Fill within 1-2 inches below the rim of the base (Fountain - Lower section).
- Not for operation below 41° F (5° C). All water must be removed from the unit in freezing conditions.
- This fountain is for outdoor decorative use only.
- This fountain is designed to function with water only.
- Never leave a running fountain unattended.
- The water in the fountain is not safe to drink.
- Keep away from small children and pets.
- Change the water regularly to prevent the proliferation of mosquitoes
- During Winter, this fountain must be stored indoors Please follow the following steps:
 - Disconnect power supply
 - Carefully empty fountain of all water
 - Store Indoor on water resistant surface