
 
 

 
 




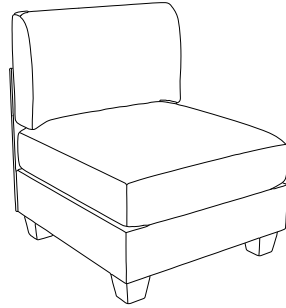




ASSEMBLY INSTRUCTION




PARTS LIST

				
A	B	C		
x1	x1	x4	x1	x1


HARDWARE LIST

						
1	2	3	4	5	6	7
x2	x8	x8	x2	x4	x1	x2

Open up Velcro of Non-Woven Fabric cover on the bottom of the to remove **HARDWARE** and **legs**.

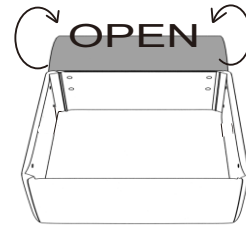

Step1

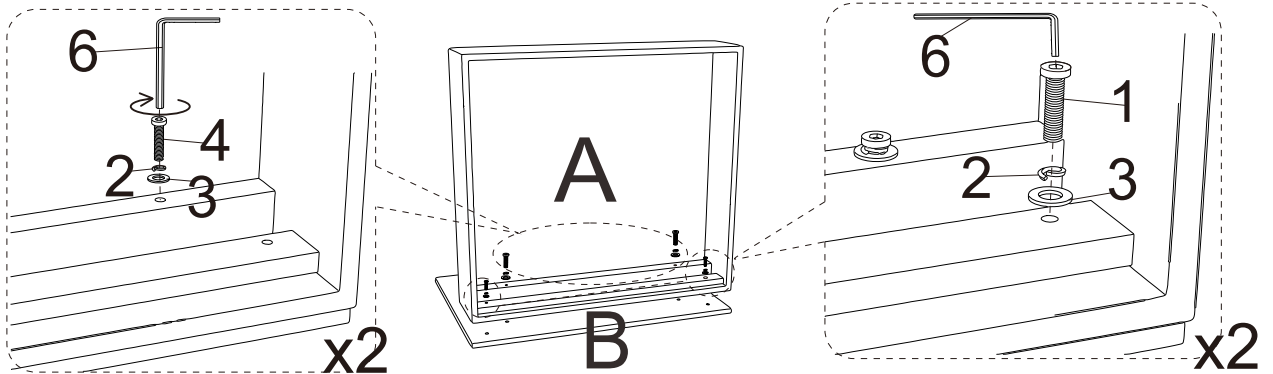

Step2

