


INSTALLATION INSTRUCTIONS

DeerValley®

Bathroom Console Sink

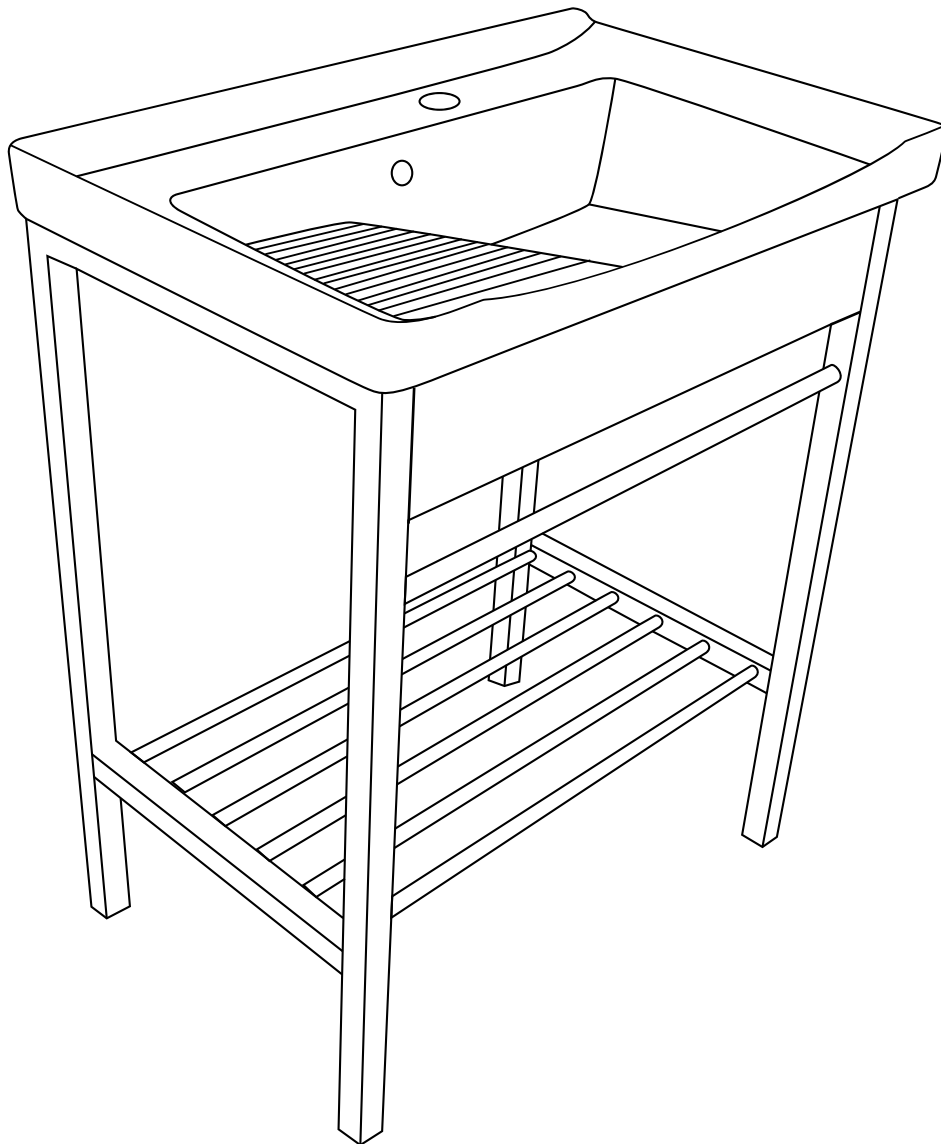



Prior to Installation:

- Please read all instructions carefully before installation.
- Make sure all parts are present and undamaged.
- Turn off the water supply before starting any plumbing work.
- Use proper safety equipment when handling tools.
- Installation should be done by a qualified professional if you are unfamiliar with plumbing or wall mounting.
- This sink is designed for solid wall installation. Additional support may be required for drywall or plaster walls.
- Handle the ceramic basin with care when placing it onto the console frame to avoid chipping or misalignment.
- Do not overtighten fittings to prevent damage to the product.
- Do not place heavy objects on the sink or console frame during installation.
- Clean the sink regularly using gentle, non-abrasive cleaners to protect its finish.

**If you have any questions or concerns
please contact us:**

(312) 626-9466
service@deervalleybath.com

1. Recommended Tools



Gloves



Safety Glasses




Pencil or Marker



Measuring Tape




Phillips screwdriver

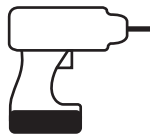

Electric Drill





 


Adjustable Wrench




Level

- These tools are recommended and are not included with the product.


2. Package Contents

 <p>Ceramic Sink Basin×1</p>	 <p>Console Frame Components (to be assembled)</p>	 <p>Drain Outlet Pipe×1</p>	 <p>Flip Cover Drain×1</p>	 <p>Mounting Hardware Pack</p>
--	---	---	---	---

 Mounting Hardware Pack Contents




Long Screws × 4

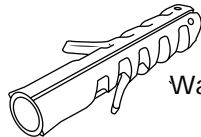


Wall Anchors × 4



 
Short Screws × 19




Foam Pads × 4

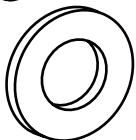

Plastic Washers × 19

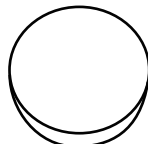

Decorative Covers × 19

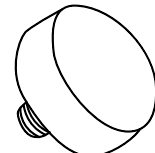

Foot Pads × 4

3. Installation Steps



1. Prepare all frame parts and assembly hardware.



2. Assemble the left side, top bar, and bottom bar of the console frame.



3. When assembling, align a plastic washer with the hole on the frame, then insert a short screw through the center and turn it slightly to hold it in place. Do not fully tighten yet.



4. Repeat the same steps to assemble the right side of the frame.



5. After confirming all parts are properly aligned, fully tighten all short screws, then snap on the decorative covers for a clean finish.



6. As shown in the diagram, screw the foot pads into the bottom of each of the four legs.



7. As shown in the diagram, secure the front panel to the frame using screws.



8. Once the frame is fully assembled and stable, place it against the wall. There are four mounting holes on the rear legs of the frame.



9. Use a pencil to mark the positions of the holes on the wall.



10. Drill holes at the marked points and insert wall anchors.



11. Use washers and long screws to secure the frame to the wall, then snap on the decorative covers.



12. As shown in the diagram, stick the 4 foam pads onto the four corners on top of the frame.



13. Carefully place the ceramic basin onto the frame.



14. Install the flip cover drain into the basin's drain hole.



15. Connect the drain pipe to the drain, making sure all washers are in place and connections are tightened to prevent leaks.



16. The installation is now complete.

4. Care & Maintenance

To keep your sink looking its best, clean it regularly using a soft cloth and nonabrasive cleaner. Always rinse thoroughly and dry after use to prevent water spots and mineral buildup.

What to Do



- Rinse off detergent and avoid residue buildup
- Wipe dry with a soft cloth after each use
- Use a plastic scraper for stubborn grime
- Use baking soda or mild detergent for tough stains
- Test any cleaner on a small hidden area first
- Use a strainer to catch lint and small items to avoid clogs

What to Avoid



- Storing bleach, acids, or harsh chemicals under the sink
- Using abrasive cleaners or scouring pads
- Letting metal or sharp objects directly touch the sink
- Placing hot pans directly in the sink
- Leaving standing water or stain-prone liquids in the sink

LIMITED WARRANTY COVERAGE

1-YEAR LIMITED WARRANTY

DeerValley products are made with quality materials and excellent craftsmanship to provide customers with a long-lasting product. If any defects in materials or craftsmanship are found under normal use within the first year of delivery, DeerValley will provide replacement parts at no charge or, at its option, replace any product or part of the product deemed defective under normal installation, use, service, and maintenance. This warranty applies only to the original purchaser. Proof of purchase will be required to process any claims. **SCRATCHES ARE NOT COVERED UNDER WARRANTY.**

The manufacturer warrants that this product will be free from manufacturing defects for the duration of the above-mentioned warranty period. Please retain a copy of the original invoice as proof of purchase.

DeerValley will, at its option, (1) repair or replace the defective part(s) or product(s) at no charge; (2) issue a refund for the original purchase price of the product(s) (valid within 30 days from the date of delivery); or (3) issue a credit to be applied toward the purchase of a new DeerValley product. Shipping/delivery charges may apply and are at DeerValley's sole discretion.

DeerValley recommends that installations be performed by a licensed, professional plumber. DeerValley will not be held responsible for any damage or product failure resulting from improper installation, misuse, or failure to hire a licensed professional. Additionally, DeerValley is not responsible for any removal or installation costs.

This limited warranty does not cover goods that have been subjected to accidents, negligence, improper installation, product abuse, product misuse, or the use of cleaners containing abrasives, alcohol, or other organic solvents. Such exclusions apply regardless of whether the actions were performed by a contractor, service company, or the purchaser.

DeerValley's responsibility under this limited warranty is limited solely to the replacement of parts and does not cover any other costs. DeerValley will not be responsible for labor charges or any damage incurred during installation, repair, or replacement, nor for any indirect, incidental, or consequential damages, losses, injuries, or costs of any kind related to this product. Except as required by law, this limited warranty replaces and excludes all other warranties, conditions, and guarantees, whether expressed or implied, statutory or otherwise, including but not limited to those regarding merchantability or fitness for a particular purpose.

RESPONSIBILITIES OF OTHERS

It is the responsibility of the installer or building contractor, acting on behalf of the user, to inspect the unit prior to installation. They are responsible for ensuring that the unit is free from defects or damage.

Notices are placed on and within the unit, as well as on the shipping carton, to inform the installer of their responsibility.

If a problem is identified, the unit must not be installed. DeerValley is not responsible for failures or damage that could have been identified, repaired, or prevented through proper inspection and testing prior to installation.

Damage occurring during transit is the responsibility of the carrier. The user or installer must open the crate and inspect the unit for damage upon delivery. If damage is discovered, it must be reported immediately to the seller and the carrier in writing, and an inspection must be requested. If the carrier fails to respond, the issue should be reported to both the seller and the carrier. Freight claims should be filed promptly thereafter.

LIMITATIONS AND EXCLUSIONS

This warranty does not cover negligence, misuse, abuse, improper installation, carelessness, accidents, hard water or mineral deposits, exposure to corrosive materials, misapplication, damages resulting from improper maintenance, alteration of the product, or failure to follow the care or installation instructions provided with your product. The warranty becomes void if the DeerValley product is altered or if repairs are attempted using unauthorized accessories or parts not provided by DeerValley.

DeerValley is not liable for the loss of use of its products, inconvenience, or any other incidental or consequential costs, expenses, or damages. Please note that some states do not allow the exclusion or limitation of incidental damages.

DISCLAIMER

Except as expressly stated, no warranties or obligations, whether express, implied, oral, or statutory, are provided. No dealer or other individual has the authority to make any warranties or representations regarding DeerValley or its products. DeerValley shall not be held responsible for any such unauthorized warranties or representations.

WARRANTY SERVICE

NOTE: When requesting warranty service, please ensure you have the following:

- A copy of the original invoice
- Date of installation
- Description and pictures of the defect
- Model number or product description

To obtain warranty service or replacement parts, contact DeerValley Customer Service. DeerValley will determine whether to repair or replace the product, issue a refund, or provide a credit.