


34IN FIRE PIT

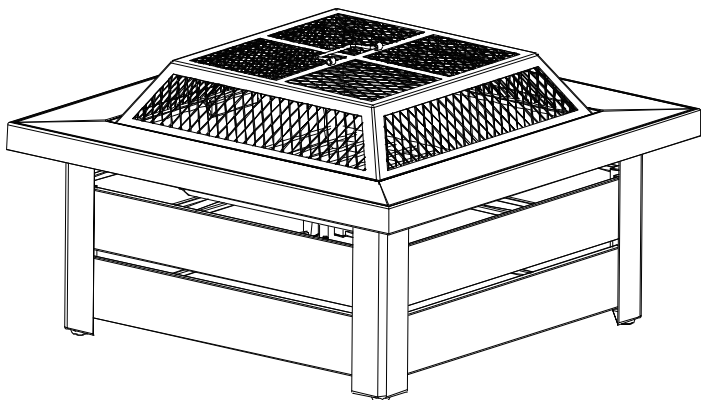

Pre-assembly

PLANNING ASSEMBLY



NOTE: Read all instructions before assembly. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



NOTE: More than one person may be required to assemble this product.



AA



BB



CC



DD



EE

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

Part	Description	Quantity
AA	Bolt	4
BB	Gasket	12
CC	Nut	8
DD	Allen key	1
EE	Wrench	1

Pre-assembly (continued)

PACKAGE CONTENTS

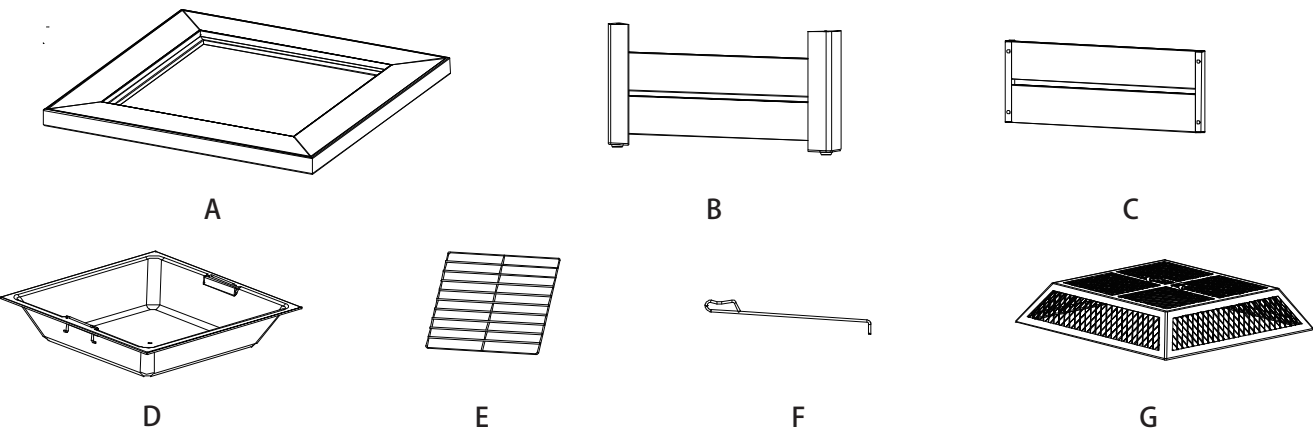

Part	Description	Quantity
A	Table top	1
B	Legged panel	2
C	Legless panel	2
D	Fire bowl	1
E	Log grid	1
F	Fire poker	1
G	Mesh cover	1


Assembly

1 Attaching the legged panels to the table top

- Place the table top (A) upside down on a soft surface.
- Attach legged panel (B) to the table top (A) with bolts (AA) and gaskets (BB).
- Don't tighten fully at this step.



NOTE: Loosely tighten all bolts and nuts using Allen key (DD) and wrench (EE) provided.

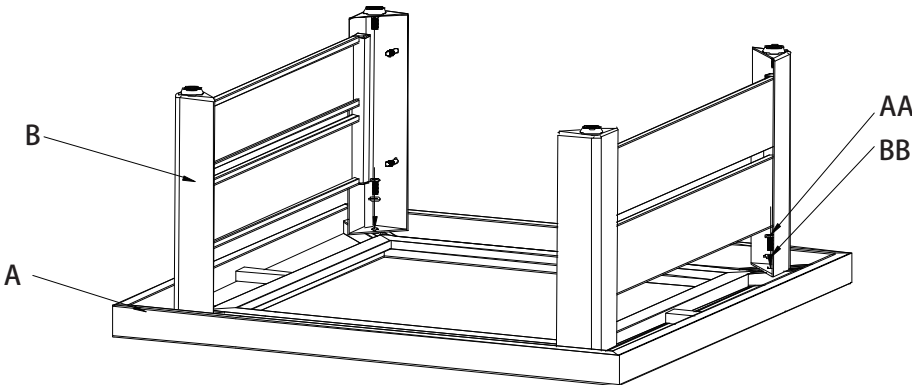


2 Attaching the legless panel to legged panel

- Attach the legless panels (C) to the legged panels (B) with nuts (CC) and gaskets (BB) onto screwpin.




NOTE: Loosely tighten all bolts and nuts using Allen key (DD) and wrench (EE) provided.

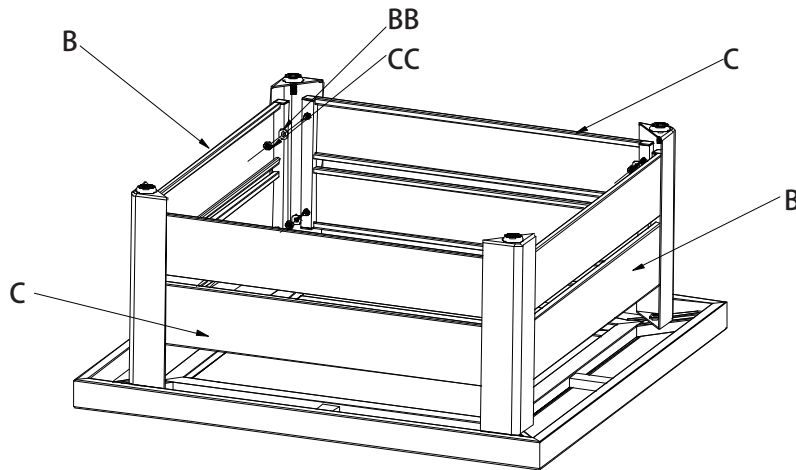

Assembly (continued)

3 Tightening the bolts

- Once all of the bolts are in place, fully tighten the bolts
- Turn the table right side up.
- Place fire bowl (D), log grid (E), fire poker (F), mesh cover (G) on the table top (A).
- Ensure that the table is tightly assembled and stable before use.

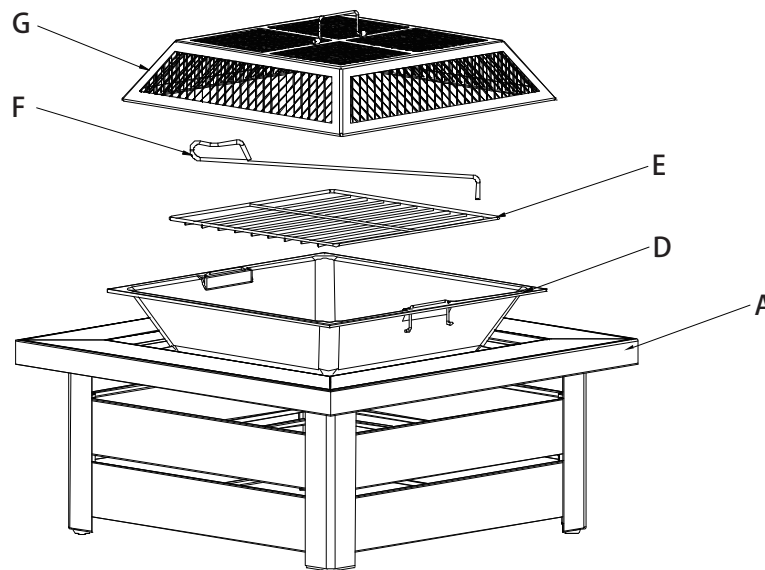

Operation

TENDING THE FIRE

- ☐ DO NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.
- ☐ Use a match to light the kindling or fire-starter.
- ☐ Wait until glowing coals have developed before adding any additional wood. If additional wood is required.

EXTINGUISHING THE FIRE

- ☐ Let the fire burn itself out.
- ☐ DO NOT use water to extinguish the fire. Such action is dangerous and can cause irreversible damage to the fire pit.

Maintenance

INSPECTING

- ☐ This fire pit should be inspected on a regular basis to ensure product safety and longer product life. DO NOT attempt to inspect this fire pit until the fire is COMPLETELY out and the fire pit has COMPLETELY cooled. Check components for any signs of damage or rust.
- ☐ If damage to any component is detected, DO NOT use the fire pit until repairs are properly performed.

Cleaning and Storage



NOTE: This fire pit should be cleaned on a regular basis to promote safer experiences and longer product life. After repeated use, a slight discoloration of the finish may occur. DO NOT attempt to clean this fire pit until the fire is COMPLETELY out and the fire pit has COMPLETELY cooled. DO NOT use oven cleaner or abrasive cleaners as they will damage this product. DO NOT clean any part of this fire pit in a self-cleaning oven as this may damage the finish.

- ☐ Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
- ☐ For stubborn surfaces, use a citrus-based degreaser and a nylon scrubbing brush.
- ☐ Rinse and clean with water.
- ☐ Remove built-up residue from components with a chimney cleaning product.
- ☐ DO NOT move or store this fire pit until the fire is COMPLETELY out and the fire pit is cool to the touch.
- ☐ Once the fire is out, the coals have completely cooled and the fire pit can be safely handled, remove and properly dispose of the ashes.
- ☐ Store the fire pit in a clean and dry location to maximize product life.
- ☐ Store the fire pit assembled in a safe location away from children and pets.