



Instruction Manual

Contents


Make sure that the package contains the following parts:

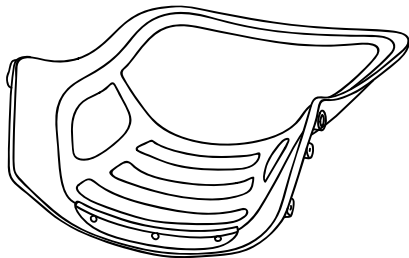


① Back Cushion(1)

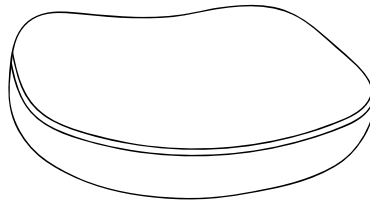


② Seat Cushion(1)

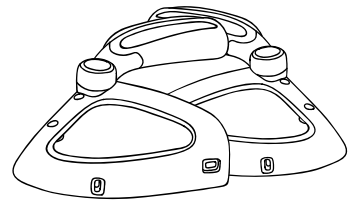


③ Arms(2)

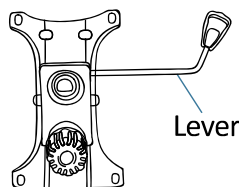


④ Seat Plate(1)

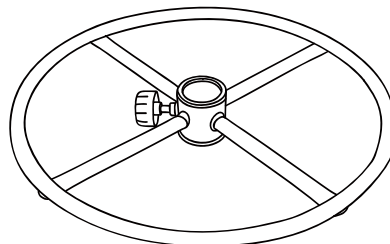


⑤ Foot Ring(1)

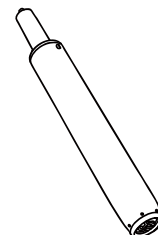

⑥ Gas Lift(1)

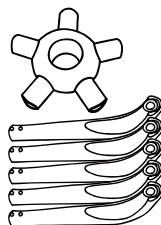

⑦ Star Base(1)

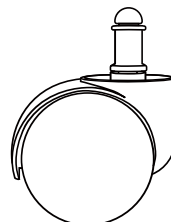

⑧ Casters(5)




Ⓑ Bolts M6*40mm(4)



Ⓒ Bolts M6*20mm(6)



Ⓓ Cap Covers(4)

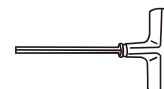

Ⓔ Wrench(1)



Ⓕ Washer M6*18mm(8)



Ⓖ Washer M6*15mm(4)



Ⓗ Bolts M6*30mm(2)




Ⓘ Bolts M6*14mm(10)

Centimetre




Assembly Instructions

Step 1: Attach the arms to the seat cushion using four (B) bolts, and four (F) washers using the wrench (E) Note: DON'T fully tighten the bolts first, **keep 50% tightness.**

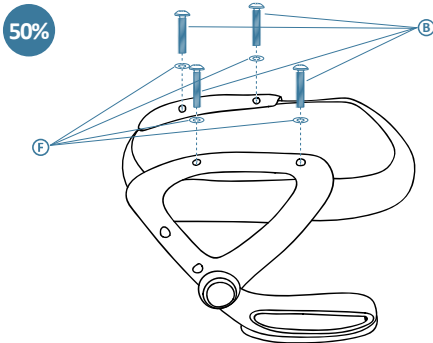


Step 2: Use both hands to buckle the top hole of the arm with the protruding part of the backrest tightly, so as to ensure that the two screw holes on the arm are aligned with the backrest;
Secure into place with four (C) bolts, and four (G) washers using the wrench (E).
Cover the holes with cap covers (D), then tighten the four (B) bolts of step 1.

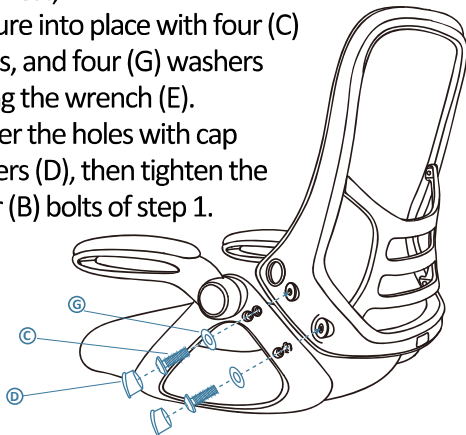

Step 3: Attach the seat plate to the seat cushion using two (H) bolts, two (C) bolts and four (F) washers.

Tighten all the bolts with the wrench (E), being careful not to miss-thread the bolts or damage the seat.

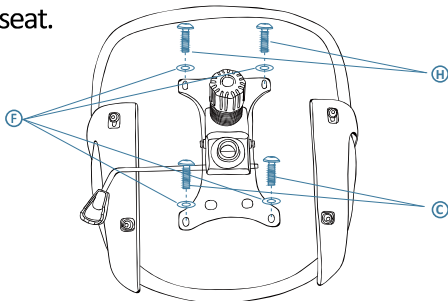


Step 4: ① Turn the star base upside down, insert the detachable feet in turn to the star base, secure the feet with ten (I) bolts with the wrench (E)

② Press the casters into the holes at the end of each base leg


③ Insert the cover in the star base as shown

④ Insert the gas lift into the center hole of the star base

⑤ Slide the foot ring around the gas lift and tighten into place by turning the tension knob to the right.

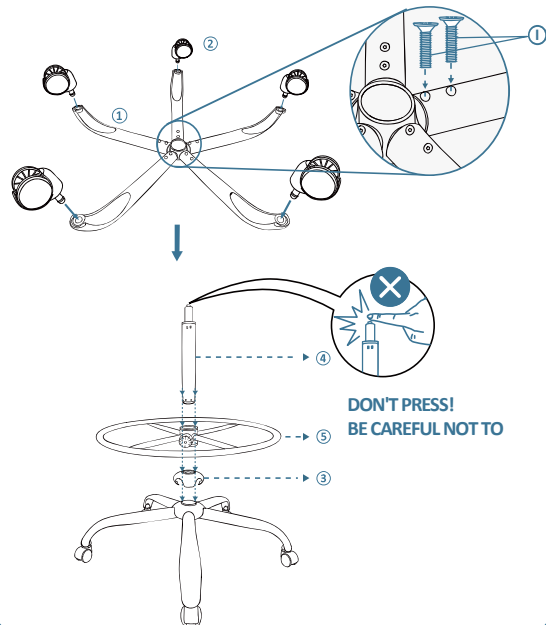


Step 5: Attach the seat cushion down onto the gas lift firmly until the connection is secure.

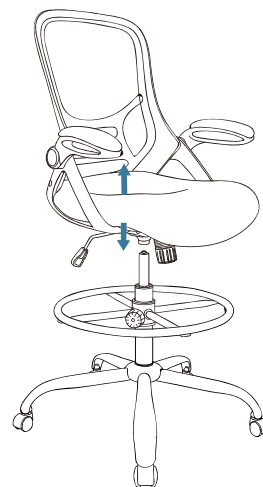

Adjustment


Adjusting the seat height

To raise your seat, lean forward to lift your body weight from the seat, then pull up the lever. To lower the seat, pull up the lever while you're seated.

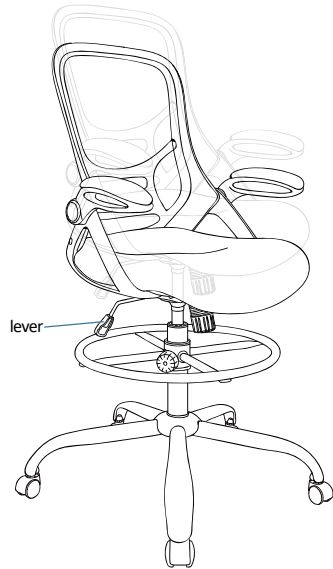

Adjusting the foot ring

Turn the knob on the foot ring counter-clockwise, then the foot ring can be raised up or down to your desired height.

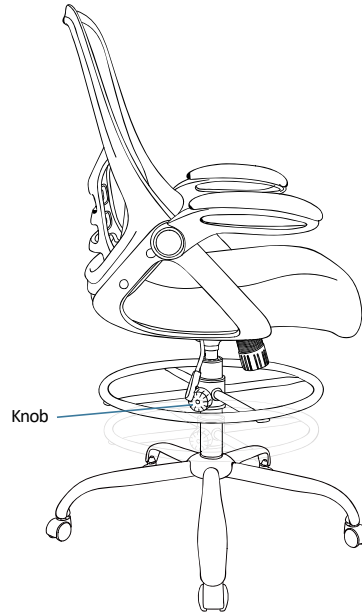


Adjusting the seat tension

Turn the tilt knob clock wise to make it easier to rock your chair backwards. Turn the tilt knob counter-clockwise to make it harder to rock your chair backwards.


To operate the tilt lockout


To let your chair tilt back, pull the lever out. To stop your chair from tilting, push the lever in.

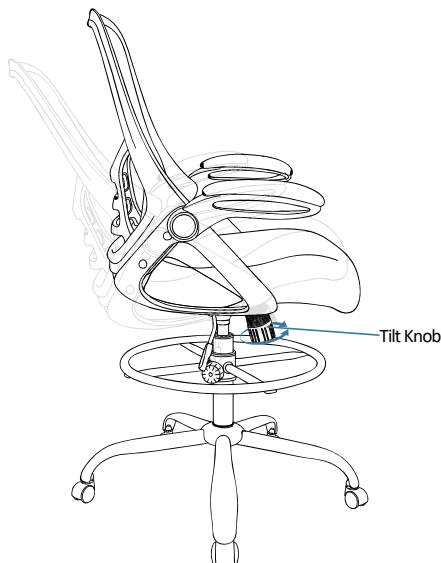

Adjusting the arms

The arms can be flipped up, so that you can have better rest and is space saving.

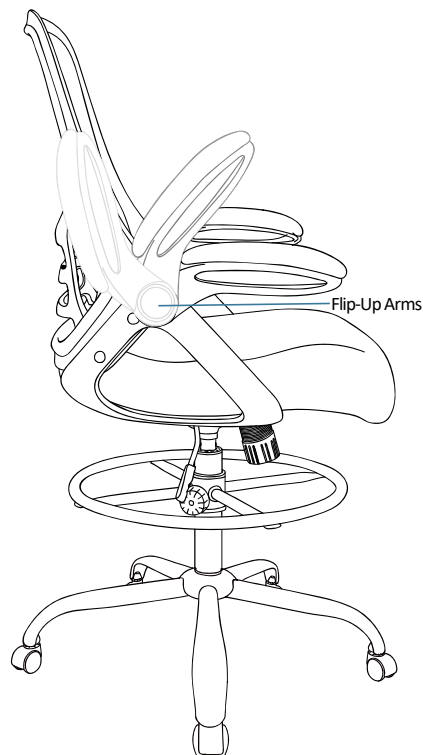

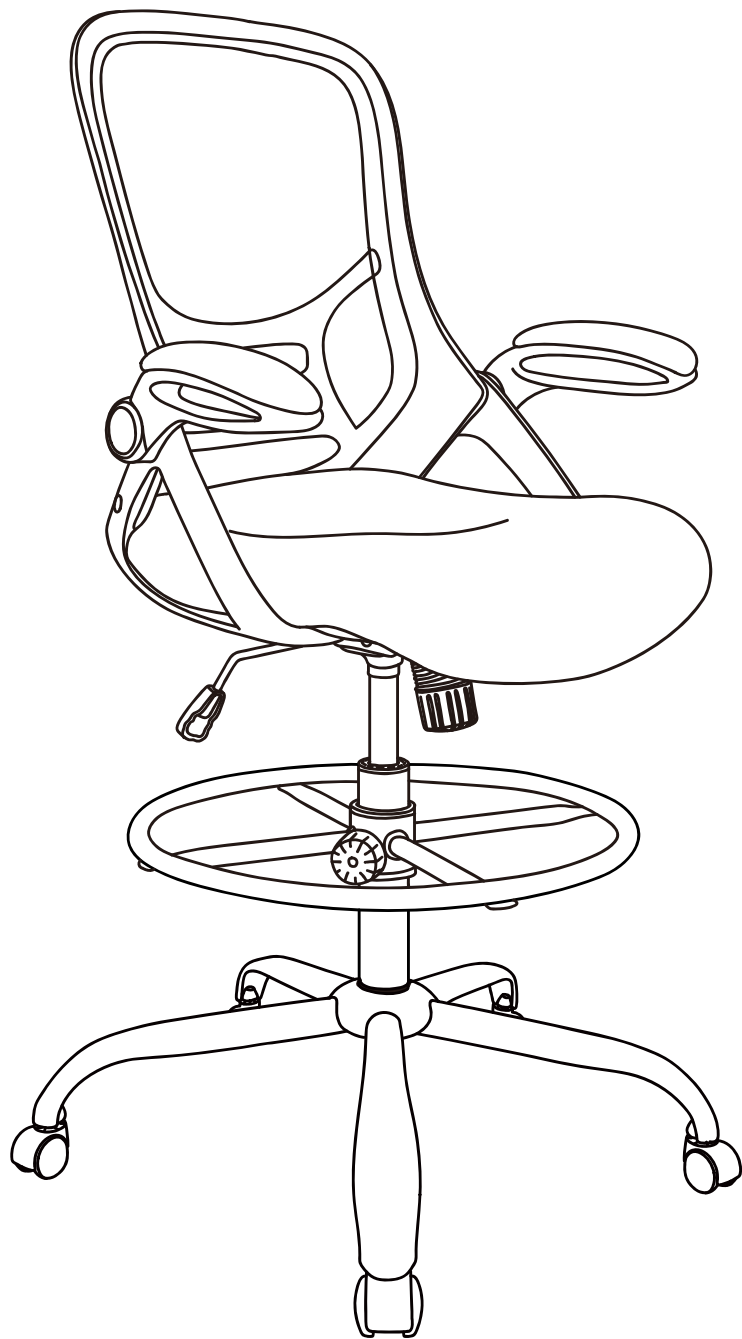

Safety and Compliance

- Use care when handling
- Please read the instructions completely before assembly
- Remove all parts from the carton and ensure all parts are included prior to assembly
- Assemble the chair on the carton or carpet to prevent scratching the chair
- Be careful not to cross-thread screws
- Do not use power tools

ATTENTION: ALL REPAIR WORK OR EXCHANGE FOR THE HEIGHT ADJUSTABLE GAS LIFT MUST BE DONE BY SPECIALISTS