 


COFFEE GRINDER

User Manual

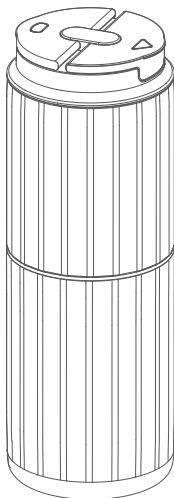

Model No.: HB-W8808

**Item No.: CM0608-BLACK
CM0608-WHITE
CM0608-GREEN**

Read this booklet thoroughly before using and
save it for future reference



Web: www.electacticshop.com



Email: service@electacticshop.com



Tel: 888-698-2504

Scan the QR code to watch the product videos

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	1
PRODUCT OVERVIEW	4
OPERATION INSTRUCTION	5
CLEANING & MAINTENANCE	8
TROUBLESHOOTING	10

IMPORTANT SAFETY INSTRUCTIONS

The precautions described in this manual are intended to ensure correct use of the product and to protect your personal safety. Please read this manual carefully before use and keep it for future reference. Pay special attention to the safety Instructions and all warning notices.

Safety Symbol Explanation

Incorrect operation may result in potential hazards or damage. The following symbols are used to indicate different levels of risk:

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage.

Symbol Meanings



Mandatory

Must be followed



Prohibited

Strictly forbidden

Cautions

- This product is intended for household use only. Do not use it for commercial or industrial purposes.
- Do not operate the product while it is severely damaged, deformed, or overloaded.
- Do not use the product on an inclined or unstable surface.

IMPORTANT SAFETY INSTRUCTIONS

- Do not place the product in environments with strong magnetic fields, high temperatures, high humidity, or flammable/explosive gases, as this may cause malfunction or damage.
- Do not place the product near heat sources or flammable materials to avoid fire hazards or personal injury.
- Do not move the product while it is in operation.
- Do not operate the product continuously for more than 10 minutes. Otherwise, the motor may overheat and fail to operate properly.
- If the product emits abnormal odors or smoke during operation, unplug it immediately and stop using it.
- Do not disassemble or modify the product.

Warnings

- If the power cord or other components are damaged, stop using the product immediately and contact an authorized service center. Do not attempt to repair it yourself.
- Do not insert chopsticks, metal objects, or other foreign objects into the product, or expose it to water or environments above 140°F (60°C).
- Do not immerse the product in water or rinse it under running water, as this may cause electric shock or damage to the unit.
- Do not allow children to operate this product alone. Ensure that the product is not used as a toy. Keep it out of reach of children. Elderly persons, persons with physical or mental disabilities, or users without experience should use this product only under supervision and guidance.

IMPORTANT SAFETY INSTRUCTIONS

Battery Safety Precautions

- ❗ Before replacing the batteries, be sure to remove the batteries from the appliance.
- ❗ When removing or installing batteries, the appliance must be powered off.
- ⊘ Dispose of used batteries safely and properly.

Do Not Use or Store the Product in the Following Locations:

- Near open flames or heat sources
- On shaking or unstable surfaces
- Near flammable or explosive materials
- In places accessible to children
- In damp or humid environments
- On high shelves, tables, or other elevated surfaces


Disposal

For disposal of the product packaging materials, please follow local regulations and requirements.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) this device must accept any interference received,
including interference that may cause undesired operation.

PRODUCT OVERVIEW

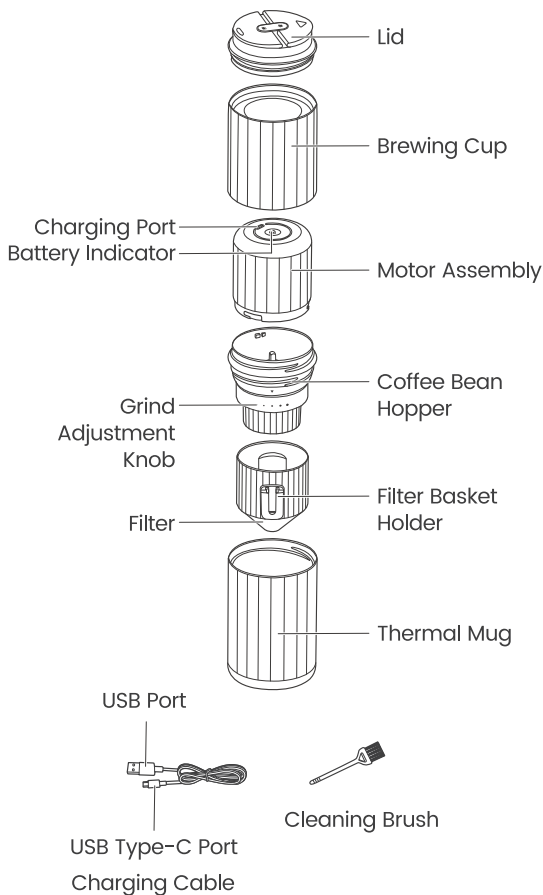

OPERATION INSTRUCTION

Note: Before using the product for the first time, it is recommended to fully charge the battery. Once the power indicator shows a steady light after charging, the product is ready for use.

Step 1

Hold the brewing cup (with lid) and rotate to unlock, then remove it.




Step 2

Remove the thermal mug by pulling it downward.



Step 3

Pull the filter downward to remove it from the grinding unit.

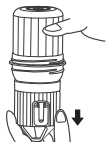

Step 4

Rotate the motor assembly to unlock and remove it.



Step 5

Rotate the grind adjustment knob to set the grind size. There are 5 grind levels, ranging from fine to coarse.



OPERATION INSTRUCTION


Step 6

Add coffee beans into the coffee bean hopper. A recommended amount for one cup is 0.5–0.6 oz (15–18 g).



Step 7

Reinstall the motor assembly and tighten it securely.

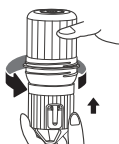

Step 8

Install the thermal mug, then press the power button to start grinding.


Note:

- During grinding, the indicator light will flash.
- The grinder will automatically stop when grinding is complete.
- If grinding stops abnormally, check whether the grinder is blocked.
- Clear any blockage and restart the unit manually.




Step 9

After grinding is complete, the unit will stop automatically. Remove the thermal mug by rotating and pulling it downward.

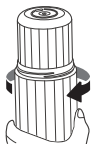

Step 10


Remove the filter containing the ground coffee by pulling it downward.

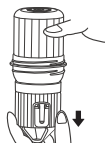

OPERATION INSTRUCTION

Step 11


Place the filter with ground coffee onto the support stand inside the thermal mug.

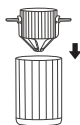

Step 12

Slowly pour hot water into the brewing cup, and close the lid.

- Recommended water temperature: 190–203°F (88–95°C)
- Recommended water volume: 7.6–9.1 fl oz (225–270 ml)

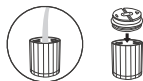

Step 13

Flip open the pour spout on the lid in the indicated direction and carefully pour hot water. Do not allow the water level to exceed the ground coffee level.



Step 14

After brewing is complete and most of the coffee has finished dripping, remove the filter. Unscrew the Lid from the brewing cup, then screw it securely onto the thermal mug with the drinking spout facing outward. This enables the thermal insulation and direct drinking function.



CLEANING & CARE

Cleaning & Maintenance

1. Before cleaning, make sure the unit is powered off and not in operation. Remove the motor assembly and place it on a clean, dry surface.
2. After grinding coffee beans, use the supplied cleaning brush to clean the grinding head. Under normal conditions, the grinding head does not require rinsing with water.
3. All parts except the motor assembly and the coffee bean hopper may be cleaned with clean water or a mild neutral detergent.
4. Before storage, ensure the product is clean and completely dry. Store it in a dry, well-ventilated place away from direct sunlight.

Operating Environment

1. Operating temperature range: 32°F to 104°F (0°C to 40°C)
2. Relative humidity: below 95% (at an ambient temperature of 77°F / 25°C)
3. Storage temperature range: -4°F to 140°F (-20°C to 60°C)
4. The surrounding air must be free of flammable gases, corrosive gases, or conductive dust.

Charging Instructions

1. When the battery level is low, please recharge the product promptly.
2. Charging speed may be reduced when the ambient temperature is below 50°F (10°C) or when charging via a computer USB port. This is normal.

CLEANING & CARE

3.If the product will not be used for an extended period, recharge it at least once every three months to prevent battery degradation.

4.This product supports fast charging. When the red indicator light remains on, charging for 10 minutes or longer can provide enough power for 1–2 emergency uses.

5.The product also supports operation while charging. The built-in battery can be charged via a power adapter while the product continues to operate normally.

6.A charging cable with a standard USB Type-C connector is included. A charging cable with the same specifications may also be used.

7.Using a different type of charging cable may result in variations in charging time.

TROUBLESHOOTING

If the following conditions occur, please consult the troubleshooting before requesting for customer service.

Problem	Analysis	Solution
The device does not power on and cannot be operated; the indicator light does not illuminate.	Insufficient battery power.	Charge the device promptly.
The device shuts down during use, and the indicator light does not illuminate.	Over-temperature protection activated.	Add coffee beans and restart the device.
The stainless steel cup cannot be closed.	The cup is not aligned properly or has not been closed completely.	Re-align the cup correctly and close it tightly.
The charging indicator does not illuminate.	Due to compatibility limitations of some chargers, the actual output voltage and current may be lower than DC 5V-1A.	Please use a standard DC 5V 2A or 1A charger purchased through authorized channels to charge the product and ensure normal operation.
Different operating environments may affect the measurement of no-load current.	Different operating environments may affect the measurement of no-load current.	Press and hold the power button (10S) to enter forced reset mode.

ROWAN ELECTRIC APPLIANCE LLC

**8:30am–5:30pm P.S.T.
Monday to Friday**