

After-Sales Service

Thank you very much for choosing us, your support is our greatest motivation!

May it create a comfortable and cozy home environment for you.

If you need anything, feel free to contact us, wish you a happy life.


Customer Support :

Email: TOTTE-CustomerService@outlook.com

Phone number: 208-820-0068

Intelligent toilet all-in-one machine

Instruction Manual

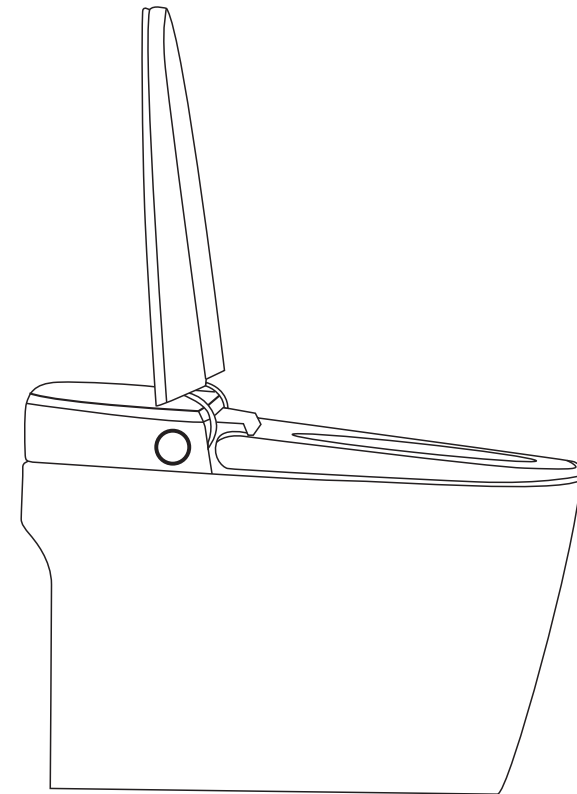

- First of all, we would like to express our most sincere gratitude to you for choosing our company's products!
- To avoid accidents and use this product safely, please be sure to read the "User Manual" carefully.
- Please keep the instruction manual in an easily accessible location and store it properly.

First of all, regarding your purchase of our company's products
Express our most sincere gratitude!

Directory

Directory	-----	1
Safety Precautions	-----	2-4
<hr/>		
Panel cognition		
• Remote control instructions	-----	5-6
• Display screen description	-----	7
• Operation panel and knob instructions of this machine	-----	8
<hr/>		
the installation method of the product		
• Installation method	-----	9
• Confirmation matters before use	-----	10
<hr/>		
The application of the product		
• Function adjustment and usage methods	-----	11-12
• Instructions for Use	-----	13
<hr/>		
Cleaning and maintenance methods	-----	14
• Fault analysis and elimination	-----	15
• Product specification	-----	16
<hr/>		
Accessories	-----	17
Installation steps for flange rings	-----	18

Please read this manual carefully
before use to ensure the correct use of the product.

1 Safety Precautions

The content shown here is related to user safety.
Please use this product correctly after reading the manual.


Warning ⚠️ If the operation is carried out without regard to the indication here, it may cause serious injury or death to personnel.

Attention ⚠️ If the indication here is ignored and the operation is made by mistake, it may cause personal injury or property damage


Attention ⚠️ **Do not damage or replace the power cord, power plug or connecting wire privately. Do not scratch, process or approach high-temperature areas. Forcibly bending, twisting, stretching, placing heavy objects, and binding.**
 ① If damaged but still used, it may cause electric shock, short circuit and fire.
 ② The power cord of this product adopts a Y-type connection. If the power cord is in the right position, it must be replaced by our company or a professional service personnel authorized by our company.

!
 ◆ The following individuals (children, the elderly, patients, People with weak skin, those taking sleeping pills if used by drinkers or those who are extremely fatigued during childbirth, Please set the seat temperature to the low setting.
※ Avoid low-temperature burns caused by prolonged use


⚡
 ◆ Please do not disassemble, repair or modify this product without permission.
※ It is prone to causing fire in the house or electric shock. Cause harm to the human body.
※ It must be repaired by professionals




⚡
 ◆ Please make sure to connect the ground wire properly
※ Weak connection without good connection can easily lead to electric shock. The danger of electric leakage
※ If there is no ground terminal, please entrust Electrical appliance company installation




⚡
 ◆ Do not touch the power socket with wet hands
※ There is a risk of electric shock

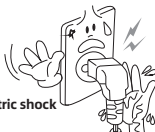

 ⚡
 ◆ Do not power on before water is supplied.
 Do not use any power source other than 110V AC.
※ Prone to cause fire




⚡
 ◆ Do not use loose power sockets.
 Do not scratch, damage, process or modify the power supply, forcibly bend, stretch, curl or bundle it, bear weight on it, or overly squeeze it.
※ It is prone to cause electric shock or fire



1 Safety Precautions


⚠ Please do not open or close the seat ring and the seat cover roughly

✖ It is prone to cracking or causing faults such as electric leakage




⚠ Please do not lie down or step on the lid of the toilet

✖ It is prone to damage and cause malfunctions




⚠ Please do not pull or bend the connecting water pipe

✖ It is prone to cause water leakage or no water supply




🔥 The upper cover, seat ring and seat cover of the entire machine are made of plastic. Do not bring items with fire sources close to these areas.

✖ Prone to fire




⚠ Do not use a dry cloth or toilet paper to wipe the plastic parts of the upper cover, seat ring and seat cover of the entire machine.

✖ It is prone to cause surface scratches




⚠ Please avoid direct sunlight or place the heater or stove near the toilet.

✖ It is prone to cause plastic discoloration




⚠ When lightning occurs, please unplug the power cord.

⚡ It is prone to cause accidents or malfunctions



⚠ On nights when freezing is possible, to prevent damage caused by freezing, please take anti-freezing measures.


Refer to Page 15



1 Safety Precautions

⚠ When cleaning and maintaining plastic parts, do not use unsuitable cleaning agents (bleach, benzene, paint thinners, scouring powder, cresol, etc.)

✖ The plastic of the component is cracked or corroded




⚠ Please clean the dust on the power plug regularly. When cleaning, unplug the power cord and wipe it with a dry cloth

✖ Poor insulation can cause fires



⚠ The installation height of the socket should be more than 0.8 meters above the ground and as far away as possible from places where water is likely to splash.



⚠ Do not connect this product to water sources other than tap water (ensure the cleanliness of the water source).

✖ It may cause skin inflammation or lead to electric shock and fire due to internal corrosion of the machinery.

2 Names of each component

Display screen

Filter

Slow-opening Angle valve

Product size: 26.97×15.75×18.90in
26.97×15.75×20.47in

Pit distance: 12.01/15.75in



3 Packing list


Serial number	Name	Quantity
1	Whole machine	One
2	Slow-opening Angle valve	One
3	Six-point hose	One
4	Instruction Manual	One
5	Flange ring	One

4

Remote control instructions

Please use the remote control corresponding to the purchased product:

Remote control code matching method: Unplug the power supply, turn on the machine, and ensure that the toilet is in standby mode without a seat. Long rotate the side knob in the buttock wash direction for 3 seconds. Release it after hearing the prompt sound. Press any key on the remote control within 10 seconds. The code matching is completed after hearing the prompt sound. If there is no prompt sound, it indicates that the code matching was unsuccessful. It needs to be reoperated. The address code of any remote control is unique, so the remote control and the toilet must be paired once before the remote control can be used.

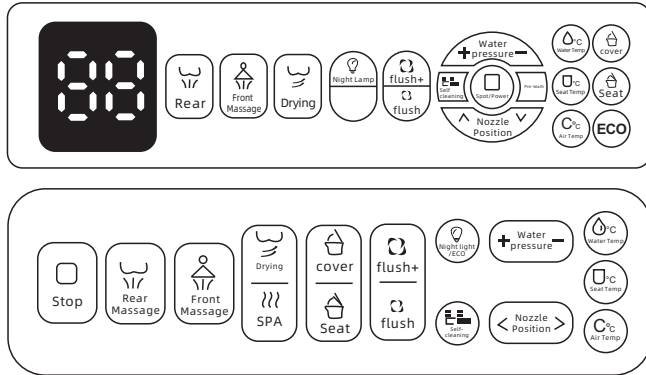

1. Press and hold the stop button for 3 seconds to turn the toilet power on/off.
2. Press and hold the Rear wash button for 3 seconds to turn on/off the radar function.
3. Hold "Wind Temp" for 3s to enter radar distance adjustment mode. Press nozzle lever left to lower gear (1 press = 1 down); right to raise gear (1 press = 1 up).
Radar range: Gear 1 (7.9in), Gear 2 (19.7in), Gear 3 (27.6in), Gear 4 (35.4in), Gear 5 (47.2in).
4. Do not sit down. Gently turn the knob forward to turn the ambient light on or off.
5. Adjusting Flip Force: Hold the flip button for 3 seconds to enter the seat ring flip force adjustment mode. Then press the buttock wash button once to switch to cover flip force adjustment.
To adjust force: Press the spray rod's left key to reduce force (1 press = 1 level down); right key to increase force (1 press = 1 level up).
Note: For continuous operation, an additional three presses are required to adjust the gear up or down.
6. Seat Ring Flip Force Adjustment: Hold the flip cover key for 3 seconds to enter the cover and seat ring flip force adjustment mode. Then press the feminine wash key once to switch to seat ring flip force adjustment.
To adjust: Press the spray rod's left key to reduce force (1 press = 1 level down); right key to increase force (1 press = 1 level up).
Note: For continuous operation, an additional three presses are required to adjust the gear up or down.
7. Press and hold the Flush+ button for 3 seconds to turn on/off the off-seat flushing function.
8. Press and hold the Front Wash button for 3 seconds to open/close the automatic flushing function when the lid closed.
9. Press and hold the night light button for 3 seconds to turn on/off the energy-saving function.
10. Hold water temp for 3 seconds to toggle the toilet's automatic bowl moistening function on/off.

Pay attention to the function selection

4


Remote control instructions

- ① Press once to activate the buttock cleansing function, which lasts 90 seconds. Press again to start the reciprocating movement function.
- ② Press once to activate the women's wash function. After 90 seconds of washing, press again to start the reciprocating movement function.
- ③ It is used for drying after cleaning, with a drying time of 3 minutes. The water temperature for cleaning alternates rhythmically between the high-temperature and normal-temperature Settings.
- ④ SPA
- ⑤ Press this key to stop all active functions.
- ⑥ Automatic flushing requires sitting for over 15s (body sensor detects 15+s occupancy); it activates when you leave. Hold this key 3+s to disable.
- ⑦ Move the cleaning spray rod forward. Move the cleaning spray rod backward.
- ⑧ Lid & ring flip function. 1 press: Flip lid; 2 presses: Flip ring; 3 presses: Close both + flush.
- ⑨ There are four adjustable Settings for increasing water pressure. There are four adjustable Settings for water pressure reduction.
- ⑩ 4 adjustable levels. Indicator light remains off at normal temperature: Level 1 (normal temp), Level 2 (93.2°F), Level 3 (98.6°F), Level 4 (104°F). Presetable or adjustable in real time during cleaning; has a memory function.
- ⑪ 4 adjustable levels. Indicator light remains off at normal temperature. Presetable or adjustable in real time during drying; has a memory function.
- ⑫ 4 adjustable levels. Indicator light remains off at normal temperature: Level 1 (normal temp), Level 2 (93.2°F), Level 3 (98.6°F), Level 4 (104°F). Has a memory function; preheating takes a few minutes.
- ⑬ Press once to turn on low-light, again to turn off (on/off memory). Hold 3s to toggle energy-saving mode—display icons (lit=on, lit=off). In energy-saving mode, seat stays at 86°F when idle, auto-heats to preset temp when used.


5

Display screen description

(Please correspond to the purchased model)

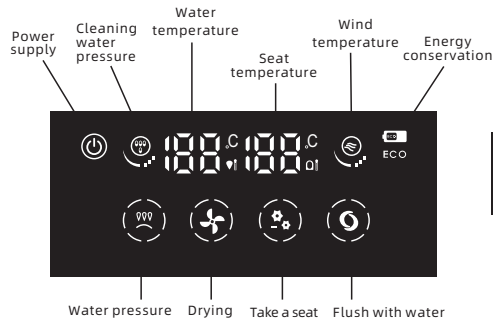


Note: When the work starts, light up the corresponding icon; when it stops, turn off the corresponding icon.

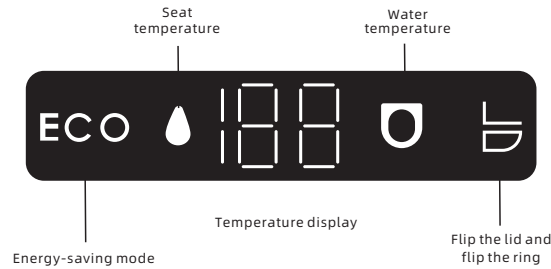

Left and right buttons

Sitting on the toilet:

1. Left memory knob: The front knob is for User 2, the back knob is for User 1, and pressing it once is for the child wash function (this function can be used without sitting down).
2. Right function knob: The front knob is for butt wash, the rear knob is for feminine wash, pressing the middle knob is for stop, and pressing it again is for drying and flushing (in the case of no seat, pressing it once is for flushing function).

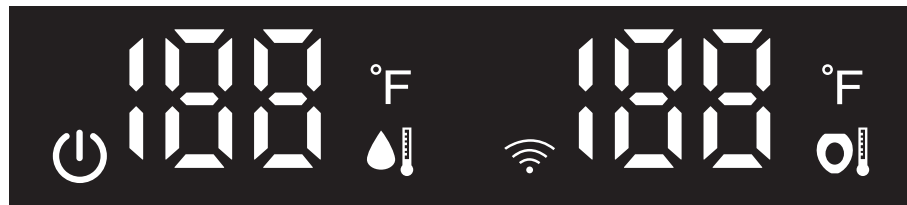

Power on/off indicator light



When the water temperature indicator light is on, the spray water is in a warm water state. When extinguished, the spray water is at room temperature.



Microwave induction signal





When the seat temperature indicator light is on, the seat ring is in a heated state. When extinguished, the seat ring is at room temperature.

5

Display screen description

(Please correspond to the purchased model)

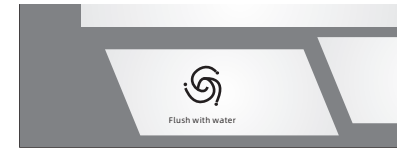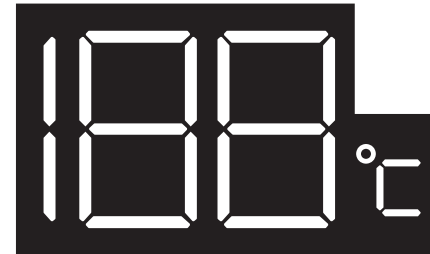

6

Instructions for the operation buttons and knobs of this machine

(Please correspond to the purchased model)



Hold this key 3s+ to toggle power on/off. Quick-press twice to activate warm air drying. Press once when active to stop all functions. Press to flush the toilet when idle (or power off).



Turn the knob to the "Hip Cleaning" icon to start hip cleaning. Then turn the spray rod to activate reciprocating cleaning.



Turn the knob to the "Feminine Cleaning" icon to start the function. Turn the spray rod again to activate reciprocating cleaning.



Stop

Short press to issue a "Stop" command and halt ongoing operations.



Warm air drying

Press this key; the drying heater will blow warm air to dry the buttocks.



For Feminine cleaning

Press the "Feminine Wash" button to start a 90-second wash. During cleaning, this button toggles "Reciprocating Cleaning": 1 press to start; press again to stop.



Wash buttocks.

Press the "Buttock Wash" button once to start a 90-second buttock wash. During cleaning, this button toggles "Reciprocating Cleaning": 1 press to start; press again to stop.



Flush with water

Press this key to activate the toilet flushing function.

7 Installation method

① Confirmation of the installation environment


Before installation, ensure bathroom walls and floor tiles are fully installed, and sewage pipes, water lines, and electrical wiring are pre-installed as shown in the diagram.

Select a suitable toilet based on the bathroom's actual pit distance: 9.8in pit distance or 15.7in pit distance.

Inlet water pressure range: 0.15MPa (dynamic) - 0.75MPa (static)

Inlet water temperature: 39.2°F - 95°F

Install the water inlet valve on the wall, 3.9in above the floor and approx. 11.0in to the left of the sewage outlet center.

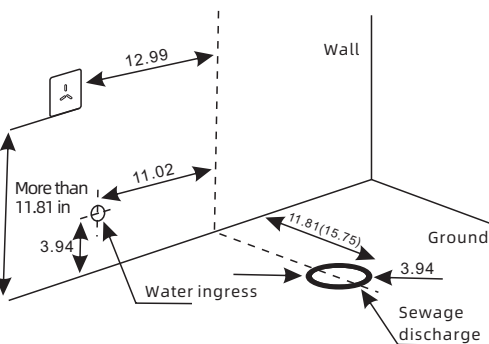

Hint: Please install it to the water pipe using the dedicated water inlet valve included with this product. If the user has already installed an inlet valve, it needs to be removed.

② Install the toilet

1. Apply a layer of glass glue to both the top and bottom surfaces of the flange ring, then place it over the sewage outlet. Align the toilet's bottom drain with the flange ring, gently lower the toilet down onto the floor, and secure it with the mounting bolts supplied in the package.


2. Apply a layer of glass glue to the connection between the bottom of the toilet and the ground.

③ Waterway connection

1. connect the filter Angle valve in the attachment to the wall water pipe.

2. Connect the Angle valve to the wall.

3. After installing the toilet, connect the braided hose to the water inlet filter.

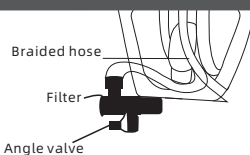

Steps for equipping batteries

Note:

Open the package with a 9V carbon battery. Fasten the battery connection cover with the buckle position aligned. Just press it tightly.

Figure 1

 


Figure 2

 


Figure 3



Figure 4


 


Figure 5

 

Note:
The spare battery wire connector is located in the middle section of the toilet's water inlet pipe.

Figure 6




8 Confirmation matters before use


Before using the smart toilet for the first time, please make sure to confirm the following items.

① Make sure the power plug is inserted into the socket

● Plug the power plug into an AC 110V socket, and the indicator light of the leakage protection device will light up.

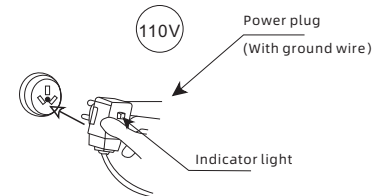

② Make sure the water inlet valve is in the open position

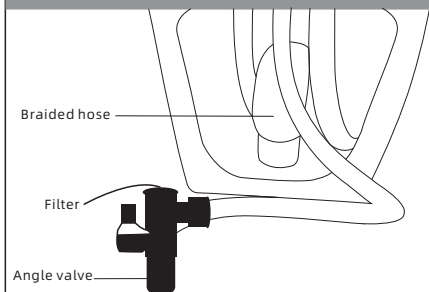

③ Display information confirmation

⊙ Confirm whether the icon on the toilet screen is lit up.

⊙ Make sure the water temperature icon is lit. If it is not, press the water temperature adjustment button on the remote control to start the water heating.

⊙ Make sure the seat temperature icon is lit. If it is not, press the seat temperature adjustment button on the remote control to start the seat ring heating.

④ Confirm all functions

1. Confirm whether the nozzle and its water pipe are leaking: After drying all parts of the water pipe, check with absorbent paper.

2. Check whether the nozzle cleaning (when the human body is not seated), cleaning, female use, drying, and automatic deodorization actions are normal when the human body is seated, whether the water potential, water temperature, seat temperature, and air temperature adjustment are normal, and whether the damping buffer mechanism is normal.



※When checking the cleaning, female use, drying and automatic deodorization functions, it should be confirmed that the seat sensor is activated. When cleaning or for women's use, cover the front end of the nozzle with your hand to block the spray water and prevent splashing.



Warning

- Do not use power sources other than 110V AC.
- Please wire in accordance with relevant regulations.

9

Function adjustment and usage methods

Hip Cleaning

When seated, press remote/knob "Hip" button. Nozzle extends to set position, sprays at set temp for 90s, then stops auto.

- ★ **Message:**
In buttock wash reciprocating massage mode, body buttons/knob control its on/off.

Female Cleaning

When seated (female), press "Female Cleaning" on remote/knob. Women's nozzle extends to set position, sprays at set temp for 90s then stops, auto switches to drying and stops after 3min.

- ★ **Message:**
In buttock wash reciprocating massage mode, body buttons/knob control its on/off.

Drying

It is used for drying after cleaning and can be dried continuously for 3 minutes. Before drying, using toilet paper to absorb water droplets first can speed up the drying process.

Stop

During the termination of the following functions, the Hip cleaning, Female cleaning, drying, and nozzle cleaning will stop working.

- ★ **Remote Control or knob stop button:**
A short press is the "Stop" command, which functions the same as the "Stop" butt-on on the remote control, used to halt the current operation.

Automatic flushing

Press this key to activate the automatic flushing function of the toilet. When there is a power outage, you can press the manual flushing button on the left side of this machine or the stop button on the knob to flush the toilet.

SPA

During washing, press once to turn on SPA massage, press again to turn off. When on, wash water temp rhythmically alternates between high and normal, boosting blood circulation.

10

Instructions for Use

Nozzle position adjustment

No need to move; adjust wash position forward/backward to fit your body. Memory function included. Use remote's "Nozzle Forward/Backward" buttons—presetable or real-time adjustment.

Adjustment of water pressure strength

Adjust cleaning water pressure to your preference (with memory function). Use the remote's "Water Pressure Adjustment" button—5 adjustable levels.

Water temperature regulation

Press this key to enter water temp settings (5 adjustable levels total). Each press switches the temp and saves the setting automatically. Light turns off at room temp.

Wind temperature regulation

Press this key to enter air temp settings (5 adjustable levels total). Each press switches the temp and saves the setting automatically. Light turns off at room temperature.

Seat temperature adjustment

Press this key to enter seat temp settings (5 adjustable levels total). Each press switches the temp and saves the setting automatically. Light turns off at room temperature.

Lighting

Toilet has a night light for easy night use. Press once to turn it on, again to turn it off. Has on/off memory function

ECO

Press once to activate ECO mode (main indicator lights up); press again to deactivate (indicator turns off). When active, seat stays at ~86°F (lowest setting) when unoccupied, returning instantly to set temp when seated.

10 Instructions for Use


Equipped with a Seat Sensor

The seat ring is fitted with a seat sensor. When no one is within the sensor's effective detection range, the sensor remains inactive, and functions such as buttock washing and feminine washing will not activate automatically.

※When you are not sitting within the effective sensing range of the sensor, please change your sitting position.


Slow-Close Seat Ring & Cover

This unit is equipped with a soft-close damping system, which eliminates impact noise when lowering the seat ring and cover.

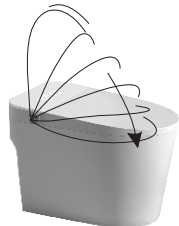

Foot-Activated Flush

Foot-activated flush: No bending or manual touching—just tap the foot sensor to flush.

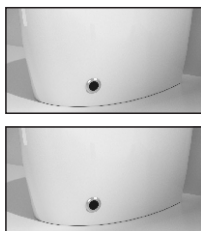

Touch the sensor point on the toilet with your foot.

Energy-Saving Function

Effective energy-saving measures:

- ※ Lower the seat cover after use.
- ※ Avoid setting the seat temperature and water temperature too high. Instead, adjust them to a comfortable level.
- ※ Adjust the water temperature according to the seasons.
- ※ Use a device with a power-saving function.
- ※ Unplug the device when away for an extended period.

Nozzle Water Discharge Note

Water may flow around the nozzle before/after cleaning or during its self-cleaning cycle. This is a structural normalcy, as it is part of the nozzle's self-cleaning function and not a malfunction.



※ In cases other than the above, if water flows continuously unexpectedly:
Close the water inlet valve; Unplug the power cord;
Contact the retailer where you purchased the unit for assistance.

Foot-Sensing Flip Cover & Ring



11 Cleaning and maintenance methods

Note: When performing cleaning and maintenance, please be sure to turn off the power and confirm that the power indicator light on the cover panel is off


Cleaning of the exterior of the machine

- ※ When cleaning, the power plug must be unplugged first to prevent the plug from touching or water from entering the socket.
 - ※ When cleaning this product, please wipe it with a soft cloth dampened with water. If it still cannot be wiped off, moisten the soft cloth and then wipe it with a cleaning agent (neutral).
 - ※ Do not use unsuitable cleaning agents (such as banana water, bleach, benzene, thinner, scouring powder, cresol, etc.). Do not directly rinse with water or spray with a showerhead to avoid fires caused by short circuits in the wiring.
 - ※ It is recommended to wipe with a damp cloth to prevent static electricity. Due to static electricity, the product is prone to attracting dust, making it dirty, black and difficult to clean.
- ▲ The toilet lid can also be removed from the ceramic body to facilitate the cleaning of the part between the toilet lid and the ceramic body (see page 14)


Filter screen cleaning

Should the spray intensity of your shower head or the flushing power of your smart toilet diminish over time, clean the filter screen as per the steps below. The cleaning frequency varies based on local water quality.

1. Close the filter angle valve to shut off the water supply.
2. Unscrew the filter screen from the angle valve.

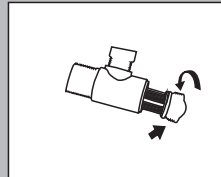

 3. Use a small brush and water to scrub off the dirt adhering to the filter screen.



4. Insert the filter screen into the Angle valve in the original direction and then tighten it to ensure it is secure.
5. Open the filter Angle valve to the original position to supply water.
6. Finally, please be sure to conduct a trial run (see page 11).

※ At this time, a small amount of water will flow out. Please place a basin or other containers at the bottom.


- When removing the filter screen, be sure to close the water inlet valve.
- When installing the filter screen, please make sure to tighten the water supply hose tightly; otherwise, it may cause water leakage and indoor water accumulation.

The disassembly method of the toilet lid

1. Unplug the power cord from the socket.
2. Close the water inlet valve and stop the water supply.
3. Hold both ends of the toilet lid with both hands and lift it up forcefully to separate the toilet lid from the ceramic body.
4. Gently place the toilet lid on the ceramic body and clean it.
5. After cleaning is completed, hold both ends of the toilet cover and put it on the ceramic body from top to bottom. When you place it at the bottom and hear a "click", it indicates that the installation is complete.
6. After fixing, gently shake the toilet lid forward, backward, left and right to confirm if it is securely locked.
7. Plug the power plug into the socket and open the water inlet valve to let water in.



General measures to prevent freezing

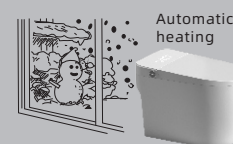


In the cold winter, smart toilets may be damaged or leak due to water freezing. To prevent freezing, please follow these steps. Do not unplug the power cord. Plug it into the power socket to connect the power.

※ To prevent freezing, the control system will automatically heat up once when the indoor temperature drops below 5 degrees.

Attention

1. Please do not pull the power cord or the water supply hose of the toilet.
※ It may cause damage or leakage.
2. When removing the toilet lid for cleaning, please handle it with care.
※ It may cause water leakage and malfunction.
3. Never turn the toilet lid upside down without unplugging the power supply. In addition, it must not be placed directly on the ground.
※ It may cause surface scratches and malfunctions.

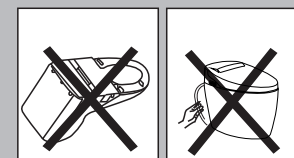

12 Fault analysis and elimination

Please check the following items before entrusting maintenance services

Product parts or functions	Phenomenon	Inspection items	Exclusion method
Toilet	Not working at all	Is the power not turned on	Please turn on the power.
		Is the power plug properly inserted	Please reinsert the power plug properly
		Is there a power outage	Check again after power is restored
Cleaning Function	The nozzle cannot discharge water.	Is the water inlet valve open	Please open the water inlet valve
		Whether the water supply is cut off	Please stop the cleaning function and wait for the water supply to resume before checking again
		Is there any foreign object blocking the nozzle	Please clean the nozzle and remove any foreign objects
		Whether the sensor senses or not	Readjust your sitting posture and make sure the sensor is working properly
	Weak water flow	Whether to set the force to the low gear	Reset the cleaning intensity
		Whether the water inlet waterway is unobstructed	Please clean the water inlet filter
	Water supply was cut off halfway.	Set whether the cleaning time has arrived <small>(The cleaning time of this machine is 120 seconds)</small>	Please wait for 3 minutes before activating the washing function
		Whether the sensor senses or not	Readjust your sitting posture and make sure the sensor is working properly
Low water temperature	Is the water temperature setting set to low	Please press the "Water Temperature" button to adjust the water temperature	
Warm air drying	The warm air has a low temperature	Is the wind temperature set to low	Please press the "Wind Temperature" button to adjust the wind temperature
	The warm wind stopped halfway	Whether it is the automatic drying stop time Whether the sensor senses or not	Please restart the drying function again Readjust your sitting posture and make sure the sensor is working properly
Seat heating	The temperature of the seat is not sufficient	Is the seat temperature set to the low setting Is energy conservation enabled	Please press the "Seat Temperature" button to adjust the seat temperature Readjust the seat temperature
Abnormal buzzer alarm	The water temperature icon flashes and the buzzer sounds an alarm	Unplug the power cord and restore the power supply. If the fault persists, please cut off the power and contact the manufacturer or local maintenance agency.	
	The seat temperature icon flashes and the buzzer sounds an alarm		
	All indicator lights flash and the buzzer sounds the alarm	Turn off the power supply, check if there is a water cut-off, and wait until the water supply is restored before turning it on again.	
	The toilet body is leaking.	Close the water valve to stop the water supply, check the water supply, and inspect whether the water supply pipeline is damaged. Contact the manufacturer or the local maintenance agency.	


13 Product specification

Rated voltage	110V 50/60Hz
Rated power	1350W
Wire length	1.5m
Water supply pressure	0.15Mpa(dynamic pressure) to 0.75Mpa(static pressure)(1.5 to 7.5Kg/cm ²)
Cleaning water volume	The maximum flow rate for hip cleaning is 0.75L/min
	The maximum flow rate for female cleaning is 0.85L/min
Water pressure regulation	There are four Settings each for hip cleaning and female cleaning.
Temperature regulation	4-Setting Temperature Adjustment: (No Heating, approx. 93.2±3.8°F, approx. 98.6±3.8°F, approx. 104±3.8°F)
Maximum power	1400W(instant heating type)(rapid heating type)
Safety device	Water temperature sensor, overheat blocking, temperature fuse
Maximum power	45W
Buffering function	When opening and closing the toilet seat and lid, lower them slowly and gently
Temperature regulation	4-Level Adjustment: (No Heating, approx. 93.2±3.6°F, approx. 98.6±3.6°F, approx. 104±3.6°F)
Safety device	Seat temperature sensor, temperature fuse
Maximum power	250W
Temperature regulation	4-Level Adjustment: (No Heating, approx. 95±4°F, approx. 113±4°F, approx. 131±4°F)
Safety device	Fan locked rotor protection, overheat protection, temperature fuse
Flushing method	Jet siphonic type
Ambient temperature	0~104°F


Execution standards: GB4706.0-1998, GB4706.53-2002, GB/T6952-1999

Note: When the water pressure is lower than 0.2Mpa, it is recommended that users install a booster pump; otherwise, it may affect your normal use.

Accessories

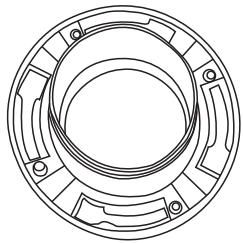


Flange plate

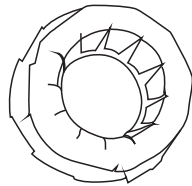


Flange ring




Filter cotton

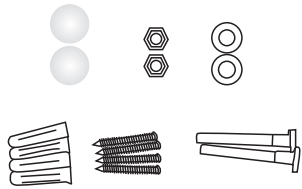


Fixed screw

 

Angle valve

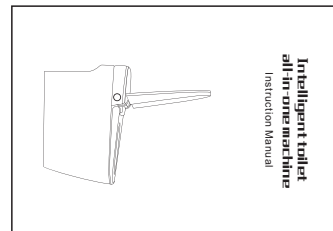

Instruction Manual

 


Aromatherapy

Installation steps for flange rings



Toilet Rough-in Distance and Heights of Angle Valve & Socket from Floor

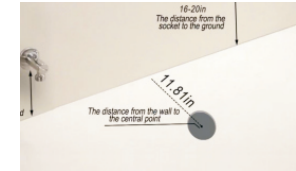

Toilet Rough-in Distance and Heights of Angle Valve & Socket from Floor



Slip the pvc flange ring over the floor drain outlet



Mark the 4 positions for drilling, then drill holes at the marked spots



Align the PVC flange ring with the 4 small holes, and tighten the 4 screws to fix it



Insert two large screws into the gaps of the flange ring and put plastic gaskets over them



Lift the lid



Apply installation adhesive along the bottom edge of the toilet.
(Apply the glass glue and let it dry in two hours)



Press the flange ring tightly against the toilet drain outlet



Align it with the sewage outlet, place it down and apply anti-mold glue around it



Lock the screws to fix it



Align, cover the lid and fix it to complete the installation