

 
ASSEMBLY INSTRUCTIONS

ASSEMBLY
REQUIREMENTS

2-Person
Assembly

2 Hours
Assembly Time
(Approximate)

Tools Required
(Not Provided)

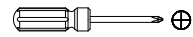

Phillips Screwdriver




Flat Screwdriver

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

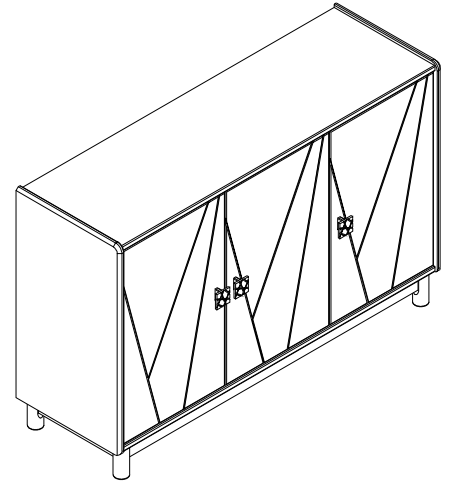

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List, and ensure parts and hardware are complete before you start assembling. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY














1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE







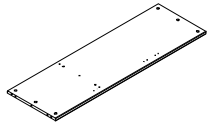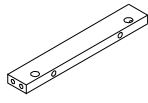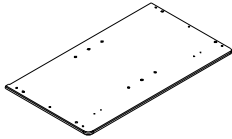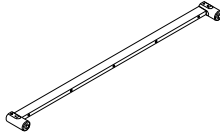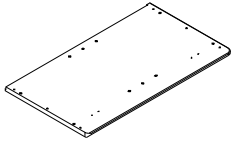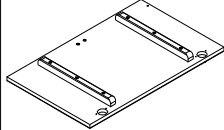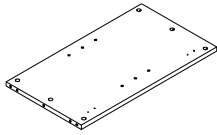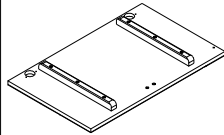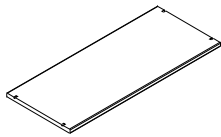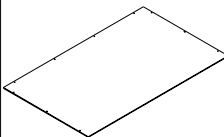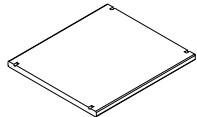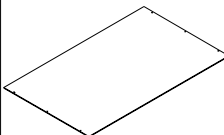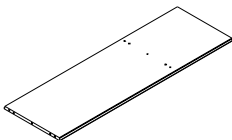













- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.

 Parts List

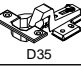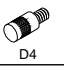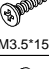
ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	TOP PANEL		1pc	8	SIDE RAIL		2pc
2	LEFT PANEL		1pc	9	FRONT RAIL		2pc
3	RIGHT PANEL		1pc	10	LEFT DOOR		1pc
4	MIDDLE PANEL		1pc	11	RIGHT DOOR		2pc
5	LEFT SHELF		1pc	12	BACK PANEL		2pc
6	RIGHT SHELF		1pc	13	MIDDLE BACK PANEL		1pc
7	BOTTOM PANEL		2pc				

Hardware List

ITEM	DESCRIPTION	HARDWARE	QTY	ITEM	DESCRIPTION	HARDWARE	QTY
A	CAM-BOLT	 D15	22pcs	L	SCREW		3pcs
B	CAM-LOCK	 D15	22pcs	M	STRAP		1pcs
C	WOOD DOWEL	 D8*30	20pcs	N	WASHER	 D6*18	2pcs
D	SCREW	 M4*45	14pcs	O	SCREW	 M3.5*30	1pcs
E	HANDLE	 50*50*28	3pcs	P	SCREW	 M3.5*20	1pcs
F	SCREW	 M4*20	6pcs	Q	ANCHOR	 M6*30	1pcs
G	HINGE	 D35	6pcs	R	SHELF HOLDER	 D4	8pcs
H	SCREW	 M3.5*15	36pcs	S	SCREW	 M3*15	25pcs
I	MAGNET LOCK		3pcs	T	H-Groove		2pcs
J	SCREW		6pcs				
K	WASHER		3pcs				

INSTRUCTION FOR CAM-BOLT & CAM-LOCK

INSERTING AND TIGHTENING CAM-BOLT

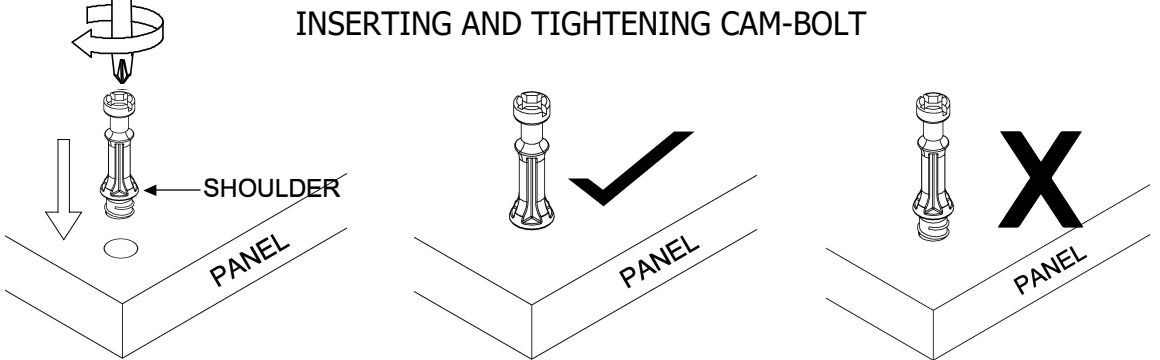


Place Cam-bolt on pre-drilled hole and screw in vertically

Shoulder is flushed (on the same level) with the panel.

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

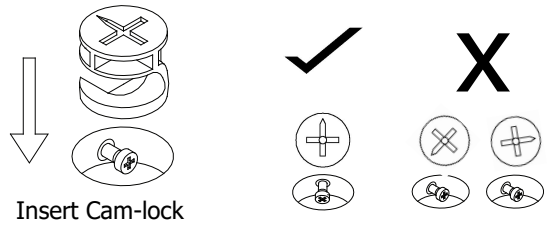


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT WRONG


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK

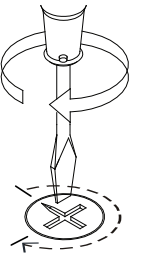


Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

STEP 1

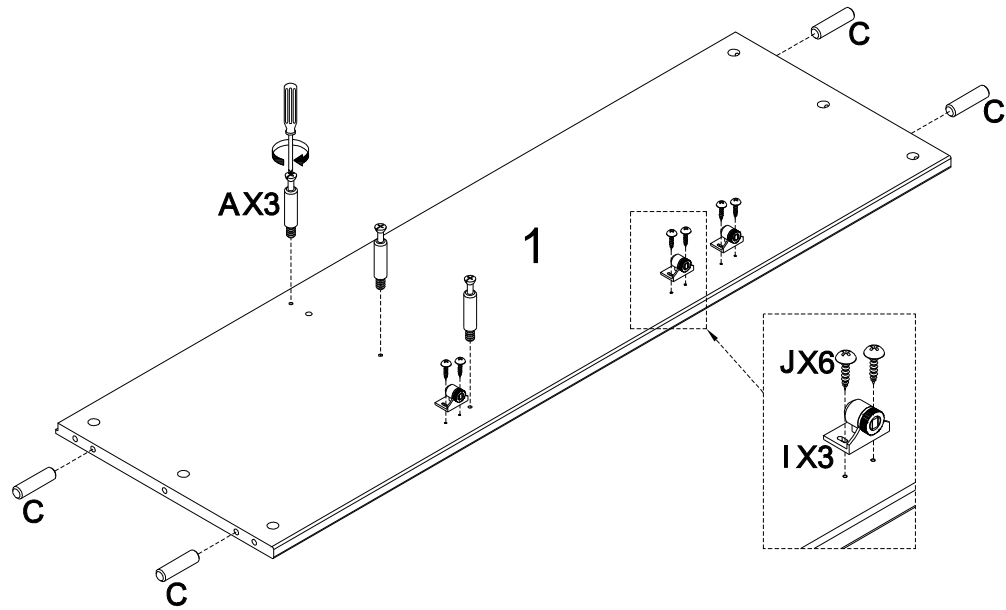


- Lay Top Panel (1) flat down on a material that does not scratch or damage the part.
- Screw in Cam-bolt (A) into designated holes as shown. Refer to Page 3 for instructions to screw in and tighten Cam-bolts
- Insert Wood Dowel (C) into designated holes on both short edge of (1).
- Locate pilot holes for Magnet Lock (I) and use Screw (J) to fasten Magnet Locks.

STEP 2

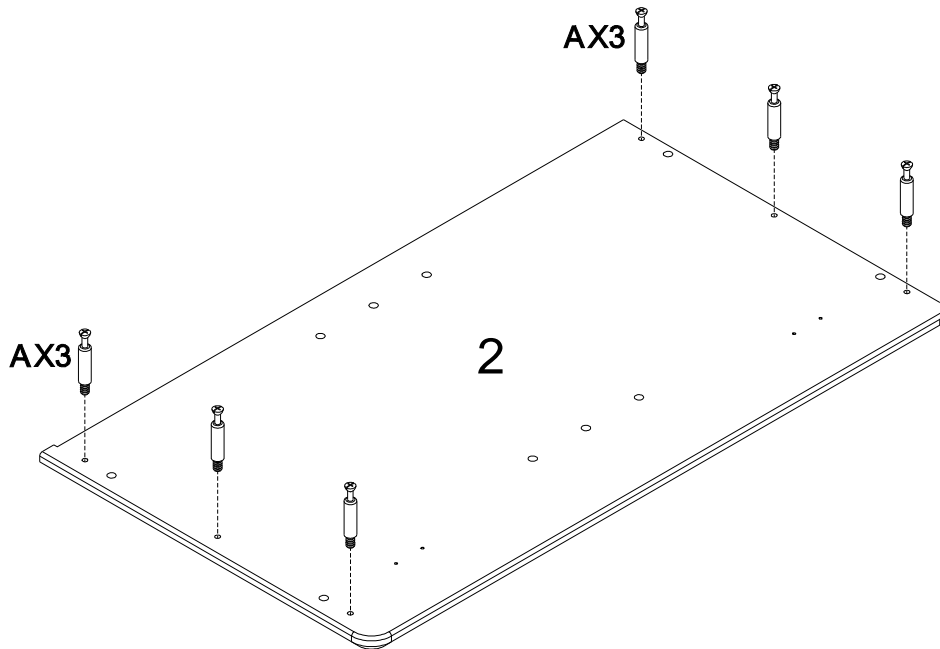


- Lay Left Panel (2) flat down on a material that does not scratch or damage the part.
- Screw in Cam-bolt (A) into designated holes as shown.

STEP 3

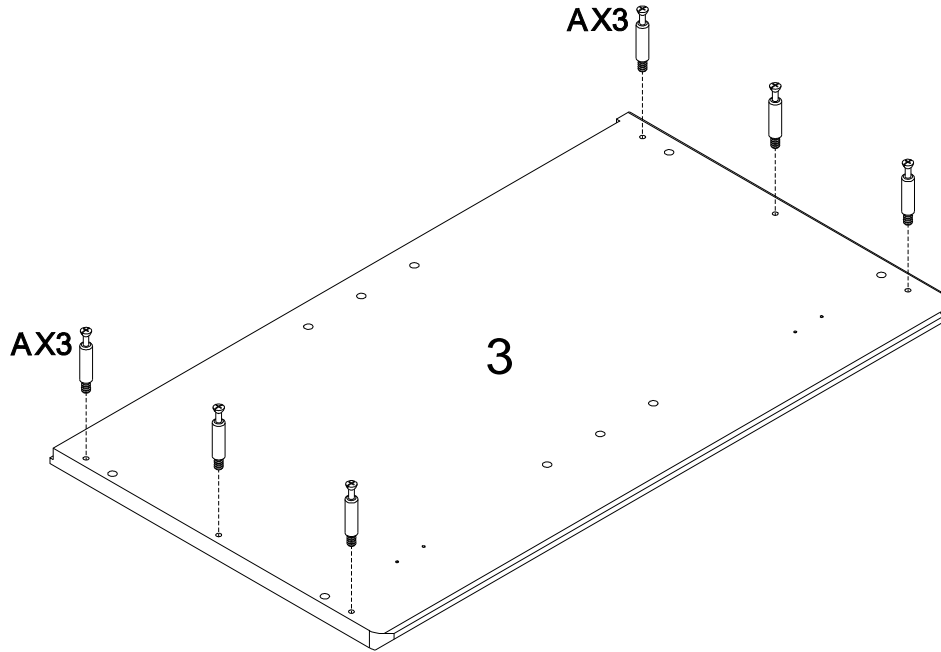


- a) Lay Right Panel (3) flat down on a material that does not scratch or damage the part.
 - b) Screw in Cam-bolt (A) into designated holes as shown.
-

STEP 4

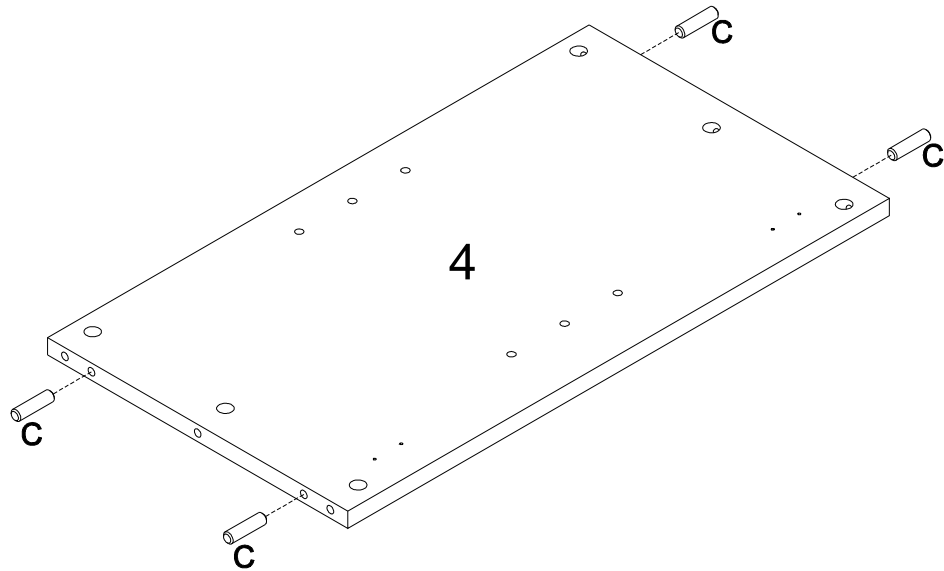


- a) Lay Middle Panel (4) flat down on a material that does not scratch or damage the part.
- b) Insert Wood Dowel (C) into designated holes on both short edge of (4).

STEP 5

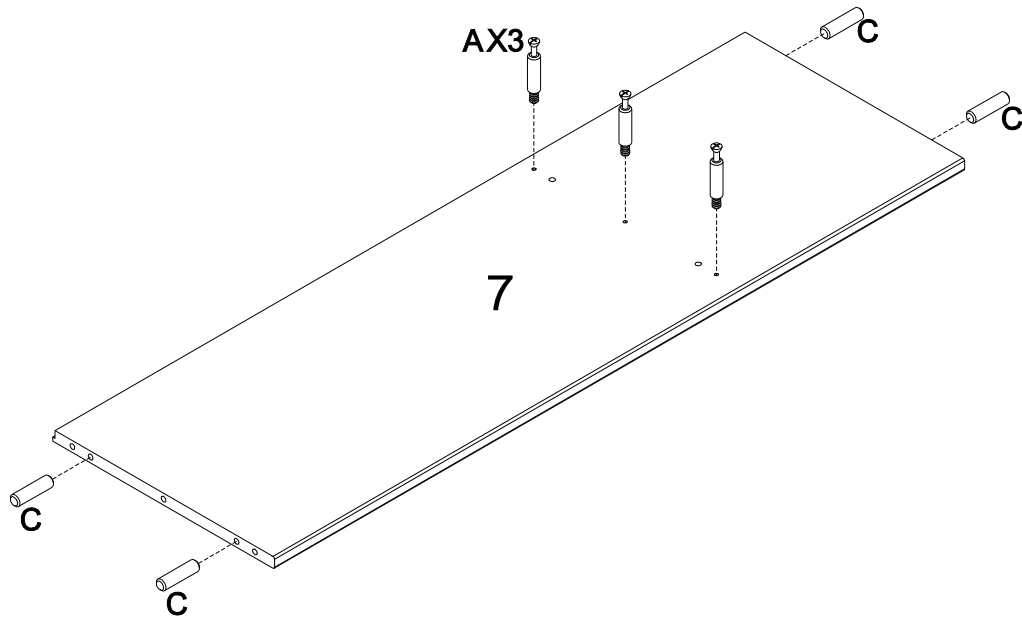

- Lay Bottom Panel (7) flat down on a material that does not scratch or damage the part.
- Screw in Cam-bolt (A) into designated holes as shown.
- Insert Wood Dowel (C) into designated holes on both short edge of (7).


STEP 6

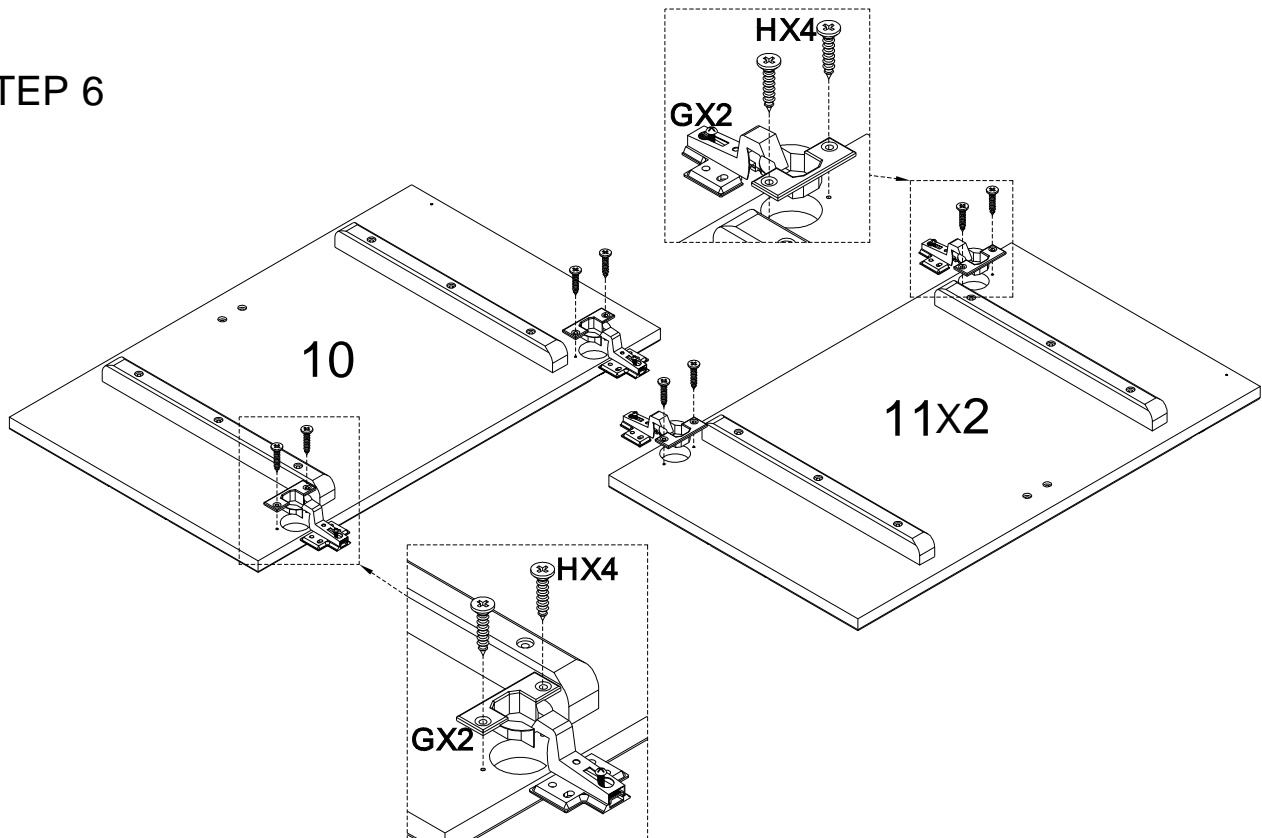


- Fit hinge cup of Hinge (G) into the well (refer to enlarged drawing) on Left & Right Door (10 & 11) and align the screw holes on hinge to pilot holes on door.
- Use a Phillips Screwdriver to drive Screw (G) to fasten hinge to door. Do not tighten the screw completely until both screws are in place.

STEP 7

- a) Lay Bottom Panel (7) from STEP 5 flat down on a material that does not scratch or damage the part.
- b) Attach Middle Panel (4) from STEP 4 to (7) via wood dowel and cam-bolts on the respective parts. Note the orientation of (4).
- c) Insert Cam-lock (B) into the designated holes on (4) and turn clockwise to lock onto cam-bolt. Refer to Page 3 for instructions on inserting and tightening cam-lock.

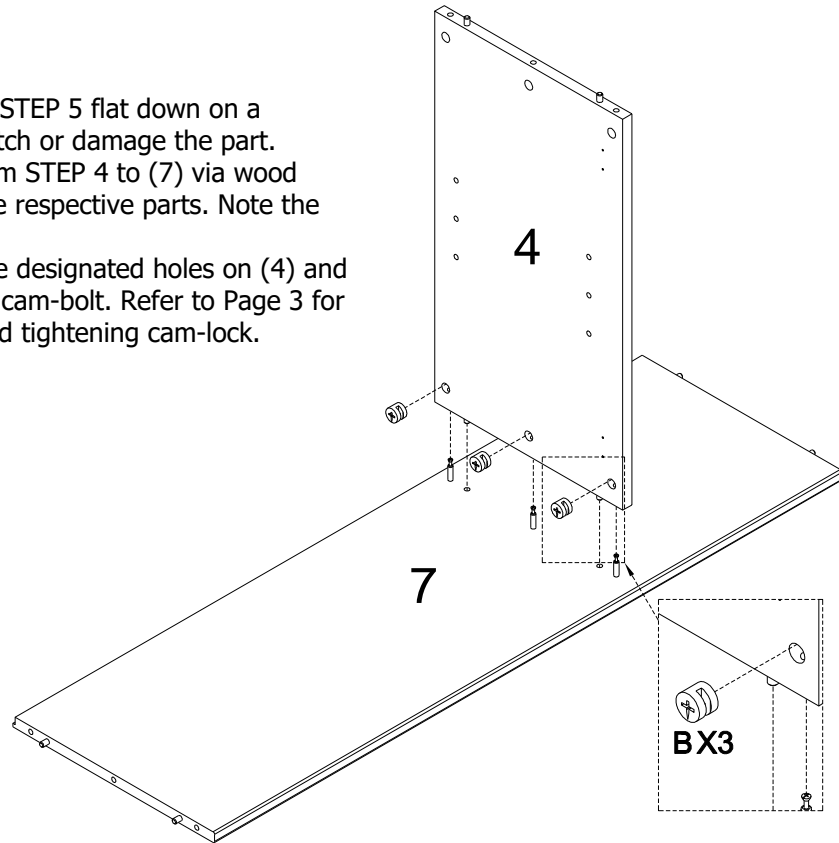


STEP 8

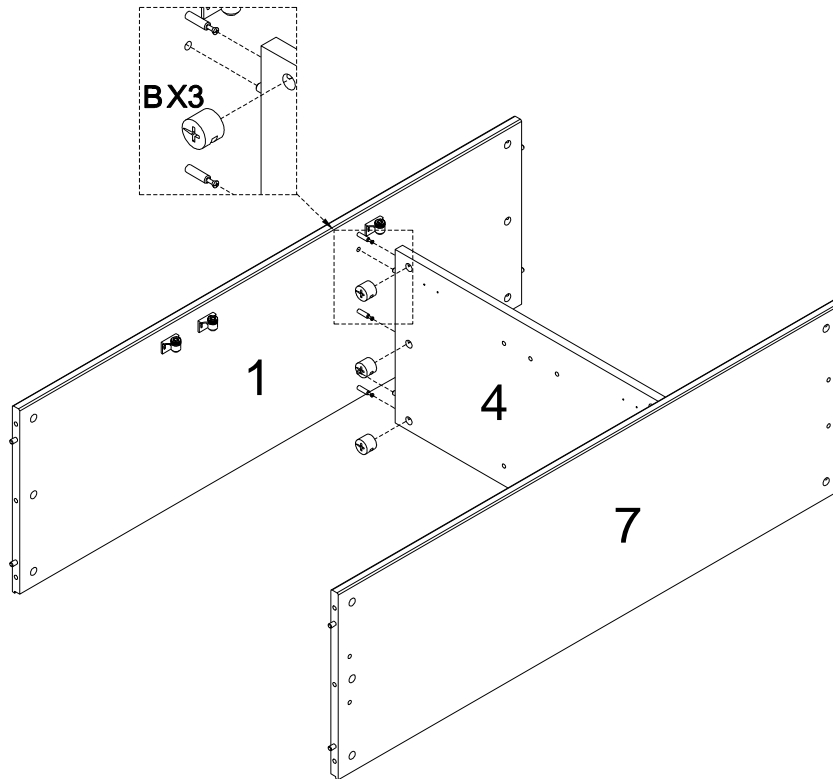


- a) Lay the assembly from STEP 7 flat down on a material that does not scratch or damage the parts.
- b) Attach Top Panel (1) from STEP 1 to Middle Panel (4) via cam-bolt and wood dowel on the respective parts.
- c) Insert Cam-lock (B) into the designated holes on (4) and turn clockwise to lock onto cam-bolt.

STEP 9

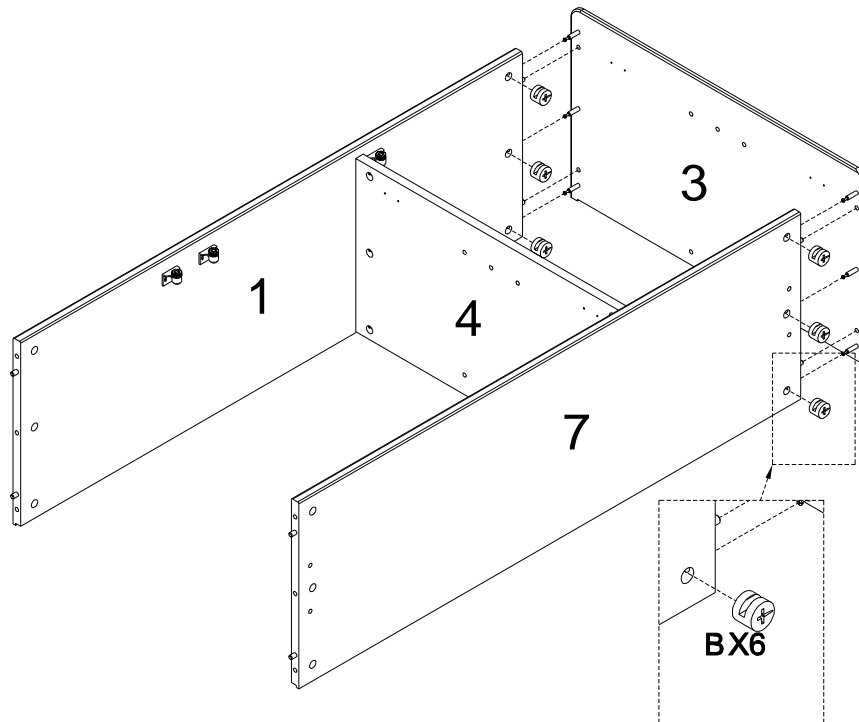


- Attach Right Panel (3) from STEP 3 to Top Panel (1) and Bottom Panel (7) via cam-bolt and wood dowel on the respective parts.
 - Insert Cam-lock (B) into the designated holes on (1 & 7) and turn clockwise to lock onto cam-bolt.
-

STEP 10

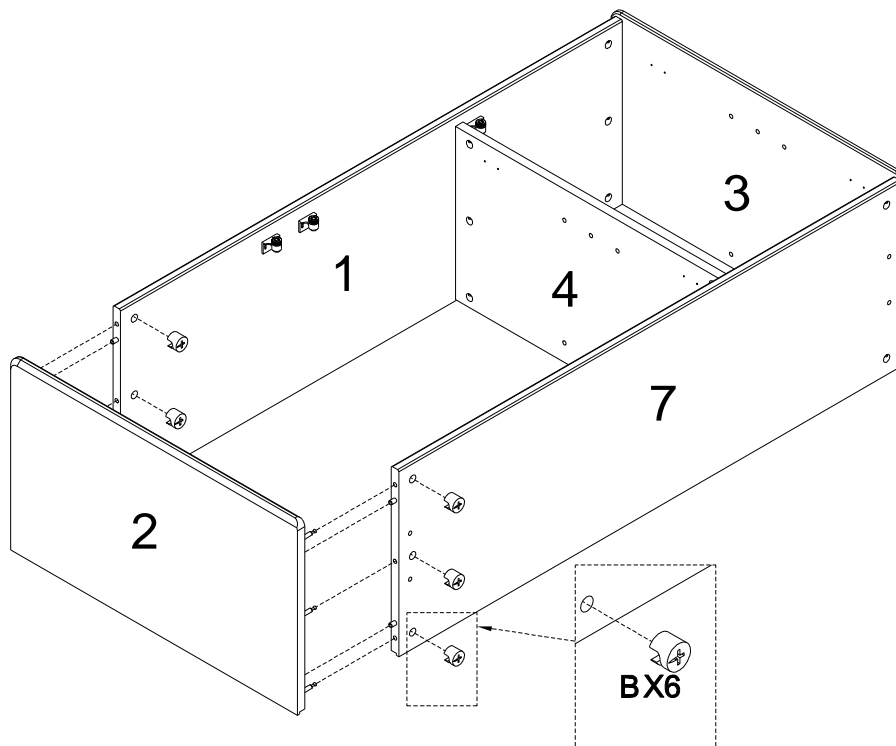


- Attach Left Panel (2) from STEP 2 to Top Panel (1) and Bottom Panel (7) via cam-bolt and wood dowel on the respective parts.
- Insert Cam-lock (B) into the designated holes on (1 & 7) and turn clockwise to lock onto cam-bolt.

STEP 11

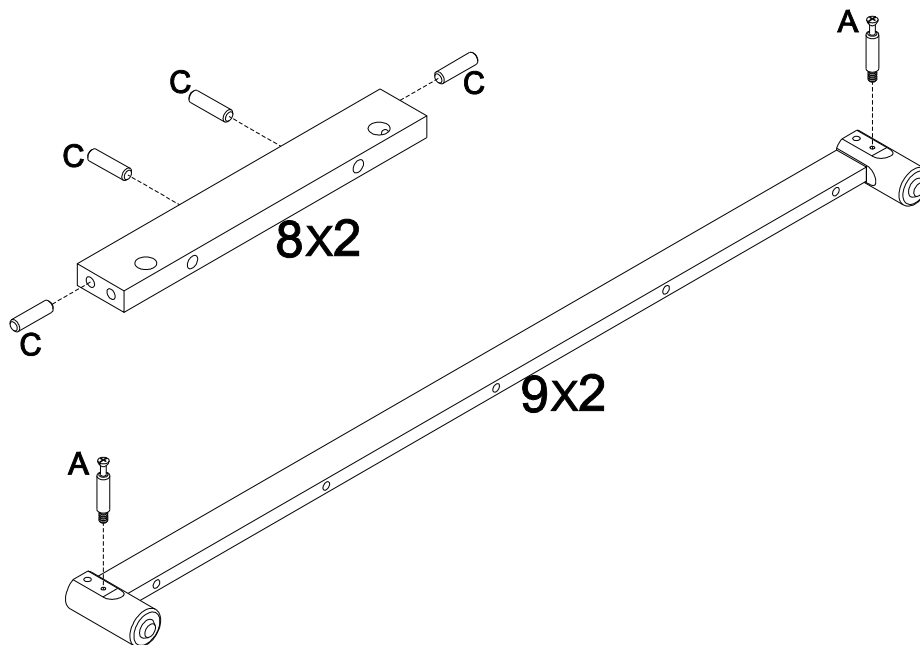


- Lay Side and Front Rail (8 & 9) flat down on a material that does not scratch or damage the part.
- Screw in Cam-bolt (A) into designated holes on (9) as shown.
- Insert Wood Dowel (C) into designated holes on (8).

STEP 12

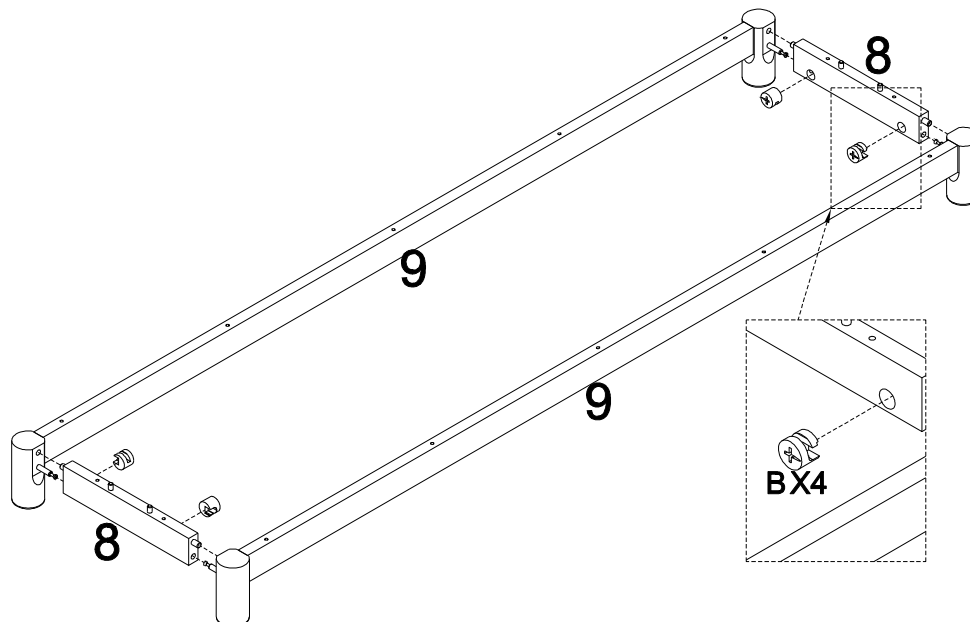


- Attach Front Rail (9) to Side Rail (8) via cam-bolt and wood dowel on the respective parts.
Note the orientation of (8).
- Insert Cam-lock (B) into the designated holes on (8) and turn clockwise to lock onto cam-bolt.

STEP 13

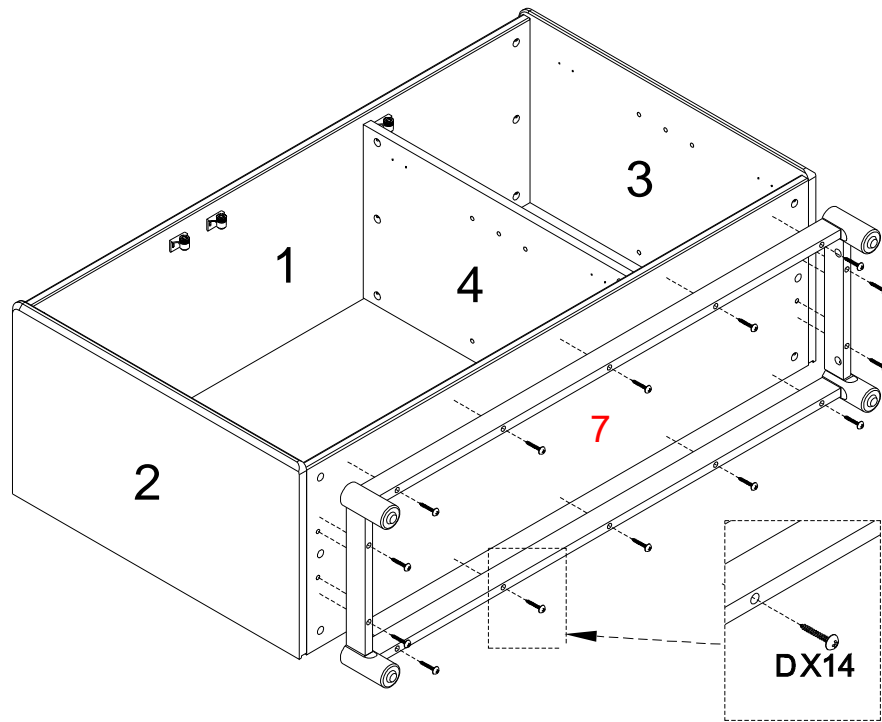


- Attach Front & Side Rail assembly to Bottom Panel (7) via wood dowel on Side Rail.
- Use Screw (D) to fasten Front & Side Rail to (7).

STEP 14

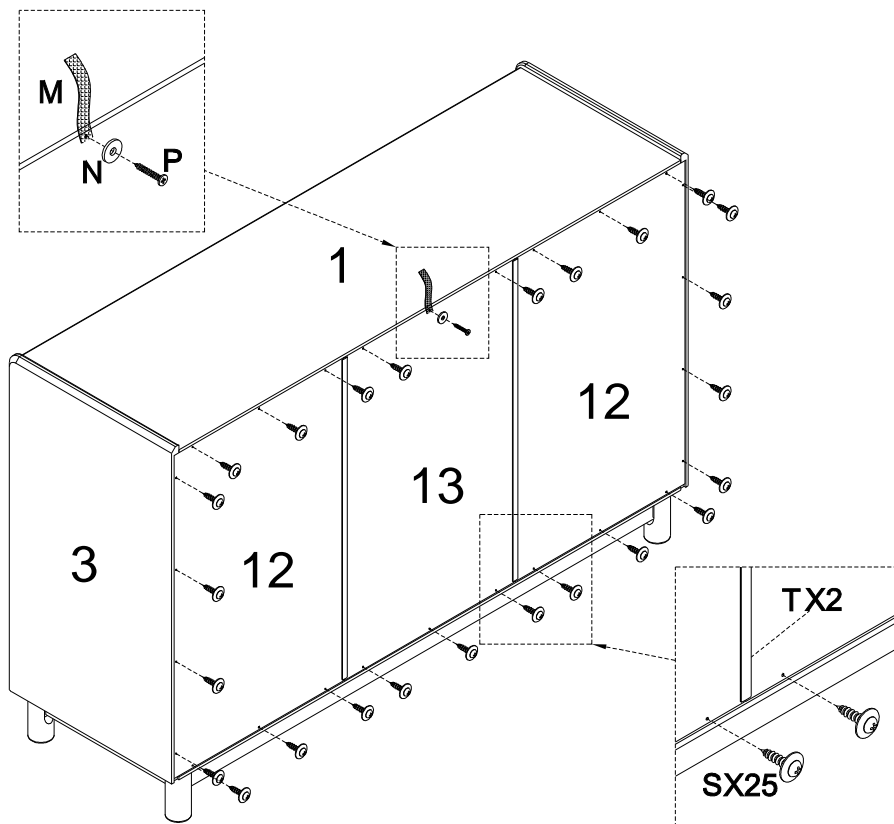


- Use H-Groove (T) to join Position Back and Middle Panel (12 & 13) and position the panels as shown. Use screw (S) to fasten Strap (12 & 13).
- Use Washer (N) and Screw (P) to fasten Strap (M) in the middle of the back edge of Top Panel (1).

STEP 15


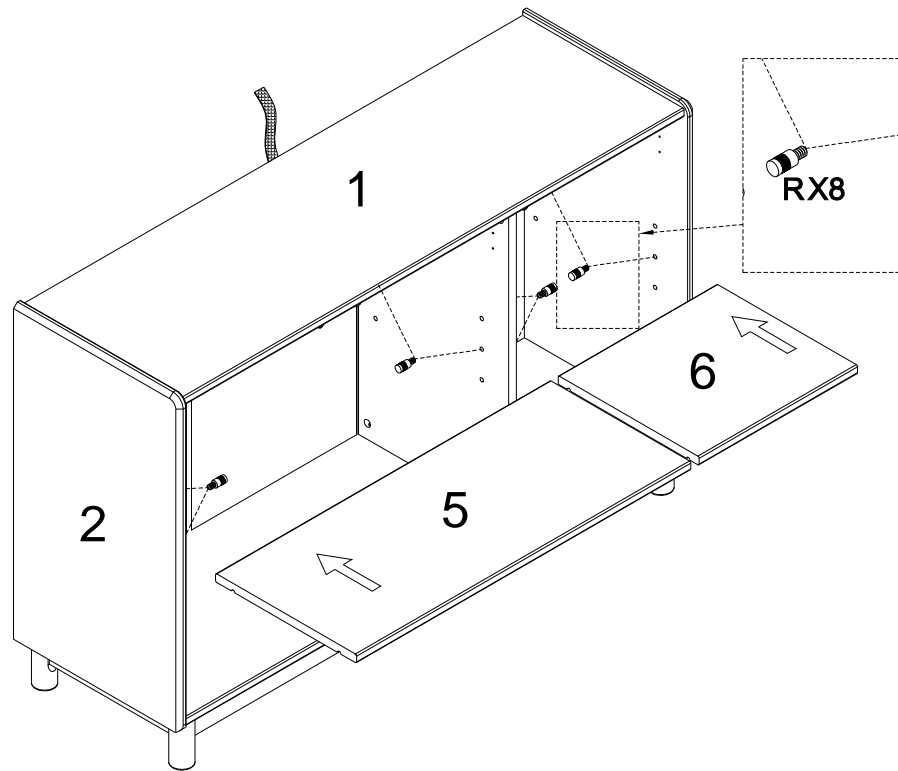


Insert Shelf Holder (R) into the designated holes on the same level at the desired height on Side and Panels. Place Shelf (5 & 6) to fit between Side and Middle Panels and then level it to sit on (R).

STEP 16

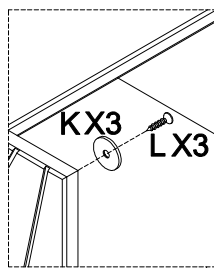


NOTE: Doors are adjustable left & right or up & down for reasonable gap between doors as you preferred.

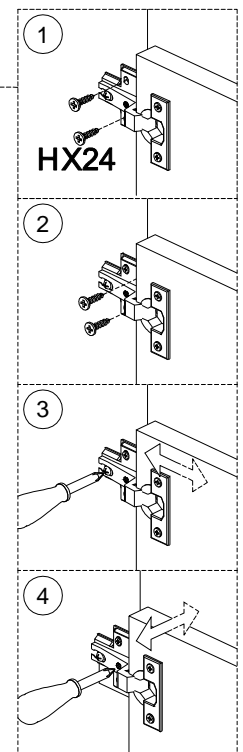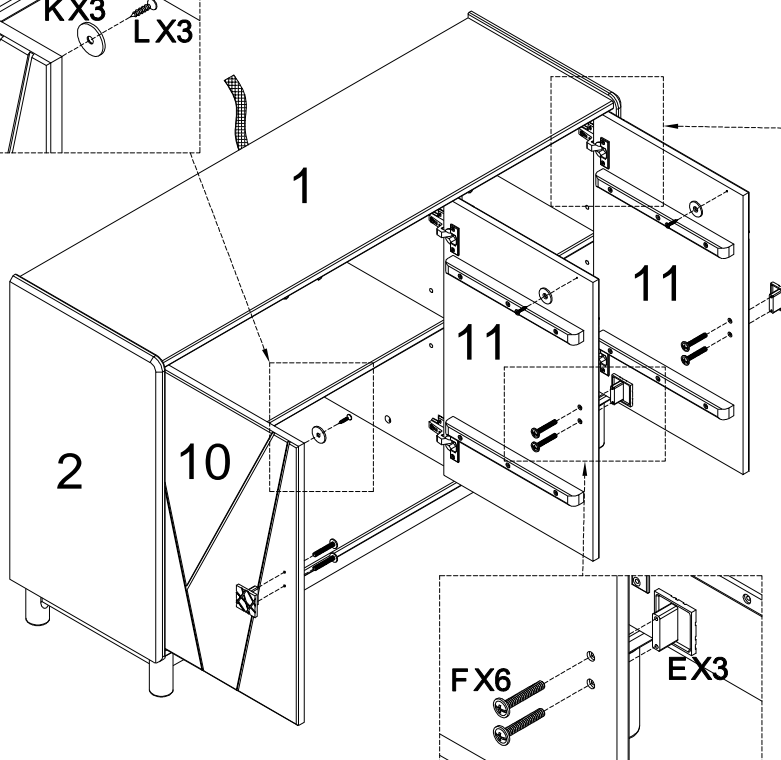

- Locate pilot holes on Right Panel for Hinge and place wing of Hinge against the Right Panel.
- Align the screw holes on wing of Hinge to pilot holes on the Right Panel and fasten with Screw (H).
Do not tighten the screw completely until both screws are in place.
- Use Screw (F) to fasten Handle to each door and Screw (L) to fasten Washer (acting as a magnetic catch)

STEP 17

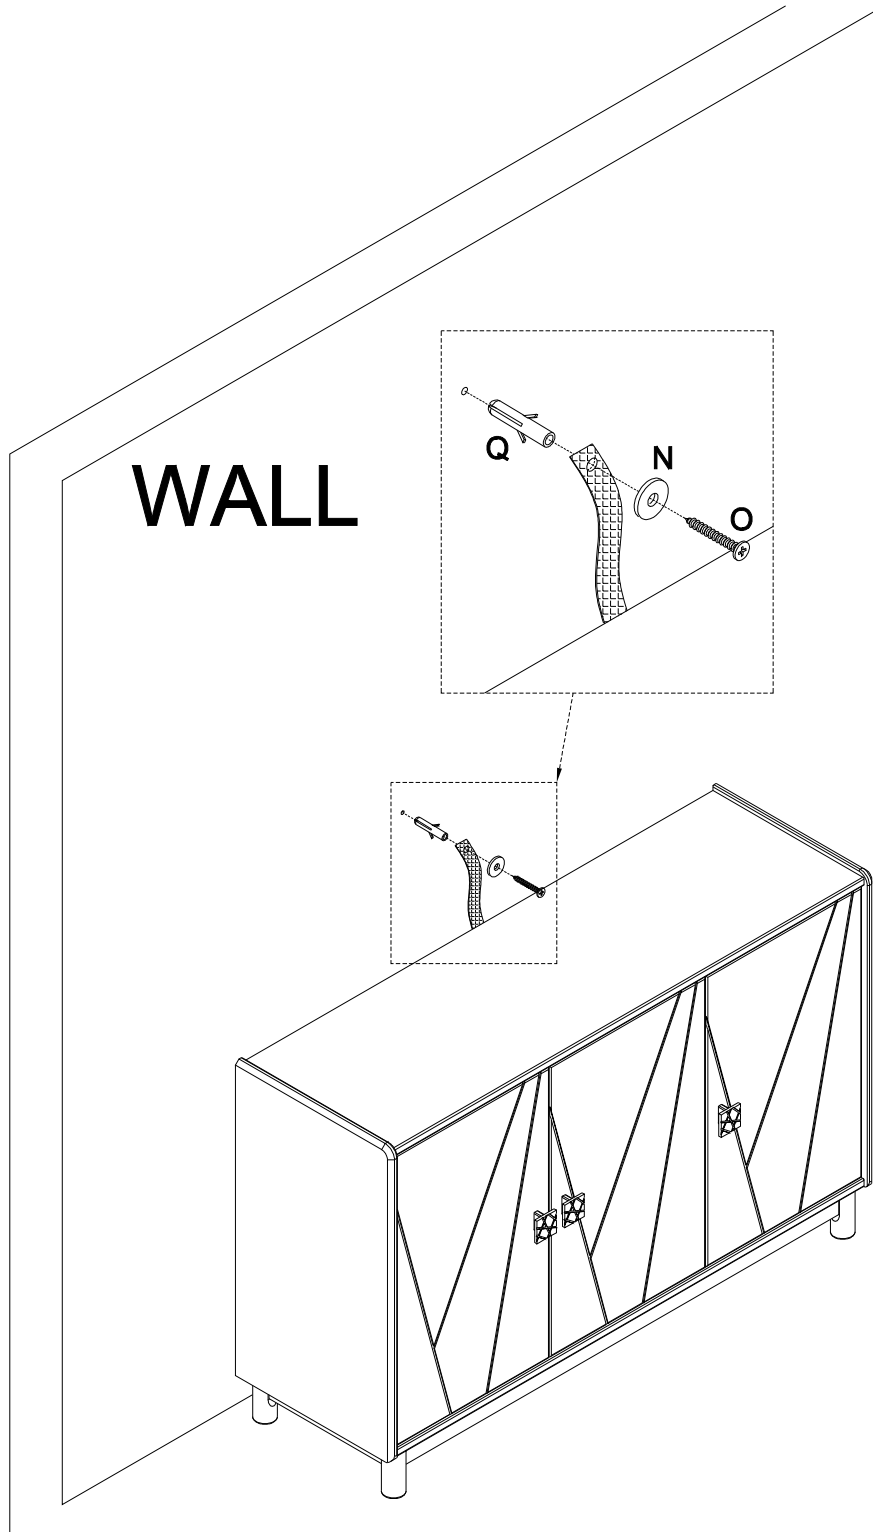

- Select the location to place the unit.
- Drill a hole in the dry wall to fit Anchor (Q) snugly and insert (Q). Ensure that the anchor fits securely in the wall.
- Affix the Strap (Q) to the anchor by using Screw (D) and Washer (N).

The assembly of the unit is complete.