
# Quick Start Guide

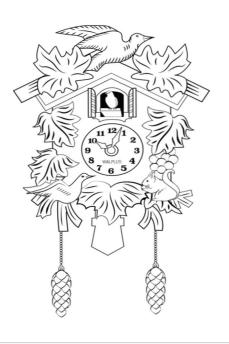

## **Clock**

## The History

Who invented the cuckoo clock is still a mystery to this day, but it is thought that the first ones were crafted in the Black Forest area of south-western Germany around the middle of the 18th century and quickly spread and became popular for the quality and beauty of their craftsmanship. Now you can enhance the look of your room with our vintage looking cuckoo clock as it matches with any type of elegant and classic home décor.

## **Specification**

1. Overall Dimention: 20cm Width x 37cm Height x 9.5cm Depth

2. Application: Can be hang on a screwed wall; screw is not included.


3. Material: PVC

4. Operation Time: The clock work 24 hours, the cuckoo chime between 7am till 9pm; this is manufacturer setting and can't be changed. However, you can disable this funtion by removing the third battery.

## **Setting Up The Clock**

- 1. You will need 3  $\times$  3C Battery for the Cuckoo Clock to be fully functional.
- 2. Plug the pendulum to the bottom of the clock
- 3. Move the minute hand to adjust the correct time

#### Setting Up The Cuckoo Bird

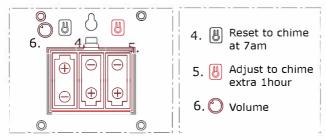

- 4. You now need to make the bird assign at correct time, by pressing "adjust" key once at the back of the clock. This sets you to 7am; the bird will pop out from her house and chime "kookoo" seven times.
- 5. Adjust key allow you to add extra hours, For example, if your local time is 12pm, press 5 times "Adjust" key right after the "Reset Key".
- 6. Volume Switch allow you to adjust the "kookoo" chime volume; turning to the right for louder and left for quieter
- 7. If you do not wish to hear the chime, you may remove the third battery to disable this feature.

# 2 Year Warranty

#### **Quality Time by Quality Clock**

Register on our website and receive **Two Year** warranty against defects in materials and manufacture under ordinary consumer use from the date of purchase

"Please do keep your receipt or e-receipt for your 2 years warranty to be validated.