

 
INSTALLATION MANUAL

Model : FCN0750_00
FCN0760_00


Support: [ServiceTeam86@outloo .com](mailto:ServiceTeam86@outloo.com)





* Guests need to prepare their own :




Phillips screwdriver

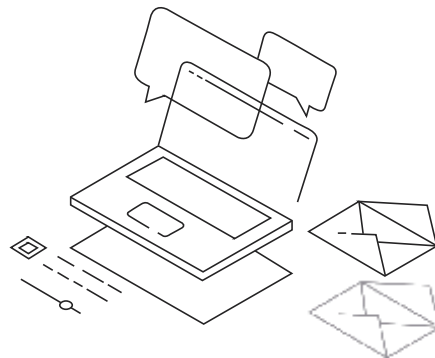 


PARTS

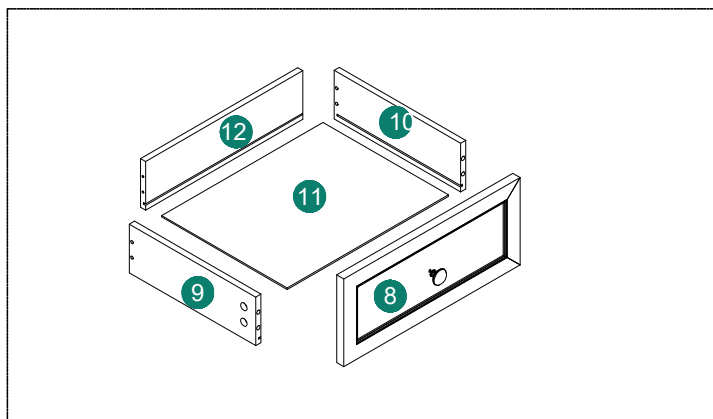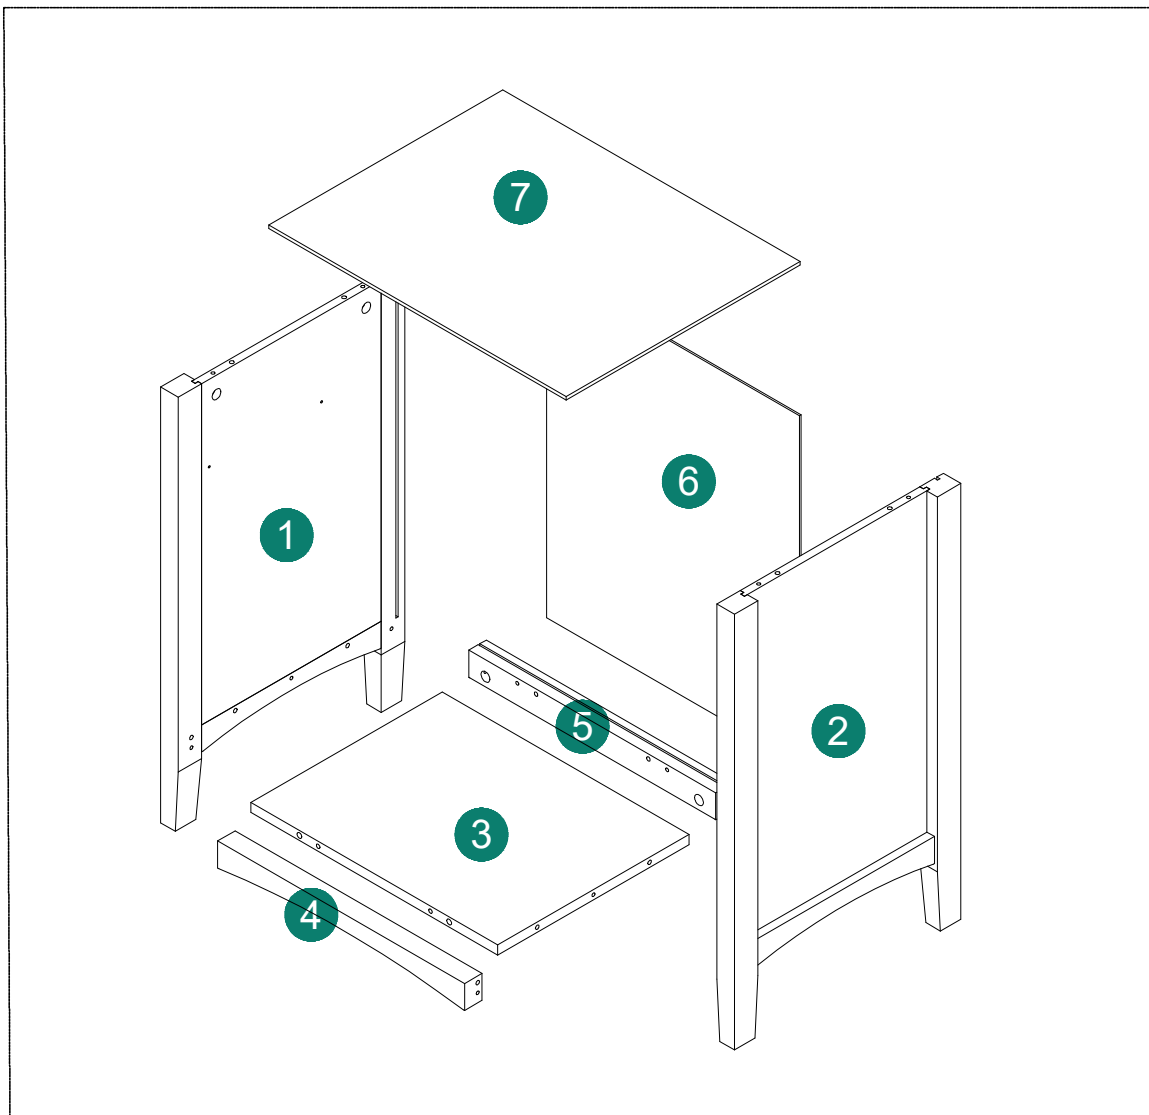  


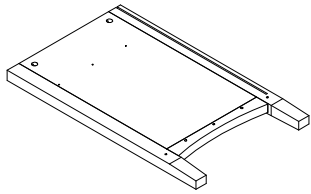 


1 X1

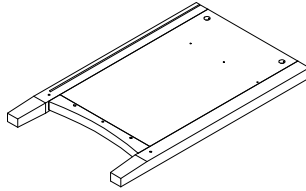 


2 X1

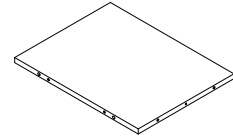 


3 X1

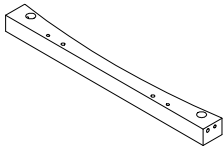 


4 X1

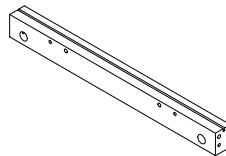 


5 X1

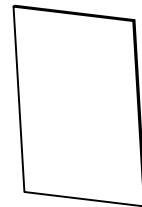 


6 X1

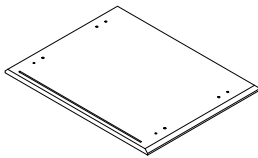 


7 X1

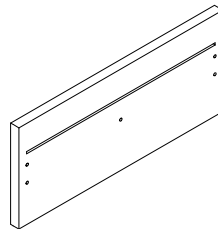 


8 X1

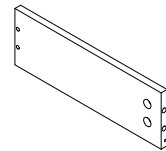 


9 X1

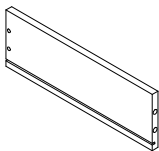 


10 X1

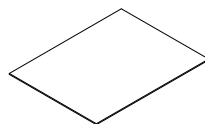 

11 X1

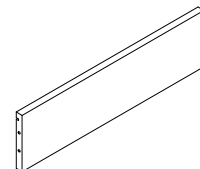 


12 X1

 


35mm

 A X18+2



Ø6 X 30mm

 B X12+2

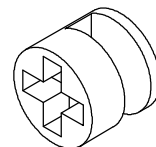

Ø15 X 9.5mm

C X18+2



 
Ø3.5X10mm

D X12+4



Ø4X14

E X1

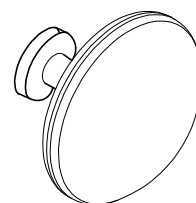


F X1



Ø5 X 30mm

 G X 4



Ø20

 
H X 18+2



J X6




K X1




Ø3X15mm

 L X6

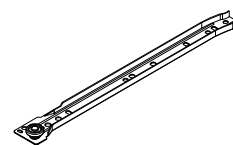


L=300mm

 CL X1

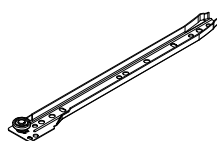


L=300mm

 CR X1

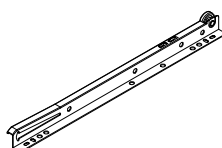

L=300mm

 DL X1


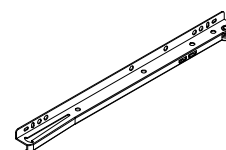


L=300mm

DR X1

D		X6
CL		X1
CR		X1

  
1

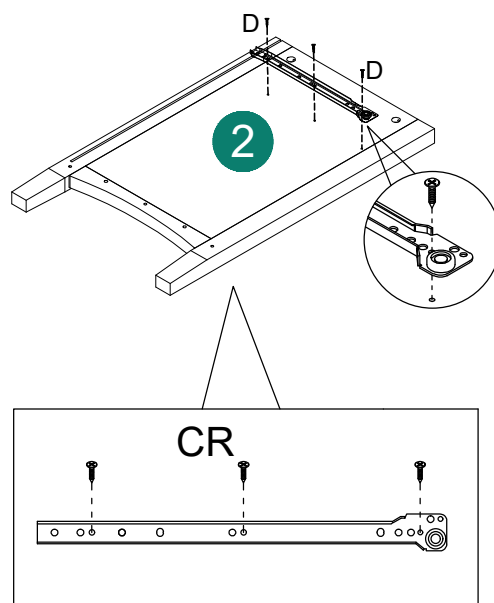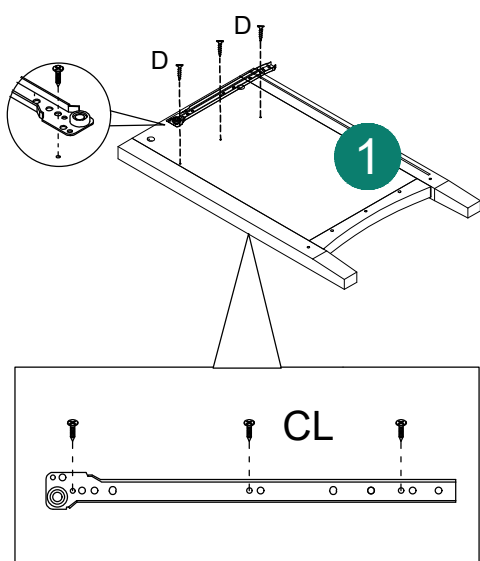


A		X6
---	---	----




B		X4
---	---	----

  2

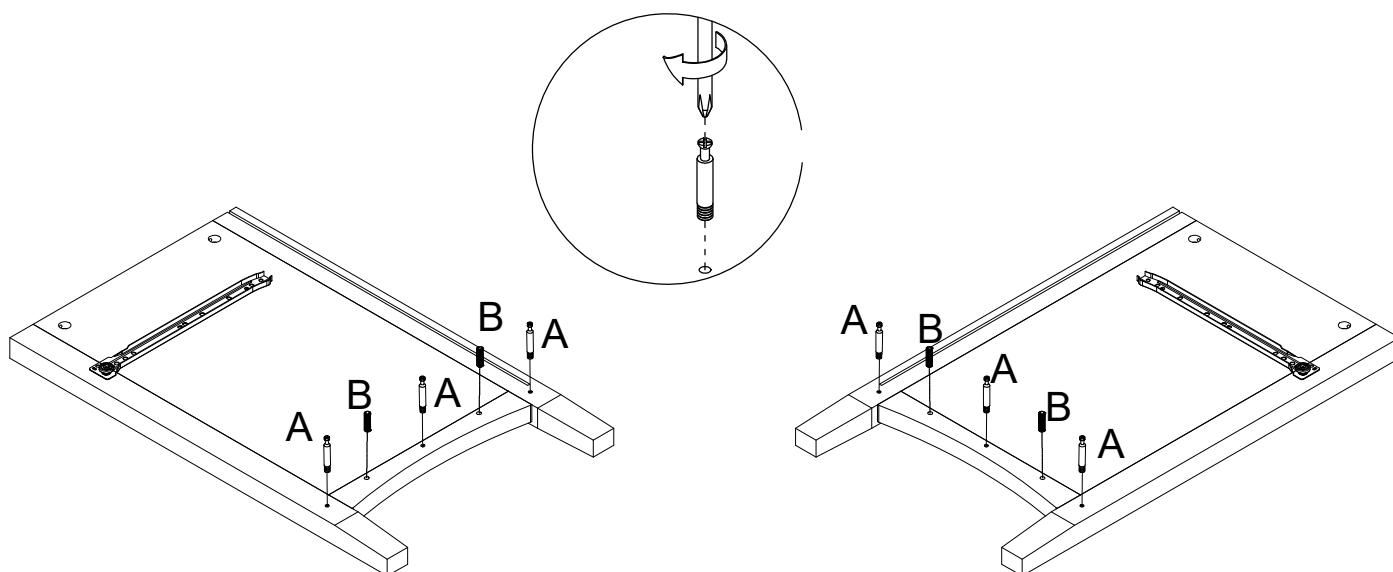



A		X4
B		X4

   3

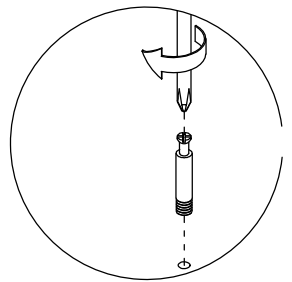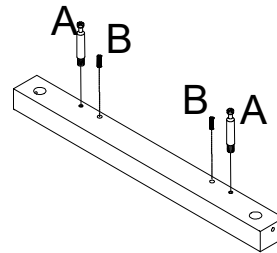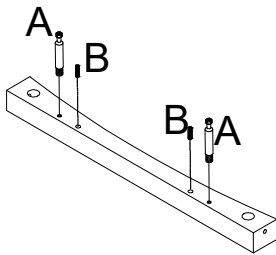



C		X4
---	---	----

  4

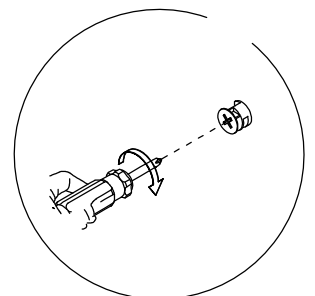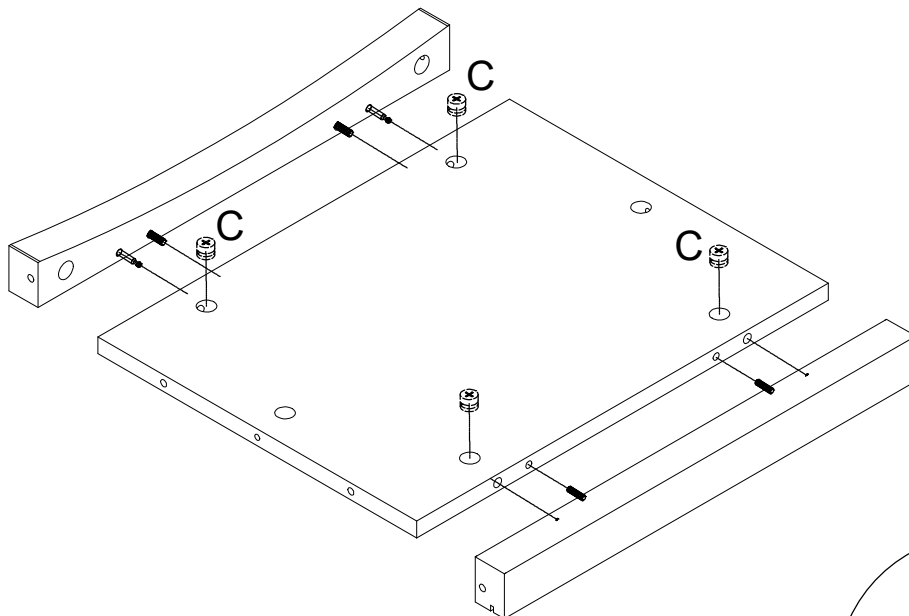


C		X6
---	---	----

  5

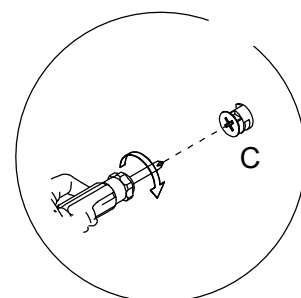
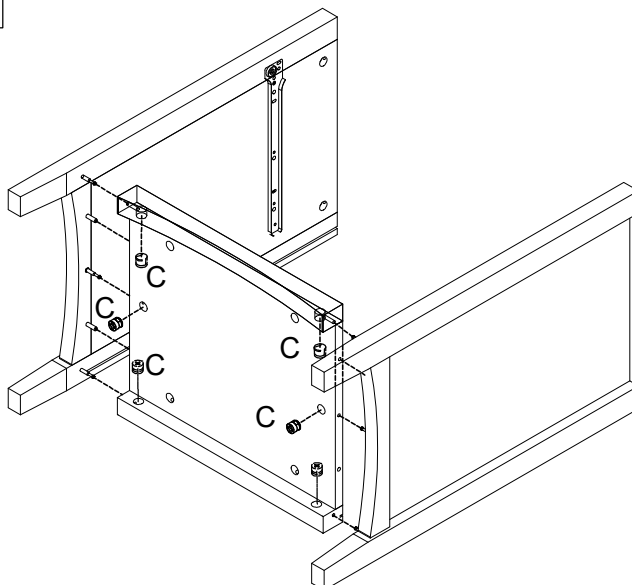


6

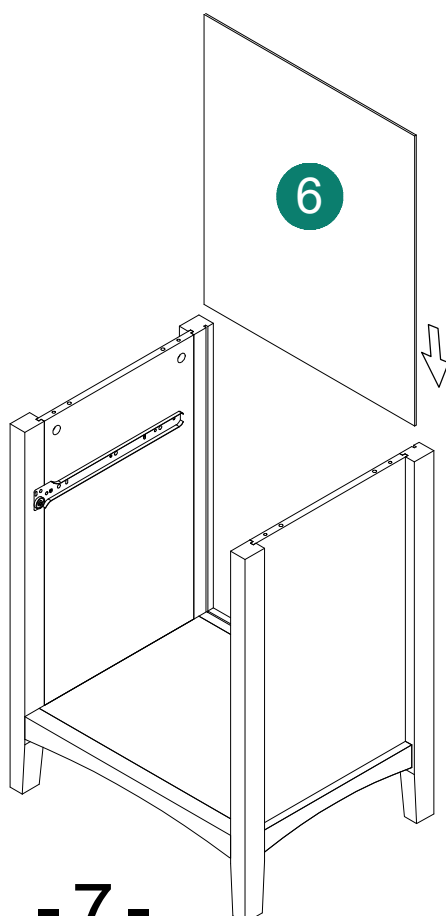 


A		X4
B		X4
C		X4

  
7

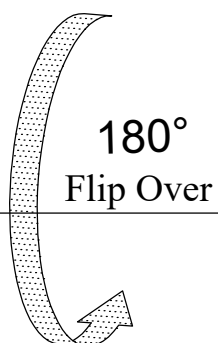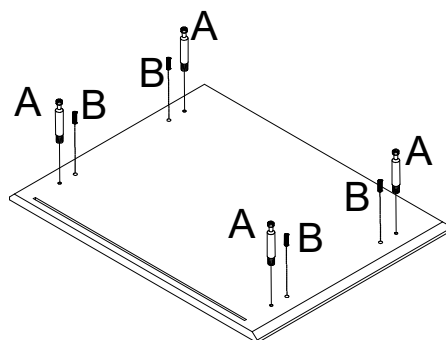



8

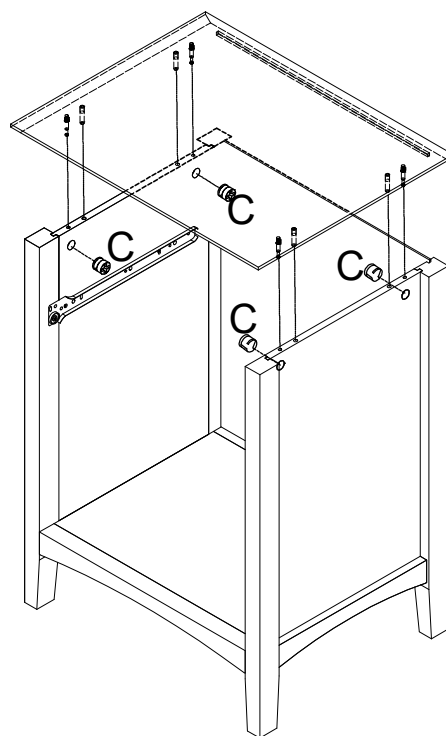 


L		X6
J		X6

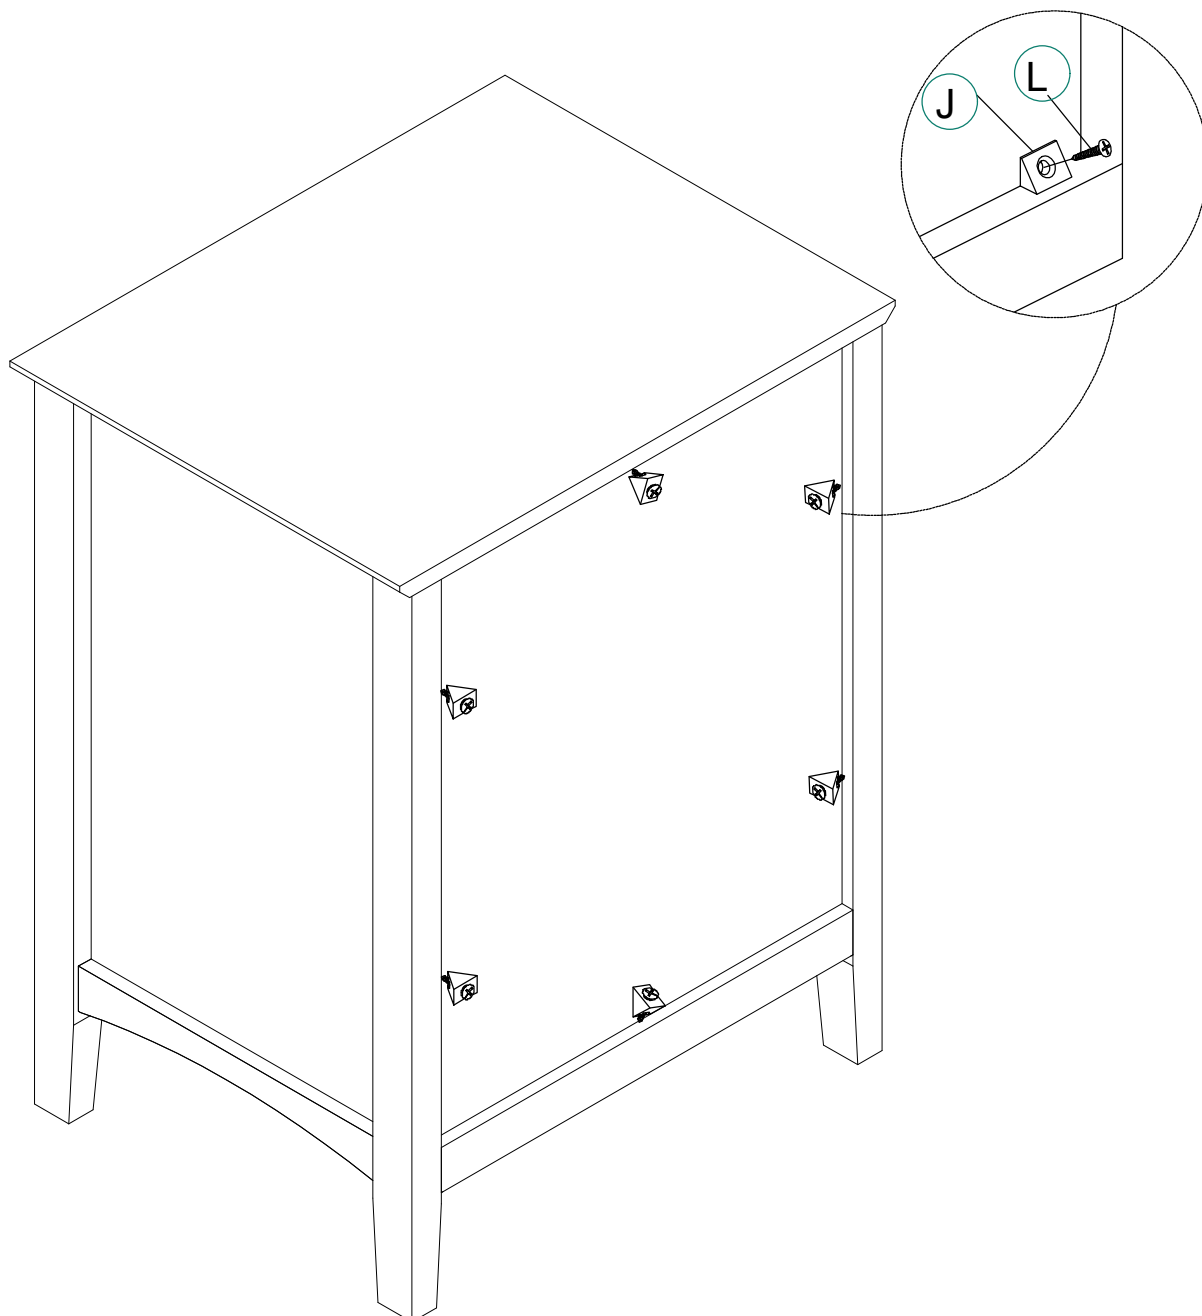 


G		X4
K		X1

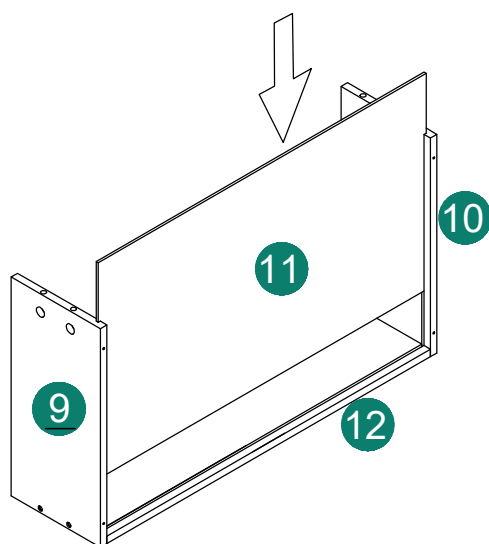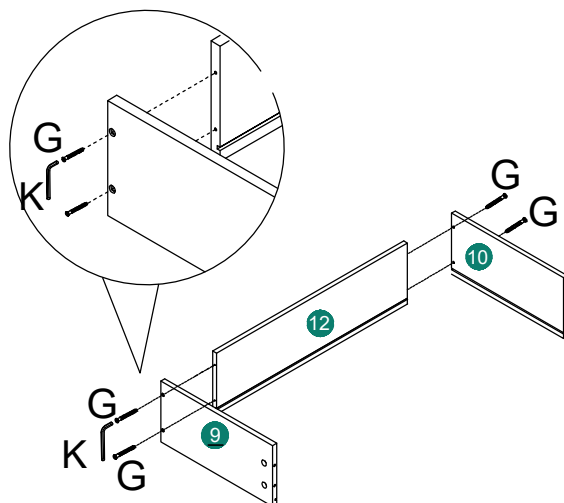  



A		X4
---	---	----

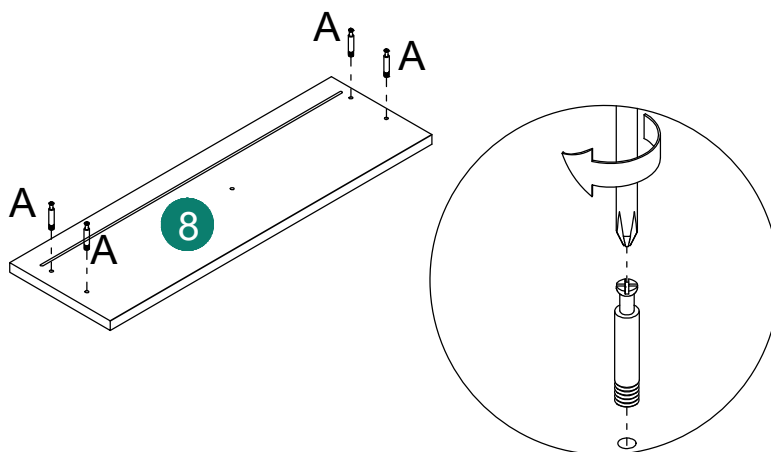 


C		X4
---	---	----

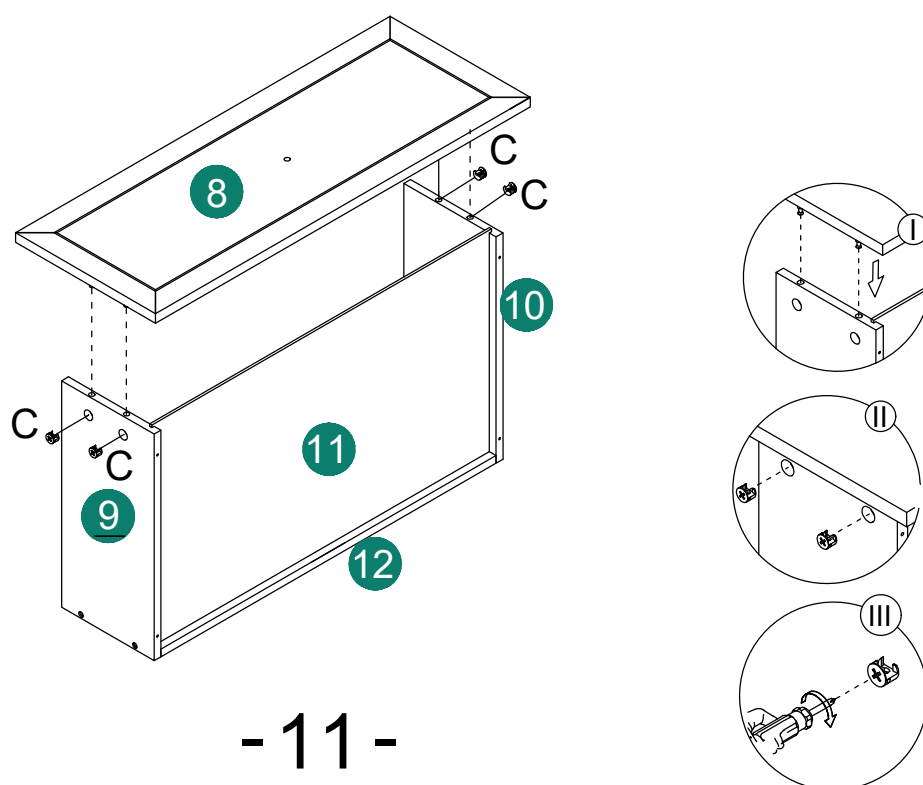 

D		X4
DL		X1
DR		X1
E		X1
F		X1
H		X8

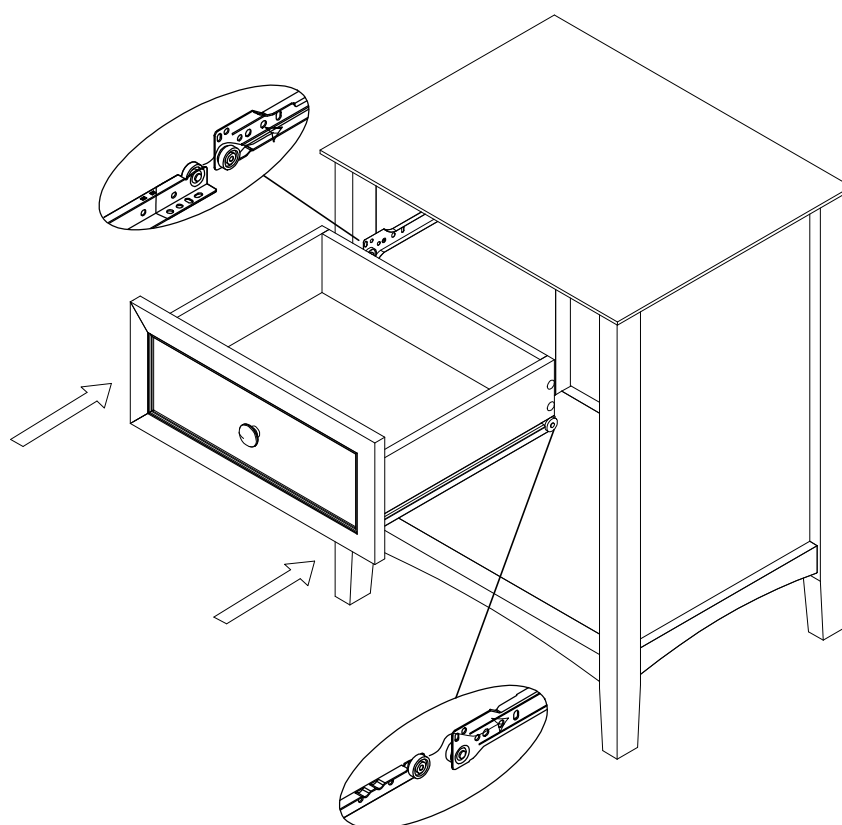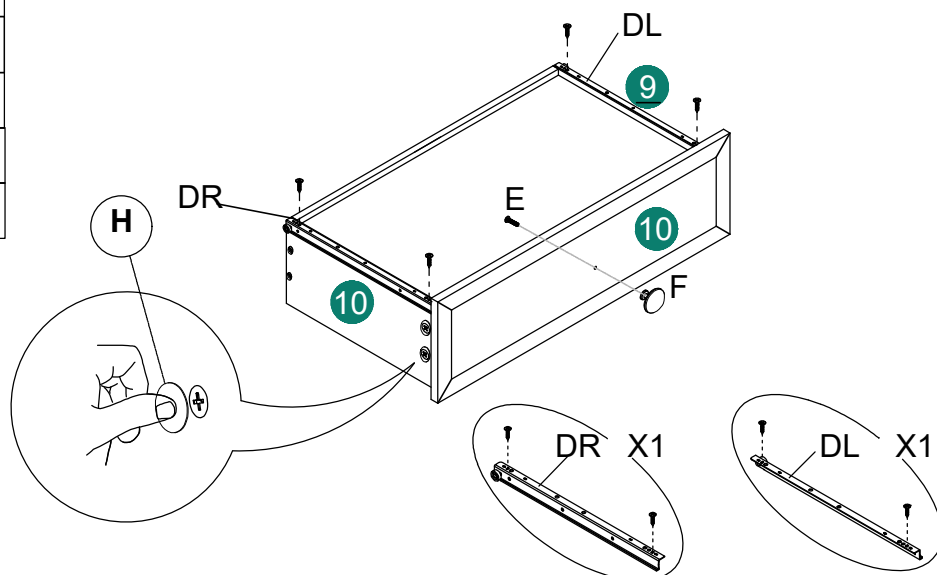  

⚠ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install Anti-tip device provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on any drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers. <i>This is a permanent label. Do not remove!</i>
	

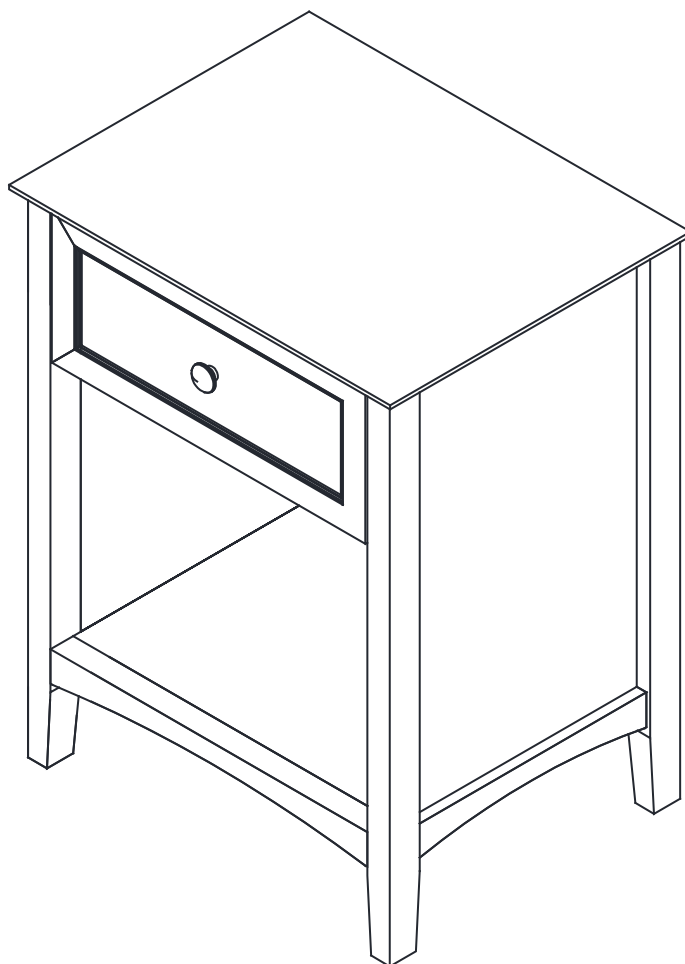 

SAFETY FIRST, STYLE ALWAYS

Thank you for choosing our products. To ensure safety and performance, please follow these instructions:

- **Assembly:** Carefully follow instructions and tighten all parts.
- **Intended Use:** Use furniture as intended and adhere to weight limits.
- **Handling:** Move gently and check for loose parts regularly.
- **Tipping:** Tall or unstable furniture may tip over if not secured, especially in homes with children or pets.
- **Overloading:** Exceeding weight limits can lead to collapse or damage.
- **Sharp Edges:** Handle furniture with sharp corners carefully, especially around children.

MAINTENANCE & CLEANING TIPS

- **Regular Cleaning:** Use a soft, dry cloth to wipe the surface of cabinet regularly. Avoid harsh chemical cleaners.
- **Protect from Sunlight:** Keep cabinet out of direct sunlight to prevent damage to the material and finish.

DON'T WORRY, WE'VE GOT YOUR BACK.

We don't just sell furniture — we're here for the long haul! If you run into any issues due to manufacturing defects or material problems, we offer a 1-year warranty. That means we'll replace any faulty parts for free — no hassle.

Email: ServiceTeam86@outlook.com