

 
 
 
Thank you for choosing our products. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect must be provided. Photos are used to the cause of defects and for future quality control.

If you have any questions, comments or concerns, feel free to contact us.

INSTRUCTIONS

Handmade 100% Copper Fire Tub with Iron Accessories

Read and follow all Safety Statements, Warnings, Notes and Assembly Instructions before using this product.

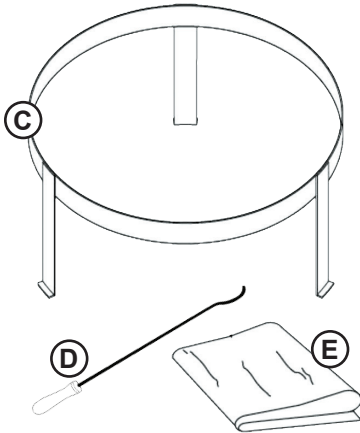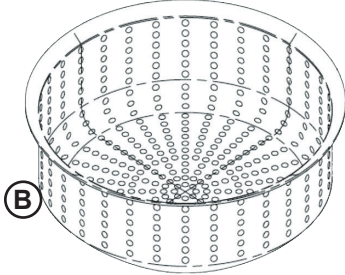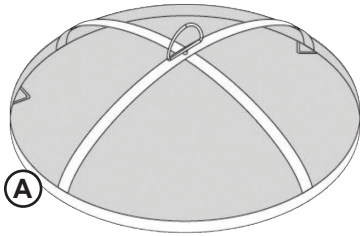

No.	PARTS	QTY.
A	Spark Screen	1
B	Copper Fire Bowl	1
C	Stand with Legs	1
D	Poker (screen lifter)	1
E	Vinyl Cover	1

NOTE: This fire pit is made of cast metal. The roughness on the surface is a natural result of this product being cast and textured by hand. This one-of-a-kind look enhances the beauty of this product and is not a defect.

FIRE PIT ASSEMBLY

1. Hold Copper Fire Bowl (B) above the Stand (C) and gently lower into place.
2. Place Spark Screen (A) onto the copper fire bowl.

HELPFUL TIPS FOR PROPER MAINTENANCE

- Remove ash after every use and clean the unit regularly.
- Keep the fire pit covered or store when not in use. Do not leave the unit sit out in wet conditions.
- Place approximately 1 inch of sand in the fire bowl to help distribute heat evenly.
- Do not overfill your pit when in use.
- Never use accelerants, such as: gasoline, alcohol, paint thinners, kerosene, etc.
- Let fires go out gradually. Do not use water as this may cause the metal to crack.
- Never use plastic materials in or near the fire pit.

Color change to the metal of your pit bowl is normal and should be expected. The color change occurs due to the effects of heat, smoke and weather. To limit color change, burn clean high-quality wood and keep your fire pit covered when not in use. You can also clean your copper fire pit bowl after each use with soap, water, and a metal-appropriate polish.



SAFETY STATEMENTS & WARNINGS



- FOR OUTDOOR USE ONLY. Never use this product in an enclosed area.
- Always follow local laws and regulations when using wood-burning fire pits.
- Exercise the same care and precautions as you would with an open fire.
- Keep unit a safe distance away from house, garage, balconies, or overhangs when in use.
- Use on a level, non-combustible surface.
- Do not use on or near combustible surfaces or structures such as wood decks, dry leaves or grass, mulch, vinyl or wood siding, etc.
- Keep away from all combustible materials including gasoline and other flammable liquids and vapors.
- Never use accelerants such as, but not limited to, gasoline, alcohol, paint thinners, kerosene, as this may cause serious injury or product damage.
- The fire pit, spark screen and lifting tool become hot when in use; to prevent injury when handling hot metal, wear fire-resistant gloves.
- Keep out of reach of children.
- Do not overfill or use this unit to burn leaves or trash.
- Avoid using any fire pit during dry or windy conditions.
- Never leave unit unattended while hot or in use.
- Supervise children and pets when the fire pit is in use.
- DO NOT USE CHEMICAL-BASED CLEANERS as this may damage the product and/or ignite a flame during the next use.
- Extinguish the fire properly before leaving. Use a fire extinguisher or a bucket of sand to smother the fire if necessary. DO NOT USE WATER to extinguish hot fires or embers as this may cause serious injury and may damage the product.
- Ashes can remain hot for a long time after fire is extinguished. Dispose of cold ashes properly.
- Ensure the unit is completely cool before covering, failure to do so will damage the cover and the unit.

Any modification or failure to follow the recommended care of the unit will void the product warranty.