
 
 





 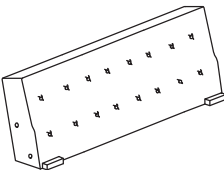






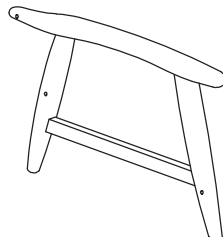


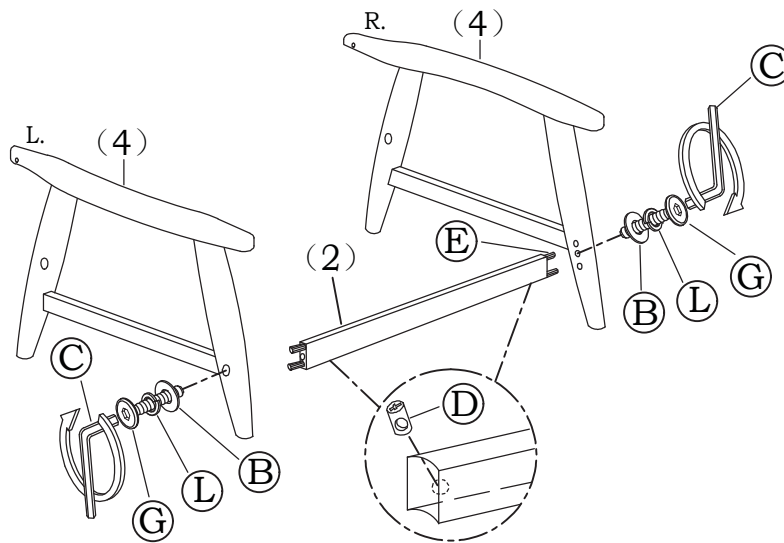
ITEM NAME / NOM D'ITEM: ROCKY SOFA (SEAT)/ROCKY SOFA (ARM)

PARTS LIST / LISTE DES PIÈCES


(1)	(2)	(3)	(4)	(5)
				A. M8 x 60MM  x2 B. Ø8MM  x6 C. M5  x1 D. Ø8 X 18MM  x2 E. Ø10 X 40MM  x4 F. WOODEN CAP  x6 G. M8 X 80MM  x4 H. Ø4 X 50MM  x3 I. PASTE PAD  x4 J. L - BARCKET  x2 K. Ø4 X 20MM  x4 L. Ø8MM  x6
×1	×1	×1	×2	

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE


I




II

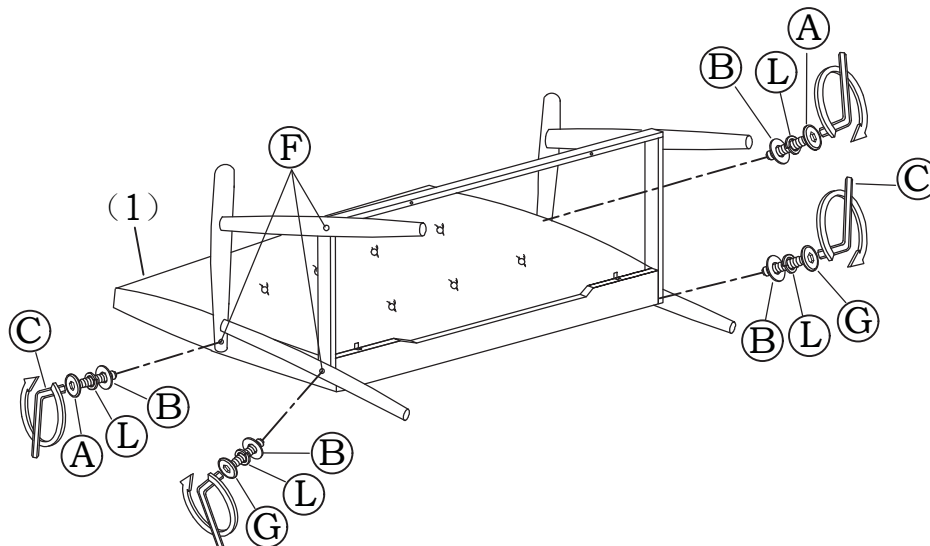

III

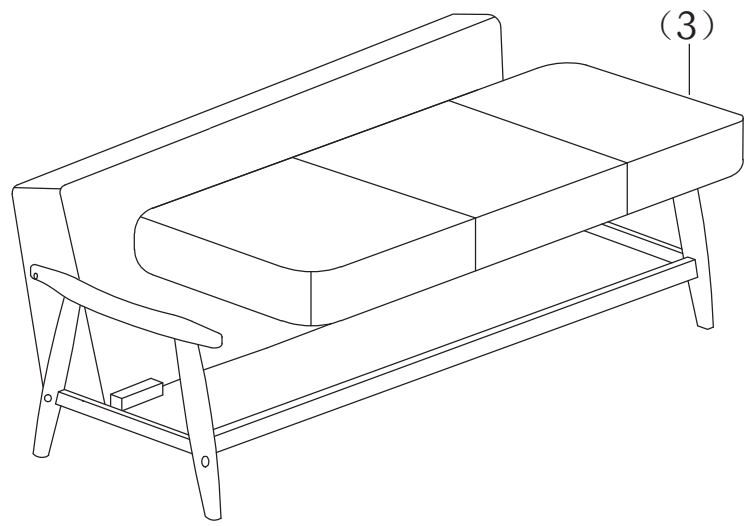

IV

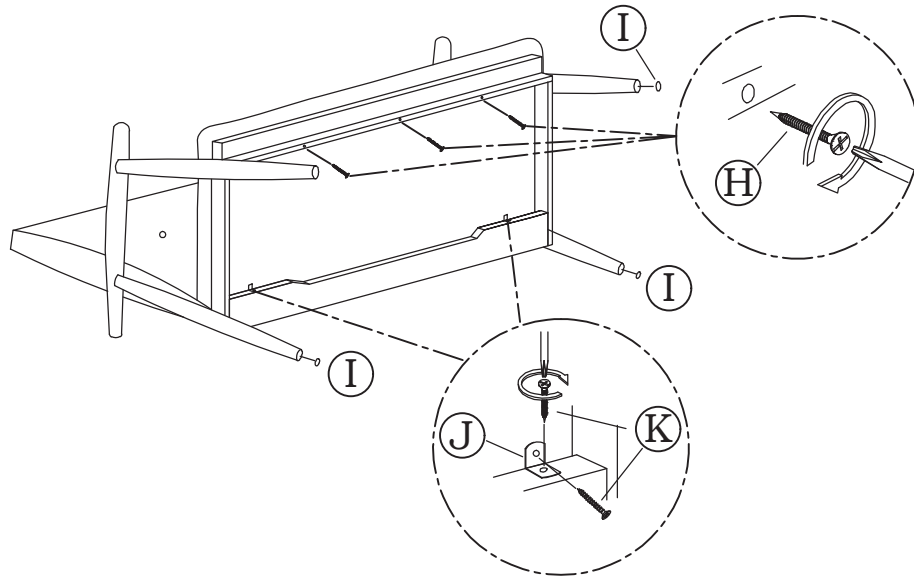

V

