


# edishinē

## Floor Lamp

[Instruction Manual]

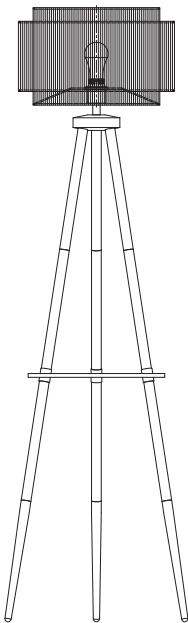


Thank you for your purchase.  
Please contact us if you have any questions,  
and we will get back to you within 24 hours.

Please attach your Order ID so that  
we can serve you better.

## CAUTION


1. Before assembly, place all parts out on a clean flat surface and inspect each part for defects that may have occurred during shipping.
2. Inspect wire insulation for any cuts, abrasions or exposed copper that may have resulted during shipping. If there are any defects in the wire, DO NOT continue to assemble. Please send an email to our Customer Service immediately.
3. Consult a qualified electrician if you have any electrical questions.
4. Never drape clothes over the lamp.
5. To reduce the likelihood of tipping over, we recommend placing the lamp behind furniture and keep children and pets away.
6. To prevent children from suffocating and choking, keep them away from packing materials.
7. Please keep this manual and hand it over when you transfer the product.

## Packing List

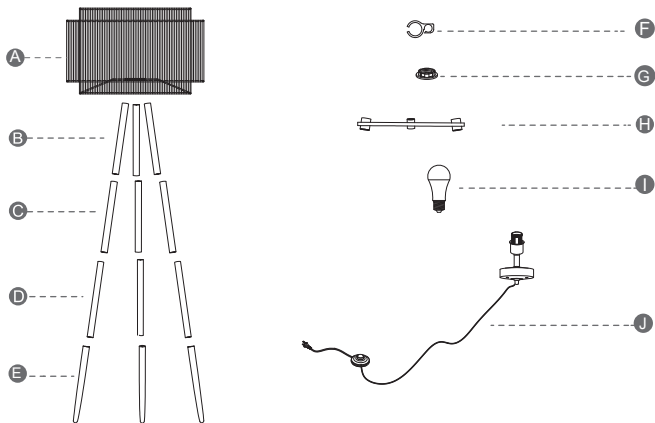

Part	Description	Quantity
A	Lamp Shade	1
B	Wooden Rod A	3
C	Wooden Rod B	3
D	Wooden Rod C	3
E	Wooden Rod D	3
F	Hook	4
G	Socket Ring	1
H	Wooden Panel	1
I	Bulb	1
J	Socket	1

# ASSEMBLY INSTRUCTIONS

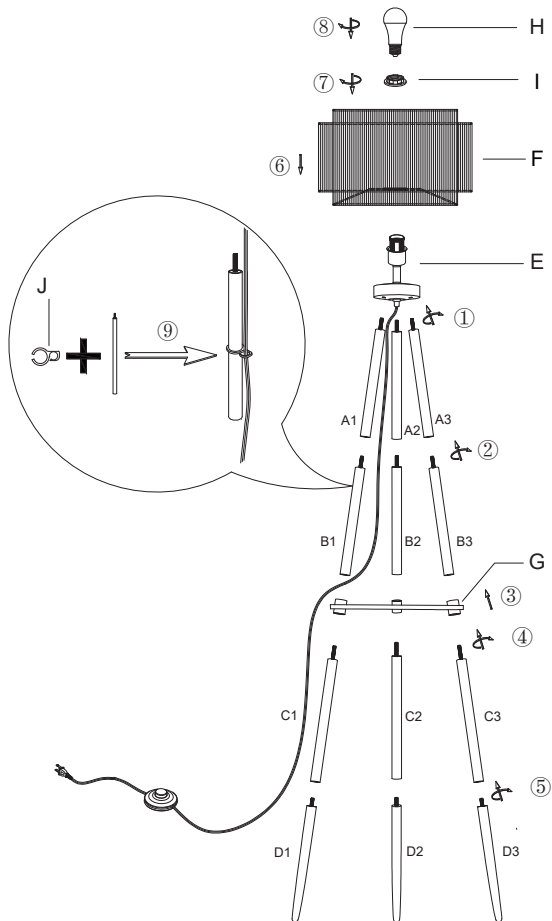

- 1.Screw wooden rods (A1, A2, A3) into the socket(E).
- 2.Screw wooden rods (B1, B2, B3) into wooden rods (A1, A2, A3).
- 3.Insert the top side of wooden panel (H) through all three wooden rods (B1, B2, B3).
- 4.Screw wooden rods (C1, C2, C3) into wooden rods (B1, B2, B3).
- 5.Screw wooden rods (D1, D2, D3) into wooden rods (C1, C2, C3).
- 6.Place the lamp shade (F) onto the socket (E), then tighten the socket ring (I) clockwise onto socket (E) until fully secured.
- 7.Install the included bulb(H) by screwing it into the socket.
- 8.Route the power cord by hanging it sequentially on wooden rods (A1, B1, C1, D1) using hook (J).

## Specifications

- Product Height: 62.4 IN
- Materials: Iron, Solid wood, Paper rope
- Input Voltage: 120VAC 60Hz
- Max.Load Power: Incandescent Bulb 60W or LED Bulb 12W
- Socket Type: Standard Medium E26
- Bulb color temperature: 3000K/4000K/6000K

## FUNCTIONS

### Foot Switch

Three color temperatures(3000K/4000K/6000K)

Stepless Dimmable

Press the switch once to turn the light ON; Short press this button in turn to select the color temperature(3000K/4000K/6000K).At last, short press this button to turn off.

After the short press to turn it on, and then Long press the foot switch, the light will gradually to brighten or darken, just moves your foot away when you think the brightness is OK.

**Memory function: the floor lamp can remember the mode of the brightness and color you settled before closing.**

## Product Care

1. Do not repair disassemble or modify under any circumstances;
2. Do not place near any heat source or heat source or in direct sunlight;
3. Do not place on uneven, unsecured desk or table;
4. Use ONLY the supplied AC power adapter;
5. Do not use the appliance with frayed or damaged electrical cords;
6. Do not touch an electrical appliance with wet hands or when liquids are present;
7. Please keep the lamp and all appliances dry and clean;
8. Unplug the adapter when the lamp is not used;
9. Power off before cleaning;
10. Clean the lamp only with a soft dry cloth;
11. Never overload electrical circuits as it may cause electrical shock or fire;
12. If the remote connection fails, please watch the user manual carefully or contact after-sales customer service, we will reply within 24 hours.

## One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date.

Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.

