



Questions about your new *Super Washer?*

| Cycles | Wash Time | |
|-----------------|-----------|----|
| | H | M |
| NORMAL | 1 | 01 |
| Heavy + Prewash | 1 | 15 |
| Quick 20' | 0 | 20 |
| ECO | 0 | 42 |
| Wool | 0 | 41 |
| Delicate | 0 | 36 |
| POWER WASH | 1 | 01 |
| Drain | 0 | 02 |
| Winterize | 0 | 02 |
| Allergen 131° | 1 | 05 |
| Self Clean | 0 | 45 |
| PET | 0 | 52 |
| Baby | 1 | 00 |
| Sanitize 165° | 1 | 09 |
| Quiet 60 dB | 0 | 49 |

| DIAGNOSTIC MENU | | |
|-----------------|---|-----------------------------|
| Code | Description | Component |
| E1 | Door close failure | Door Switch |
| E2 | Drain water failure | Drain Pump |
| E3 | Water inlet failure | Water Inlet Valves |
| E4 | Water overflow | Water Inlet Valves |
| E5 | Motor failure | Motor +Electronic Module |
| E6 | Communication between display & electronic module | Communication Cable |
| E7 | Washing heater failure | Washing Heater |
| E8 | Washing thermistor failure | Washing Thermistor |
| E10 | Water level sensor failure | Water Level Sensor |

QUESTIONS / SERVICE

Phone/Text : 1-800-776-3538

Email: Service@ApplianceDesk.com

QUICK START GUIDE

INSTALLATION



Unscrew shipping rods with phillips screw driver. Release red tag to free power cord



Pull out shipping rods (2)



Re-install the 2 screws



Close the empty space with the blanking plug enclosed.

CONNECTIONS



Connect hot & cold water hoses (included)



Insert hose into U-connector and insert into standpipe or over sink 24"-40" high



Plug power cord into 110V/60Hz/15A outlet


LAUNDRY PREP



Load clothes in the machine



Use liquid fabric softener. Items tumble more freely and dry faster.

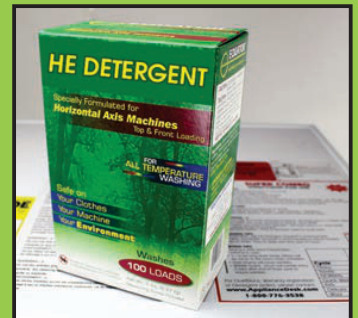

Important: Use High-Efficiency(HE) Detergent-approx. 1 tablespoon


OPERATION



Wash Only:

1. Turn knob to wash setting
2. START (Standard settings, for custom select accordingly)

MAINTENANCE

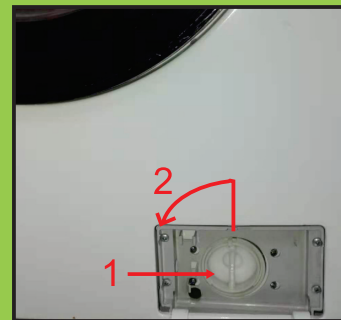

1. Open coin trap door
2. Rotate handle anti-clockwise. Clean interior. Fix cover back. Close flap.