 


Desk 012 with Lighted Mirror

50CM | SZT012

Assembly Instructions

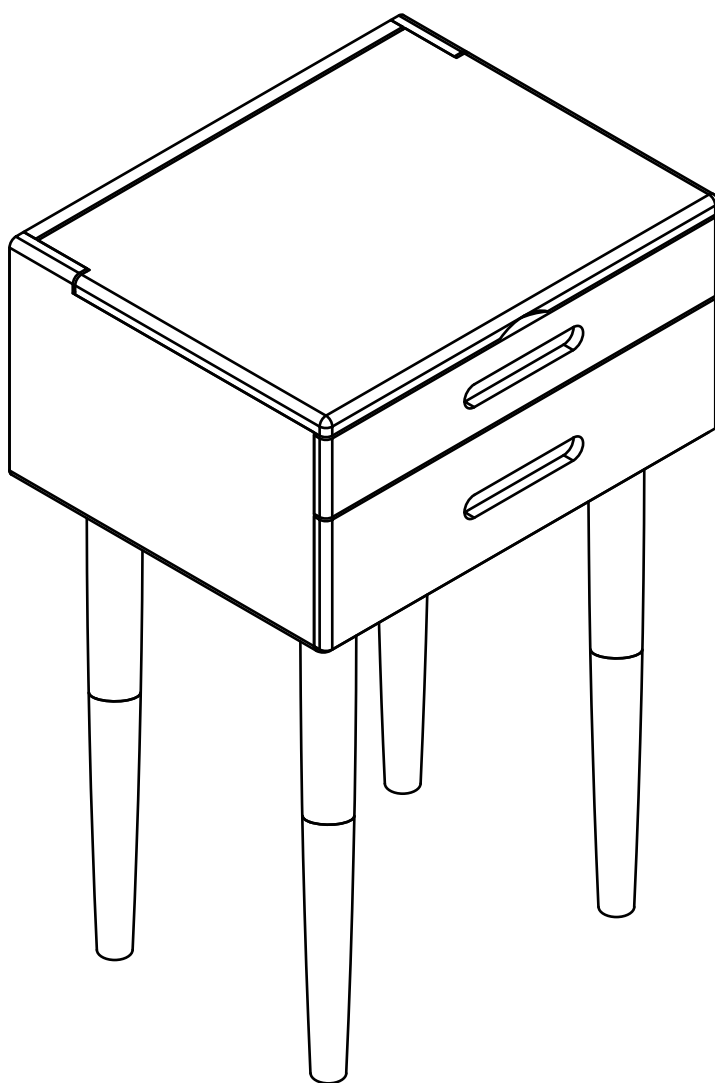

Before Assembly


Check all parts and hardware against these instructions before assembly. Contact the seller if anything is missing or damaged.

Items marked "Installed" are already fitted to the product and are not included in the hardware bag.

Important: match upper and lower leg sections with the same part number. Do not mix sections with different numbers.


Parts List

1 Cabinet

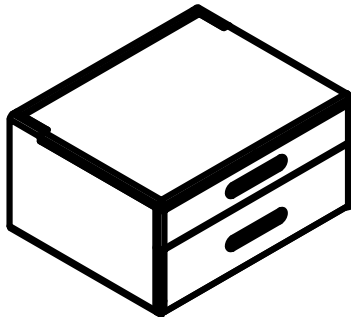

500 × 400 × 260MM

2 Table leg

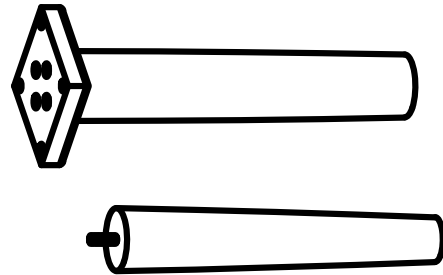


Upper: 80 × 80 × 277MM
Lower: Ø45 × 243MM

1 PC

1 upper + 1 lower section


3 Table leg

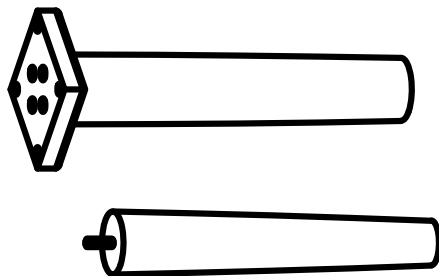

Upper: 80 × 80 × 277MM
Lower: Ø45 × 243MM

1 upper + 1 lower section

4 Table leg

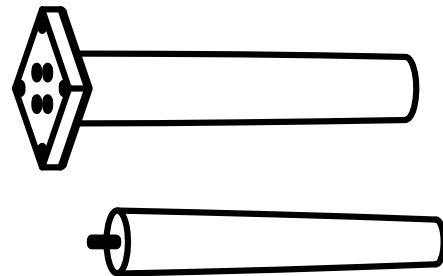


Upper: 80 × 80 × 277MM
Lower: Ø45 × 243MM

1 upper + 1 lower section

Parts List (continued)


5 Table leg

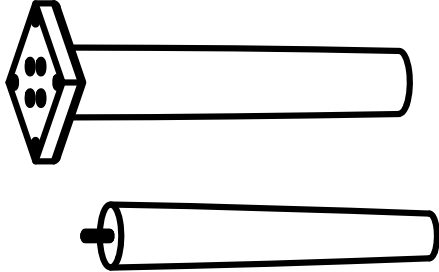

Upper: 80 × 80 × 277MM
Lower: Ø45 × 243MM

1 upper + 1 lower section


7 Lower drawer

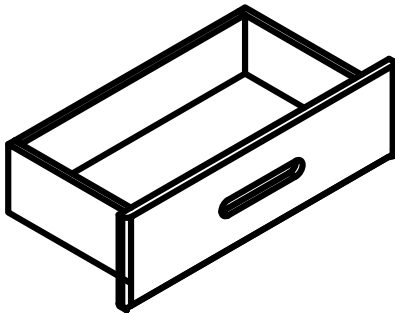

500 × 250 × 150MM

1 PC


6 Upper drawer

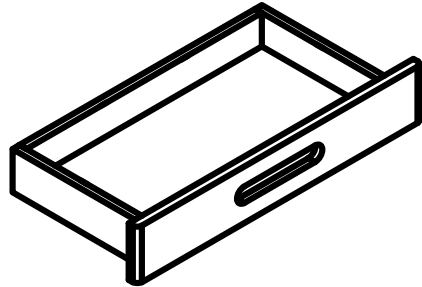

500 × 250 × 86MM

1 PC

8 Glass top

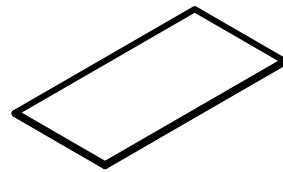

473 × 238 × 4MM


1 PC

Hardware List

A Hex socket bolt

M6 × 30MM


16 PCS

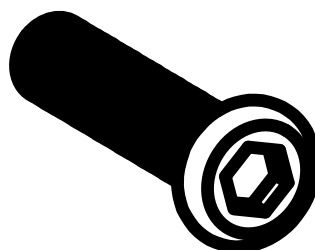

B Flat washer

M6 × 12MM


16 PCS

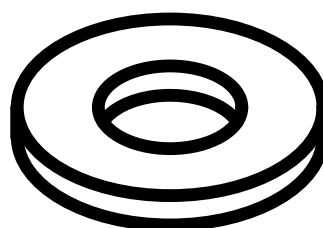

Anti-Tip Kit E


Components supplied in the kit

E1 Restraint assembly

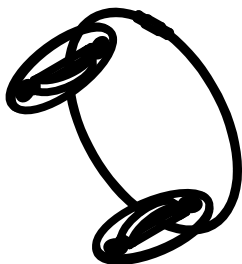

1 PC


E2 Screw

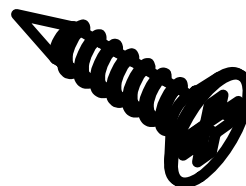

M3.5 × 14MM

1 PC


E3 Screw

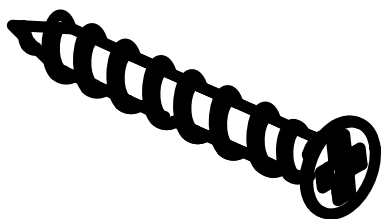

M4 × 35MM

1 PC

E4 Wall anchor

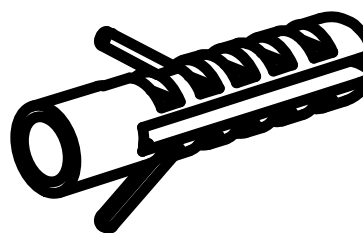

Ø8 × 30MM


1 PC

Tool & Installed Hardware

C Hex key

M4 × 100MM


1 PC (reusable)

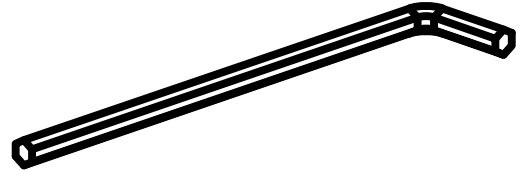

D Adjustable leveling foot

M6 × Ø19 × 20MM

4 PCS (installed)

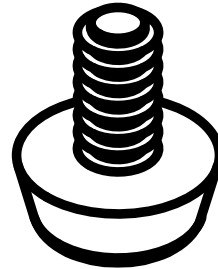


Step 1

Match upper and lower sections with the same leg number (2, 3, 4, or 5). Align their screw fittings and turn clockwise to tighten. Secure each assembled leg to the cabinet using bolts A, washers B, and hex key C.

A × 16 PCS; B × 16 PCS


Tool: C × 1 PC (reusable)

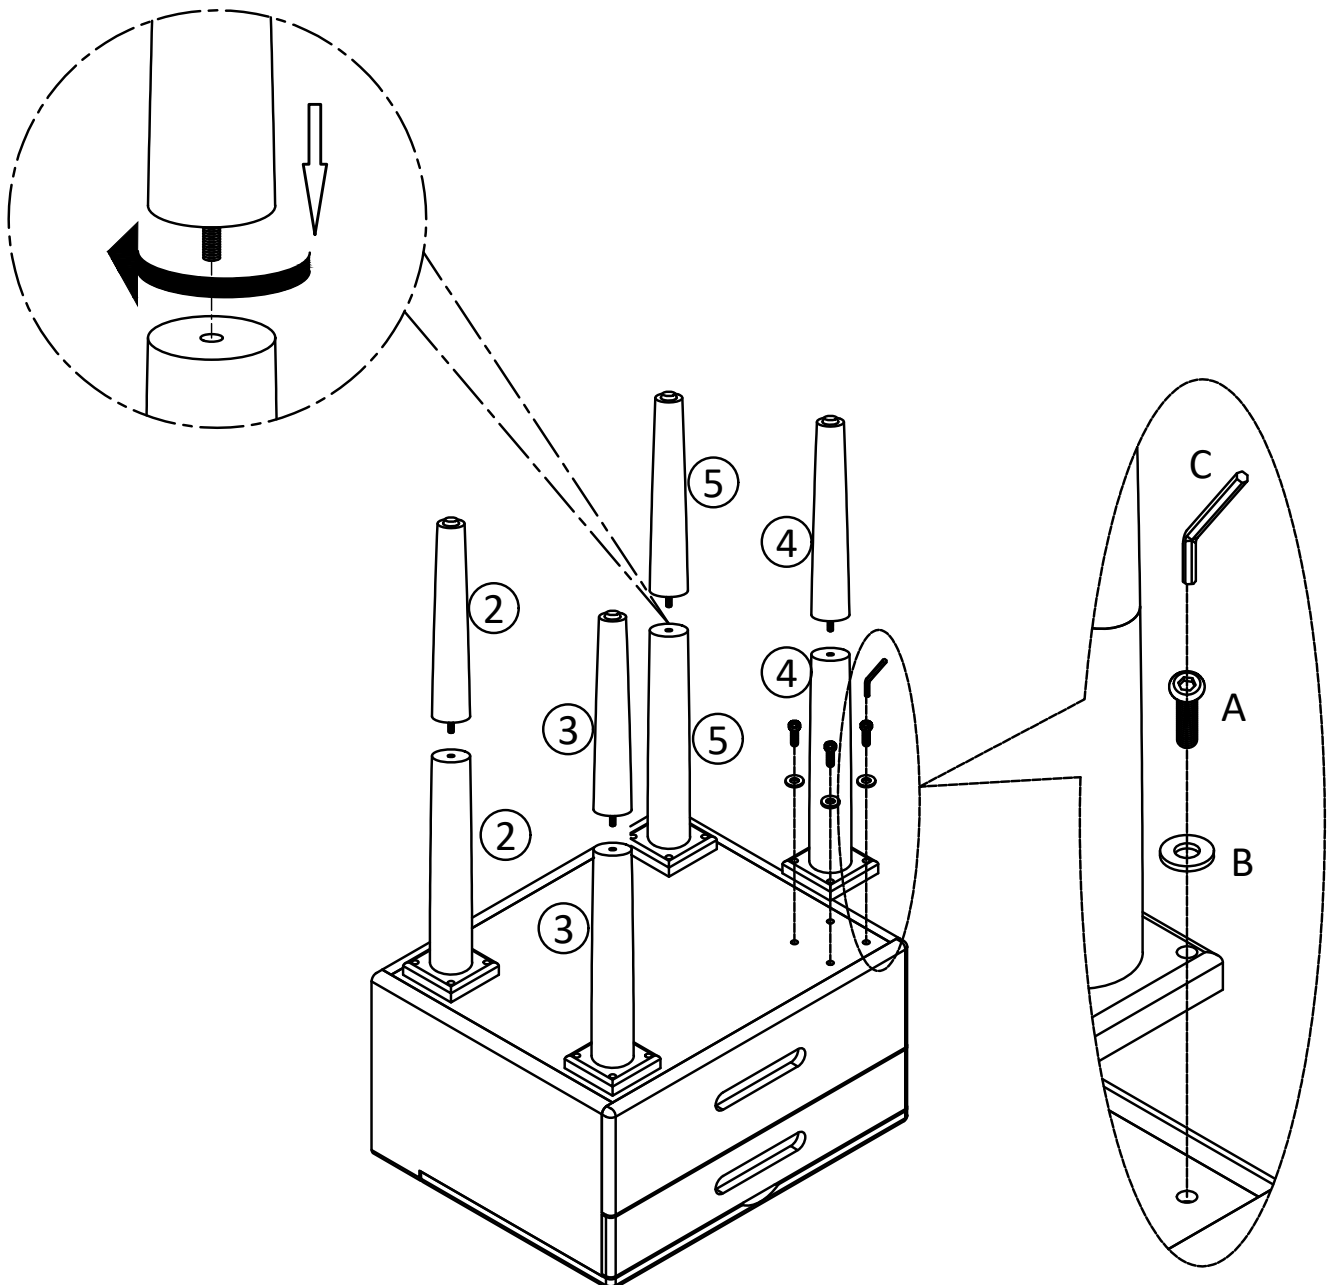

Step 2

If the tabletop is uneven, adjust leveling feet D at the bottom of the legs. Standard assembly is complete if you choose not to fit the anti-tip kit. The supplied anti-tip kit is optional; the desk can be used without it.

D: 4 PCS, already installed

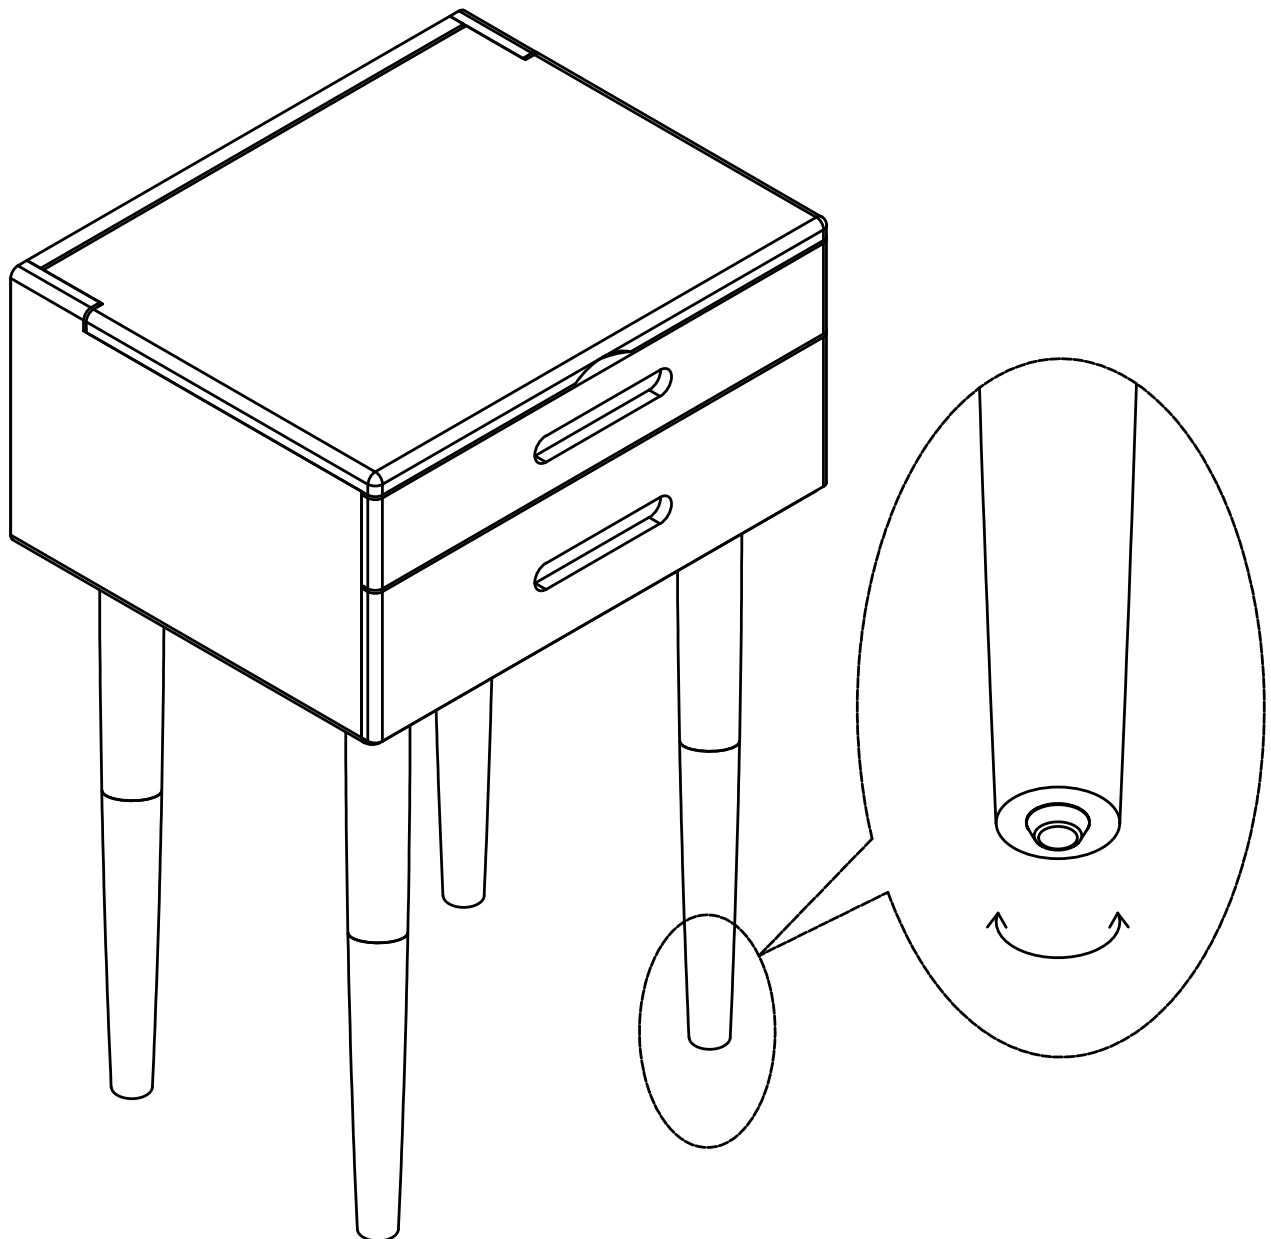


Step 3

Anti-tip kit installation: attach the cabinet-side fitting of E1 to the cabinet back panel using screw E2 and tool C.

E2 × 1 PC; E1: use the cabinet-side fitting

Tool: C × 1 PC (reusable)

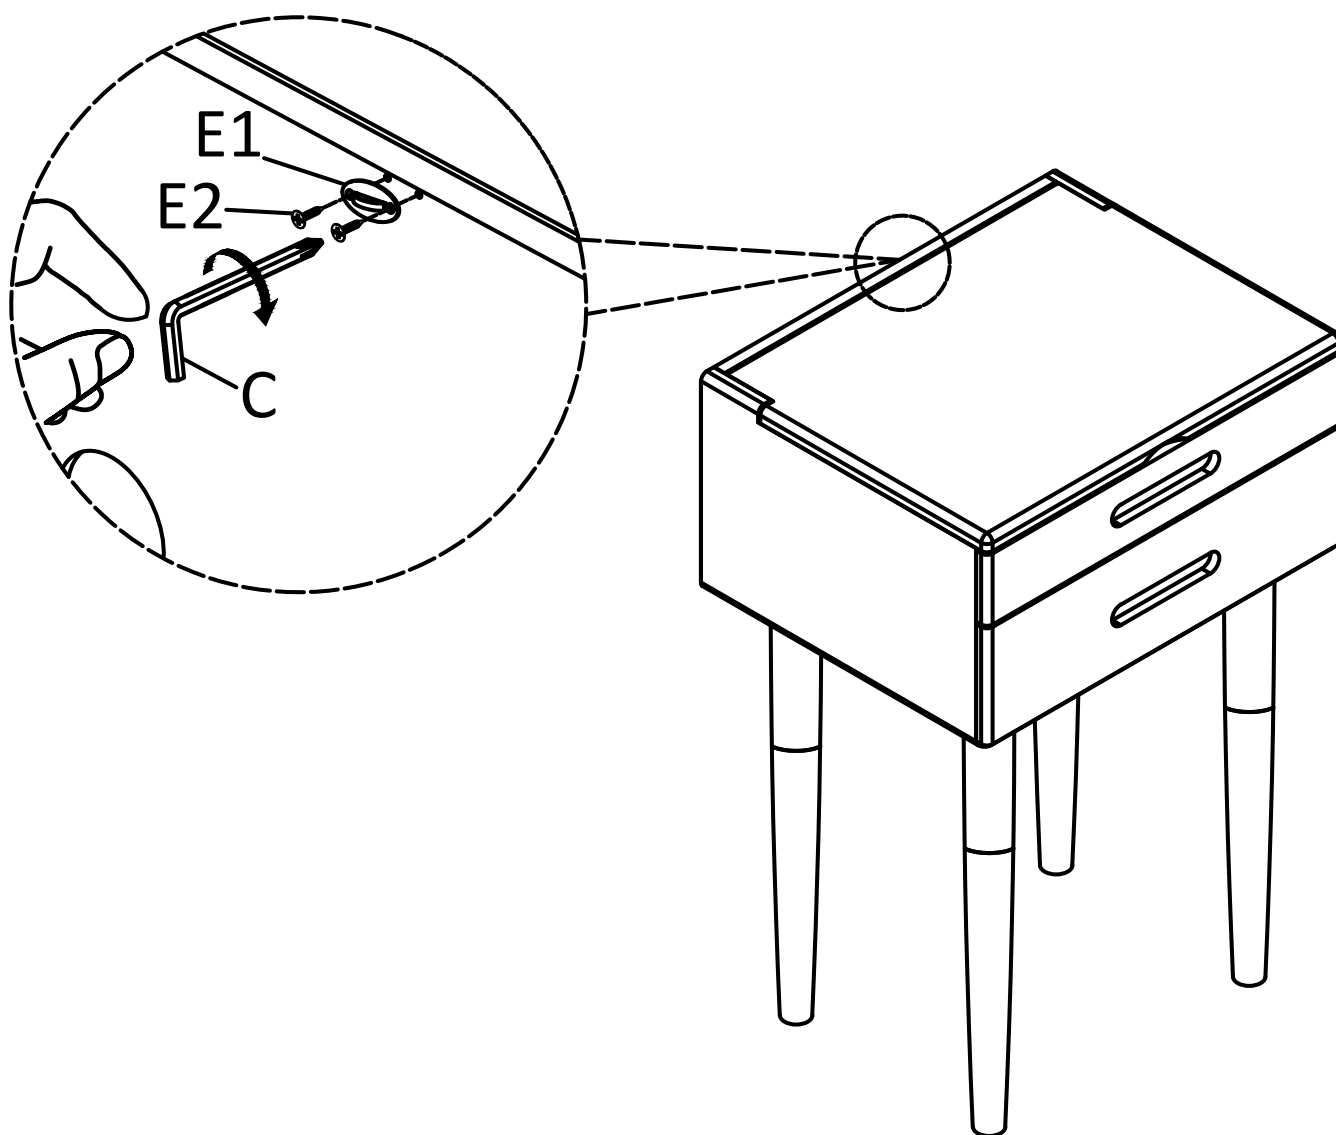


Step 4

Drill holes in the wall (drill not included) and insert wall anchor E4. Attach the wall-side fitting of E1 to E4 using screw E3 and tool C.

E3 × 1 PC; E4 × 1 PC; E1: use the wall-side fitting

Tool: C × 1 PC (reusable)

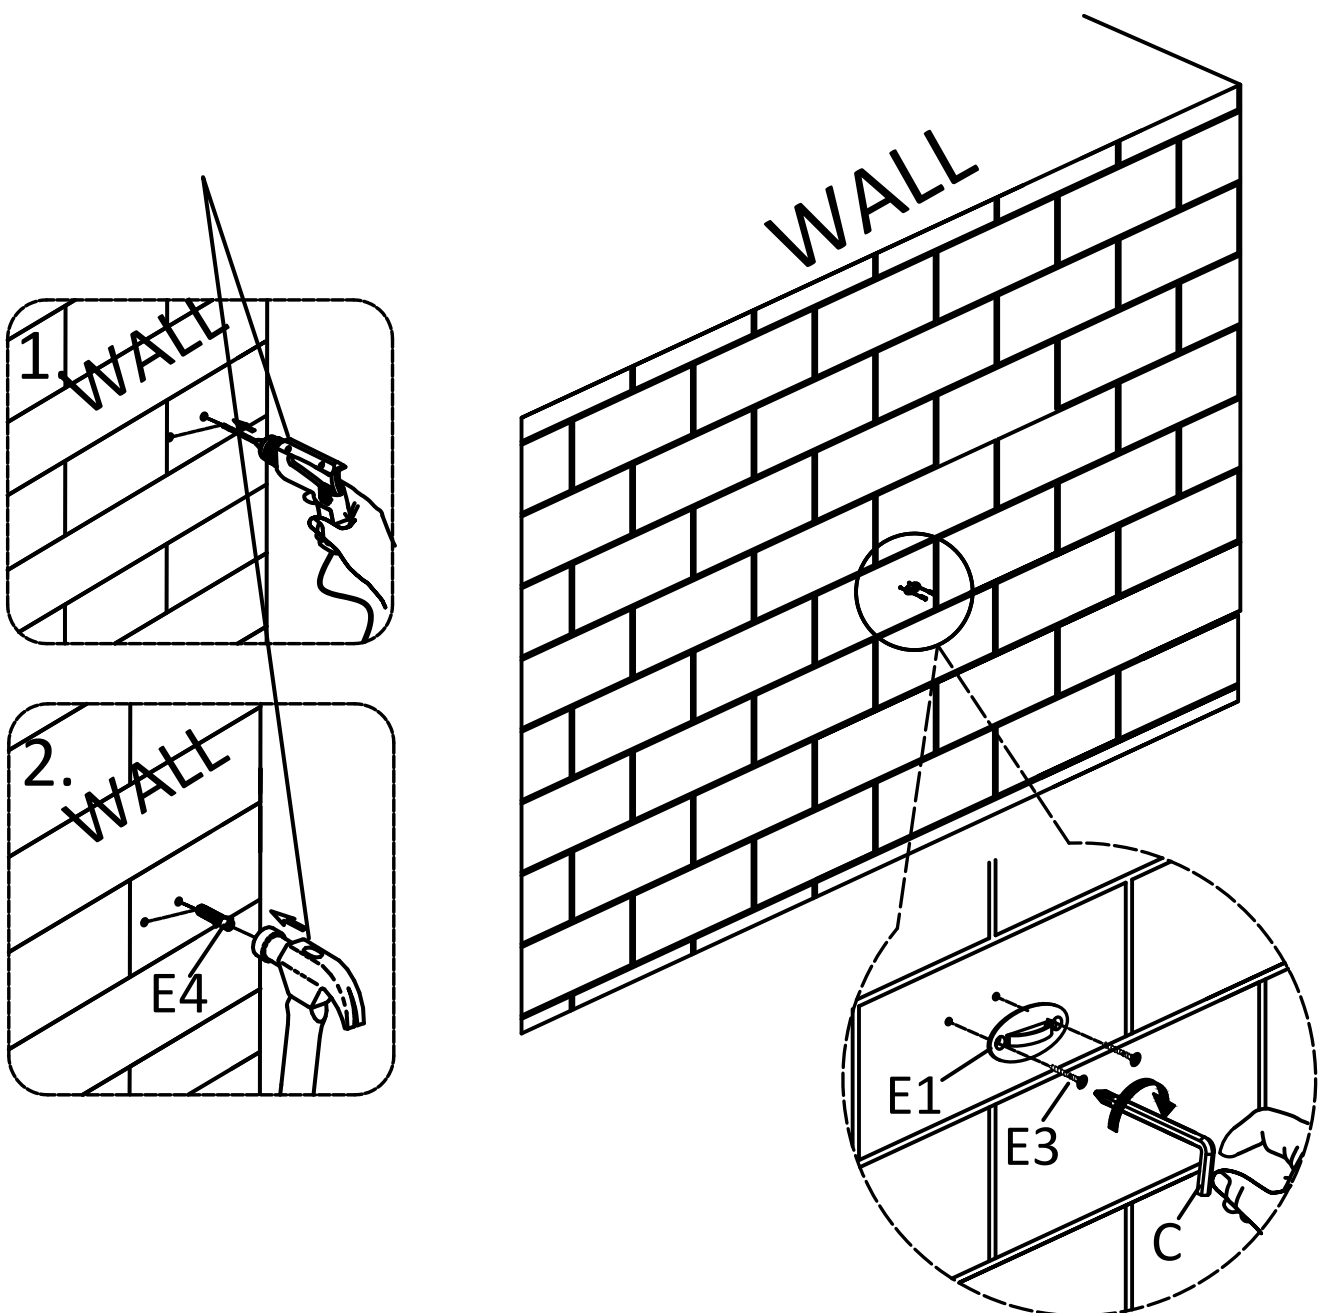

Step 5

Connect the wall-mounted fitting of E1 to the fitting on the cabinet back panel to complete assembly. Follow the safety illustrations below.

E1: connect the two fitted ends

