 


Purchase Date: ___/___/___ Order/Customer Reference Number: _____

Thank you for choosing us. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested with the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion. For warranty information, visit our website. If you have any questions, comments or concerns, feel free to contact us by phone, by email, or via our contact us page at our website.

TEAK SHOWER BENCH

Review all information before using this product. Save this manual for future reference.

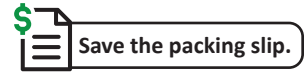

Proper maintenance helps teak furniture last a lifetime. Even though teak is naturally resistant to bacteria, mold, and mildew, if the bench is not properly cleaned water impurities and soap residue can build up. This build-up can compromise teak's slip-resistant properties so it is very important to clean the teak surface regularly.

IMPORTANT: Do not be aggressive when cleaning teak wood. Ensure any chemicals and detergents used are suited for and gentle on wood. Do not use harsh chemicals, abrasive materials, or a pressure washer.

Quick Clean – Following the direction of the woodgrain, apply water with a soft bristle brush (a mild soap+water solution may be needed for removing heavier build-up). Lightly scrub the teak surface as well as the underside. Then, thoroughly rinse the teak surfaces with clean water and allow to air dry. Quick cleaning every 3-4 weeks is typically sufficient.

Deep Clean – Consider purchasing a teak cleaning kit from a local home improvement store. Many kits come with everything needed; cleaning solution, scrubbing brushes, conditioning oil, an oil applicator, gloves and a rags for cleanup. Follow cleaning and oil application processes as directed by the kit manufacturer.

Weathered Teak – Light sanding may be required to remove any silvery patina. Sanding the entire piece is highly recommended. Use a clean, soft cloth to remove any dust. Apply a suitable teak conditioner.

When teak is cleaned, the natural surface oils are removed. Additional treatment and care is required to maintain teak integrity and appearance. Left untreated, teak wood will oxidize. This is the beginning of the aging process which results in a grayish/silver color to the surface. Apply a suitable wood oil such as teak, tung or linseed oil.

IMPORTANT: Oiling does not create a seal or barrier on the teak's exterior. Oiling teak is simply one way to enhance and maintain the appearance of teak wood.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, OR CLEANING PRODUCTS.

SAFETY STATEMENTS & WARNINGS

- Do not exceed the weight capacity.
- Do not allow children to use this product without adult supervision.
- Never stand on the stool.
- Do not use harsh chemicals or abrasive materials to clean the furniture.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with the product or it was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.