

# INSTRUCTION MANUAL




## Package Included



01 Water Fountain



02 Fountain Back Panel

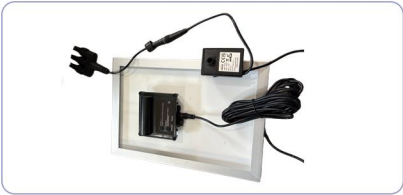

03 Solar Water Pump



04 USB Charging Cable



05 Gardening Glove



06 1 Pound Pebbles



07 Solar Panel



08 KD Part

*\*The water pump and transformer are housed in the same small box.*

# Contents

- Package Included ..... 1
- Replacement and Water Pump ..... 2
- Assembly Instructions ..... 3
- Troubleshooting and Solutions ..... 5
- Warranty & Return Policy ..... 6
- Maintenance & Care ..... 6

## Replacement and Water Pump

### REPLACEMENT PART

| No. | Model       | Picture |
|-----|-------------|---------|
| 1   | Solar Pump  |         |
| 2   | Solar Panel |         |
| 3   | LED Lights  |         |

### WATER PUMP PARAMETERS

|                   |                             |
|-------------------|-----------------------------|
| Solar Panel       | 10W-9V                      |
| Operation Voltage | 8V DC                       |
| Qmax              | 492LPH                      |
| Hmax              | 1.24M                       |
| Cable Length      | 5M                          |
| Lithium Battery   | 7.4V 2000mah = 3.7V 4000mah |

### HOW TO ADJUST THE FLOW

- Always isolate the electrical mains supply before touching or adjusting the pump.
- The pump flow can be adjusted with the regulator, this is found on the inlet of the pump.
- Adjustments up to 30%. Turn clockwise for full flow / anti-clock-wise for reduced flow.



### Assembly Instructions

1



Wear protective gloves. Take the water hose and LED cable from the bottom of the water fountain.

2



The pump's long power cord exits through a hole from the inside out. Attach the longer pump cable to the solar panel and tighten the nut securely. Connect the shorter cable to the LED light cable and tighten the nut.

3



Connect the fountain hose to the pump and place it inside the fountain, positioning the pump against the inner wall at the bottom.

4



Add water through the fountain inlet until the water level is about 2 inches above the pump.

3

5



Organize the cables. Route the cables through the notch in the back panel, then slide the panel into its designated position. Place the flower pot in the planting position.

6



Assemble the solar panel , Place the panel at a 20-30 degree angle for charging. Press the solar button switch to start.

7



Add decorative pebbles. Place pebbles on each tier of the fountain as desired, taking care not to block the water return outlets.

\* Place the fountain base on a smooth level surface.

\* When first using the fountain, air may be trapped in the pump. It may take a few minutes for the water to flow smoothly.

4

### Troubleshooting and Solutions

| Trouble                         | Solutions                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Pump not working                | <ul style="list-style-type: none"><li>Make sure the pump is fully submerged, with at least 2-3 inches of water above it.</li><li>Clean the pump impeller, built-in black sponge and water inlet to remove debris and blockages.</li><li>Check all power connections, including the outlet, transformer, and pump plug.</li></ul>                                                           |
| If the pump makes unusual noise | <ul style="list-style-type: none"><li>Turn off and unplug the power supply.</li><li>Remove the front cover of Pump.</li><li>Carefully hold and remove the impeller/rotor assembly.</li><li>Rinse the impeller assembly with clean water and clean the pump chamber.</li><li>If any damage is found, contact your local dealer to replace the part.</li></ul>                               |
| Low water flow                  | <ul style="list-style-type: none"><li>Add water to prevent low water level.</li><li>The pump or tubing may be blocked. Clean the pump and tubing.</li></ul>                                                                                                                                                                                                                                |
| LED Lights not work             | <ul style="list-style-type: none"><li>Check transformer connection is tight and secure.</li><li>Reconnect the dual-pin interface, ensuring the interface is dry.</li><li>If none of the lights illuminate, it may indicate a transformer malfunction.</li><li>If only some LEDs are out, they may be faulty.</li></ul>                                                                     |
| If the lights are flickering    | <ul style="list-style-type: none"><li>Often caused by algae or mineral scale on LED contacts.</li><li>Clean pump and fountain.</li></ul>                                                                                                                                                                                                                                                   |
| White/Green Residue             | <ul style="list-style-type: none"><li>Mineral buildup (limescale) or algae growth may occur. This is not a device malfunction. Please clean the fountain and pump regularly. Using distilled water can help minimize limescale buildup.</li></ul>                                                                                                                                          |
| Water Leakage                   | <ul style="list-style-type: none"><li>Place the fountain on a flat, level surface.</li><li>Do not overfill the basin.</li><li>Natural evaporation will occur, refill with water as needed.</li><li>If water leaks from a seam, apply a waterproof sealant to repair it and contact us for compensation.</li><li>If the fountain is damaged, please contact us for a replacement.</li></ul> |

*\*If you have further product questions, feel free to reach out.*

5

### Warranty & Return Policy

#### 01 / RETURN POLICY

- Returns within one month of purchase date: Free return service provided
- Returns after one month: Buyer responsible for return shipping cost
- Non-quality issue returns: Buyer responsible for half of the shipping costs
- Purchase within one month, if you find a lower price, don't need to return and please contact to get reimbursed for the difference.
- Please contact the seller through your purchasing platform to get a prepaid return label.

#### 02 / WARRANTY TERMS

- 30-Day Free Return policy. 1-Year warranty for non-artificial damage.

#### 03 / NOT COVERED UNDER WARRANTY

- Pump smells of burning residue.
- Discoloration resembling rust.
- Visible algae or limescale buildup on the pump.
- Paint and/or surface damage/discoloration due to limescale.If any of the above is noticeable, the warranty will void due to likely improper maintenance.
- If the proof of purchase shows the product was bought within 1 Year, free charge replacement part can be supplied.

### Maintenance & Care

#### Fountain Care Guidelines

- Winter Care: Bring Indoors if Possible (e.g., garage or shed). If freezing is a concern, drain all water to prevent damage.

#### Fountain Cleaning Tips

- To empty the fountain of water for cleaning or for winter care:
- For smaller fountains, invert and let water pour away forcleaning.
- For larger fountains, use siphon pipe for water removal. Always power off before cleaning or maintaining the fountain or pump.

Note: Stains may be present, this does not imply the fountain is second-hand. The testing water may not dry before repacking, causing stains upon opening the package.

6