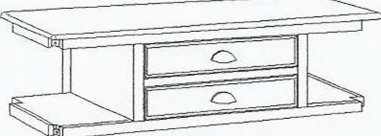
 
 



 


ASSEMBLY INSTRUCTION


SERVER

- | | | |
|--|--|--|
| A Server Top

1 pc | B Shelf

1 pc | C Server Leg

4 pcs |
| D Hex Bolt
5/16" x 2 1/2"

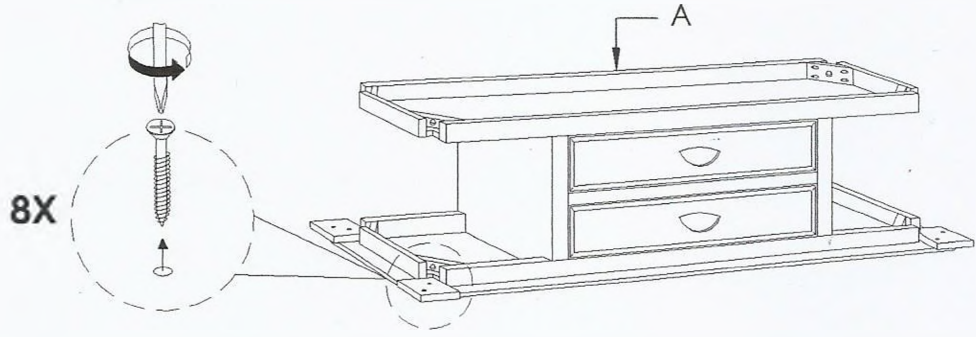12 pcs | E Flat Washer
M8 x 16mm

12 pcs | F Spring Washer
5/16"

12 pcs |
| G Wrench

1 pc | | |




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Turn the Server (A) upside down on a protective surface such as carpet or other soft material. Remove the square block which screw at the four corner of Server Top. Turn the screw anti-clockwise. See diagram below.




- 2** Turn the Server (A) upside down and place it on a piece of cloth to prevent from scratching. Attached Leg (C) to the back corner block of Server (A) . Tighten the Legs (C) with Flat Washer (E), Spring Washer (F) and Hex Bolt (D) and tighten it using Wrench (G).

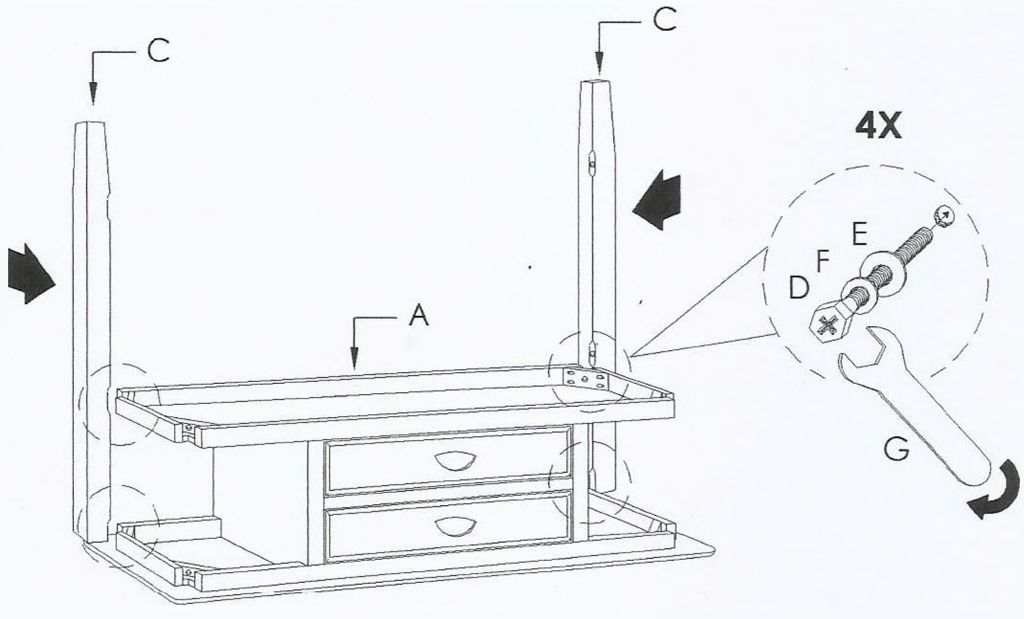

3 Align the holes of Shelf (B) corner block to the Server Leg (C). Tighten the Shelf (B) with Flat Washer (E), Spring Washer (F) and Hex Bolt (D) and tighten it using Wrench (G).

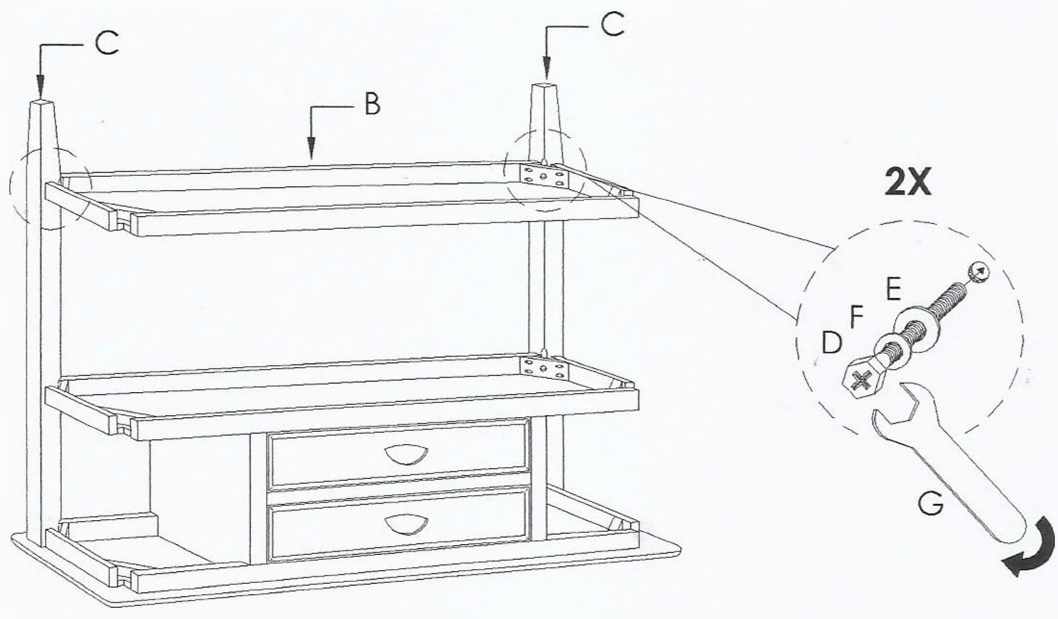

4 Repeat Step 2 and 3 to the other Legs (C).

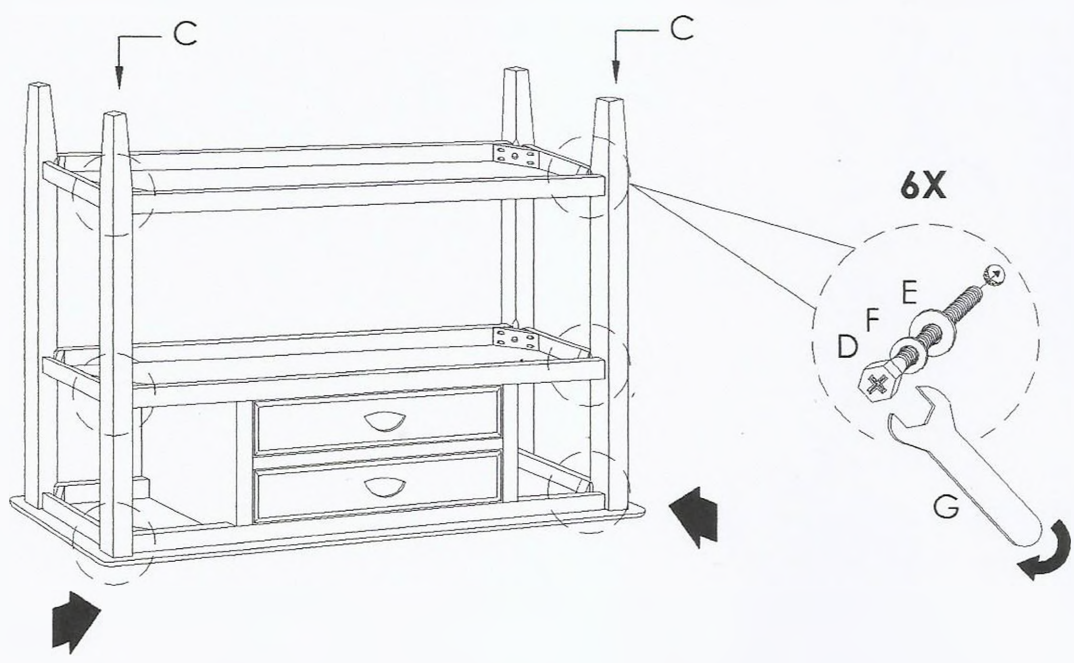

CLEANING & CARE

Treat surface with care. Surface is resistant to scratches but is not scratches resistant. Clean surface with a dry or dampsoft cloth. Do not use abrasive cleaners. Hardware may loosen overtime. Priodically check that all connections are tight.