 


INSTRUCTION MANUAL

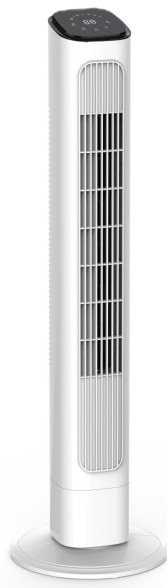

80CM TOWER FAN WITH REMOTE CONTROL

MODEL NO. RTW-GR36

AC220-240V 50/60Hz 45W

BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.

BEFORE FIRST USE

Read and follow all the instructions in this “Use And Care” manual even if you feel you are familiar with the products, and find a place to keep it handy for future reference.

Your attention is drawn particularly to the sections concerning “IMPORTANT SAFEGUARDS”

IMPORTANT SAFEGUARDS

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

When using the electrical appliance, the following basic safety precautions should always be followed.

WARNING- to reduce the risk of fire, electric shock or injury to persons or property:

- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Do not use this fan with any solid state speed control device to reduce the risk of electric shock.
- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.**
- **Children shall not play with the appliance.**
- **Cleaning and user maintenance shall not be made by children without supervision.**
- The appliance is not intended for use by persons (including children) with reduced physical, sensory, mental capabilities or lack of experience and knowledge,

unless they have been given supervision or instructions concerning use of the appliance by a person responsible by their safety.

 
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the fan running unattended.
- Do not operate the product if it is dropped, damaged or showing signs of product malfunction. Do not operate the product with a damaged plug or cord. Return the complete product to the place of purchase for inspection, refund or replacement.
- If it is not working properly, contact a qualified electrician or service centre for examination and repair, never try to dismantle it by yourself.
- Do not immerse or expose the product or flexible cord to rain, moisture or any other liquid.
- This product should not be used in the immediate vicinity of water, such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing could occur.
- Never install the unit where it could be subject to:
 - Heat sources such as radiators, heat registers, stoves or other products that produce heat
 - Direct sunlight
 - Mechanical vibration or shock
 - Excessive dust
 - Lack of ventilation, such as a cabinet or bookcase
 - Uneven surface
- Switch off and unplug from outlet when the product is not in use, before assembling or disassembling parts and before cleaning. Fully assemble the fan before switching on.
- Avoid contact with moving parts. Do not insert any body

parts (e.g. finger) or objects through the grill when the fan is operating.

- Do not cover the grille, or operate in close proximity to curtains, etc.
- This product is intended for normal domestic/household use only.
- Always disconnect the fan when moving it from one location to another.
- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- Be sure fan is on a stable surface when operating to avoid overturning.
- Do not immerse in water.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent, or similarly qualified person, in order to avoid a hazard.

READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

FEATURES OF THIS PRODUCT

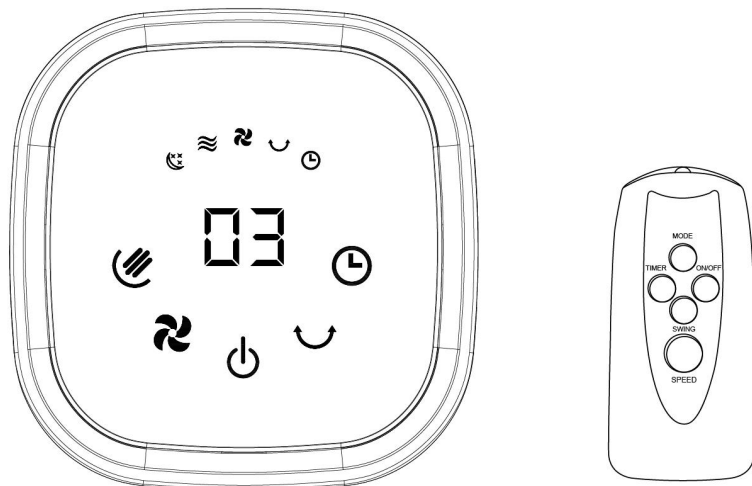


ON/OFF	SPEED	SWING	TIMER	MODE

PRODUCT ASSEMBLY


Remove the cable tie and unravel the cord set before assemble and operation.

CAUTION: Ensure the product is fully assembled before plugging it into an electrical outlet.

 
Step 1: Install the base, align it with the base slot, and buckle both sides of the base directly.

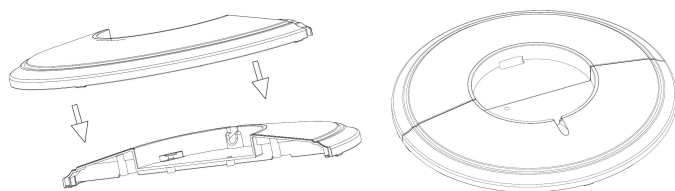

 Step 2: Align the power cord of the main unit with the reserved power cord groove on the base, and install the main unit on the base. The three buckles on the main unit will firmly fix the base on the main unit.

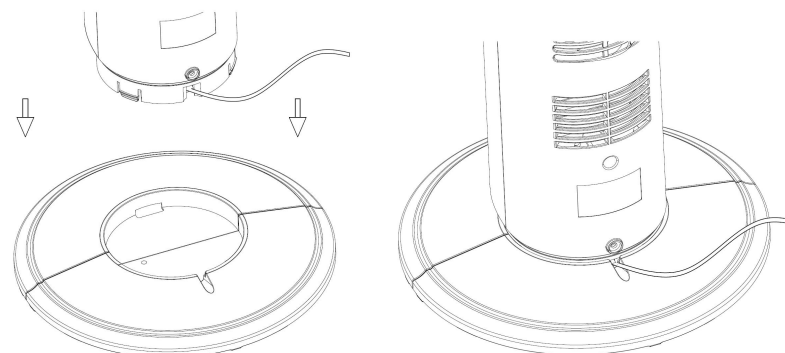

 Step 3: Install the base fixing screw.

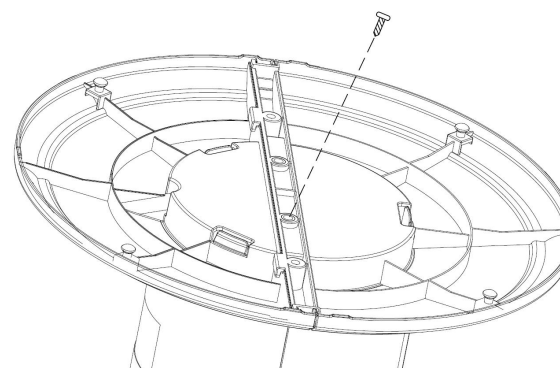

OPERATION OF THE PRODUCT

CAUTION: Fan must be assembled with the base before use!

- Place your fan on a level and dry surface, keeping in mind the safety precautions outlined.
- Plug the fan into a suitable mains socket (see technical specifications for details).
- The fan can be operated by using the manual controls, or by using remote control.
- Insert 2 x AAA size batteries (not included) into the remote control.
- Remote control operations are identical to the functions on the fan control panel.
- The LED on the fan Body control panel will illuminate according to your selection.
- To turn the Tower Fan on press the On/Off button, the fan will start at low speed (01). To turn the fan off, press On/Off button again.
- To adjust the fan speed to the desired level, by pressing the 'SPEED' button, the speed setting will be

adjusted from Low (01) to Medium (02) and to High (03).

- This Fan is equipped with a 1-9 hours timer. This enables you to preset the appliance to switch off automatically at a chosen number of hours ahead. Press the TIMER button repeatedly to select 1H, 2H, 3H, 4H, etc., to a maximum time setting of 9H.
- Press the MODE button to choose the desired mode, this unit has three blowing modes: normal, sleeping, and

natural. 'Natural'  and 'Sleep'  display on the control panel. Keep pressing the MODE button to circulate the three wind types. The corresponding indication lamp will light up for Natural and Sleep mode.

- To start or stop the fan oscillating, press the 'Swing' button.

NOTE: As a result of continual product improvements, the design and specifications may slightly differ from the unit illustrated on the packaging.

CLEANING

WARNING: ALWAYS UNPLUG THE UNIT BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE POWER CORD, PLUG OR THE WHOLE UNIT INTO WATER, OR RINSE IT UNDER THE TAP!

Caution: Do not use detergent, gasoline, benzene, thinner, or other solvents to clean the unit, to avoid damaging the appliance.

- Unplug the unit and wait until the fan stops running before cleaning.
- Use a damp cloth to clean the surface of the fan.
- We recommend cleaning the fan once a month.
- It is not recommended to take the fan apart, except by the authorized agent or any agent qualified to undertake electrical repairs.
- If the fan will not be used for a long time, store in a cool, dry and safe place, away from heat and direct sunlight.