 


# ASSEMBLY INSTRUCTIONS

---

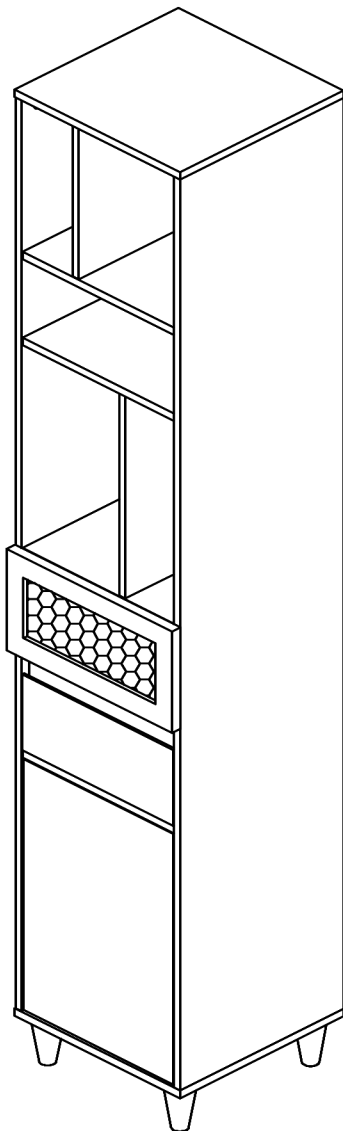

## TOOLS REQUIRED



### Hammer

(Not Included)



### Philips Screwdriver

(Not Included)



**2 - People  
Recommended**

## ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



## **CHECK BEFORE STARTING**

☐

### **Are you missing anything?**

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.

☐

### **Check out our Quick Tips!**

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

### **Should we send any replacements?**

Are there any irregularities or flaws in the parts? We can send replacements!

 
☐

### **Prep Time!**

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.



# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

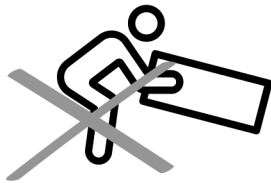

## Teamwork

  ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

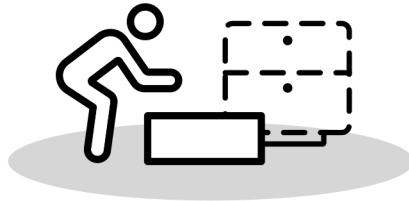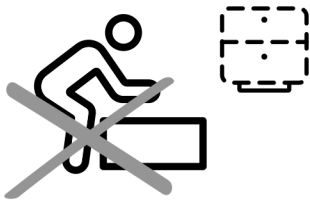


## Suitable Location

Assembling near the area of the intended location is highly recommended.





## Sufficient Space

 Make sure you have enough space to move around during the assembly.

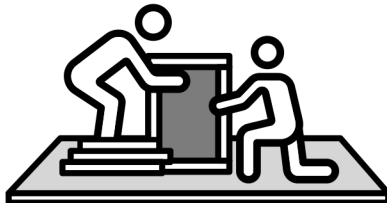

## Avoid Scratches

  Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

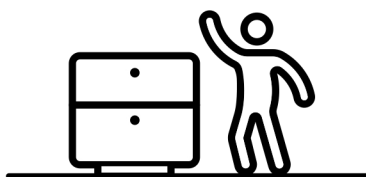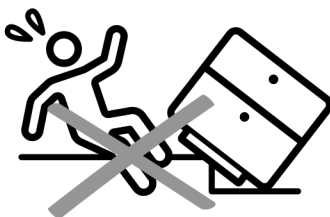

## Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

 
# ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY  
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly  
and insert screws or bolts into  
their respective holes.

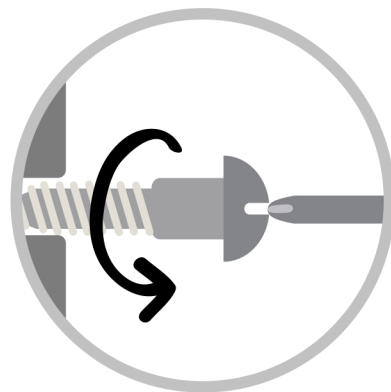


Turn clockwise to tighten and  
only tighten when step is  
completed or when instructed  
to do so.



Save the instructions and store  
any supplied tools for later  
maintenance.

 Use the appropriate hand tools  
or power tools for assembly.  
Select steps, such as tightening  
screws and/or bolts, may require  
hand tools to avoid causing  
damage during assembly.

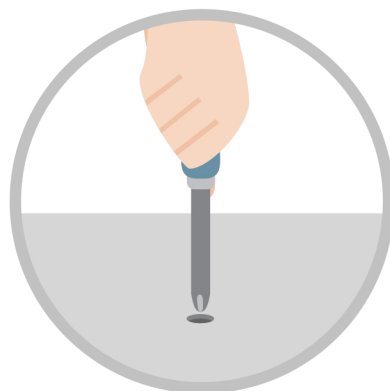

After two weeks, check and  
tighten any loose hardware and  
repeat again every six months  
thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



# CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS
 
## Note :


Every cam lock bolt must have a cam lock connector in order to fasten the parts together.




cam bolt



 cam lock

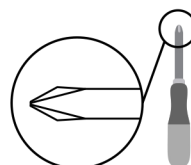


screwdriver

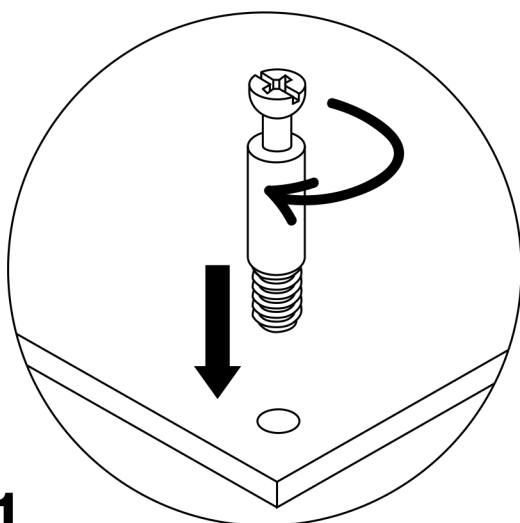 


**1**

 Screw the cam bolt into panel.

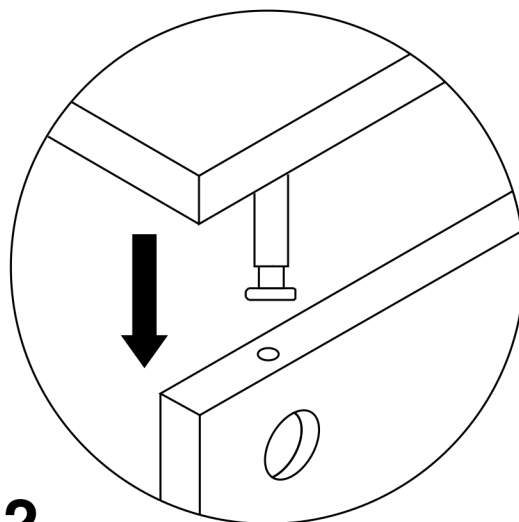


**2**

 Insert the cam bolt into the bolt hole of joint panel.

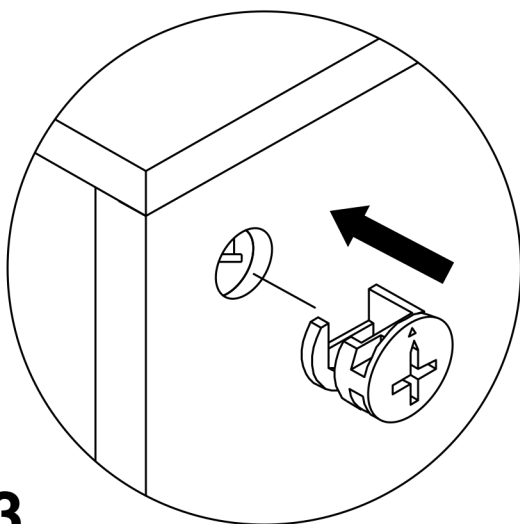

**3**

 Align the cam lock with its side opening (or arrow) pointing to cam bolt.

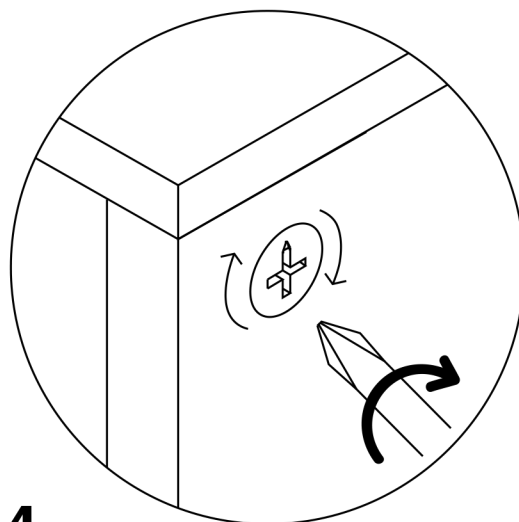


**4**

Turn the cam lock clockwise gently until it will not turn any more.


# TV TOWER



 
- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

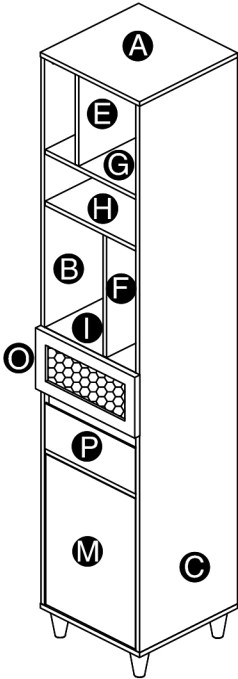


## PARTS

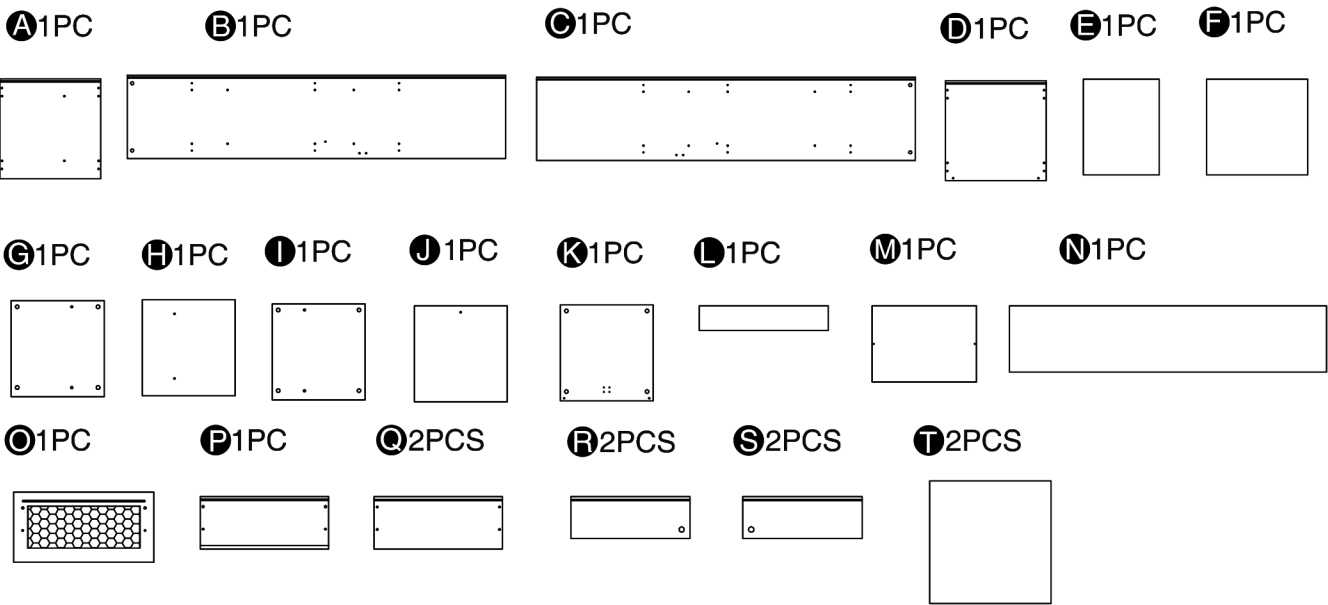 

## HARDWARE

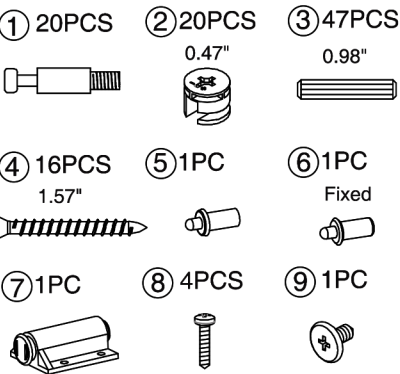 


## ACCESSORIES

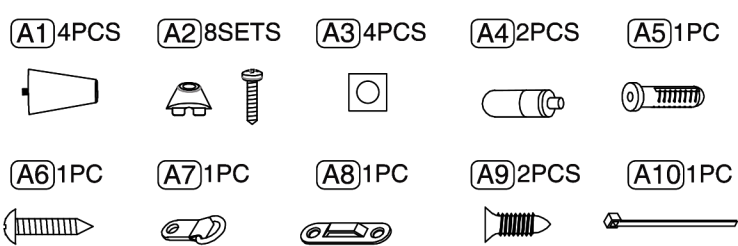 


# GET READY

Please group boards as below.

 ⓪1PC



Ⓟ1PC

 

Ⓠ2PCS



Ⓡ2PCS



Ⓢ2PCS



Ⓣ2PCS

 


Drawer

ⓔ1PC



ⓖ1PC




Ⓛ1PC




ⓗ1PC



 
ⓘ1PC



Ⓤ2PCS

 


Ⓛ1PC

 


ⓑ1PC



 
Ⓚ1PC




ⓒ1PC

 


Ⓐ1PC

 

Ⓝ1PC

 

Ⓓ1PC

 

Body

Ⓜ1PC




Doors

# ASSEMBLY INSTRUCTIONS
 
## 1

Hardware ① x 4PCS

Hardware ③ x 4PCS

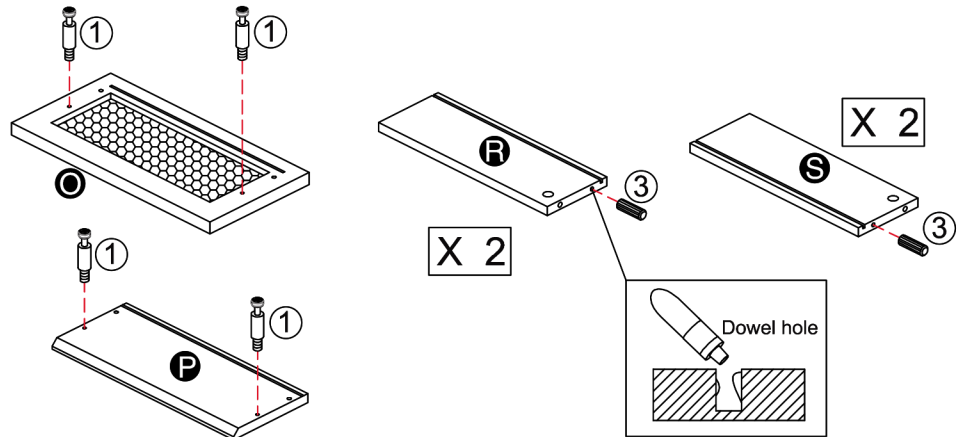

## 2

Part ① x1PC

Part ② x1PC

Part ③ x2PCS

 
 
Part ④ x2PCS

Part ⑤ x2PCS

Part ⑥ x2PCS

Hardware ② x 4PCS

Hardware ④ x 8PCS

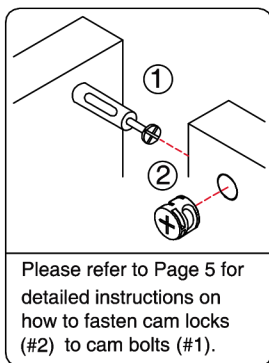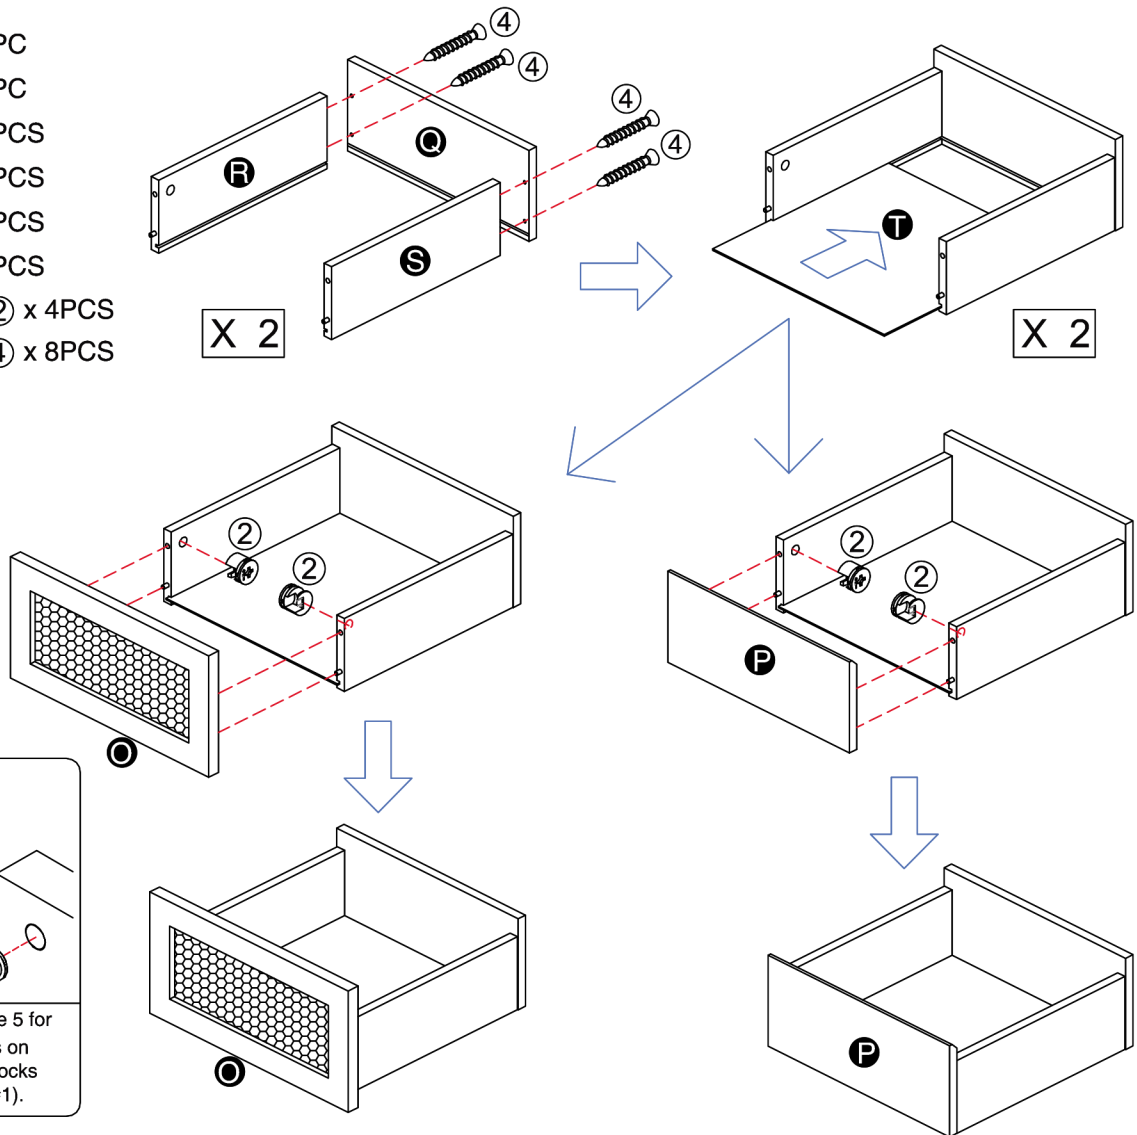


# ASSEMBLY INSTRUCTIONS

## 3

Hardware ① x 16PCS

 Hardware ③ x 28PCS

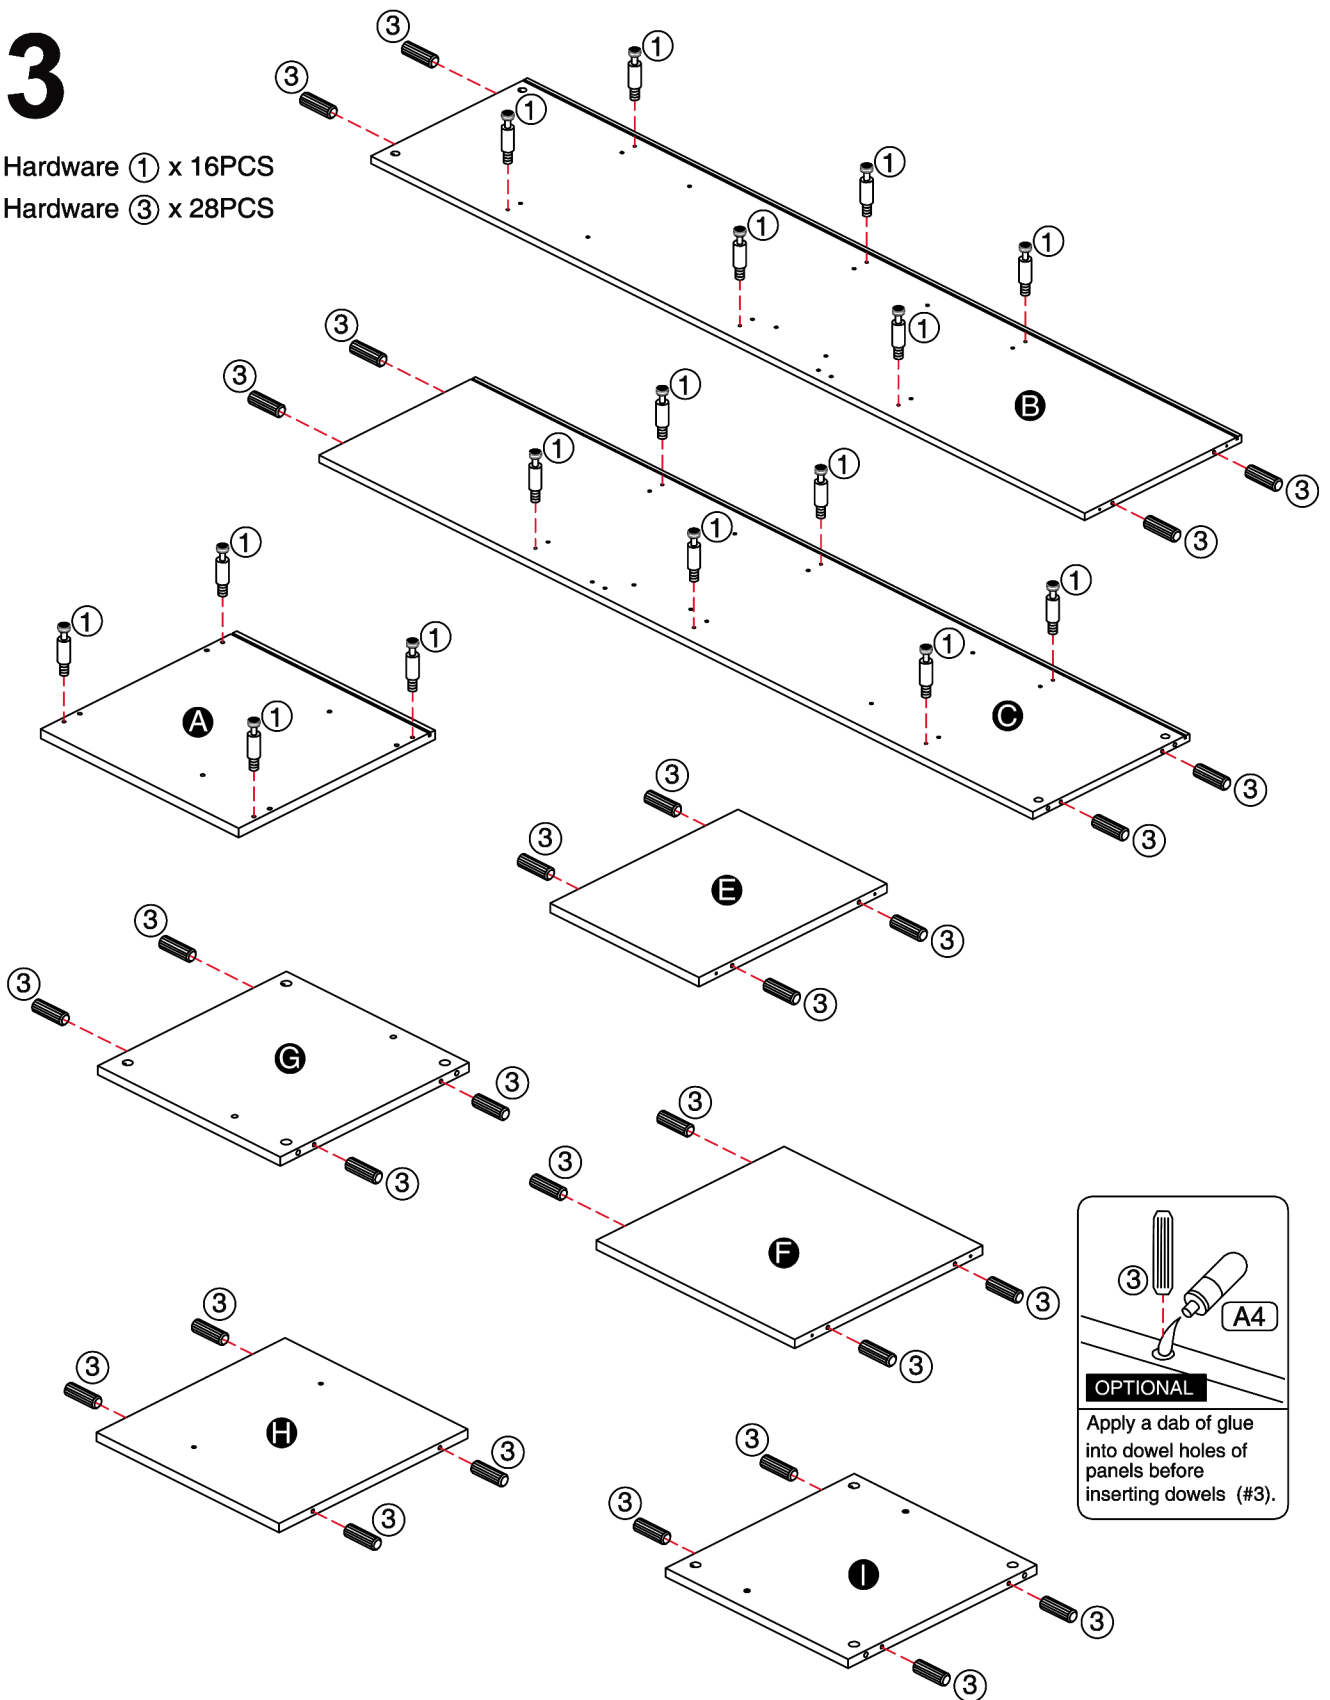


# ASSEMBLY INSTRUCTIONS

## 4

Hardware ③ x 13PCS

Hardware ⑦ x 1PC

 Hardware ⑧ x 4PCS

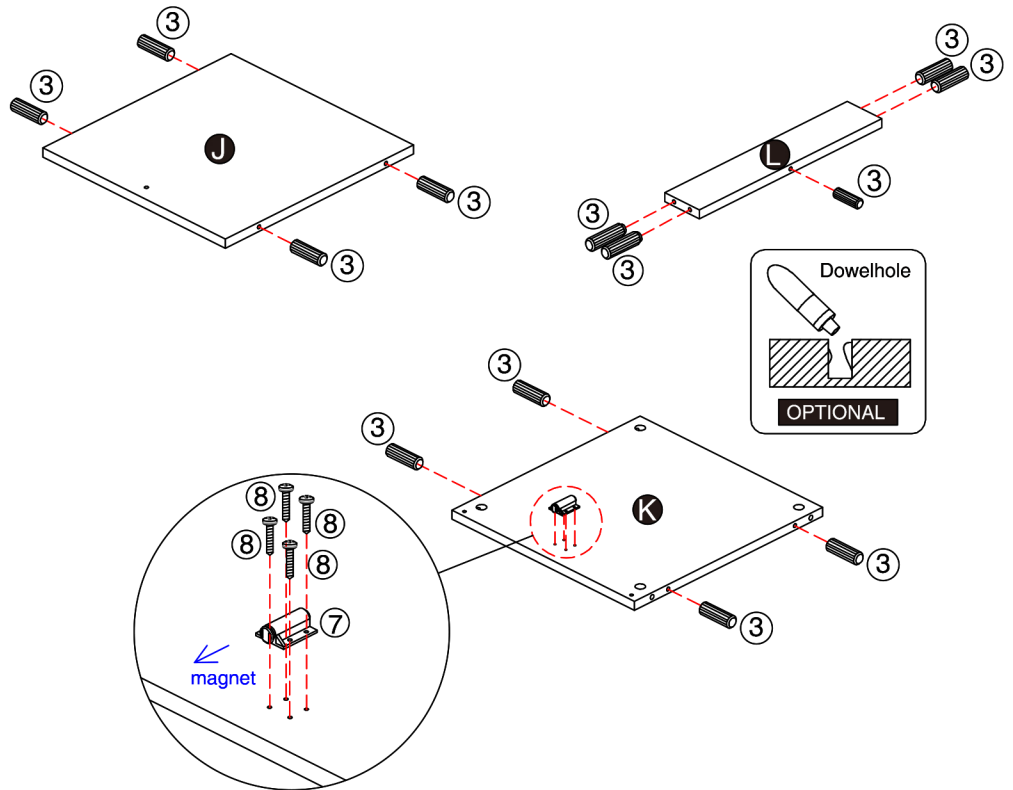


## 5

Part ⑤ x 1PC

Part ⑥ x 1PC

 
Hardware ④ x 2PCS

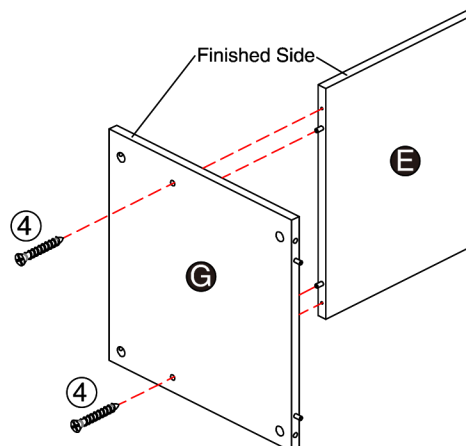

# ASSEMBLY INSTRUCTIONS


## 6

 - Part **F** x1PC
- Part **H** x1PC
- Part **I** x1PC
- Hardware **④** x 2PCS

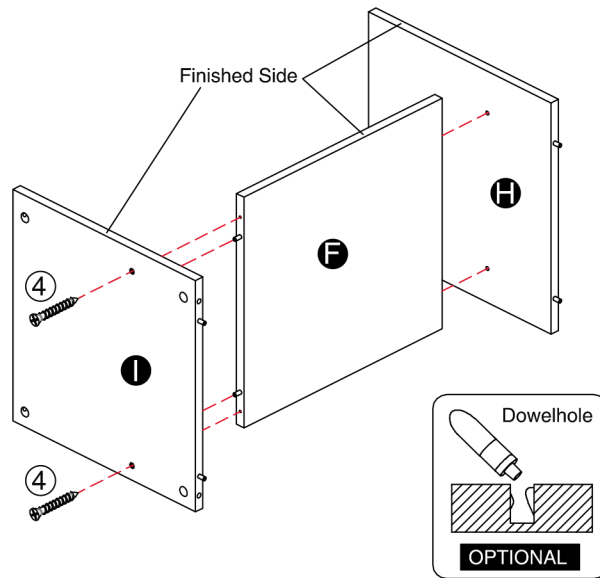

## 7

 - Part **J** x1PC
- Part **L** x1PC

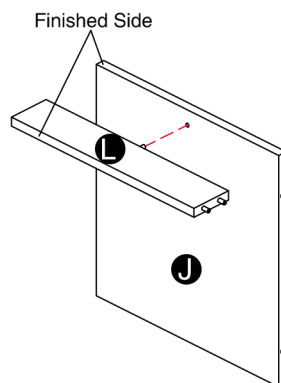


# ASSEMBLY INSTRUCTIONS

## 8

Part **B** x1PC

Part **K** x1PC



 
Hardware ② x 6PCS

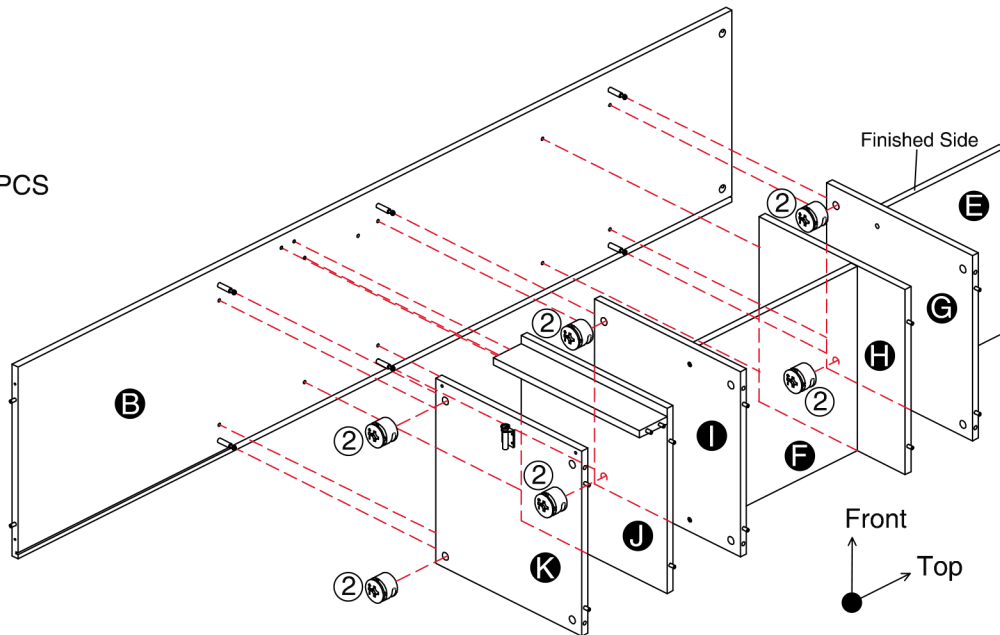

## 9

Part **C** x1PC

   Hardware ② x 6PCS

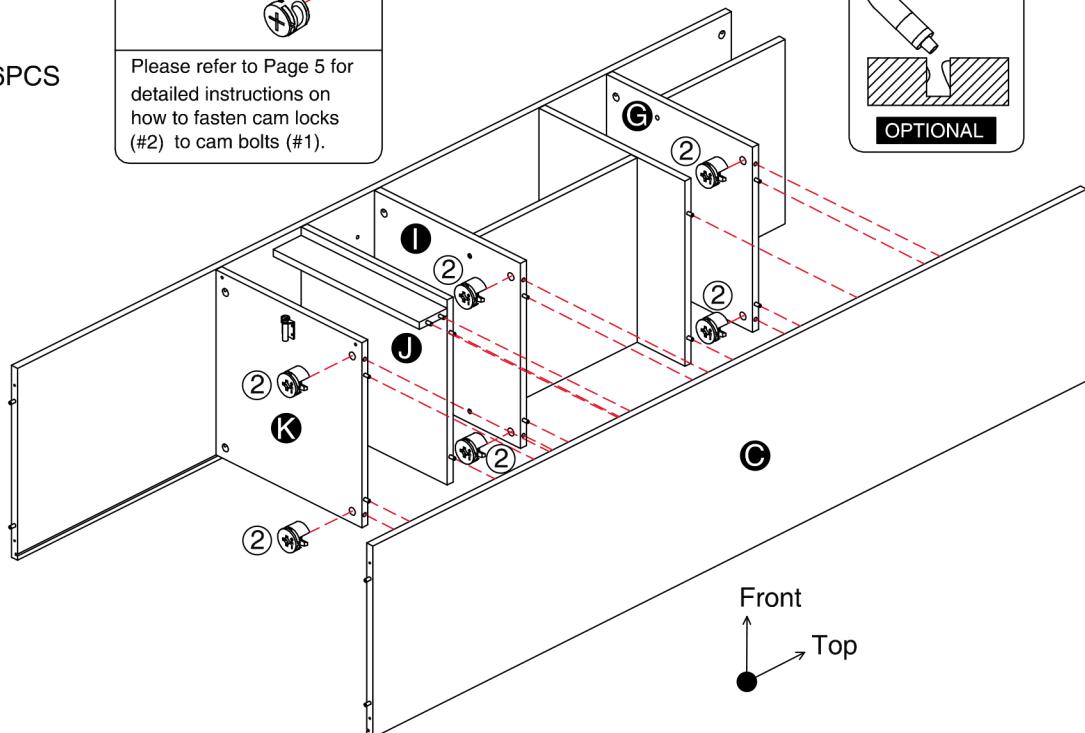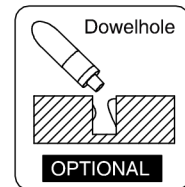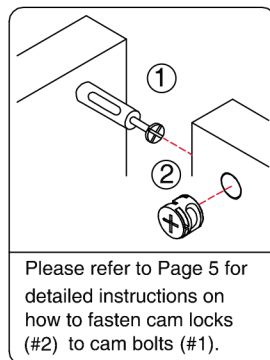




# ASSEMBLY INSTRUCTIONS

## 10

Part **A** x1PC


Hardware **②** x 4PCS

 Accessory **A3** x 4PCS

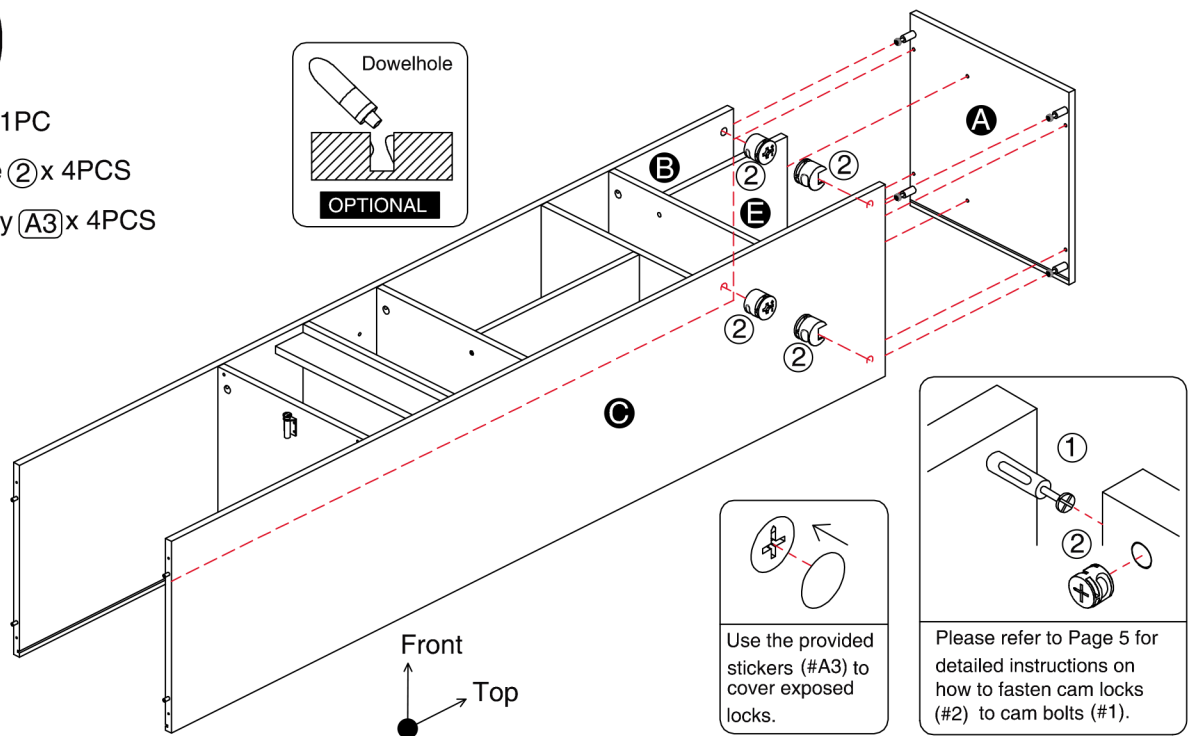

## 11

 
Part **N** x1PC

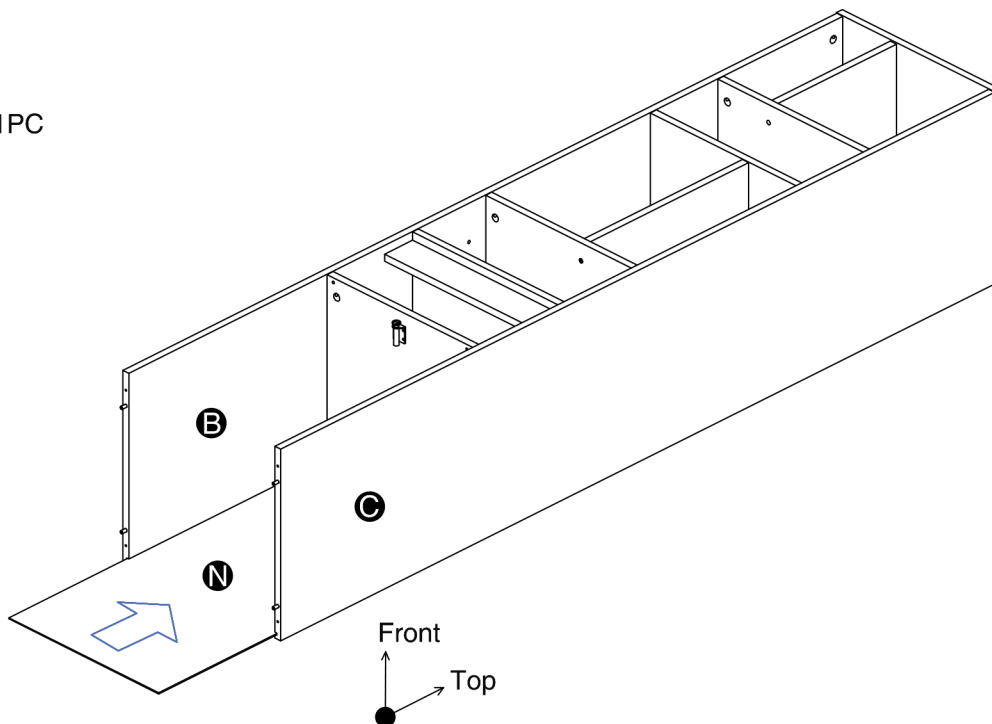

# ASSEMBLY INSTRUCTIONS


## 12

 Part **D** x1PC  
Hardware **④** x 4PCS

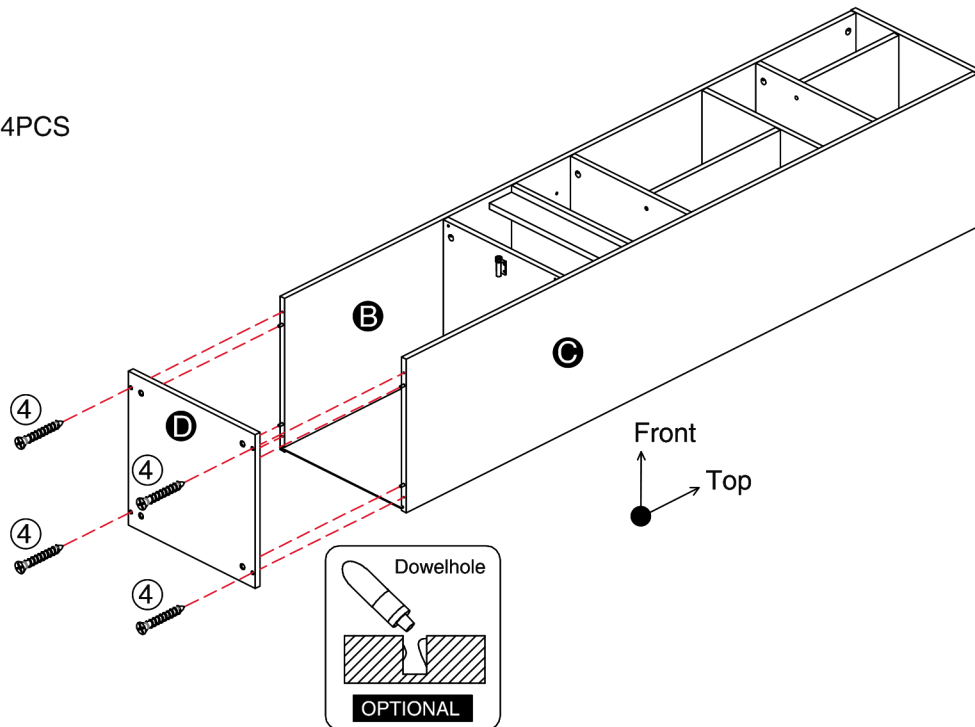

## 13


 
Accessory **A1** x 4PCS

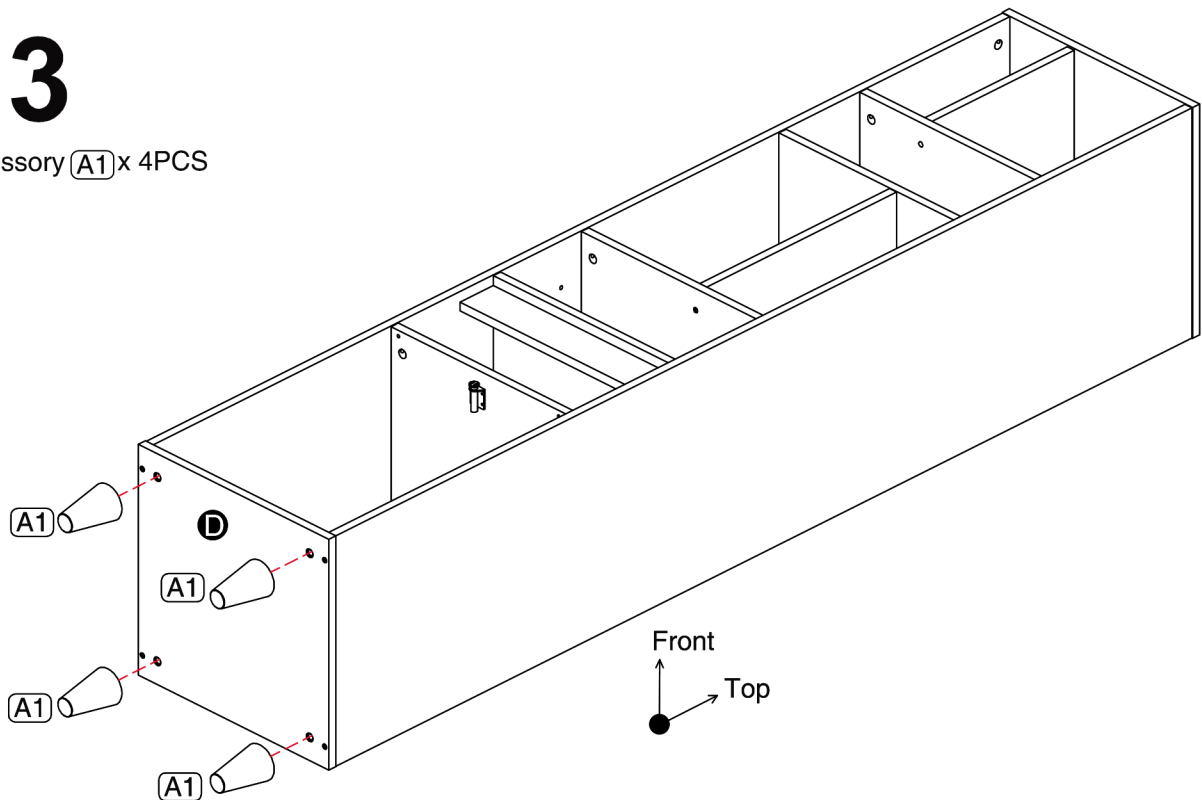

# ASSEMBLY INSTRUCTIONS

## 14

  Accessory **A2** x 8 SETS

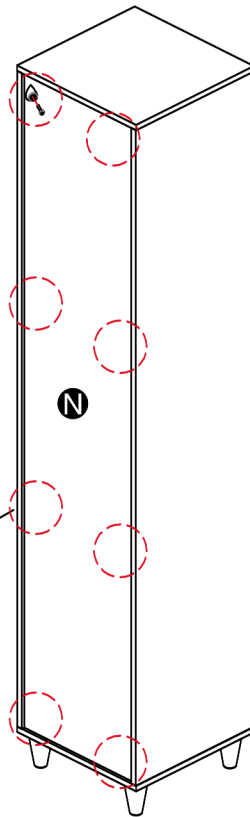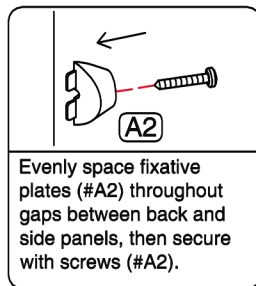

Top  
Front

## 15

Accessory **A5** x 1PC

 
 
Accessory **A6** x 1PC

Accessory **A7** x 1PC

Accessory **A8** x 1PC

Accessory **A9** x 2PCS

Accessory **A10** x 1PC

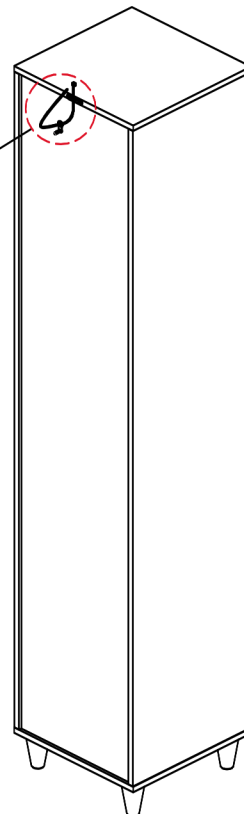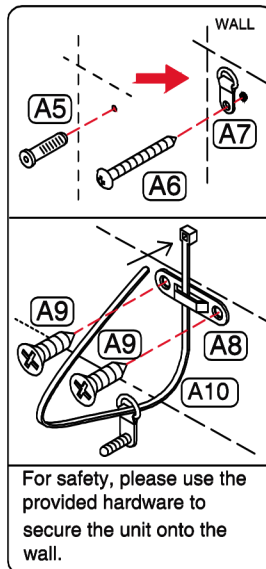


Top  
Front

# ASSEMBLY INSTRUCTIONS
 
## 16

Hardware ③x 2PCS

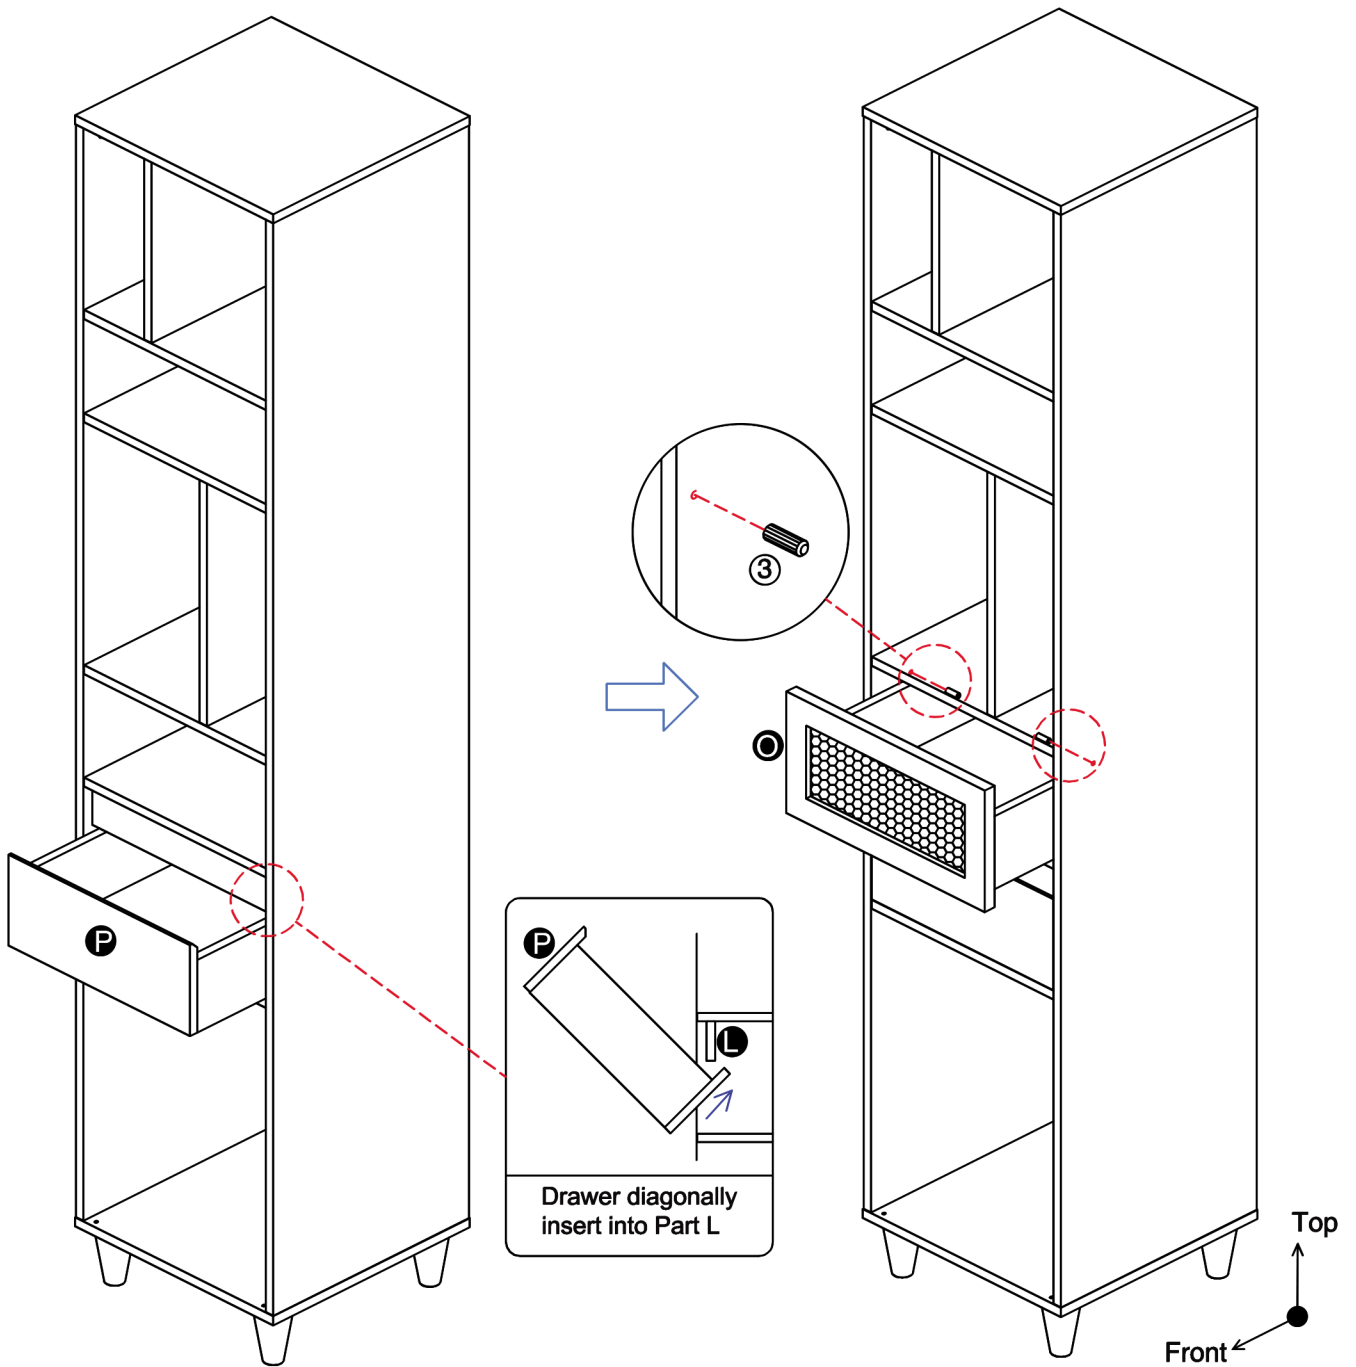


# ASSEMBLY INSTRUCTIONS

## 17

Part **M** x1PC  
Hardware **5** x 1PC  
Hardware **6** x 1PC  
Hardware **9** x 1PC

 
Optional: You can have the door open from the left side or the right side. Please ensure that once the doors are locked in place, you may not remove the door to fit it the other way around.

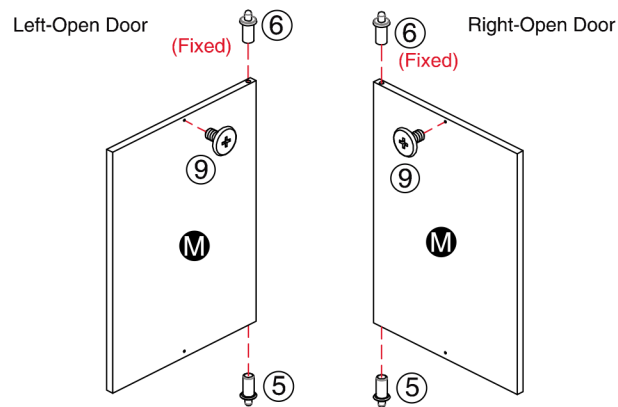

# ASSEMBLY INSTRUCTIONS

## 18

 Part **M** x1PC  
Hardware **⑤** x 1PC  
Hardware **⑥** x 1PC  
Hardware **⑨** x 1PC

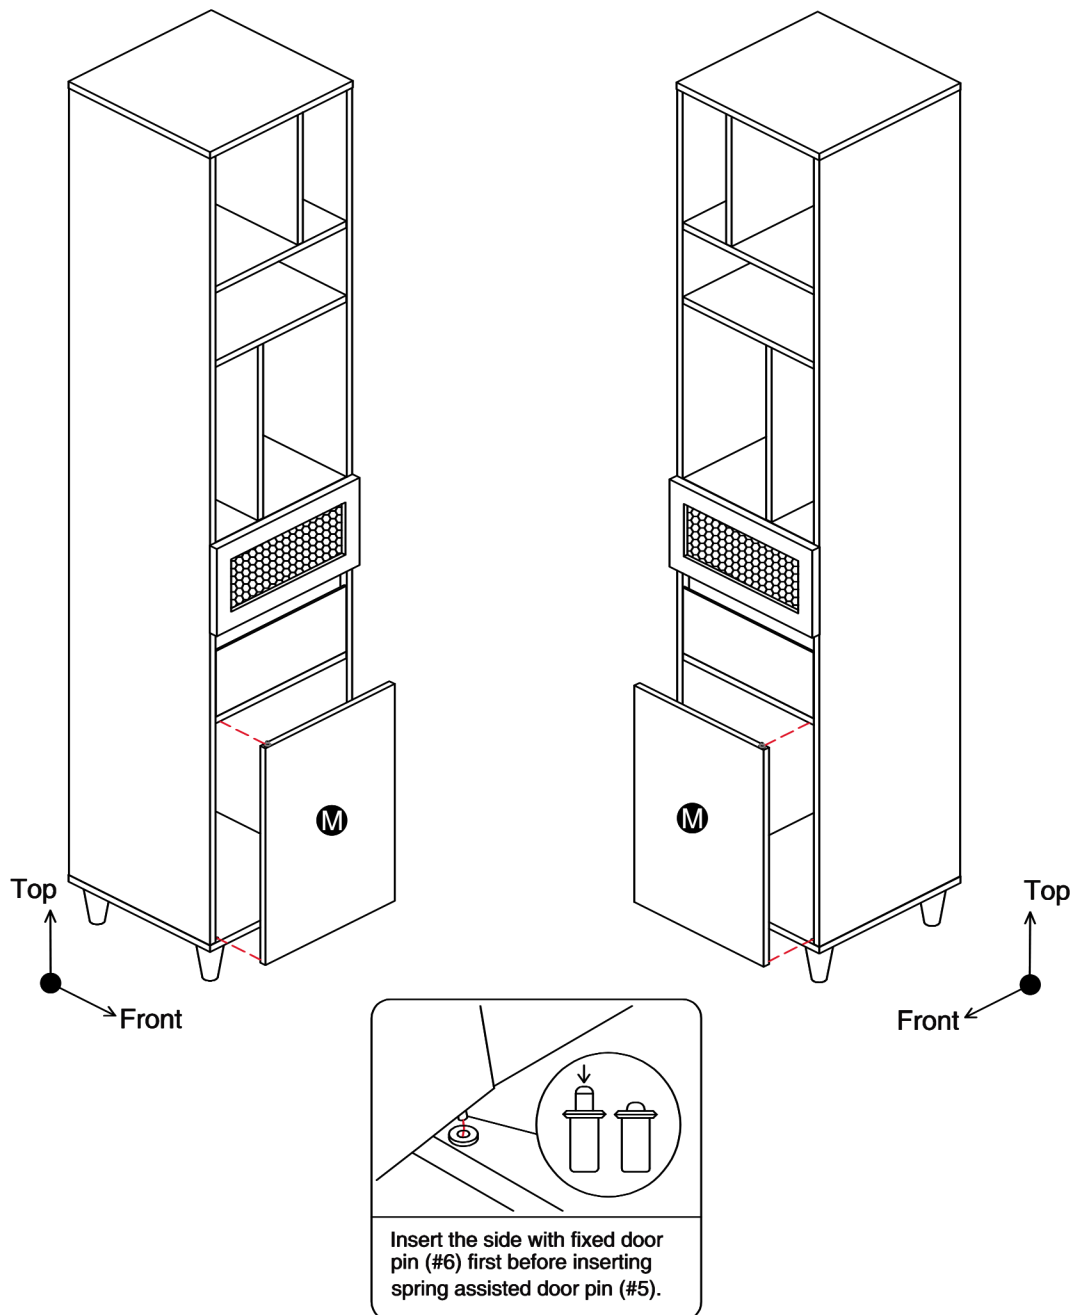

# ASSEMBLY INSTRUCTIONS

# 19

## ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



### Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



### Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

