


OKAYRUN

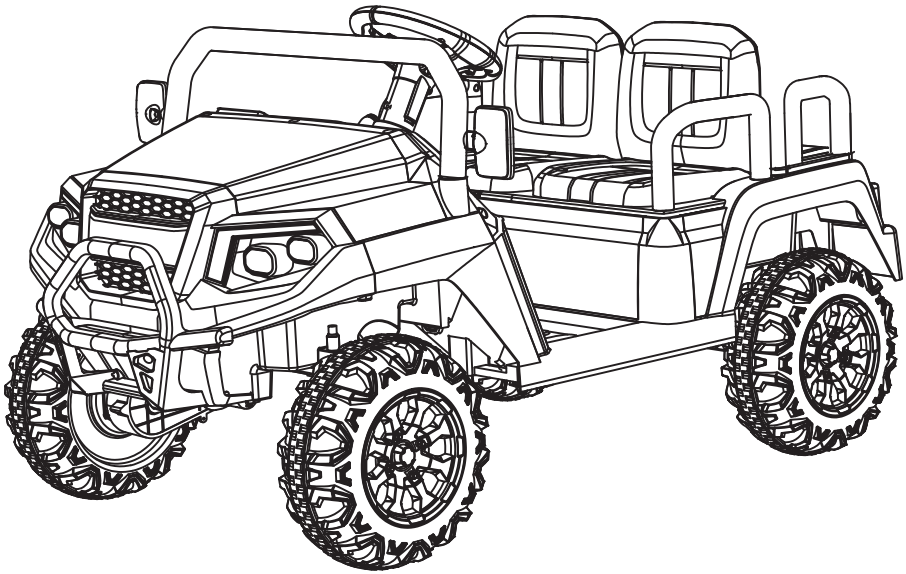

CHILDREN'S ELECTRONIC CAR

BATTERY POWERED RIDE-ON
USER GUIDE

Email: support@okayruncar.com

CONTENTS

- SAFETY 2
- BATTERY WARNINGS 3
- PRODUCT SPECIFICATIONS 4
- EXPLODED VIEW 6
- ASSEMBLY INSTRUCTION 7
- CHARGING INSTRUCTIONS AND WARNINGS 17
- TROUBLESHOOTING GUIDE 18
- ATTENTION 19
- CARING FOR YOUR RIDE-ON 19
- WARNINGS REGARDING BATTERIES 19
- MAINTAINING 20
- FUSE 20
- BATTERY DISPOSAL 20
- CALIFORNIA PROPOSITION 65 21
- FCC COMPLIANCE STATEMENT 21



Charge for **6 hrs**
before initial use.

After initial charge,
follow the normal
recommended
charging time.



SAFETY

This vehicle must be assembled by an adult who has read and understood the instructions in this manual. Keep the packaging and bags away from children and dispose of all packaging before use. Always use common sense and safe practices when operating this vehicle. This product contains or emits chemicals known in the state of California to cause cancer or birth defects or other reproductive harm.

NOTE: For best performance, only use this vehicle on flat and hard surfaces.

AGE RANGE: 3+years

Maximum Weight: Individual user weight: 55 lbs, Total users weight: 220 lbs.

The following safety hazards may result in serious injury or death:

- This product contains small parts. Keep children away during assembly. Make sure to remove all packaging material and parts from underneath the vehicle body.
- Never open the battery. Batteries contain lead and lead compounds (acids) that are toxic and corrosive, and known to the state of California to cause cancer and reproductive harm.
- Limbs, hair, and clothing can get caught in moving parts. Always wear shoes, keep limbs away from moving parts, and do not wear loose clothing while operating this vehicle.
- This vehicle does not have brakes or braking capability. Do not leave a child unattended during operation. Do not use this in a location that may require braking capability, as this could result in loss of control, which may cause serious injury or death.
- Use of this vehicle near streets, motor vehicles, steps, bodies of water, sloped surfaces, hills, wet areas, flammable vapors, in alleys, at night, or in the dark could result in an unexpected accident.
- Use of this vehicle in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel may result in an unexpected accident such as tipping over, and could damage the electrical system or battery.
- To reduce the risk of injury, adult supervision is required.
- Not to be used in traffic.
- Keep Children within Safe Riding Areas.
- Use the toy only on flat surfaces. Such as inside your house, garden or playground.

WARNING

- Never use in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-lit area.
- It is prohibited to change the circuit or add other electric parts.

- Inspect wires and connections of the vehicle periodically.
- Do not let any child touch the wheels or be near them when the car is moving.
- This vehicle has adjustable play seat belts. Please instruct children how to tie the safety belt before using, guarantee the security.
- Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 4 riders.

BATTERY WARNINGS

The following safety hazards may result in serious injury or death:

- Use of a battery or charger other than the supplied rechargeable battery and charger may cause a fire or explosion.
- Only use the battery(ies) specified by the manufacturer.
- The battery is not replaceable.
- Use of the rechargeable battery and charger for any other product may result in overheating, fire, or explosion. Never use the supplied rechargeable battery and charger with another product.
- Explosive gases are created during charging. Charge the battery in a well-ventilated area. Do not charge the battery near heat or flammable materials.
- Contact between the positive and negative terminals may result in fire or explosion. Avoid direct contact between the terminals. Picking up the battery by the wires or charger can cause damage to the battery and may result in a fire. Always pick up the battery by its case or handles.
- Liquids on the battery may cause fire or electric shock. Always keep all liquids away from the battery and keep the battery dry. Contact or exposure to battery leakage (lead acid) may cause serious injury. If contact or exposure occurs immediately call your physician. If the chemical is on the skin or in the eyes, flush with cool water for 15 minutes. If the chemical was swallowed, immediately give the person water or milk. Do not give water or milk if the patient is vomiting or has a decreased level of alertness. Do not induce vomiting.
- Battery posts, terminals, and related accessories contain lead and lead compounds (acid) – chemicals known to the State of California to cause cancer, reproductive harm, and are toxic and corrosive. Never open the battery.
- Tampering or modifying the electric circuit system may cause a shock, fire or explosion and permanently damage the system. Exposed wiring and circuitry in the charger may cause electric shock. Always keep the charger housing closed.
- RISK OF FIRE, Do not bypass, Replace only with Professional repair personnel or consult the manufacturer for suggestion.

PRODUCT SPECIFICATIONS

Battery	24V 10AH
Charger input	24V1000mA
Suitable age	3+Years
Charge time	8~12 hours
Maximum Weight Size of car	Individual user weight:55lbs,Total users weight:220lbs 130.5*72*70CM
Speed	1.86-4.35mph

⚠ WARNING

ADULT ASSEMBLY REQUIRED

CHOKING HAZARD-Small parts.
Not for children under 3 years old.



220 lb
CAPACITY



2 PERSON
ASSEMBLY



APPROXIMATELY
45 MIN.
ASSEMBLY

HARDWARE

1

#12
washer



x4

2

#10
Lock nut



x4

3

M5x40
machine
screw



x1

4

#5 nut



x1

5

#4x12
screw



x40



















6

Socket
wrench




x2

PARTS

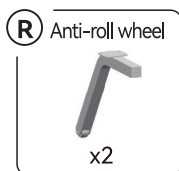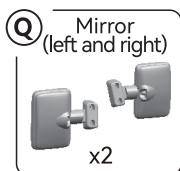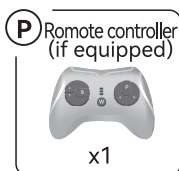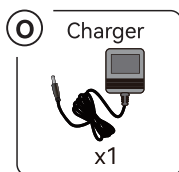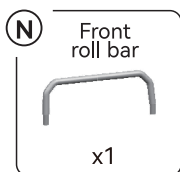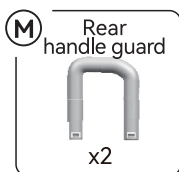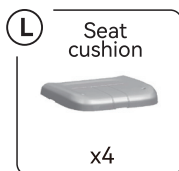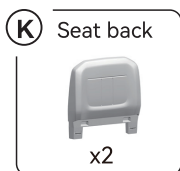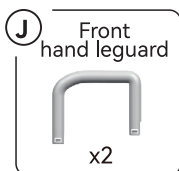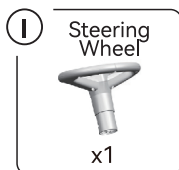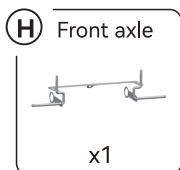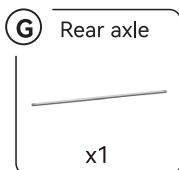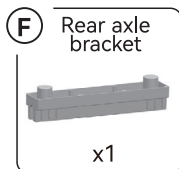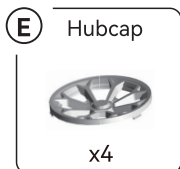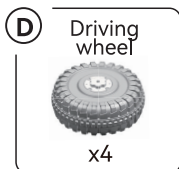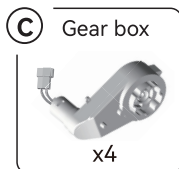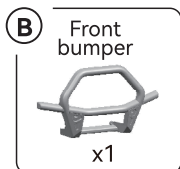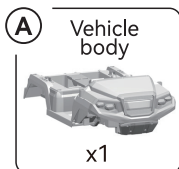


EXPLODED VIEW

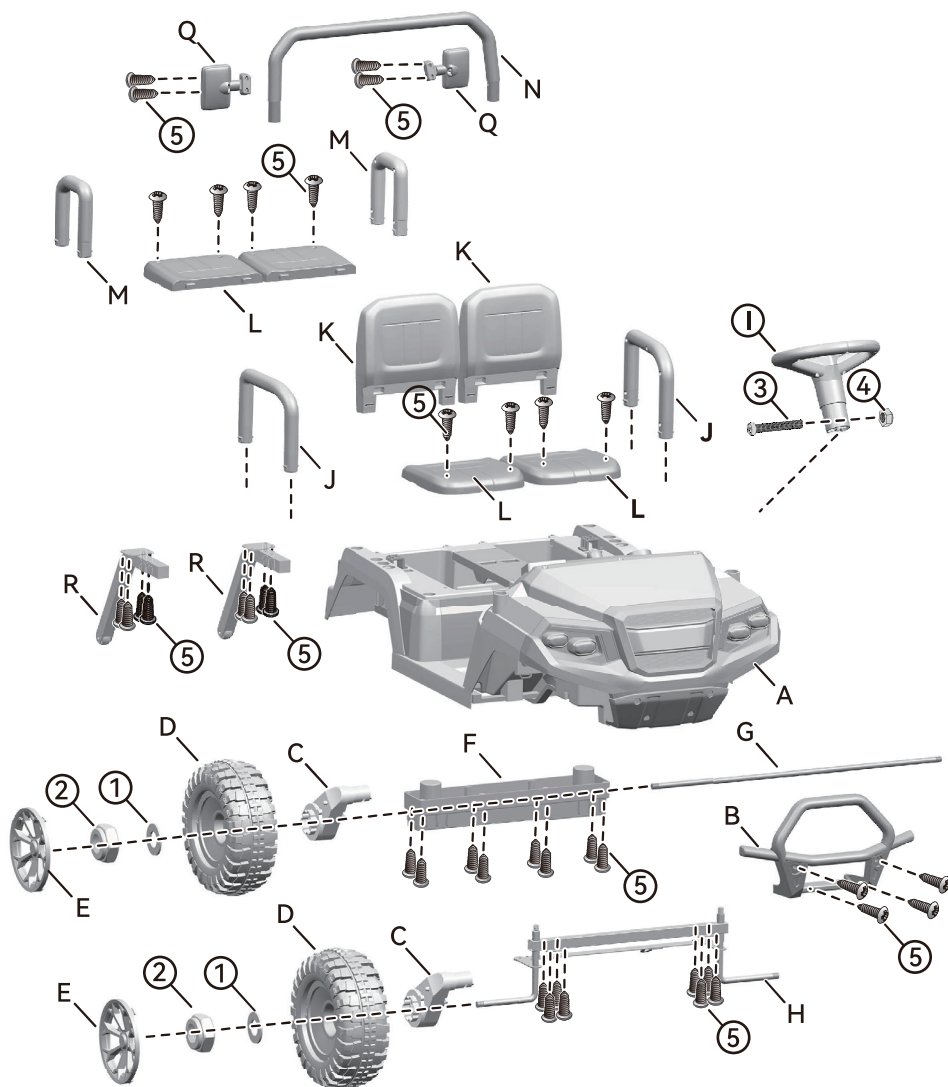


ASSEMBLY INSTRUCTION

1 Attach the Front Axle

- Fit the bull bar to the body.
- Insert four #4x12 screws and tighten with a screwdriver.
- Fit the front axle to the body.
- Insert the bent end of the steering column into the hole in the steering linkage.
- Insert eight #4x12 screws and tighten with a screwdriver.

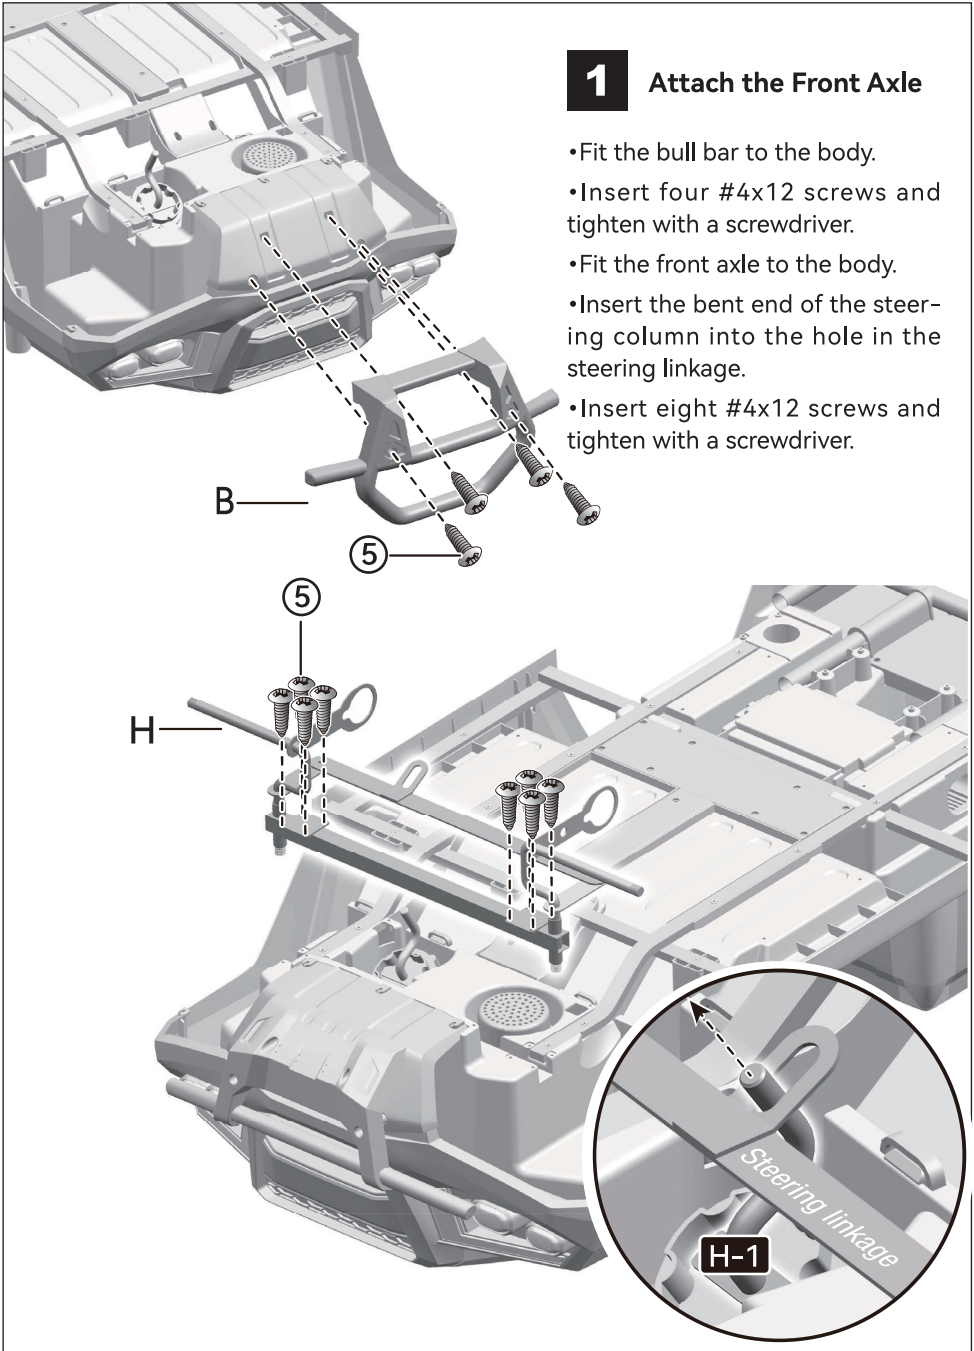


2 Attach the Front Wheels

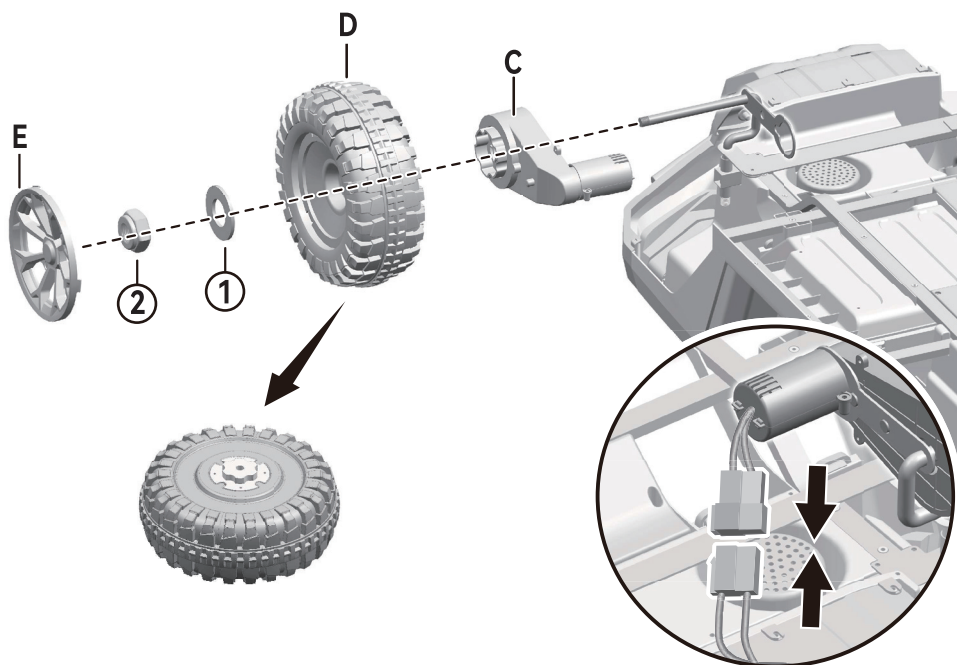


- Slide a gear box onto the front axle. Plug the connector of the gear box to the connector from the vehicle body.
- Slide the driving wheel onto the front axle.
- Slide a #12 washer onto the front axle.
- Tighten a lock nut to the end of the front axle with a socket wrench.
- "Snap" the wheel hubcap to the front wheel. Repeat for the other front wheel.

3


Attach the Rear Axle

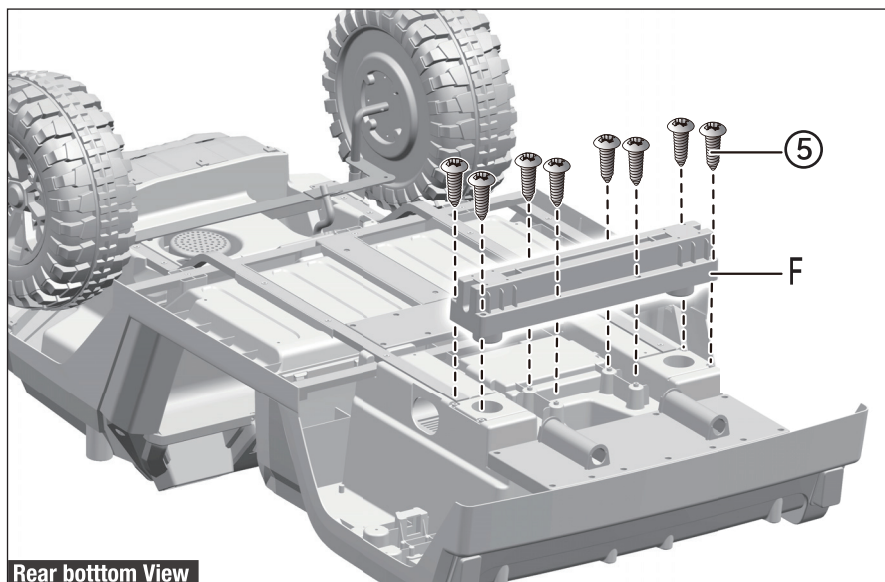

- Fit the rear wheel bracket onto the vehicle body.
- Insert eight #4x12 screws and tighten with screwdriver.
- Fit the rear axle into the hole in the rear axle bracket.

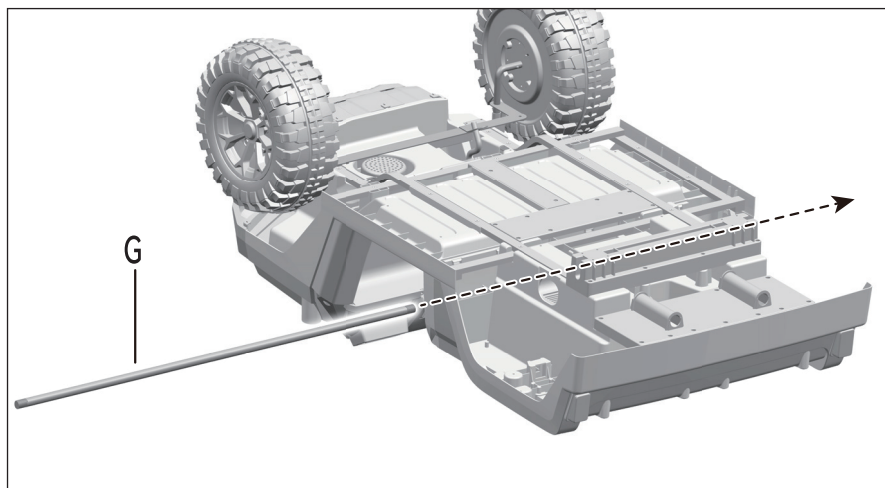

4 Attach the Rear Wheels

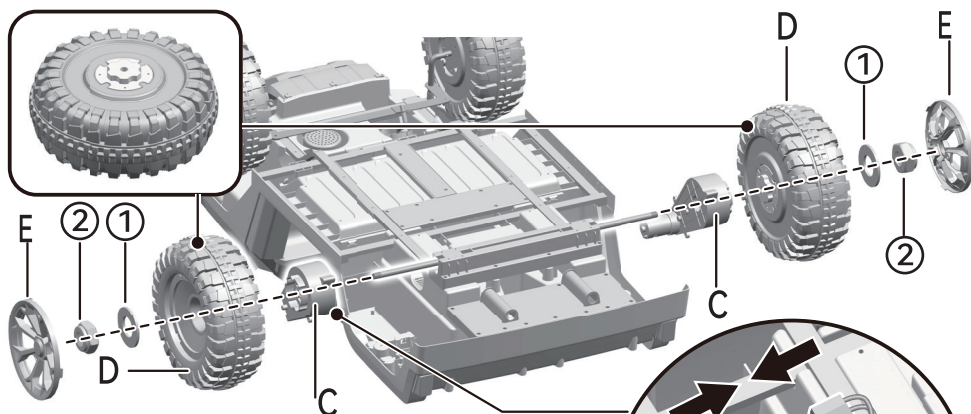

- Slide a gear box on the rear axle, and plug the connector of the rear gear box to the connector from the vehicle body (fig 1a)

- Slide the onto the rear axle. Ensure the wheel driver match up with the gear box.

- Slide a #12 washer onto the front axle.


- Tighten a lock nut to the end of the front axle with a socket wrench. DO NOT over tighten.

- Repeat the above procedures to assemble the other rear wheel.

Note: An extra socket wrench has been provided to hold the Lock Nut on the other side of the rear axle while tightening the Lock Nut on the other side.

- "Snap" the hubcap to the wheel.

HINT: An extra

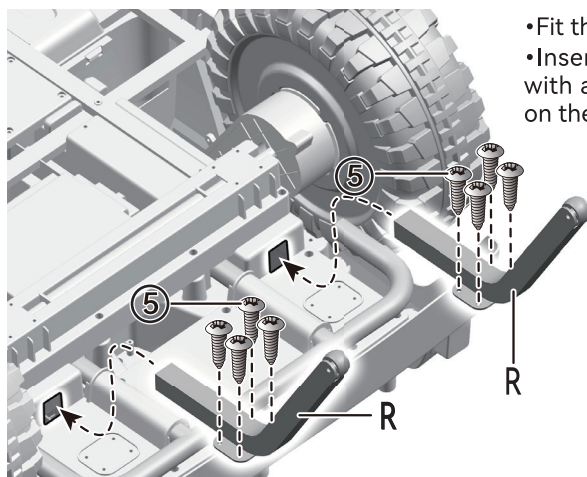

- Fit the rear anti-roll wheel to the body.
- Insert and tighten four #4x12 screws with a screwdriver. Repeat the process on the other side.




WARNING!

Be sure to follow the steps to assemble the **ANTI-ROLL WHEELS (part R)** to the body to avoid the product tipping over when using the product.


5

Attach the Steering Wheel & Seat Backs

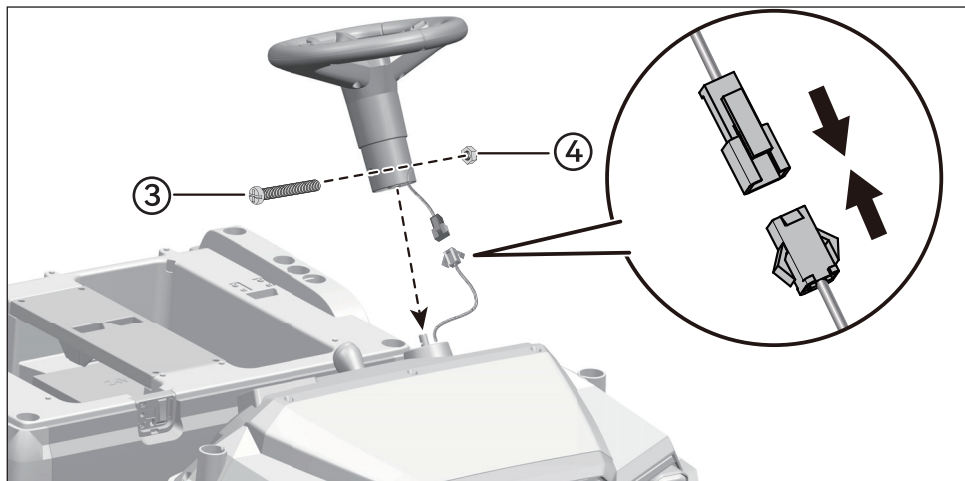



Turn the vehicle body upright

- Plug the sound unit connector on the steering wheel into the connector on the vehicle body
- Fit the steering wheel to the end of the steering column.
- Insert the #5 nut into the slot at right side of the steering wheel.
- Line up the holes on the steering wheel with the holes on the steering column, insert the M5x40 machine screw.
- Plug the red connector on the vehicle body into the red connector on the battery.
- Fit the seat backs to the vehicle body, push until you hear it "click" into place.


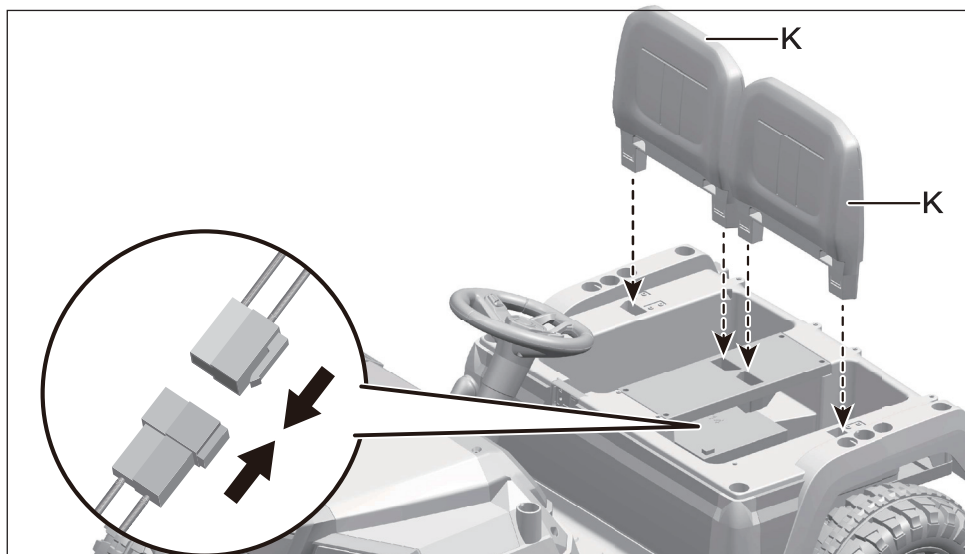


6

Attach the Seat Cushions, Handle Guards

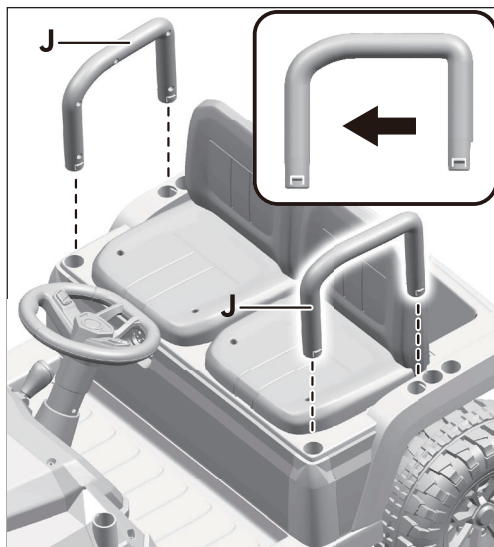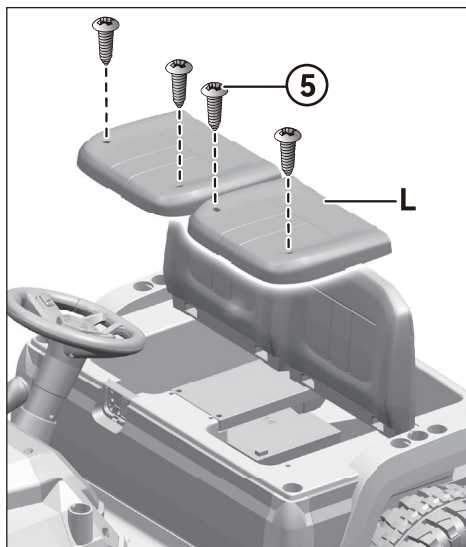


- Fit the two seat cushions to body
- Insert and tighten two#4x12 screws on each seat cushion with a scwedriver.
- Insert the front handle guard to the holes in the body,push until you hear it click into place.Repeat for the other side.
- Fit another two seat cushions to the body.
- Insert and tighten two#4x12 screws on each seat cushion with a scwedriver
- Insert the rear handle guard to the holes in the body,push until you hear it click into place.Repeat for the other side.

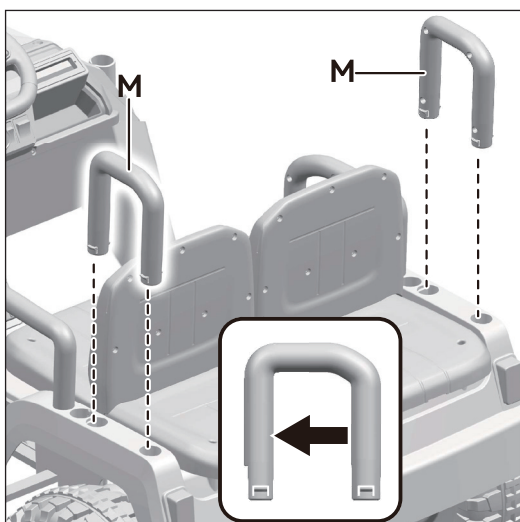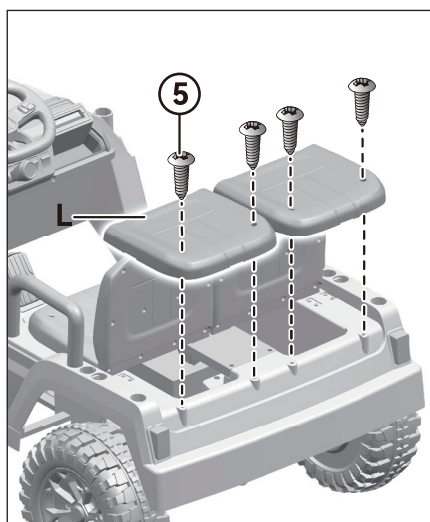



7

Attach the Front Roll Bar

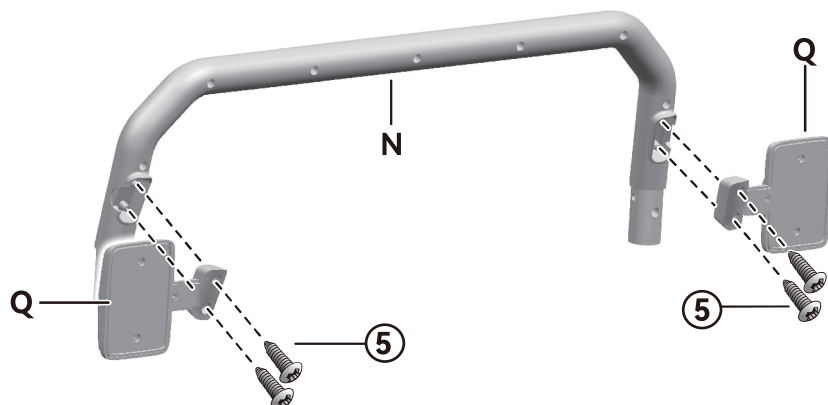

- Fit mirrors L&R to the front rollbar.
- Insert and tighten two #4x12 screws on each mirror and tighten with a screw-driver.
- Fit the front rollbar assembly to the body as shown.

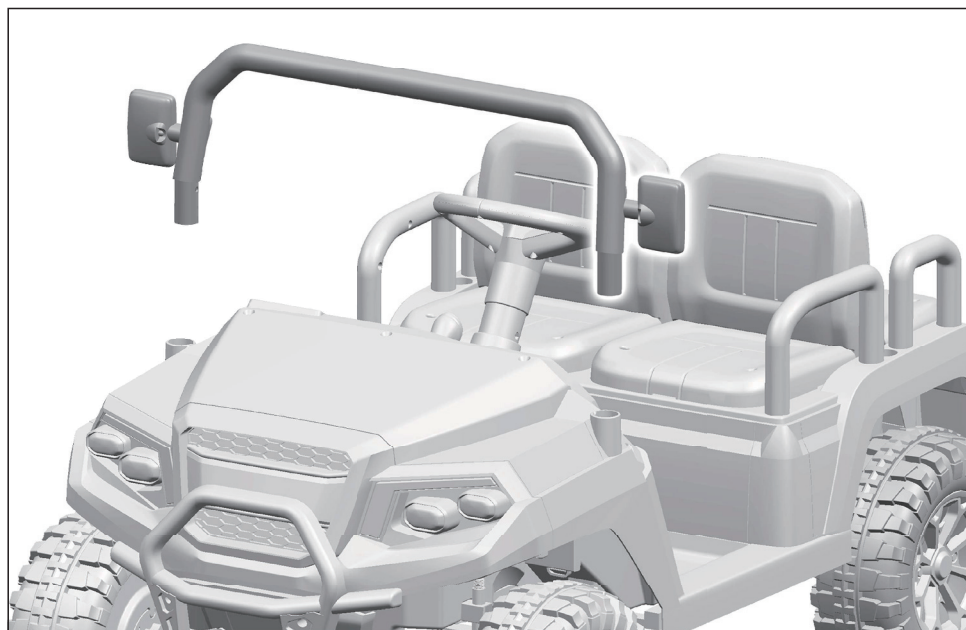

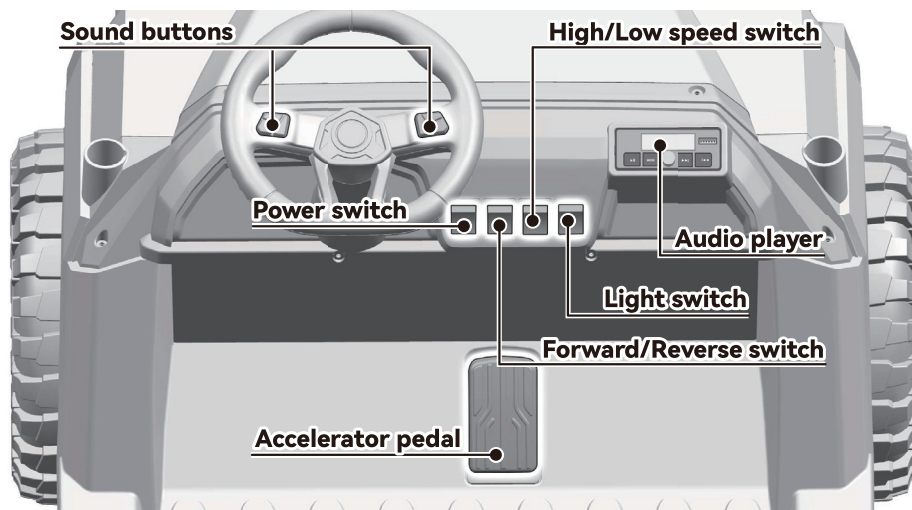

1.Power switch (if equipped,option II refer the next page):Turns the product on and off.

2.Forward/Reverse switch (if equipped,option II refer the next page):

Changes the direction that product moves from forward to reverse.

- To move the product forward,shift the lever to top position.
- To move the product backward,shift the lever to down position.

3.High/Low speed switch (if equipped,option II refer the next page):Operates the product to move forward in high or low speed.

4.Light switch (if equipped,option II refer the next page):Turns lights on and off.

5.Accelerator pedal:

- To move the product,press the pedal down.
- To brake or slow down,release pressure from the pedal.


6.Sound buttons:Press for sound or horn playing.

WARNING

- Always stop vehicle when changing the speed or direction to avoid damage the gears and motor.
- The protective cover must be opened by an adult.

9 Use The Audio Player [If Equipped]

Audio Player:

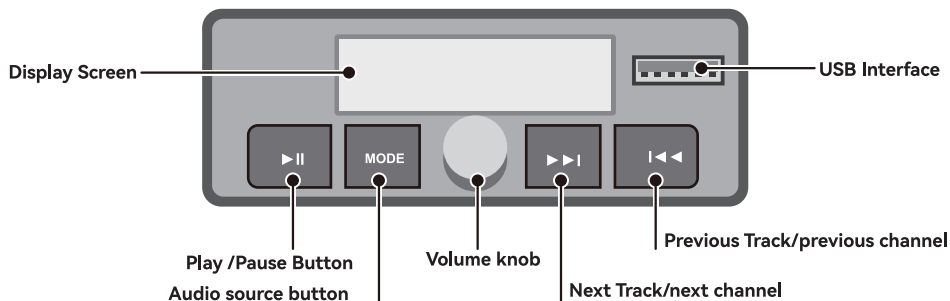

• **Display Screen:** When the product is stopped, it displays the remaining battery level. If the displayed value falls below 12 (for 12V products) or 24 (for 24V products), please recharge the battery.

• **Play /Pause Button:** Press and hold down this button for the FM radio to manually or automatically search for stations.

• **Audio source button:** Allows you to change between different audio inputs such as FM radio (if equipped), USB port, Story mode, Music mode and Wireless connection. In FM radio mode, holding down Button B (Play/Pause) enables you to manually or automatically search for radio stations.


• **Volume knob:** Adjust the volume up or down.

• **Next Track/next channel**

• **Previous Track/previous channel**

• **USB Interface:** Connects your portable device to play audio through the product's speakers, also supporting MP3 format exclusively.


Use the Rear Foot Pedal

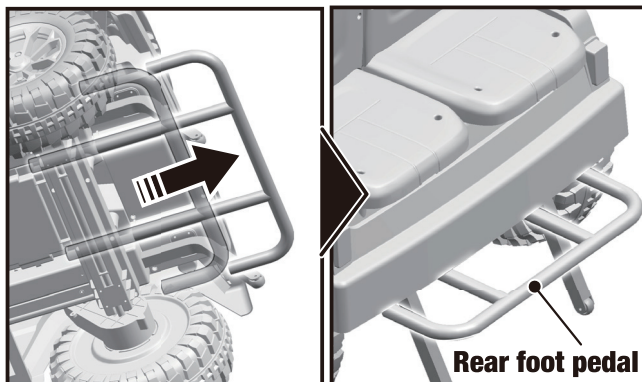

WARNING!

Pull out the rear foot pedal when using this product.

10 USE THE REMOTE CONTROLLER

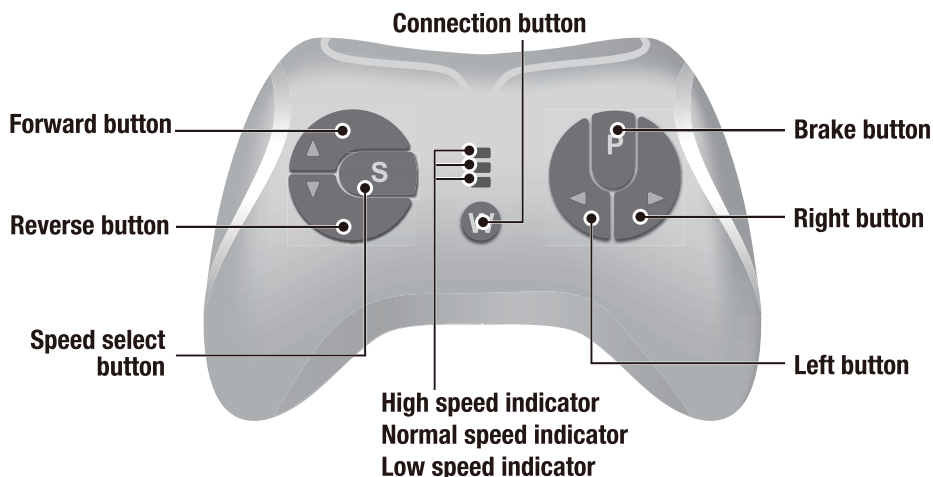

Insert The Batteries Of Controller

Lit the battery compartment door on the back of the controller and insert two AAA (LR03)batteries.

HINT:Batteries not included.Refer to the Battery Information on the page 1.

1.Build connection

- Power of the vehicle.
- Press the Connection button for 2 seconds, the status indicator flashes, then turn on the power switch located on the the vehicle dash:
 - when the status indicator turns off about 2 seconds and turns into long bright,means the connection successful.
 - If the status indicator makes no response, means the connection failed. Replace the batteries and try again

2.Brake button

Press the button to stop the vehicle,press it again to release the brake.

3.Speed select button

The switch operates the vehicle to move in low,normal or high speed.

HINT:This switch won't work while your vehicle moves reverse.

NOTE:



- Leave the remote controlleridng for about 10 secondsit will shut down automatically.
- Rebuild connection when you replace the batteries of the remote controller.
- The remote control is not a toy.It is intended for adult use only and should not be madeby children Use.Close supervision from an adult is aways required.The receiving rangemay vary depending on the weather、 battery and other environmental conditions.

CHARGING INSTRUCTIONS AND WARNINGS

WARNING

- This product with Charging Protection: when charging, all functions will be cut off!
- Only an adult can charge and recharge the battery!

- The POWER SWITCH must be turned in OFF position when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge time as 8 to 12 hours, less than 20 hours at most.
- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product.
- Only use the charger(s) specified by the manufacturer.

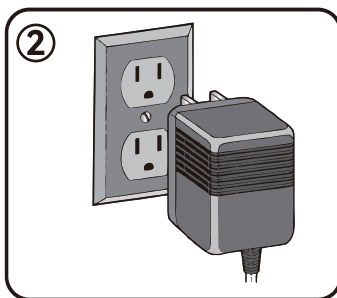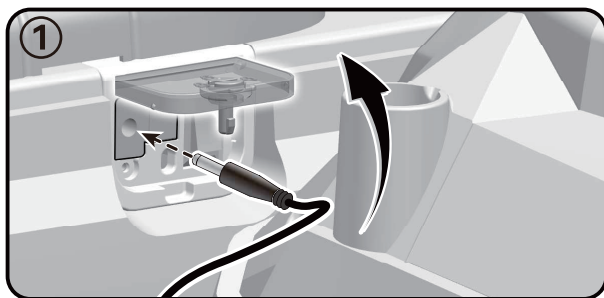

HOW TO CHARGE THE BATTERY

1. Open the charging cover (below the seat). Plug the charger port into the charger socket.
2. Plug the charger plug into a wall outlet. The battery will begin charging.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Vehicle does not run	Battery low on power	Recharge battery.
	Thermal fuse has tripped	Reset fuse, see <Fuse>
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor contact your distributor please.
	Battery is dead	Replace battery, contact your distributor please.
	Electrical system is damaged	Contact your distributor please.
	Motor is damaged	Contact your distributor please.
Vehicle does not run very long	Battery is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, contact your distributor please.
Vehicle runs sluggishly	Battery low on power	Recharge battery, contact your distributor please.
	Battery is old	Replace battery, contact your distributor please.
	Vehicle is overload	Reduce weight on vehicle.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions ,see <Safety>.
Vehicle needs a push to go forward	Poor contact of wires or Connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact your distributor please.
	"Dead Spot" on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. Contact your distributor please.
Difficult shifting from forward to reverse or vice-versa	Attempting to shift while the vehicle is motion	Completely stop the vehicle and shift, see <Use Your New Vehicle>
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Contact your distributor please.
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charger is plugged into a working wall outlet.
	Charger is not working	Contact your distributor please.
Charger feels warm when recharging	This is normal and not a cause for concern	
Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem Contact your distributor please.		

ATTENTION

- Can only use the charger and battery according to manufacturers regulations.
- Do not mix old and new or different types of batteries.
- The battery terminal should not be short circuit.
- Do not open the battery or charger.
- Do not reverse the battery.
- Before charging, please check whether the charger, battery and plug are ok, if you find any broken parts, you must stop using it immediately. And do not use it until it is fully repaired.
- The battery will be little warm when being charged, it is normal. If not, it may be caused from the short circuit of charger or circuit board.
- Must use the pressing plate to fix the battery.
- Run out of battery must be handled by adults, remove the battery which has run out from toys to recycle properly and shall not be arbitrarily discard.
- If the product is going to be stored unused long time , it must be fully charged, and charge it every 1 months ,so as to make sure the battery life.
- Charger and Battery are not toys. Keep them away from children.

CARING FOR YOUR RIDE-ON

- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Do not leave the vehicle in the sun for long periods of time or fading may occur. Store in shade or cover with tarp.
- Do not wash the vehicle with a hose.
- Do not wash the vehicle with soap.
- Charge battery at least once a month to prolong the life of the battery.

WARNINGS REGARDING BATTERIES

- Do not mix alkaline, standard (carbon zinc) and rechargeable (nickel hydride) batteries.
- Do not mix old and new batteries.
- Non-rechargeable batteries should not be charged.
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Do not put batteries next to or in a heat source (fire, electronic heating device, etc.).
- Do not hit batteries against hard objects.
- Do not submerge batteries in water.
- Batteries should be inserted with the correct polarity.

MAINTAINING

• It is parents' responsibility to check main parts of the toy before using, must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.

- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage the moving parts, motors or the electric system.
- When not using, all the electrical source should be turned off. Turn off the power switch and disconnect the battery connection.

FUSE

The battery features a thermal fuse with a reset fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. Contact your distributor please.

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.

BATTERY DISPOSAL



- The battery will eventually lose the ability to hold a charge.
- Depending on the count of use and varying conditions, the battery should operate for one to three years.

- Important! Recycle the dead battery responsibly. The battery contains lead (electrolyte) and must be disposed of properly and legally, it is illegal in most areas to incinerate lead acid batteries or dispose of them in land field, Please take it to your local approved recycling centre or a battery retailer for safe disposal.
- Do not throw the battery away with your regular household waste!

CALIFORNIA PROPOSITION 65

WARNING: Battery posts, terminals, and related accessories can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm, and are toxic and corrosive. Wash hands after handling. For more information go to www.P65Warnings.ca.gov

FCC COMPLIANCE STATEMENT

•This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This product may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

•This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

•If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product

OKAYRUN

**THANK YOU SO MUCH
FOR YOUR PURCHASE!**

Should you have any issues, please don't
hesitate to contact us at E-mail:

support@okayruncar.com

COMPANY NAME: SUN BEYOND CONSULTING LTD

Address: OFFICE NO. 448,4TH FLOOR,90 CANAL STREET, BOSTON,MA 02114

Email: mrsunbeyond@gmail.com

TEL: (+1) 5084700660

MADE IN CHINA