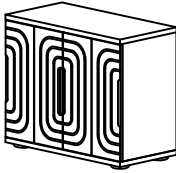 


ASSEMBLY INSTRUCTION FOR ACME FURNITURE




MODEL#AC02894


Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, Identify and count all parts and metal hardware. Compare with all parts listed to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed

***** Do not fully tighten screws until fully assembled *****

   	COMPONENT PARTS	
DESCRIPTION	PART NAME	QTY (PCS)
①	UNIT 	1
②	SHELF 	1
③	LEG 	4

HARDWARE REQUIRED

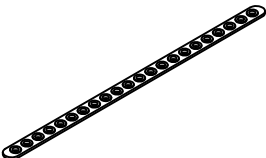 - Ⓐ  SHELF PIN Ø1/4"*11/16" 4 PCS
- Ⓑ  SCREW Ø1/4"*3/4" 2 PCS
- Ⓒ  PLASTIC RESTRAINT 7/16"*9" 2 PCS

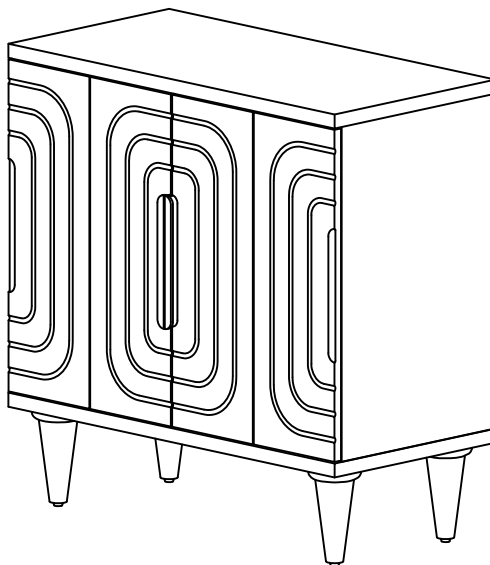


Attention

***** Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements. *****

 
How to assemble:

STEP 1


Attach Legs (3) to the bottom of Unit (1).

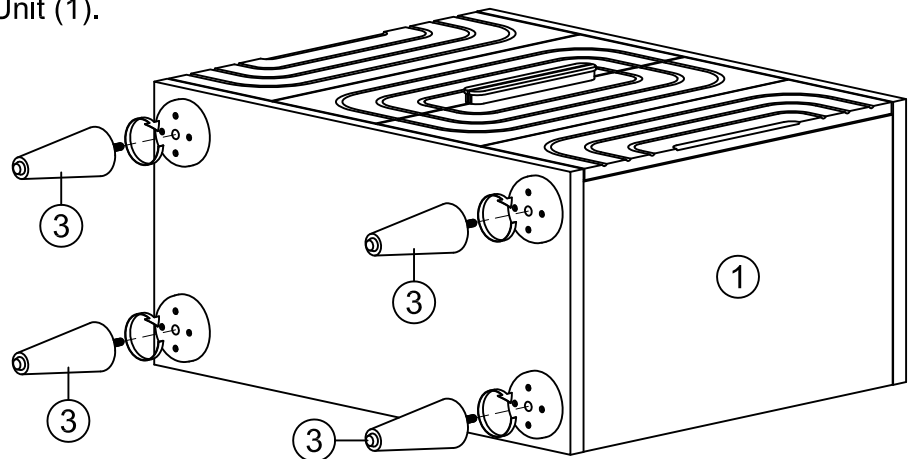

 
STEP 2

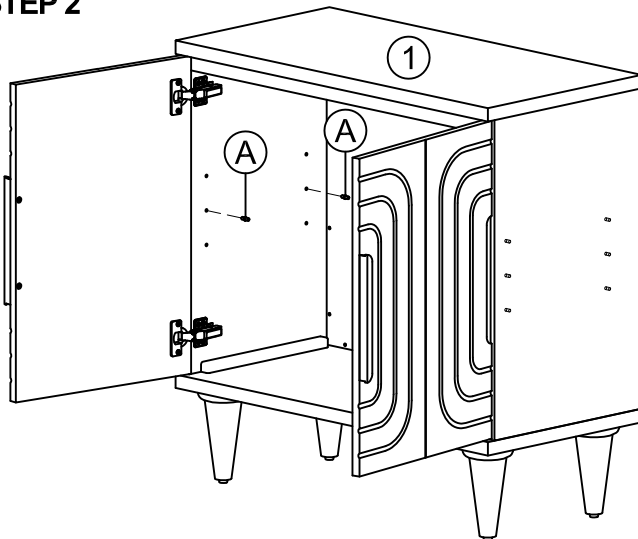

 
Insert Shelf Pins (A) into left panel at desired level.

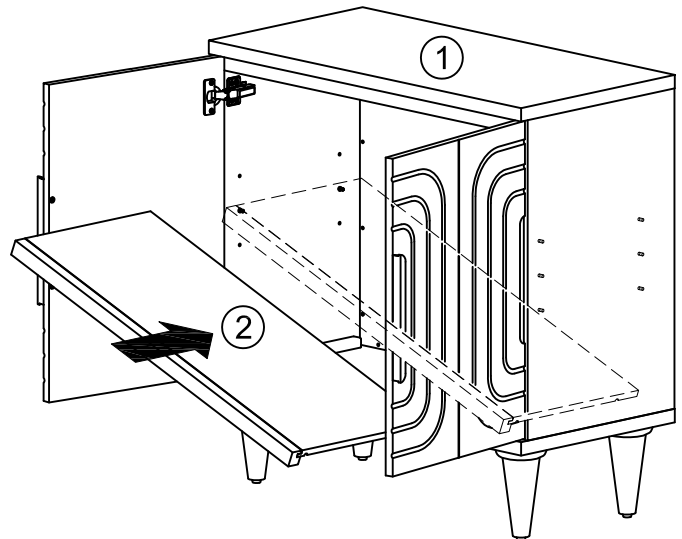

 Place the left side of the Shelf (2) into position.

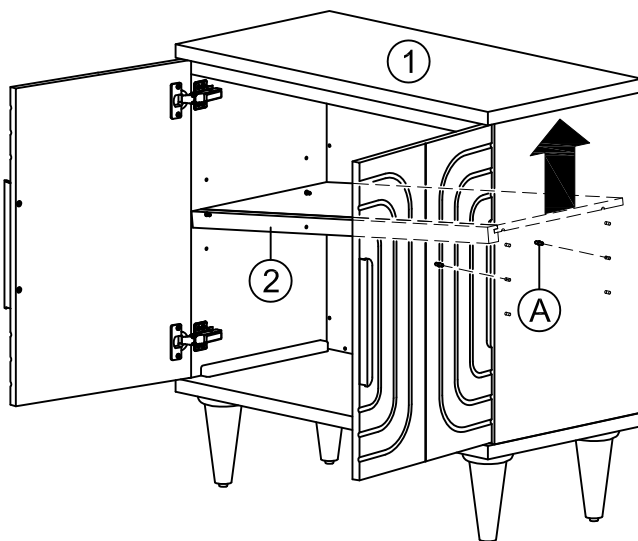

 Holding it on the right side of the Shelf (2) higher than the desired level, insert the rest Shelf Pins (A) into right panel at desired level.

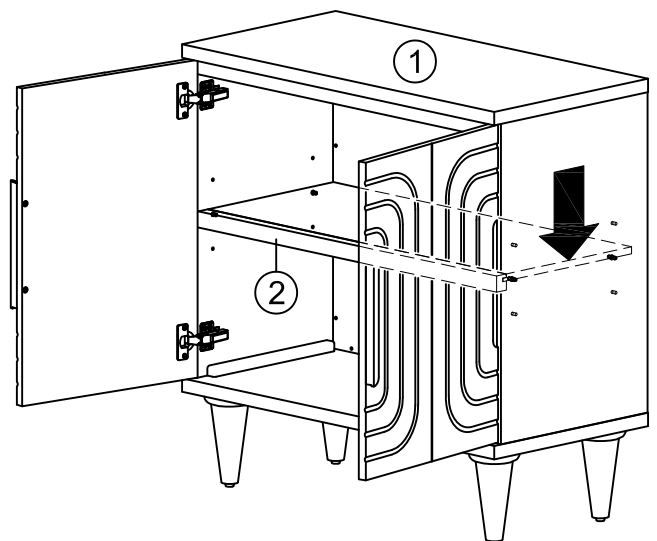


Place the right side of the Shelf (2) into position.

How to assemble:

STEP 3

 
- Adjust the adjuster that has attached to the legs to stabilize your unit.
- Attach Plastic Restraint (C) to back of Unit (1) using Screws (B).
- Attach Plastic Restraint (C) that has already attached to unit to wall using wall screw & anchor (not provided).

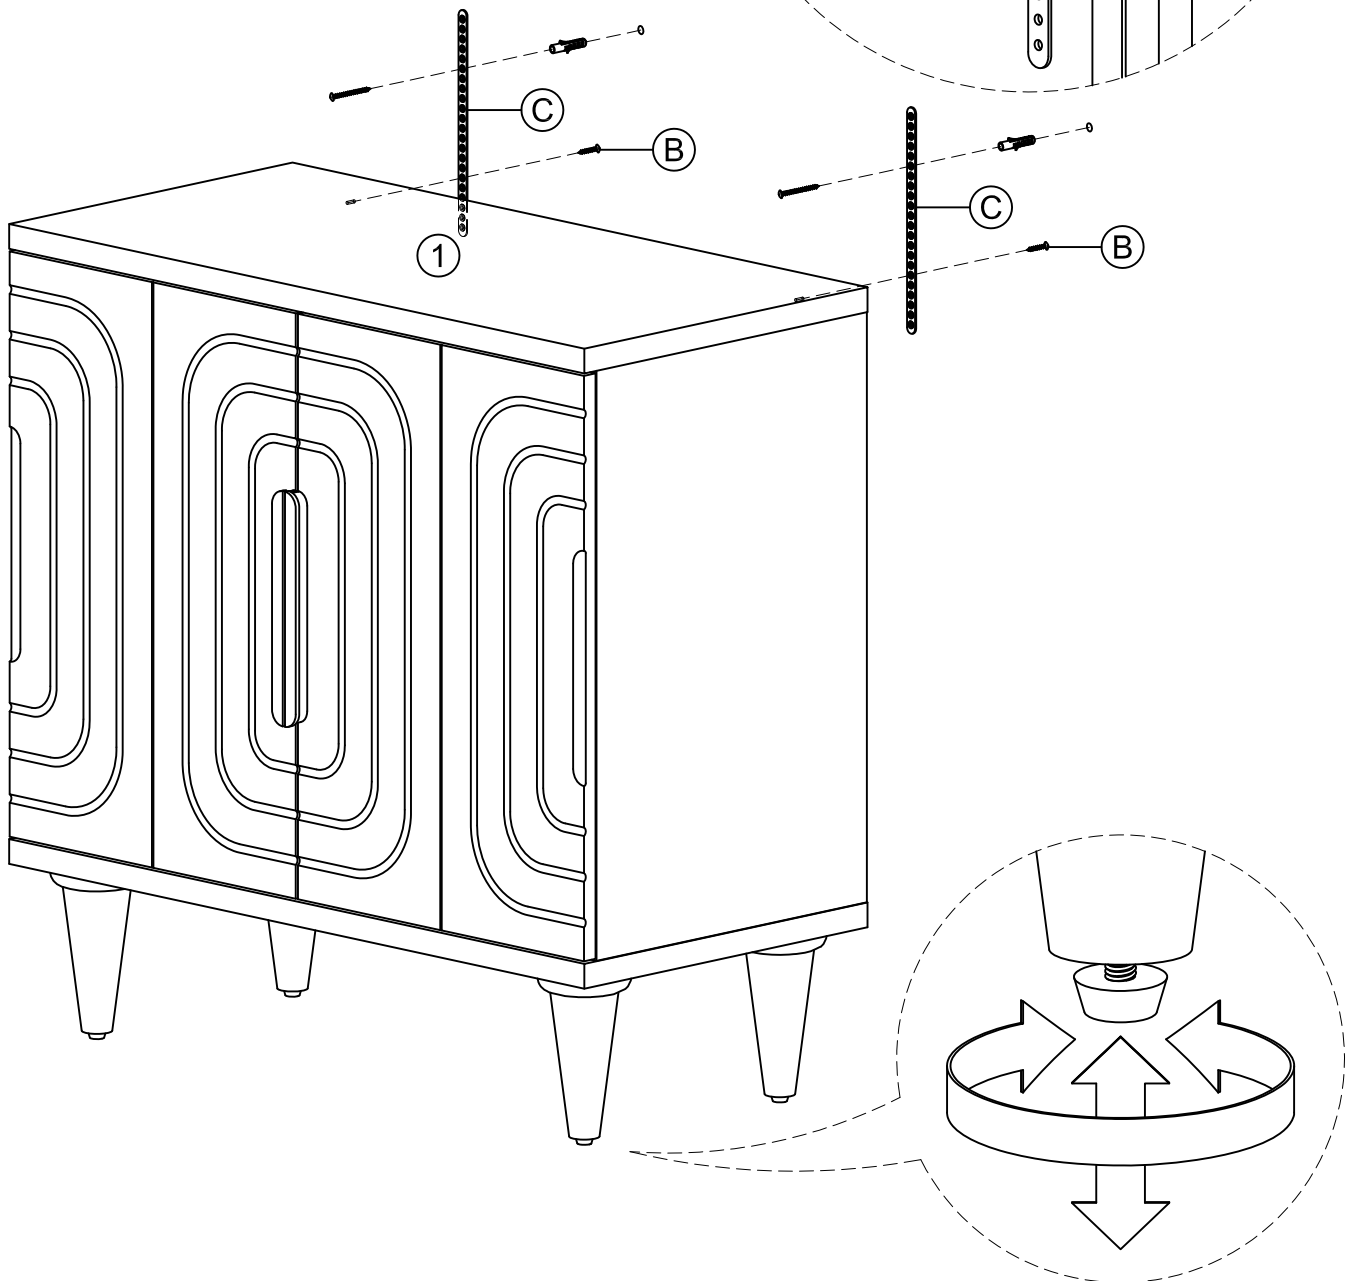





How to adjust the door:

STEP 4



 
If the edge on the left or right are not balanced, please follow this step

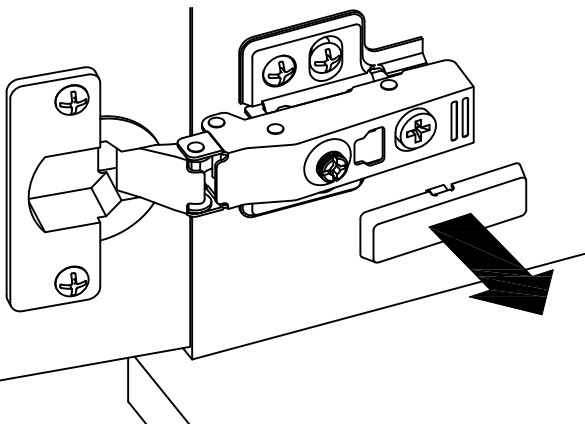

    Remove the screw cover from the hinges
Note: You can reattach the screw cover once all adjustment steps are completed

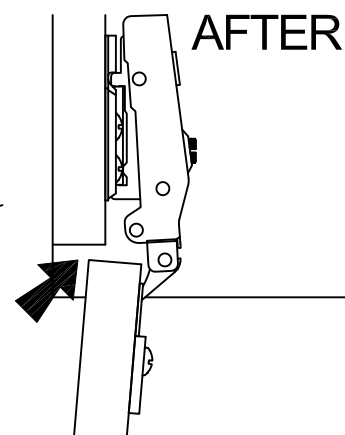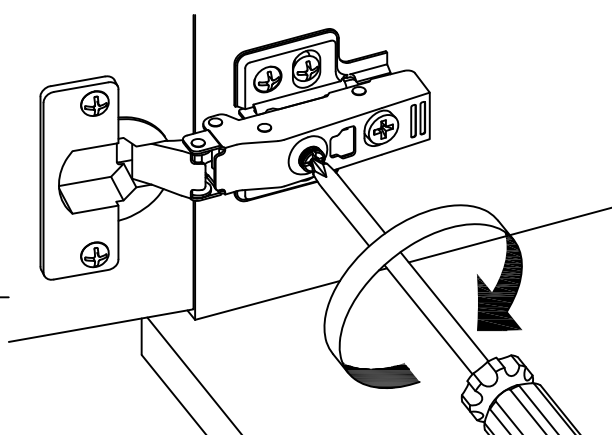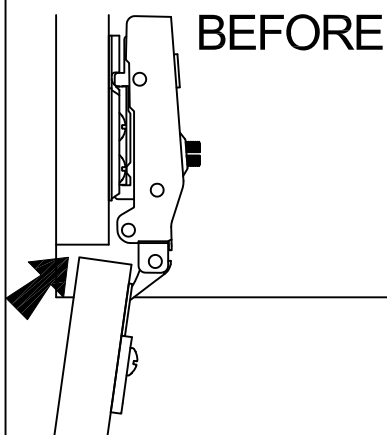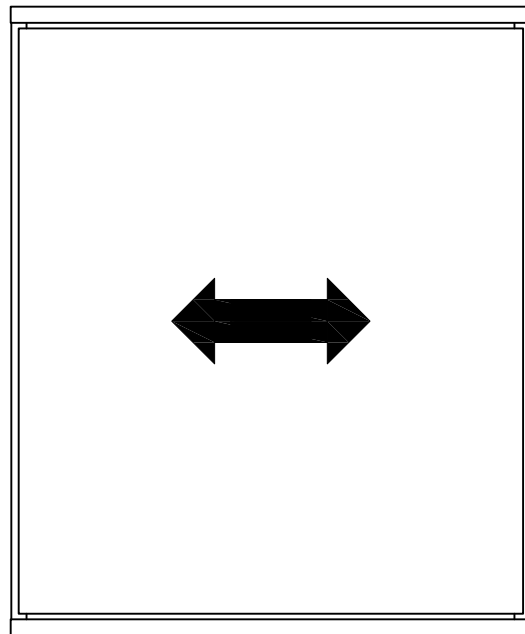

   If the edge on the left side is too narrow, you will need to slide the doors slightly to the right by turning the front center screw counter clockwise.

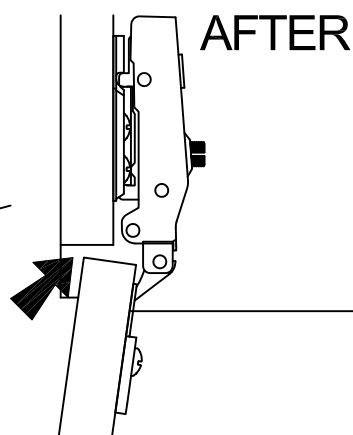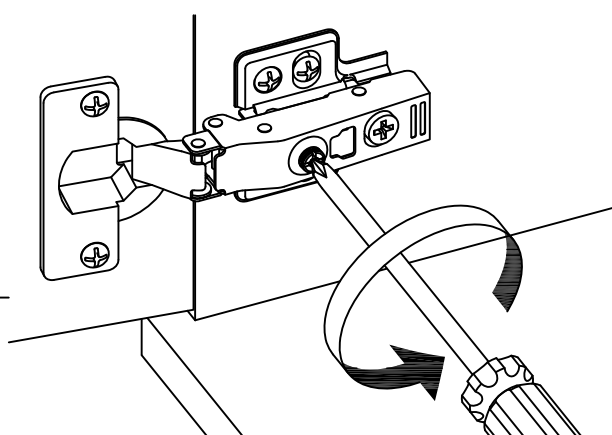
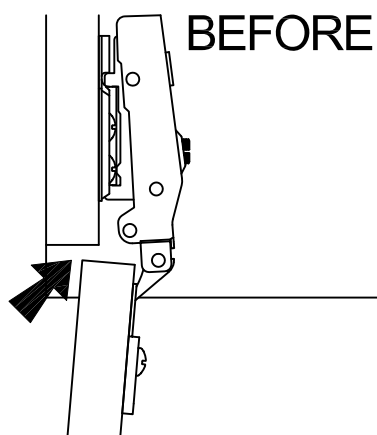


If the edge on the left side is too wide, you will need to slide the door slightly to the left by turning the front center screw counterclockwise.


How to adjust the door:

STEP 5

  If you need to slide the door forward or backward, please follow this step.

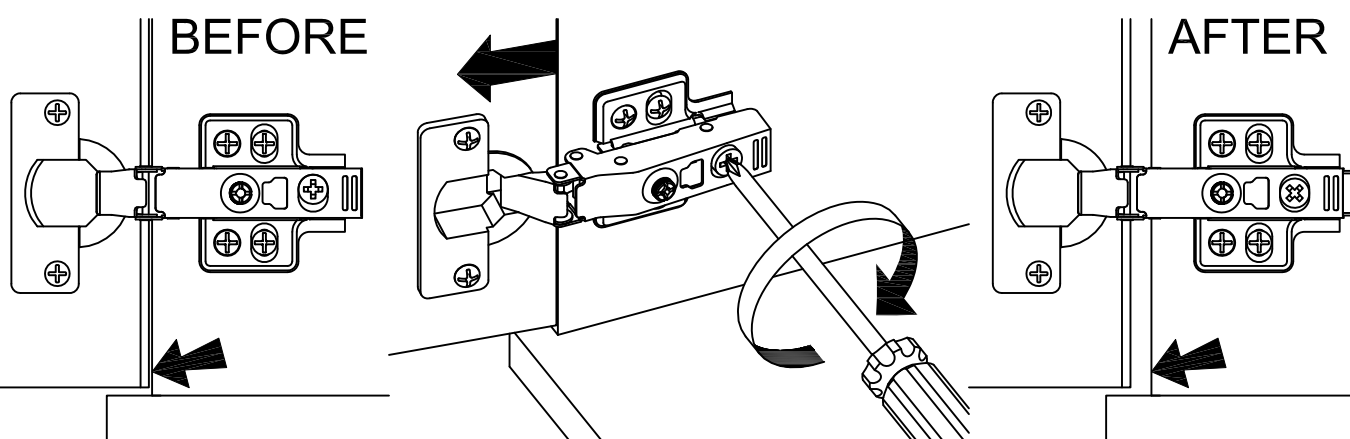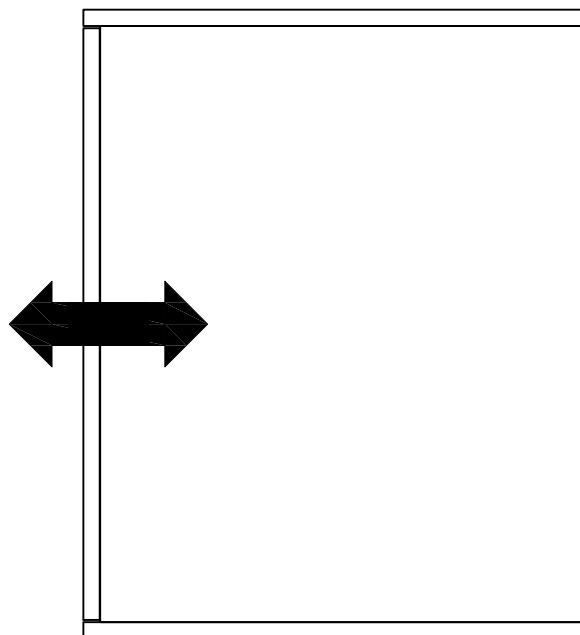

 If you need to slide the door forward. Turn the back center screw clockwise.

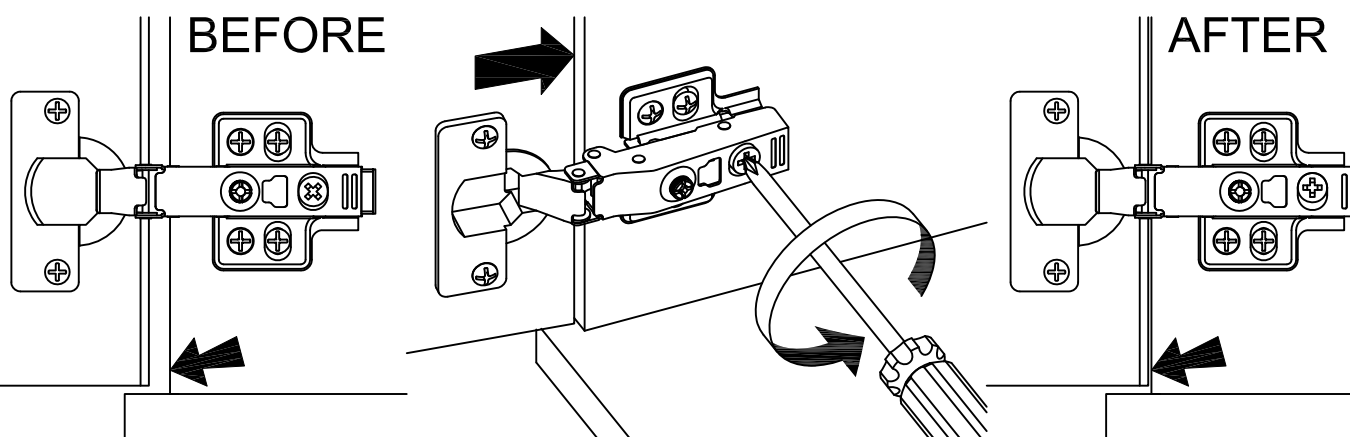

If you need to slide the door backward. Turn the back center screw counter clockwise.