 


TV Stand

Assembly Instructions - Please keep for future reference

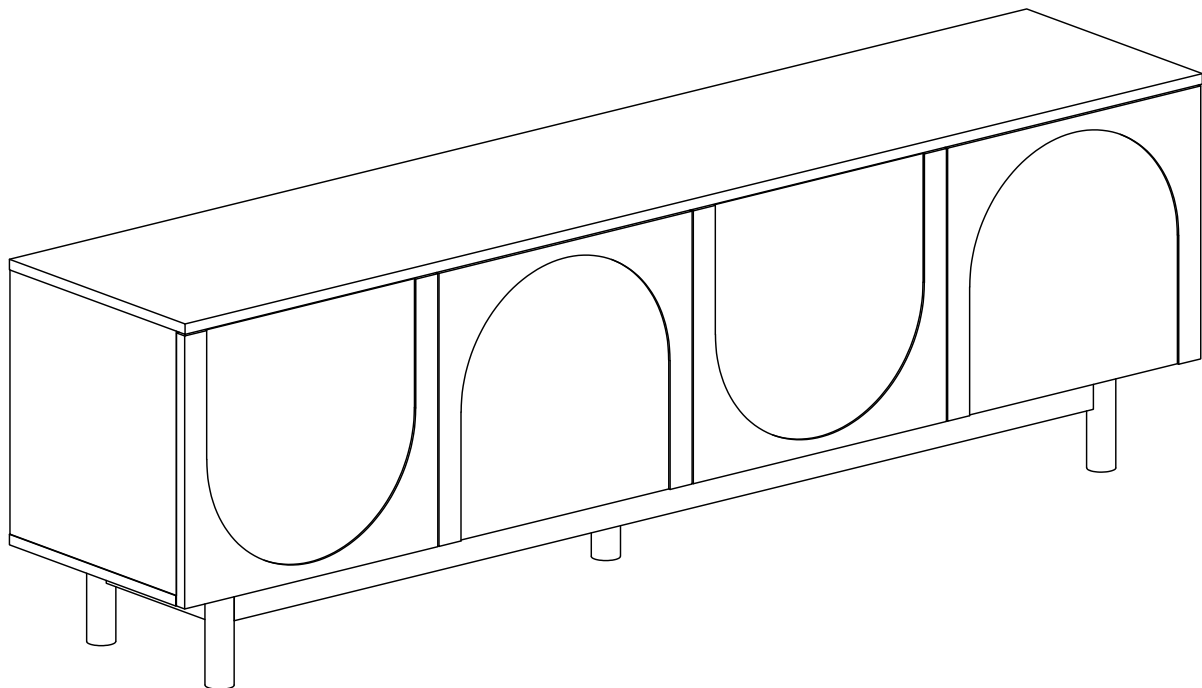

Dimensions

Width-70.87inch

Depth-14.96inch

Height-22.05inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions

 
 
 
 
 
 
 
 
 
 
To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

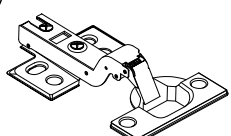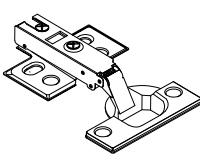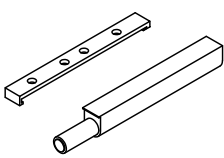A1  Cam Bolt x (16+1)	A2  Cam Lock x (16+1)	B  8*40mm Dowel x (20+1)	C  3.5*14mm Screw x (68+1)
D  Hinge x 4	E  Hinge x 4	F  7*50mm Dowel x 6	G1  Cam Bolt x 16
G2  Cam Lock x 16	H  Backboard buckle x 12	J  non-slip mat x 5	K  Shelf support pin x 8
L  Hole to stick x 38	M  Rebound device x 4	N  Anti-toppling x 2	10  150*40*40Leg x 4
11  150*30*30Leg x 1			

 Tools required



Phillips screwdriver
(medium & large)

 


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1

 
DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

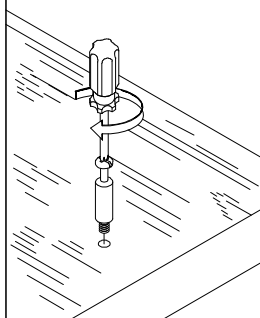

Step 2

Push the male camlock into the entry hole.

 2

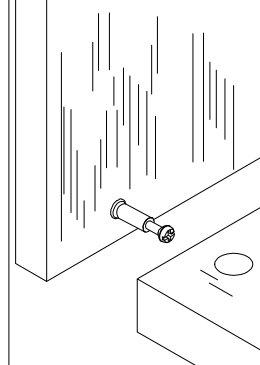


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

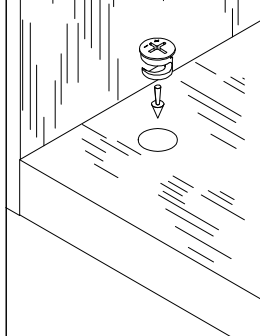


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

 4

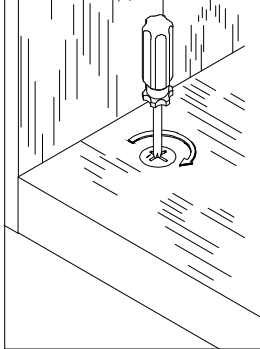


Assembly Instructions

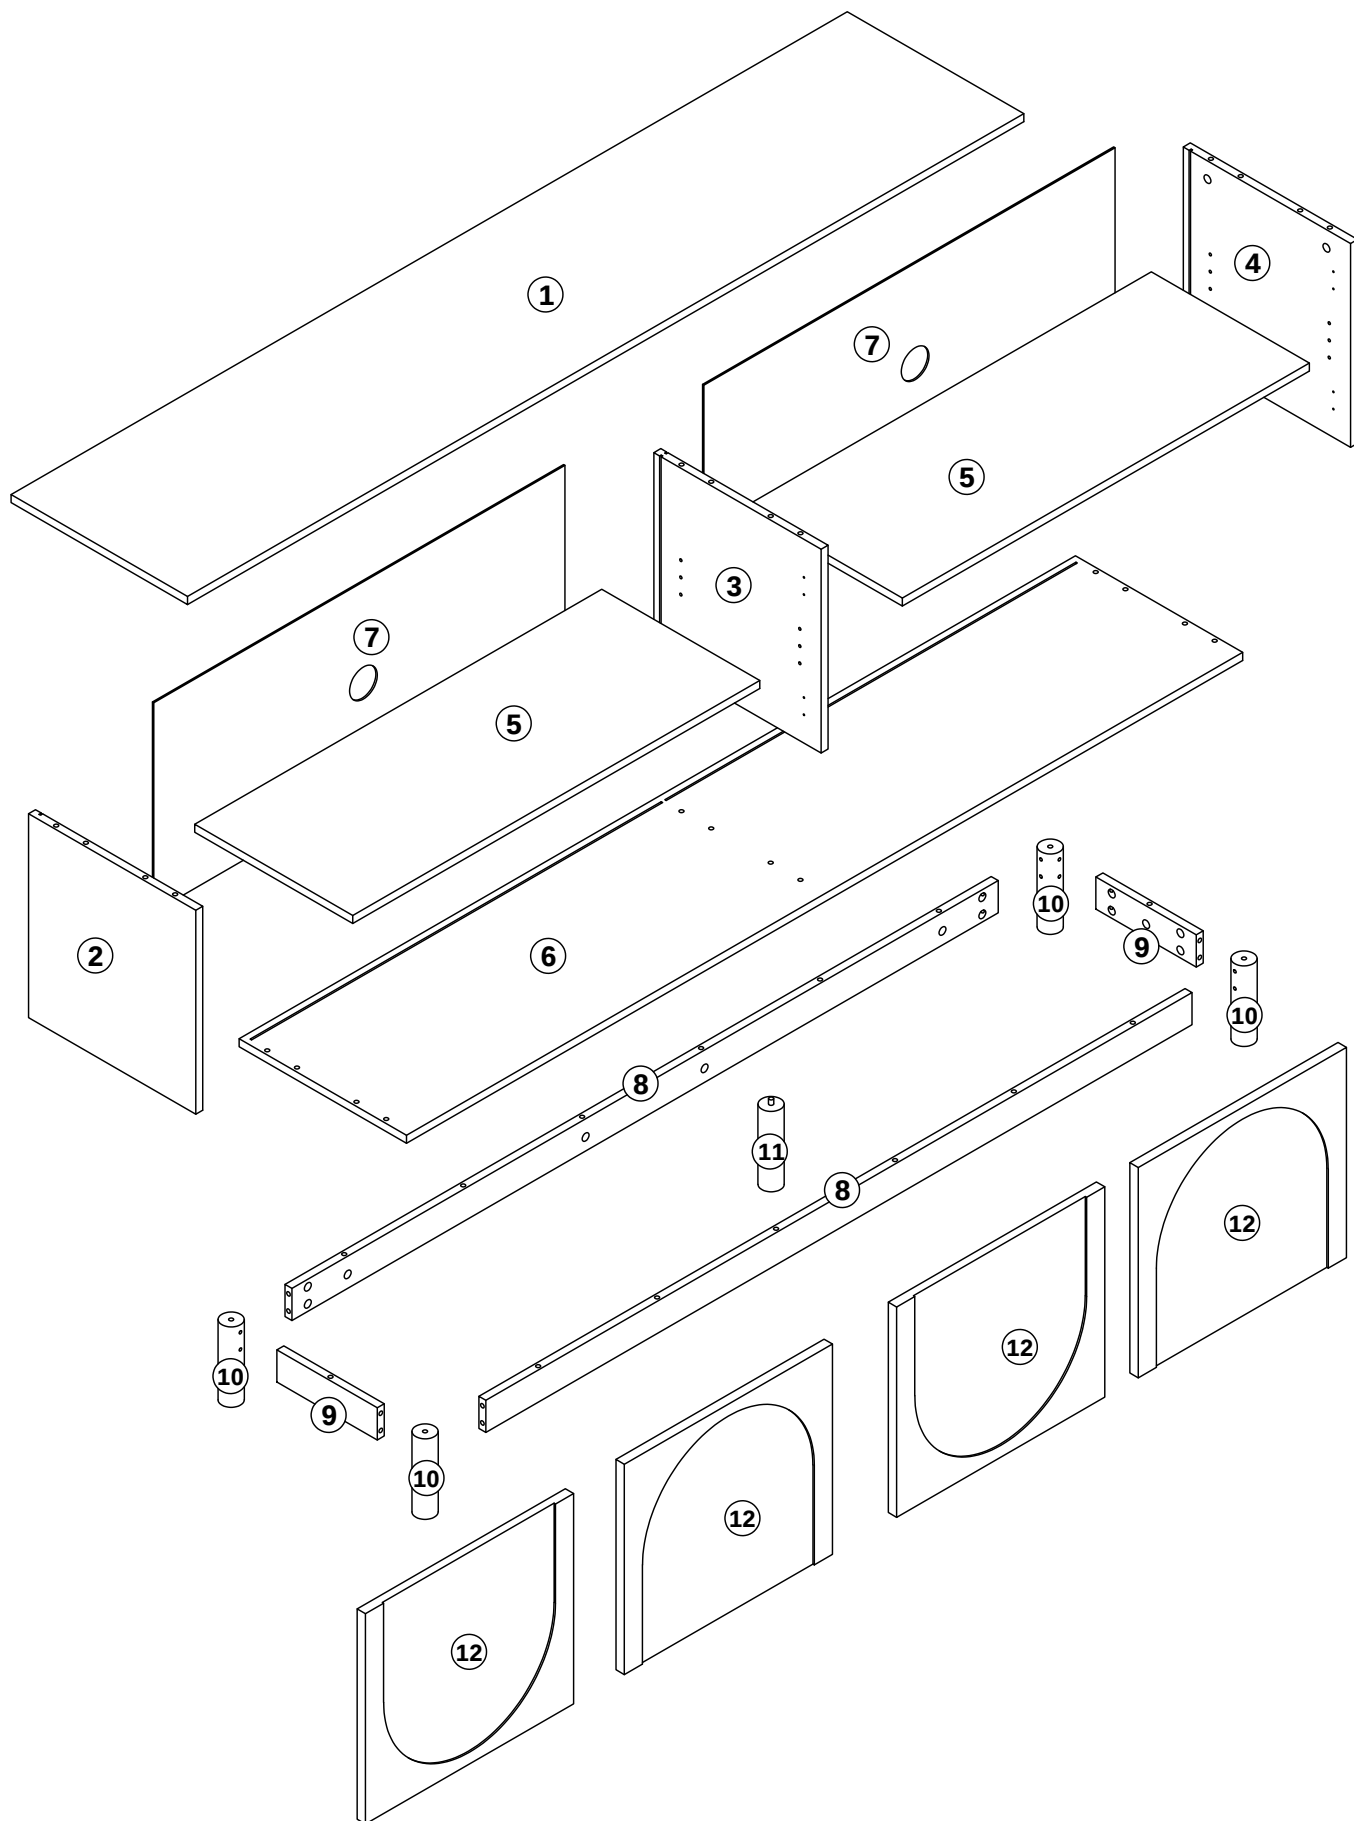 


Assembly Instructions

 1 x 1




1800x380x15mm

 2 x 1

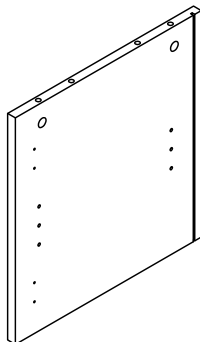


380x360x15mm

 3 x 1

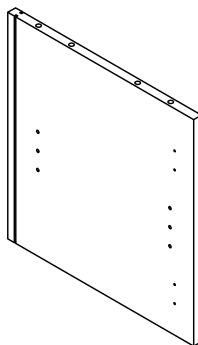


380x360x15mm

 4 x 1

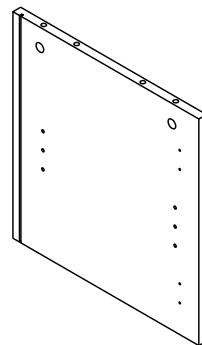

380x360x15mm

 5 x 2

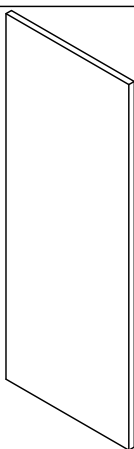


876x340x15mm

6 x 1



1800x360x15mm

 7 x 2

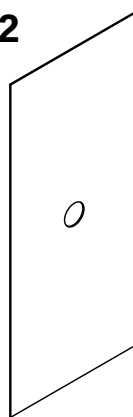

885x390x3mm

8 x 2



 
1520x60x15mm

9 x 2



216x60x15mm


12 x 4

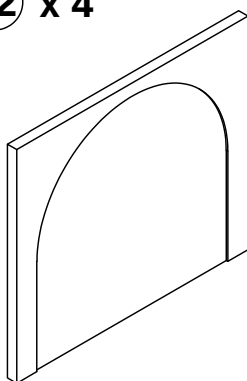

448x392x18mm

Assembly Instructions


 
Step 1

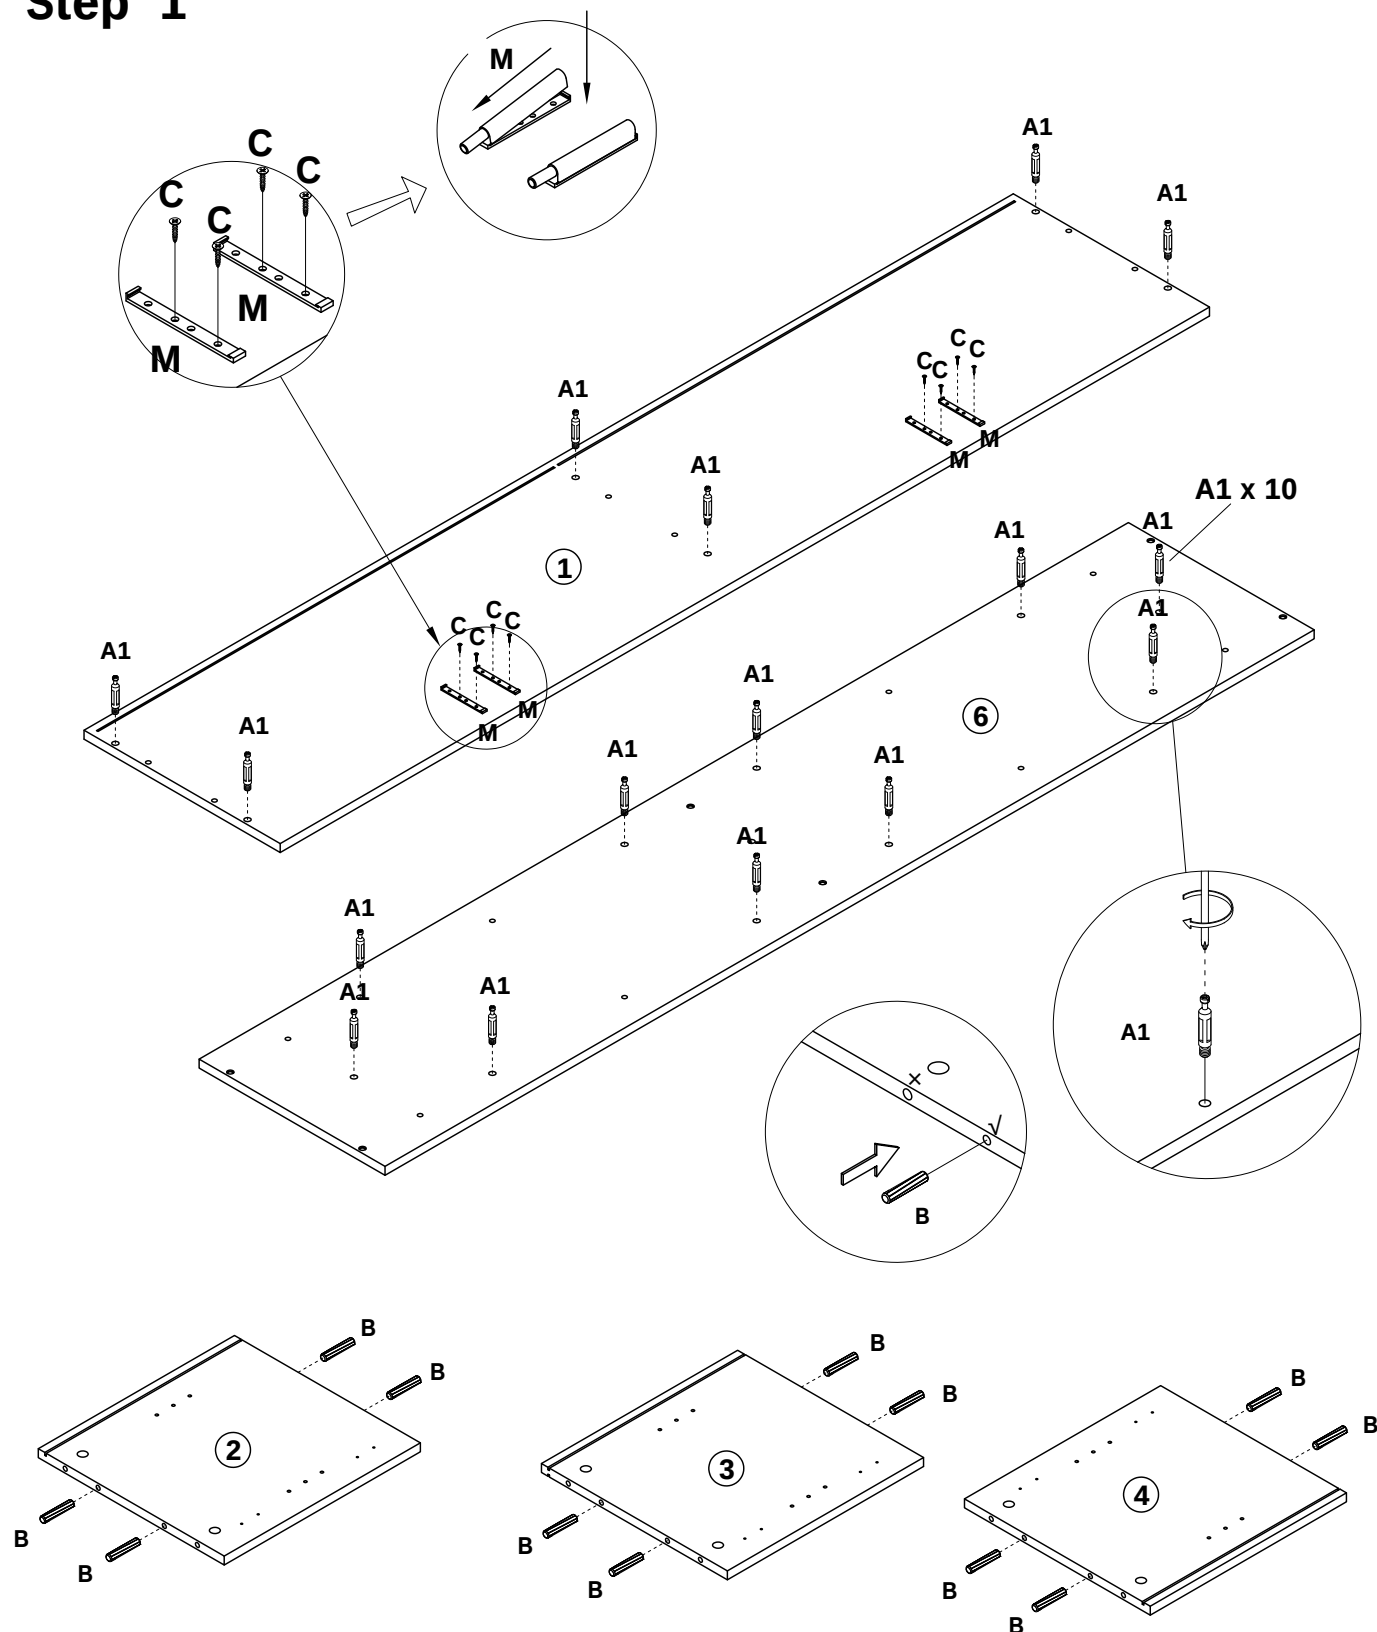

(A1)  Cam Bolt x 16	(B)  8*40mm Dowel x 12	(C)  3.5*14mm Screw x 8	(M)  Rebound device x 4
--	---	--	--


Assembly Instructions

  Step 2


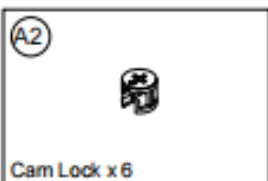
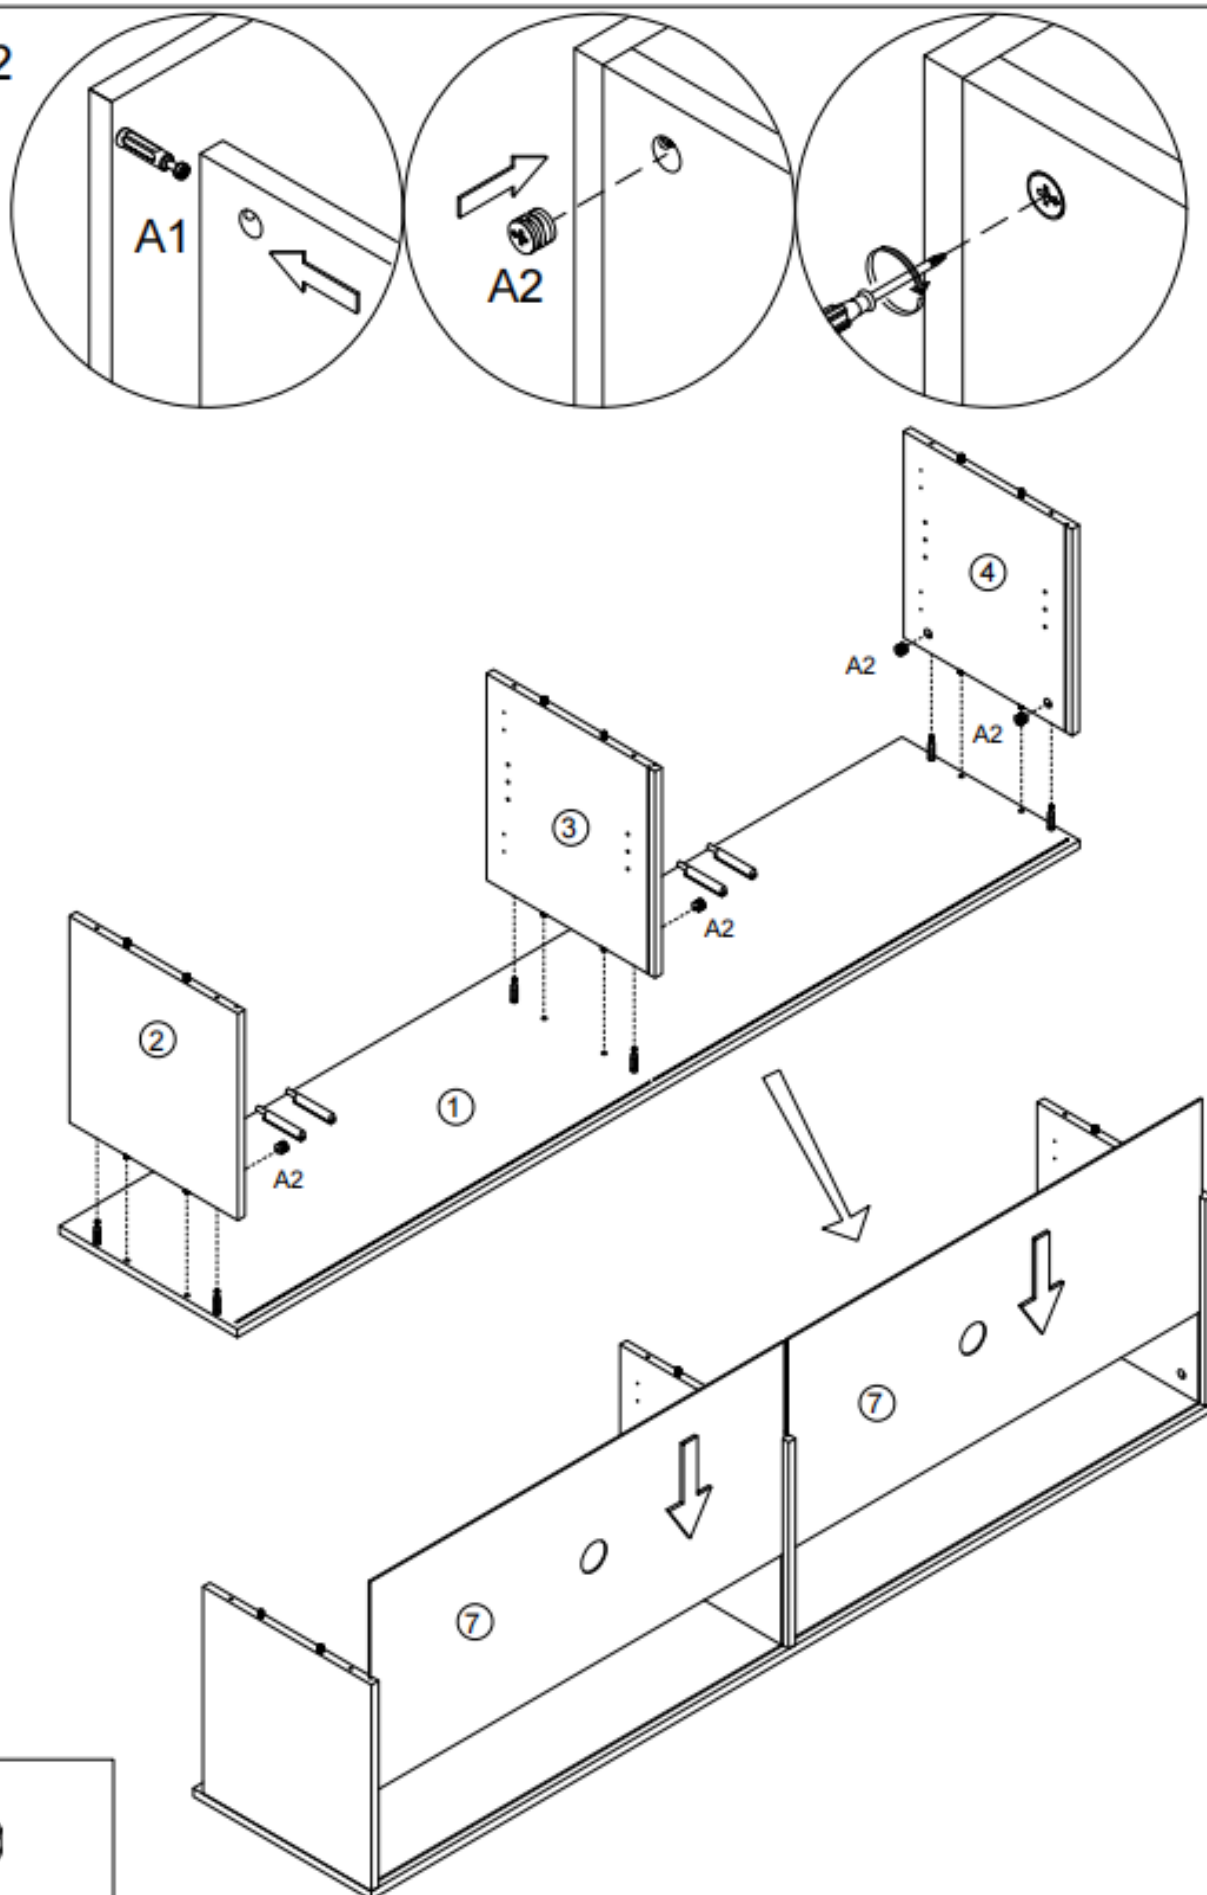


Assembly Instructions

 Step 3


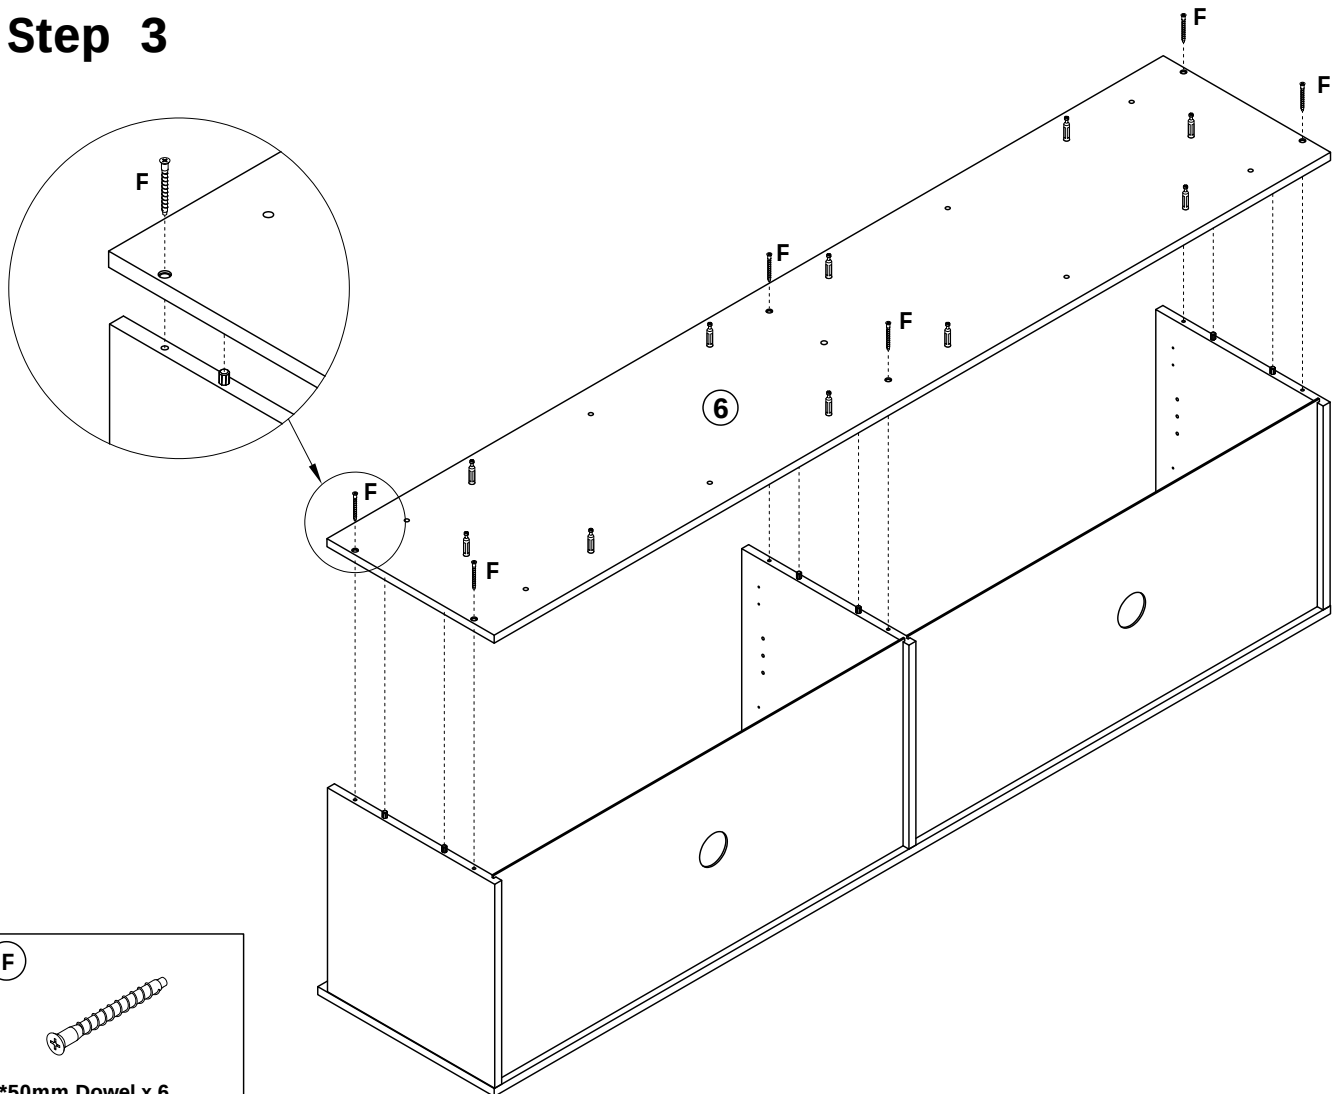


   Step 4

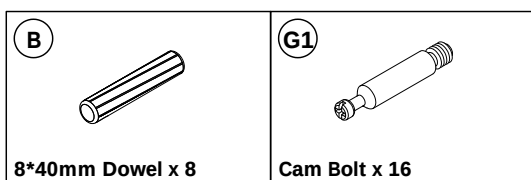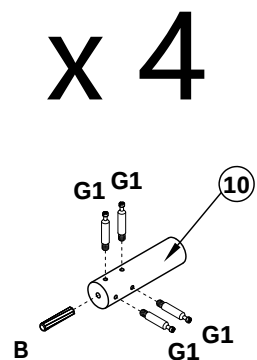
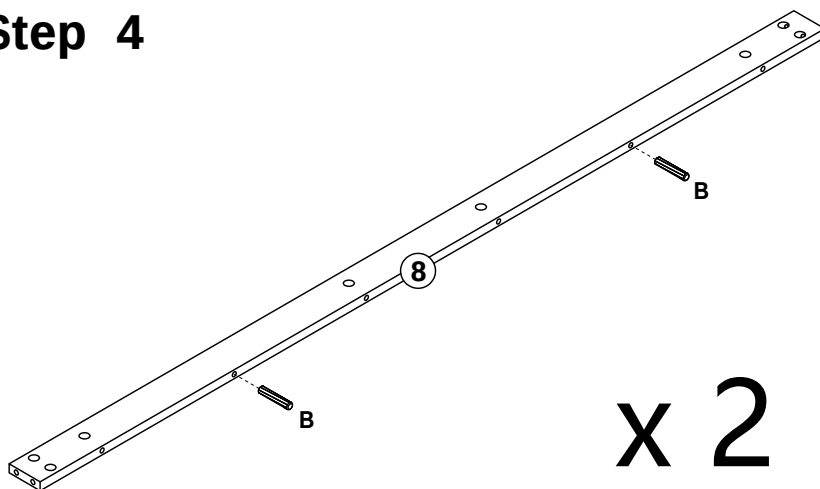


Assembly Instructions

  Step 5


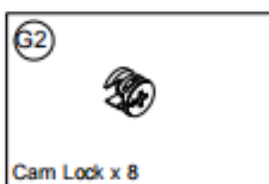
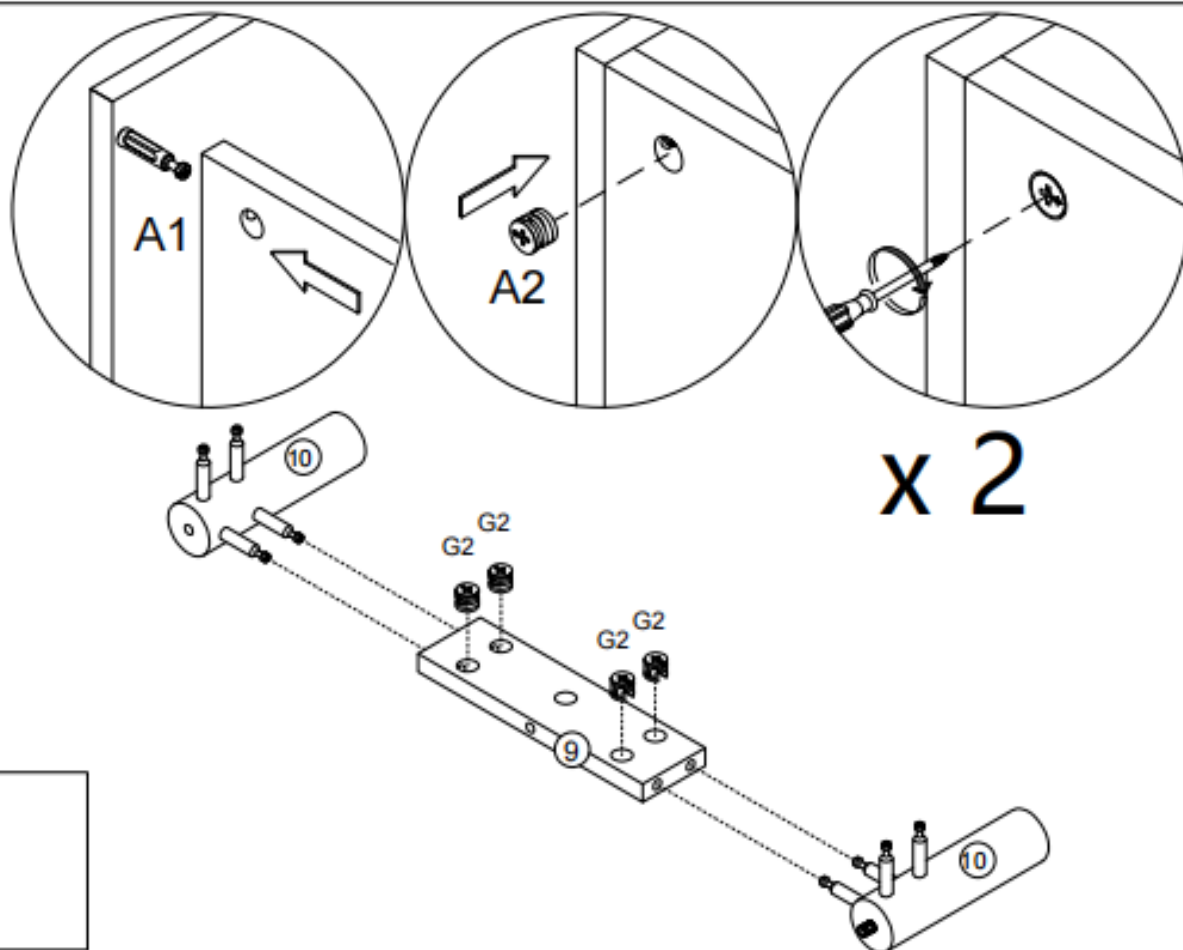


  Step 6

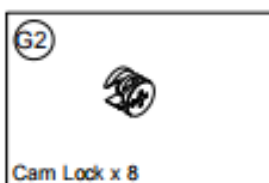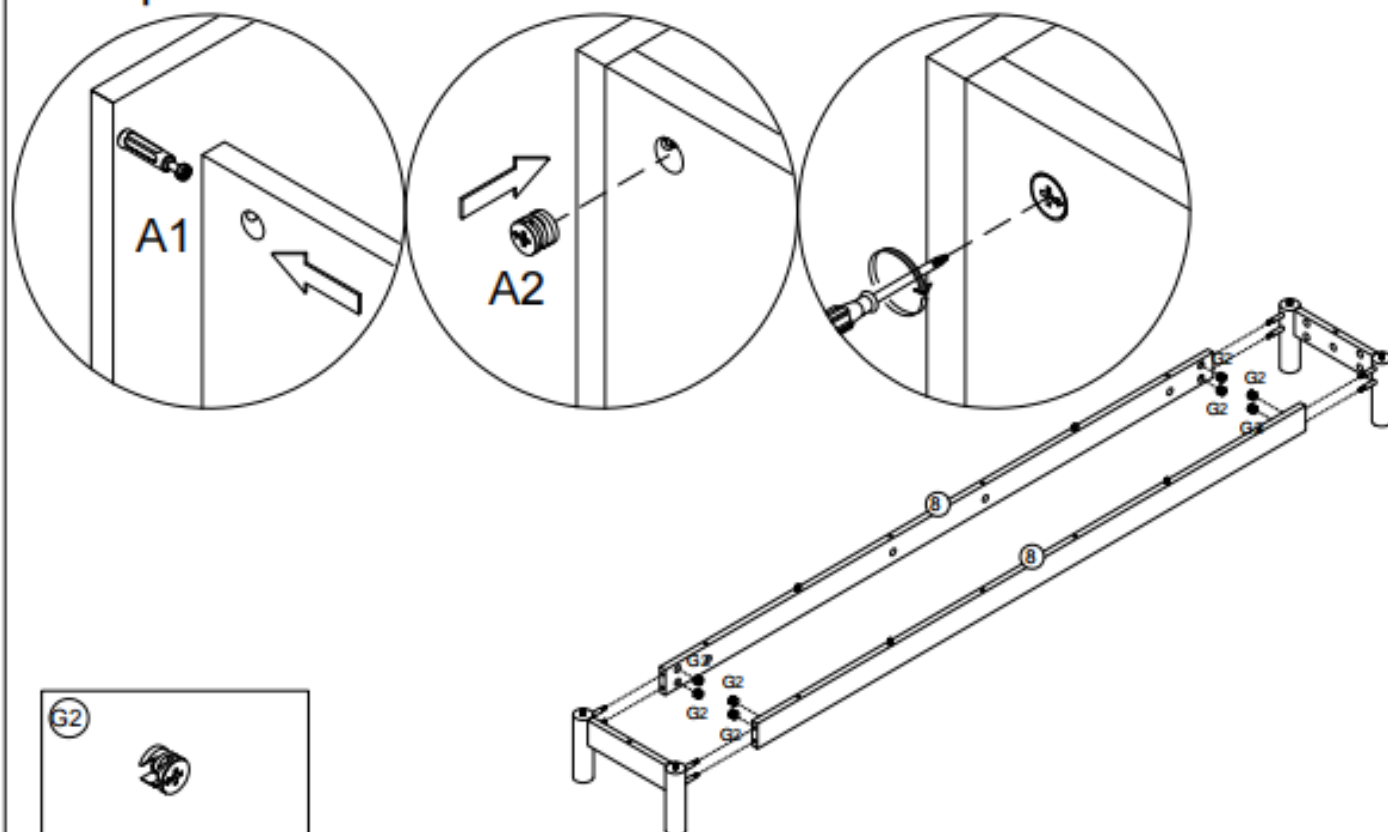


Assembly Instructions

   Step 7

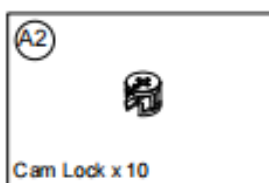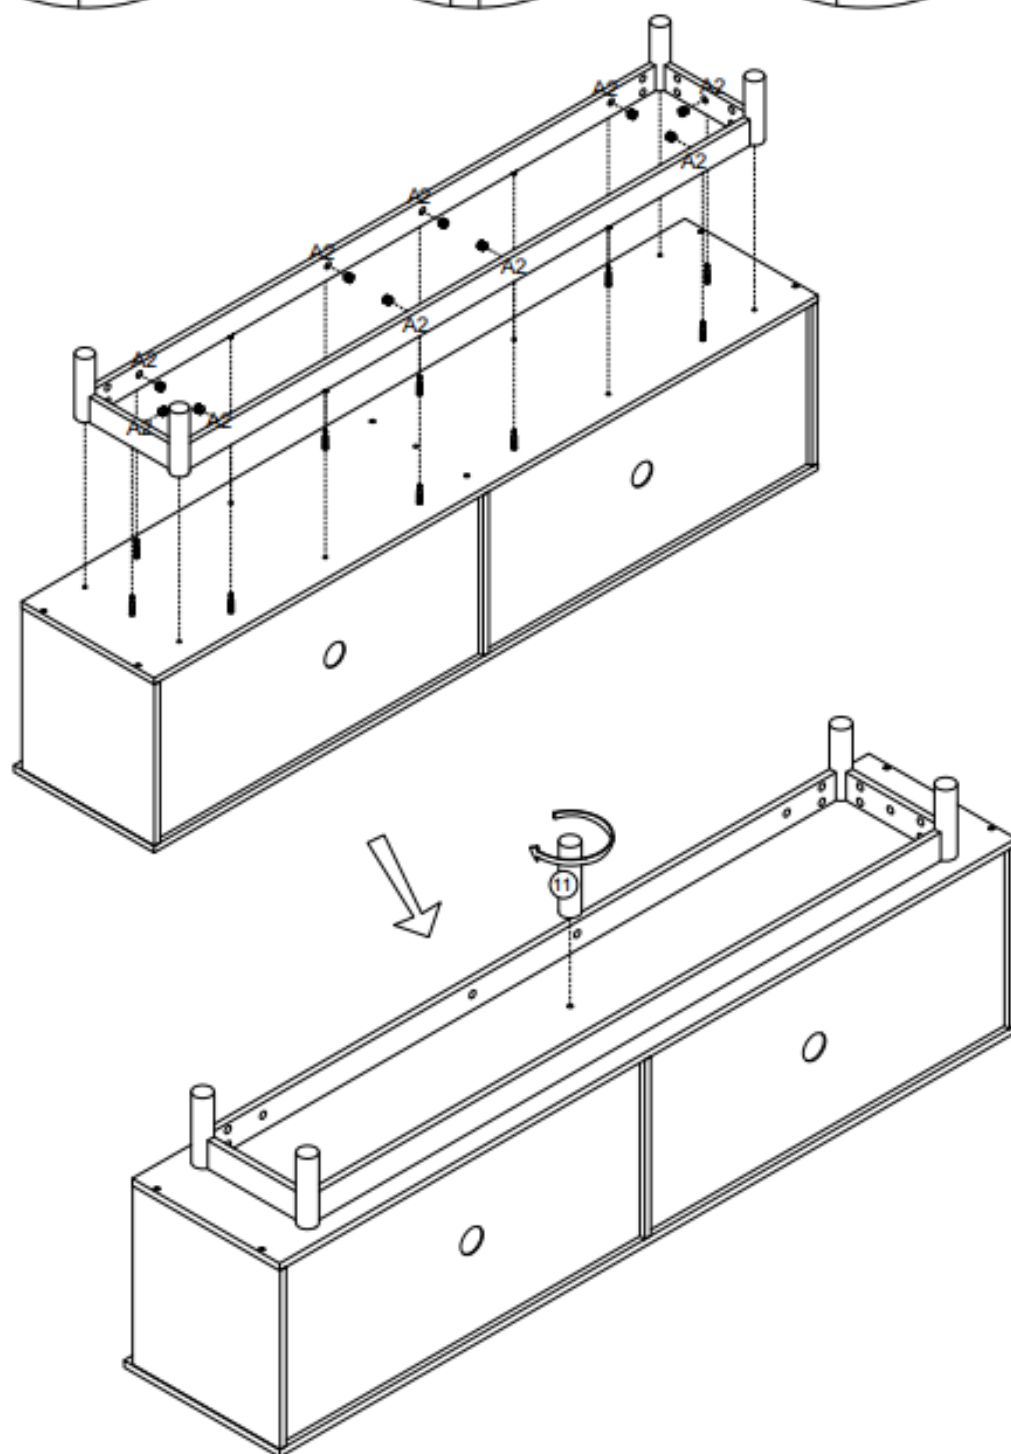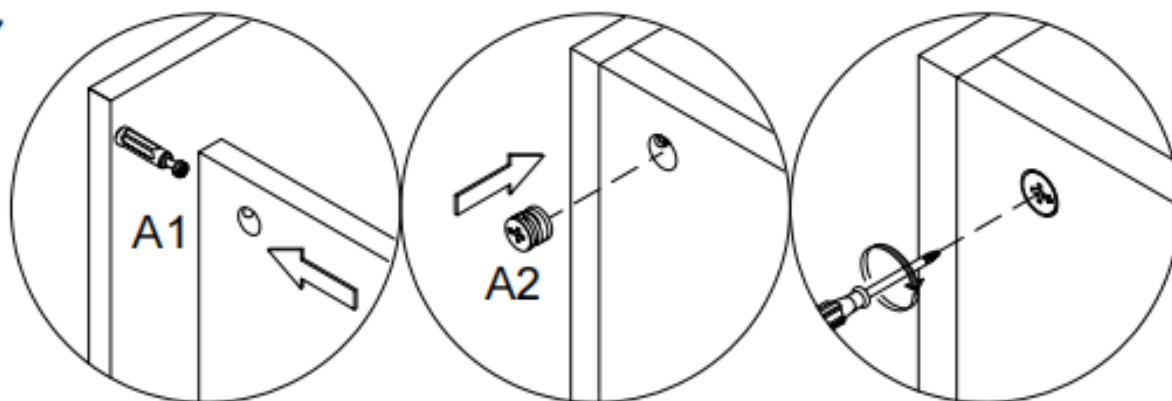




Assembly Instructions

 Step 8

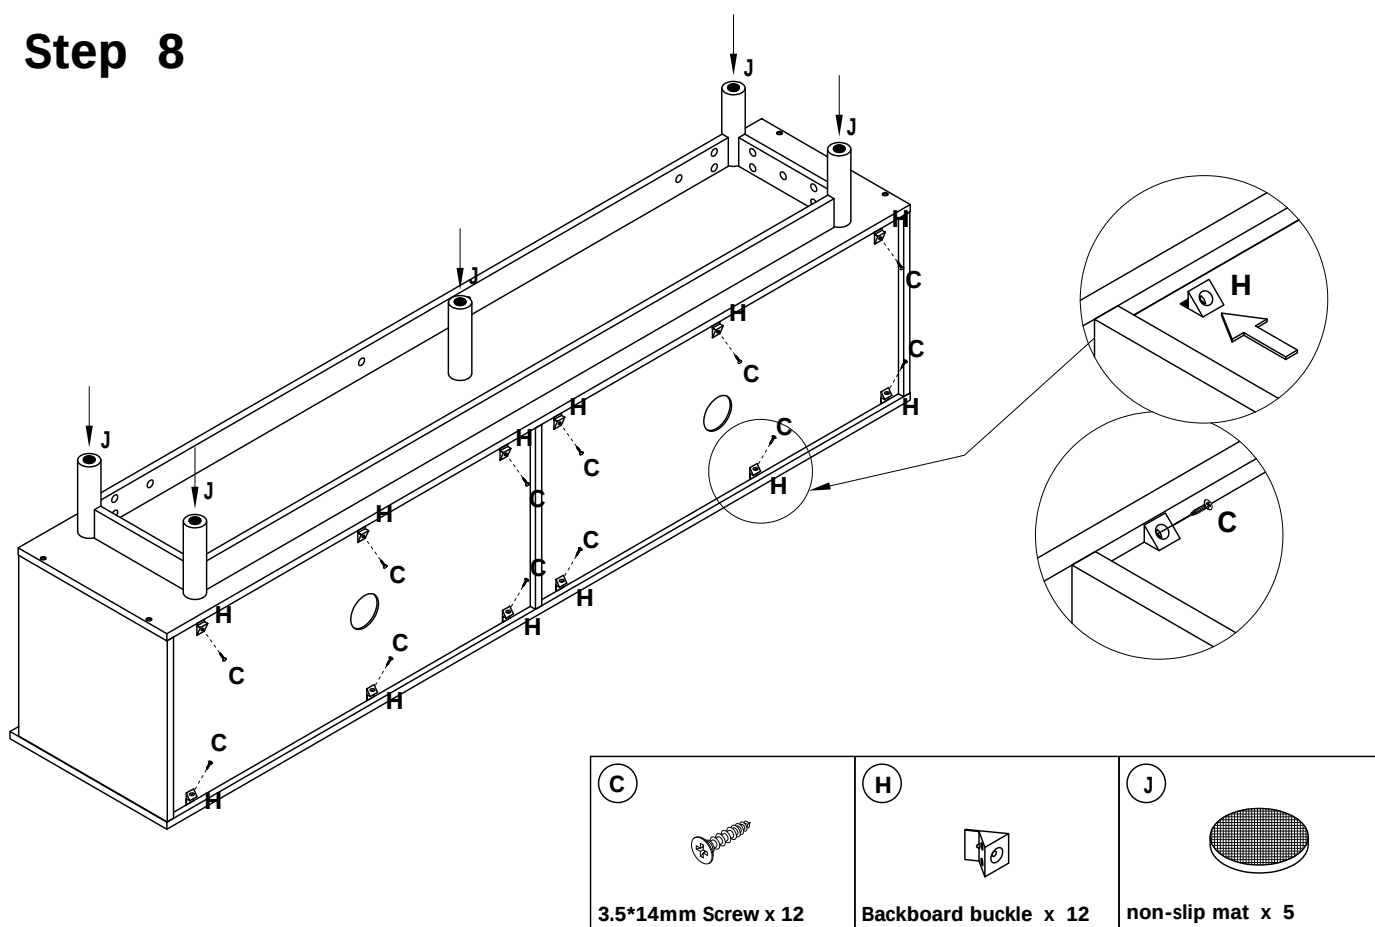


Step 9

   In order to make the product more beautiful, please paste hardware L on the exposed holes

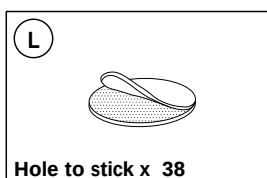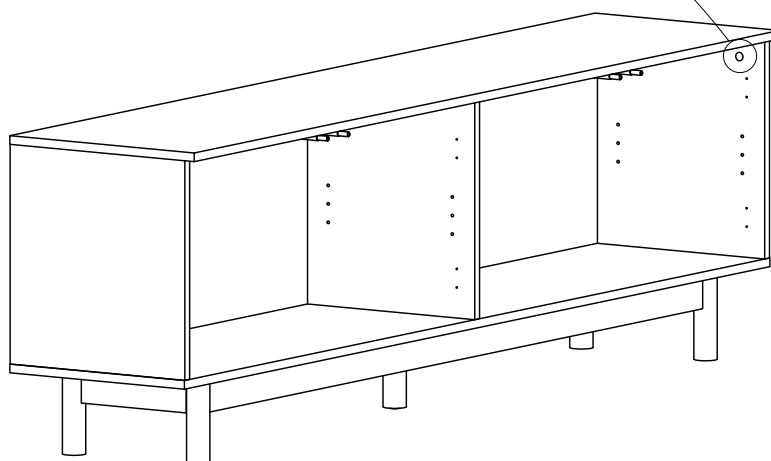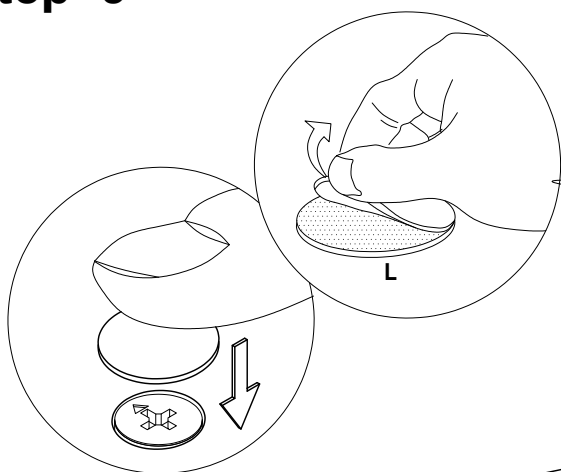


Assembly Instructions



 
Step 10

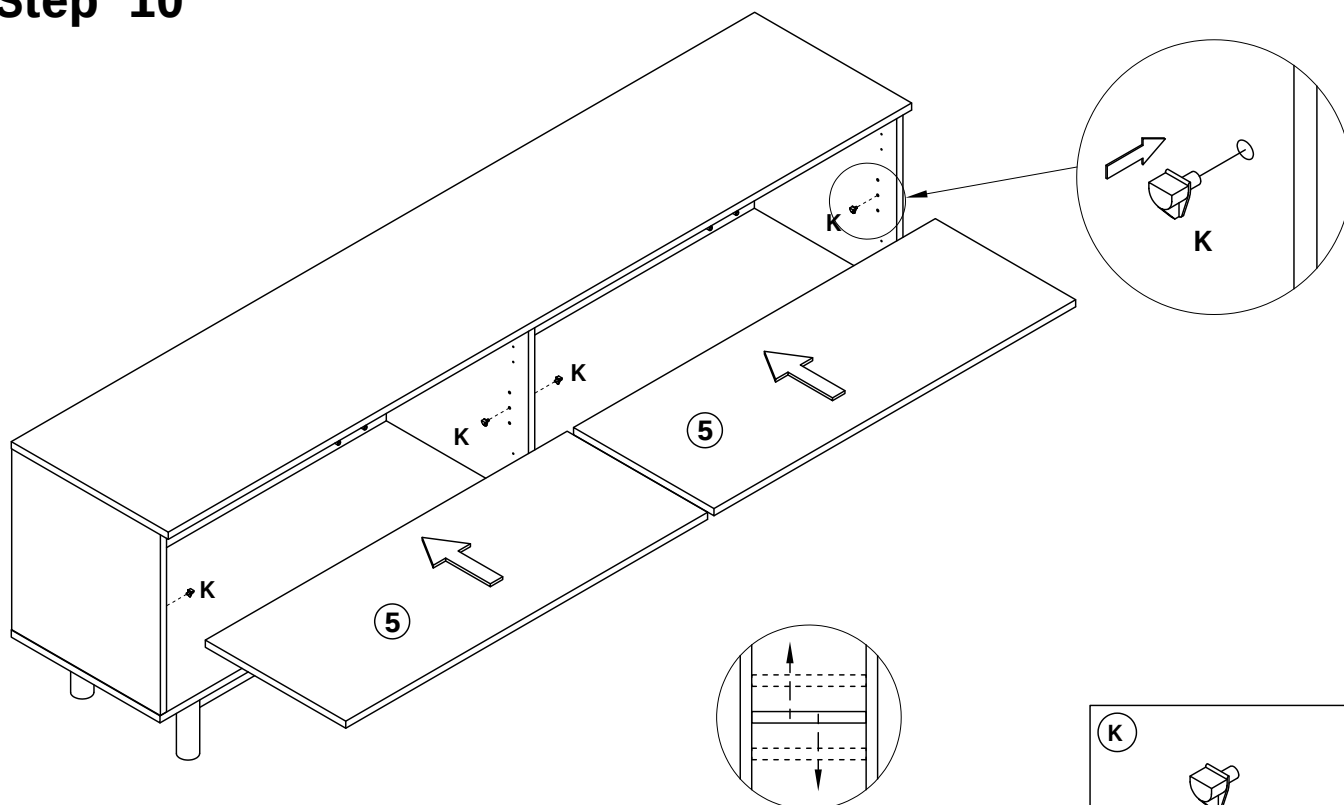

The shelf can be adjusted up and down




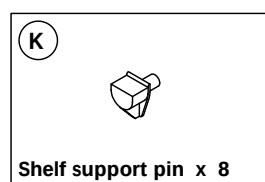 


   Step 11

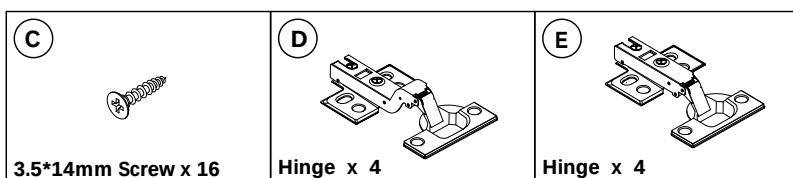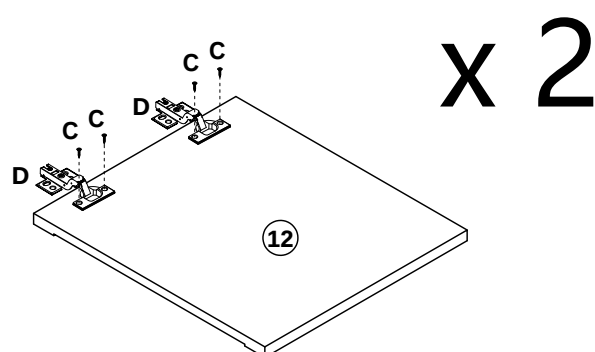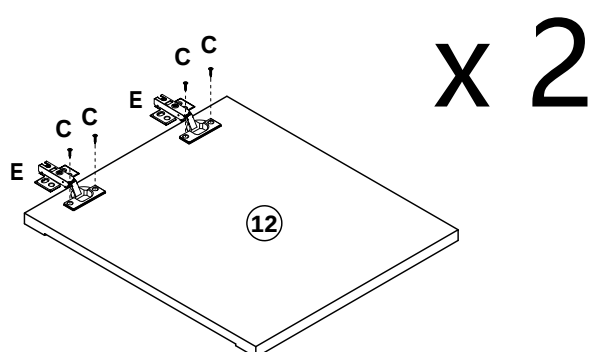

Assembly Instructions

    
Step 12

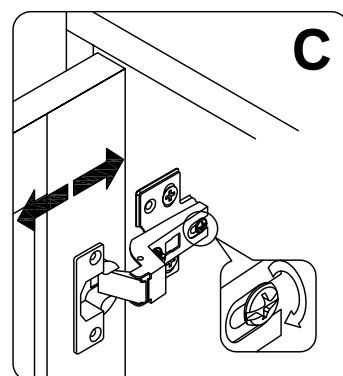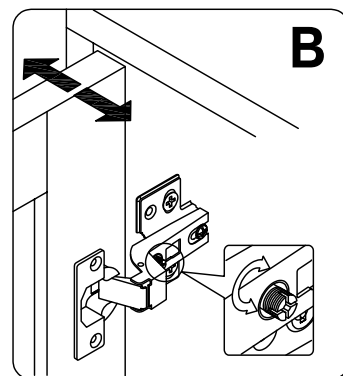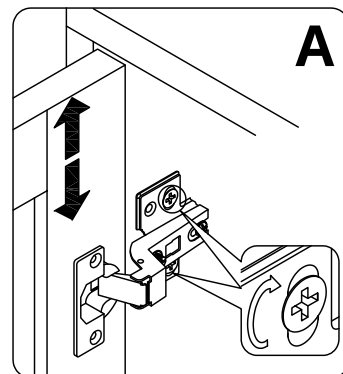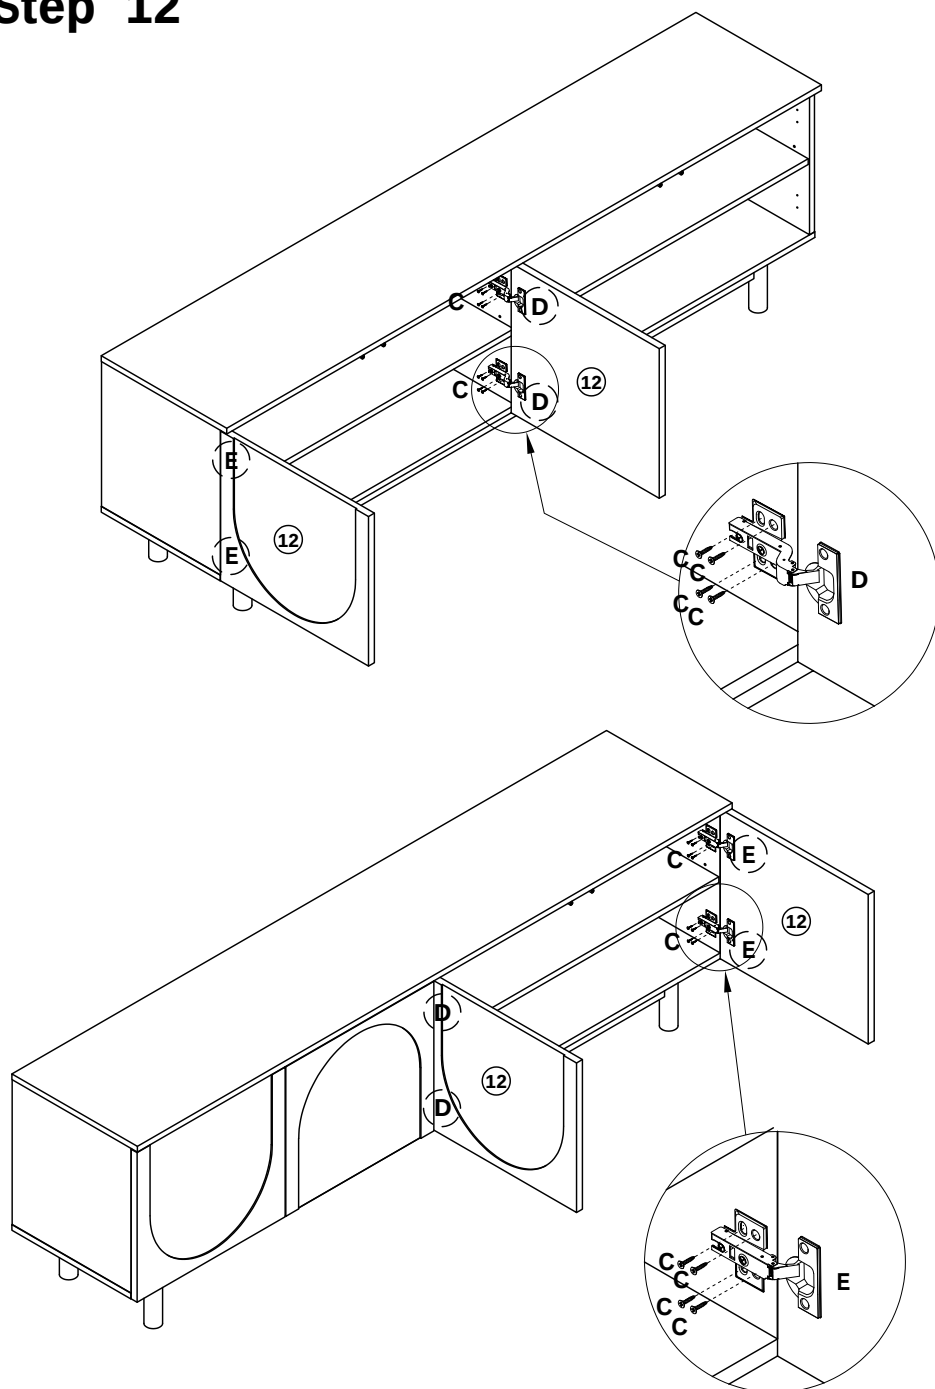

A Adjust this screw to adjust the distance between the upper and down parts of the door panel,


B Adjust this screw to adjust the left and right distance of the door panel.

 C Adjust this screw to adjust the longitudinal separation of the door panel.


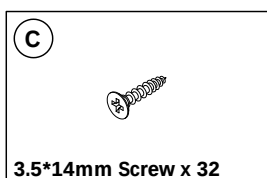


Assembly Instructions

 Step 13

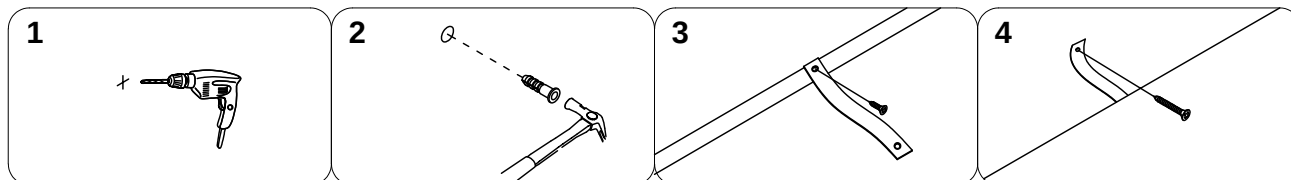

WALL

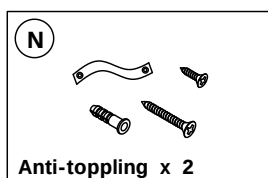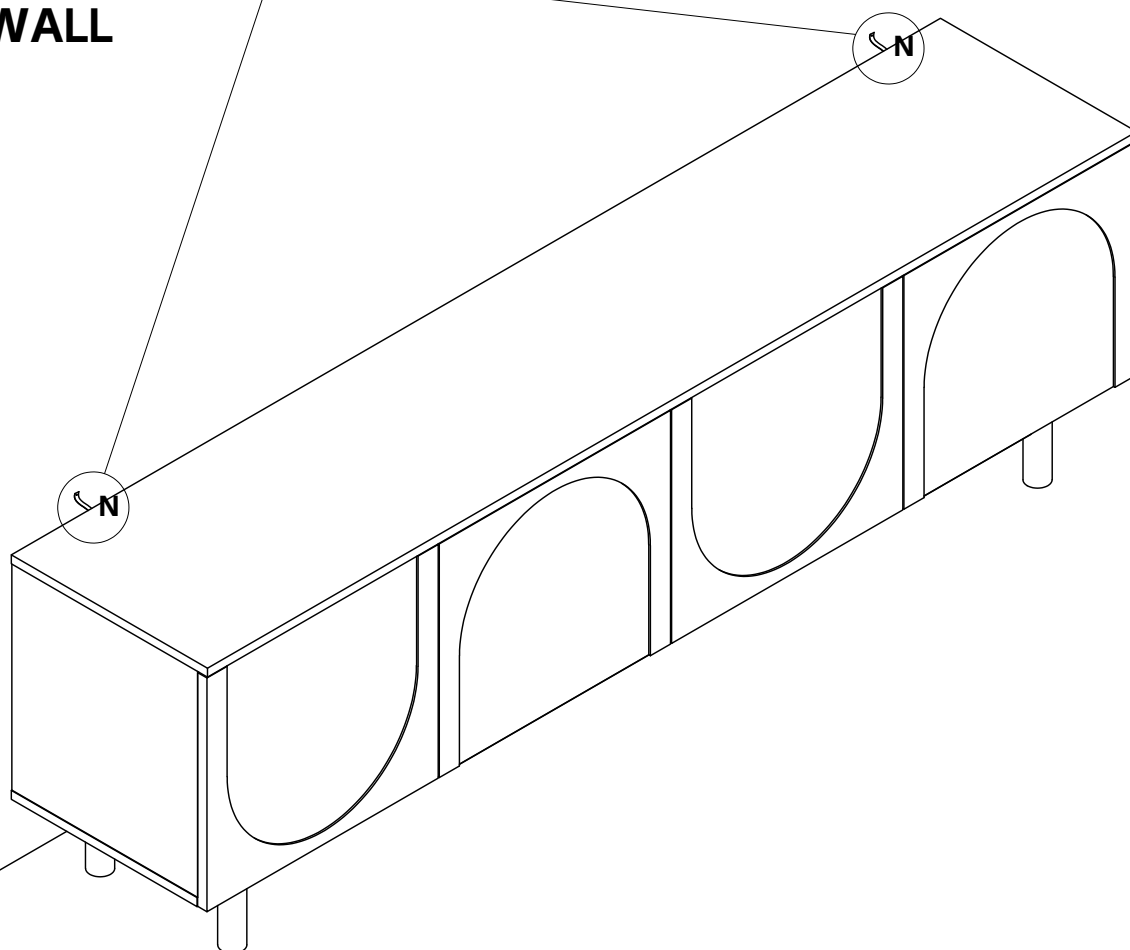  

Assembly Instructions

Step 14

