


INSTALLATION MANUAL

CHANDELIER

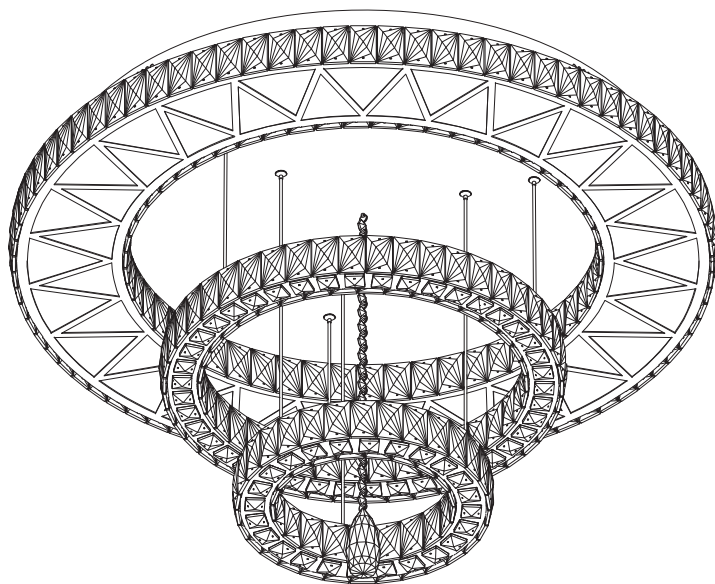

Safety Rules

WARNING: BE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF; EITHER THE FUSE IS REMOVED OR THE CIRCUIT BREAKER IS TURNED OFF. TURNING THE POWER OFF USING THE LIGHT SWITCH IS NOT SUFFICIENT TO PREVENT ELECTRICAL SHOCK.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions or situations that may occur. It must be understood that common sense, caution, and care, are factors which cannot be built into any product. These factors must be supplied by the person(s) installing this unit.

READ & SAVE THESE INSTRUCTIONS

CAUTION: Before assembling the lighting fixture, refer to the section titled Wiring Connections. If you feel you do not have enough electrical wiring experience, either refer to a do-it-yourself wiring handbook or have your lighting fixture installed by a qualified, licensed electrician.

INSTALLATION & OPERATION INSTRUCTIONS GENERAL

Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the appropriate fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.


All electrical connections must be in accordance with local and National Electrical Code (NEC) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

Installation Preparation


Tools You Need




☒ Ladder

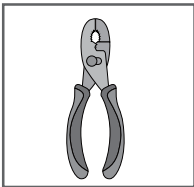


☒ Pliers

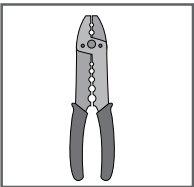


☒ Wire Strippers

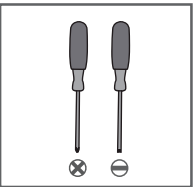

☒ Screwdrivers

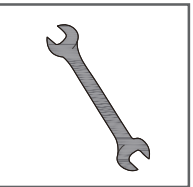

☒ Wrench

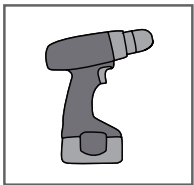

☒ Power Drill
(optional)




☒ Drill Bit
(optional)

What to Expect with your Installation




☒ Check the box to see the weight of the light

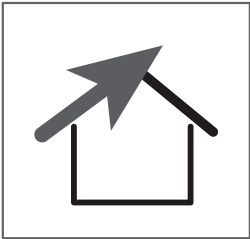


☒ Angled ceiling applicable

Packing List

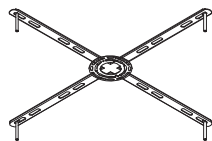

A Mounting Bracket

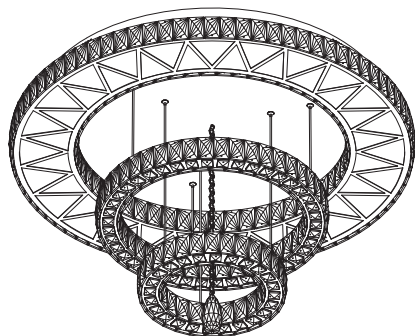

B Lamp Body

Installation Kit


AA	2x	BB	3x	CC	4x
					
Outlet Box Screw		Wire Nut		Wood Screw	
DD	4x	EE	4x	FF	1x
					
Metal Washer		Plastic Anchor		Gloves	

NOTE: The listed quantity is for installation, extra hardware may be included.

Installation Instructions

1. Remove the Mounting Bracket

Loosen the knurled nut from the lamp body (B), and take out the mounting bracket (A).

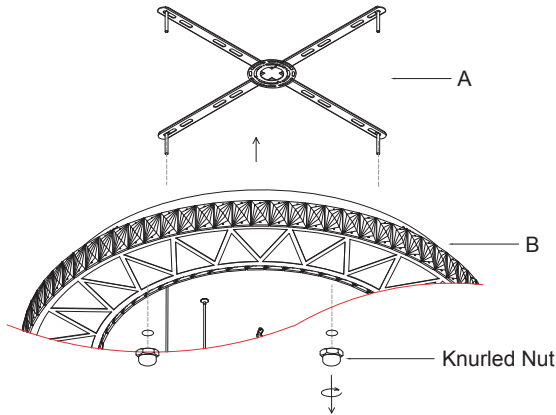


2. Mount the Bracket (3 Options)

Option 1. (For Outlet Box)


Step 1: Secure the mounting bracket (A) to the outlet box with screws taken off from outlet box or screws (AA) provided.

Step 2: Secure the ends of the bracket on the ceiling with washer (CC) and wood screw (DD).

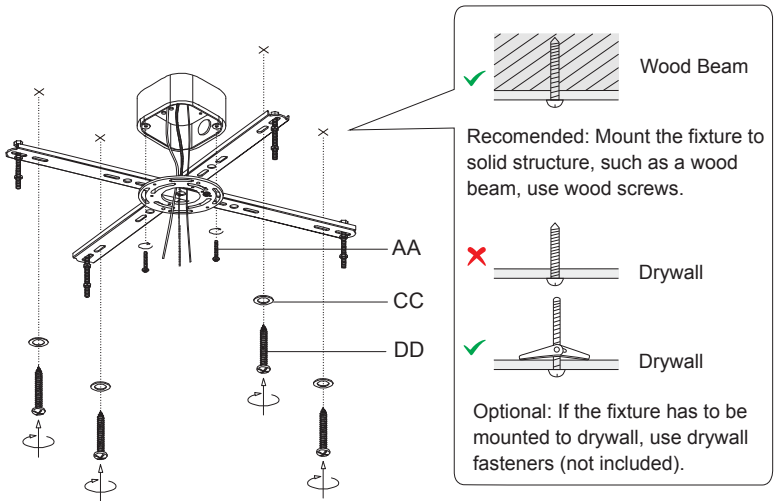


Option 2. (For Solid Wood Structure)

Mark and drill the screw holes on the solid wood structure. Mount the mounting bracket with metal washers (DD) and wood screws (CC).

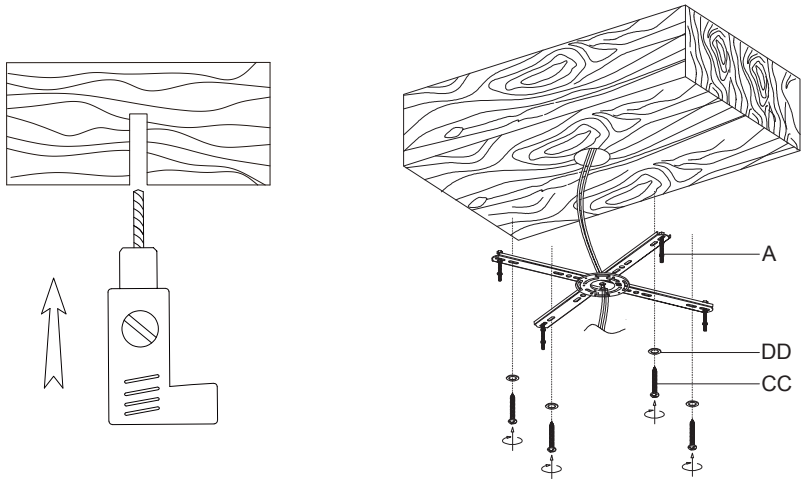


Option 3. (For Concrete Structure)

Mark and drill the anchor holes on the concrete structure. Mount the mounting bracket to the concrete structure with anchors (EE).

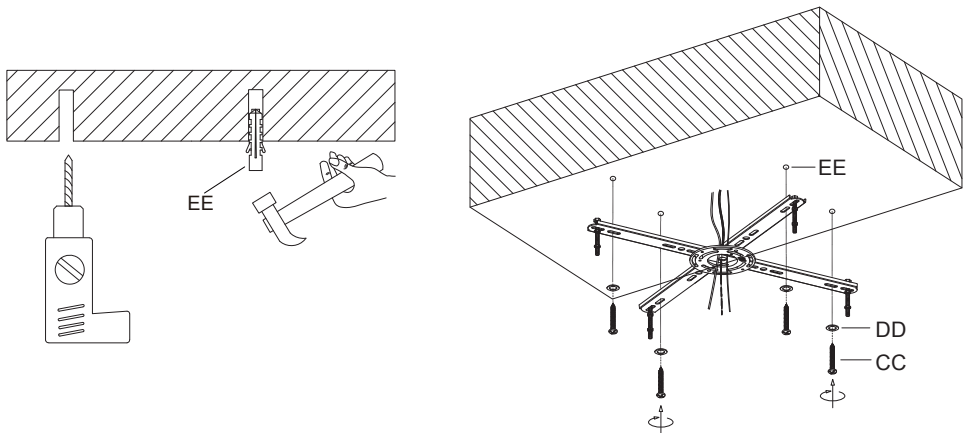


3. Connect the Wires

Connect the wires from the fixture to the house supply wires with wire nuts (BB), ground wire (green, green/ yellow, or bare copper) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to hot wire. Wrap the connection with electrical tape.

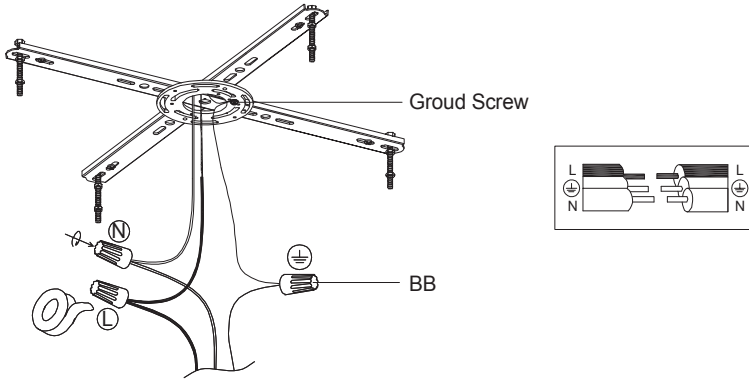

4. Fix the Canopy


Fix the lamp body (B) onto the mounting bracket (A) with knurled nuts taken off.

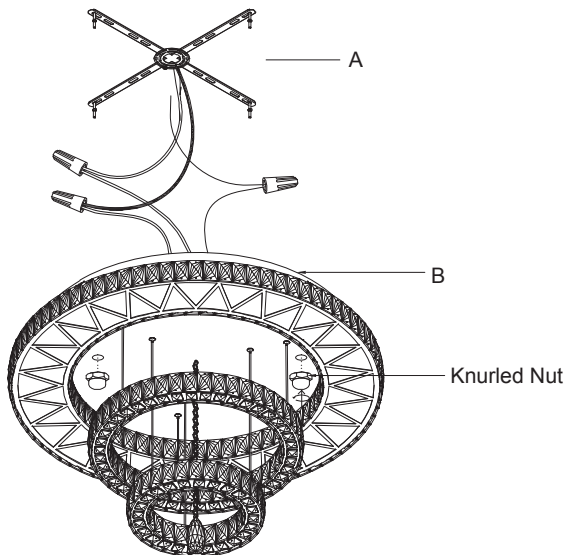

WIRE LENGTH ADJUSTMENT

Step 1: Using the tip of your finger or a fingernail, push the pin embedded in the ceiling canopy. This action will release the cable locking mechanism.

Step 2: While keeping the pin in its depressed position, gently pull downward (or push upward) on the cable. Repeat this process for each cable to adjust the height of the fixture as needed.




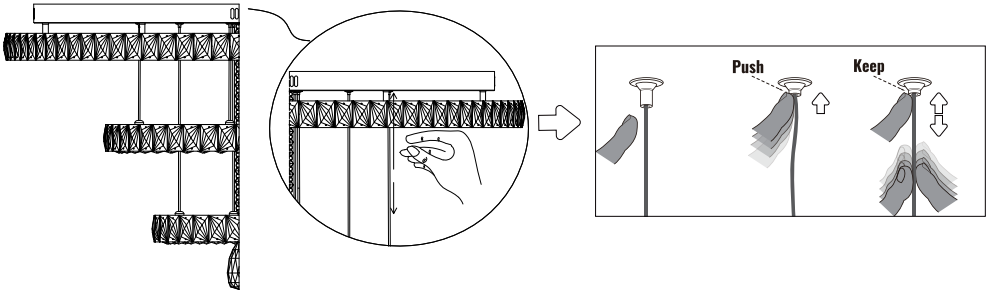


ASSEMBLY STYLES

Styles below are for reference only. Buyers are encouraged to compose their own unique configuration on site.

Note:

This product only supports three-color light change via a wall switch and does not support dimming via a dimmer.

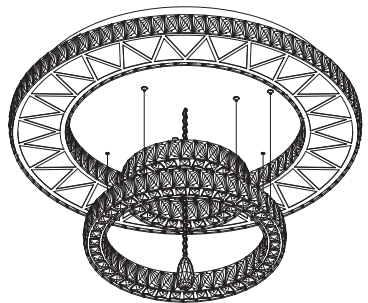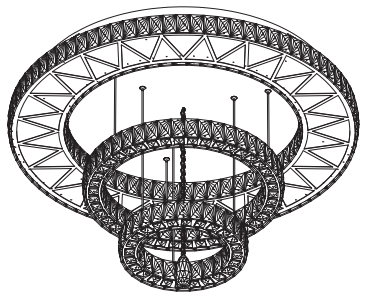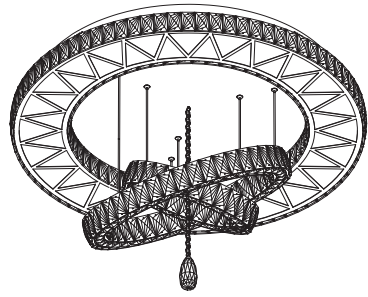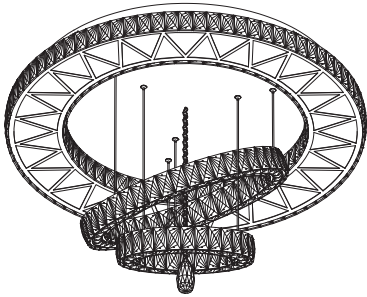

Remote Control Instructions

		Turn on/off the lights
		Adjust the light color temperature
		Adjust the brightness of the light
		Night mode, dim the lights
		Quick switch of the light color: warm light →cool light →white light
	S.light	This function is not supported
		1H/2H for timing the fan
		REMOTE SIGNAL PAIRING: If the remote control loses signal of the fan, press and hold the button at the very beginning after it's turned on from wall switch. After the fan light flashes or beeps, it's done.
Note: Please insert 2 batteries before using: AAA 1.5V battery x 2pcs (not included).		

Trouble Shooting

1.Missing / Broken Parts

- Make a list of the missing/broken parts according to the packing list, take photos for broken parts, then email us for free replacements.

2. Bulbs Do Not Light Up

- Check your power and switch to make sure it's power on.
- For regular bulbs, make sure it is connected to the ON/OFF wall switch, not the dimmer switch.
- Replace the bulb with a new one.

3. Bulbs Flicker

- If it is a dimmer switch, use a dimmable bulb.
- Replace the bulb with a new one.

4. Could Not Install / Assemble

- Take photos of the ceiling / fixture, contact seller for technical support.

Clean And Care

To clean, wipe fixture with soft cloth. Spray from chemical cleaners can discolor the finish of fixture. Do not use scouring pads, powders, steel wool or abrasive paper to clean this fixture.

Ordering Parts

Keep this manual for future reference, and in case replacement parts are needed. Available parts can be ordered from place of purchase. Use exact wording from diagrams when ordering parts.