


Owner Manual

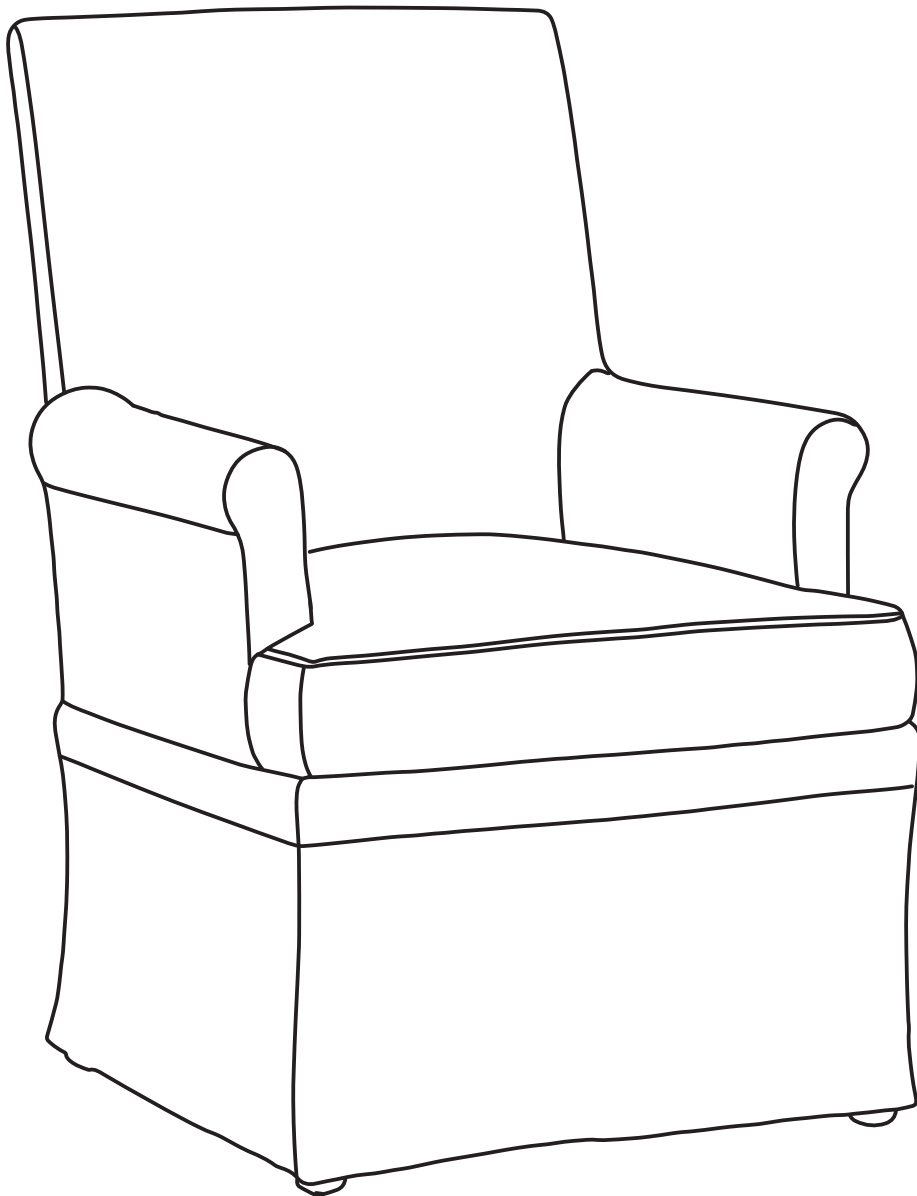

ASSEMBLY GUIDE

IMPORTANT SAFETY NOTICE:
READ CAREFULLY BEFORE BEGAINNING ASSEMBLY!



Follow the assembly steps in order. **DO NOT** skip any steps.



Always using proper tools. **DO NOT** use power tools to assembly.



Be sure to check all packing materials carefully before start, if parts are missing, please contact us to obtain any missing parts.
DO NOT USE SUBSTITUTE PARTS.



Keep the instructions and extra materials for future reference.




Periodically check to ensure that all connectors (bolts, screws, etc.) are tight, please keep the Allen key whenever needed.




Where assembly instructions state that the assembly requires two or more people, **DO NOT** attempt by yourself as there is a risk of injury.

COMPONENT LIST


A Seat

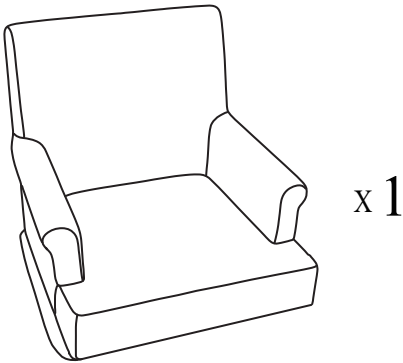

B Front Legs

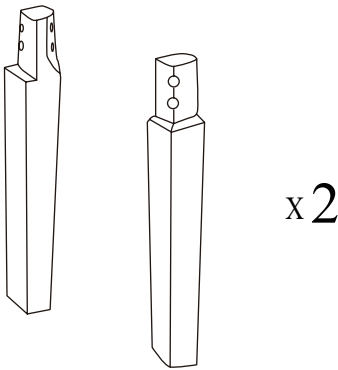

C Back Legs

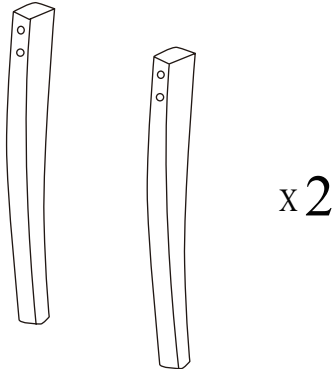

D M8*50mm Bolts



E M8*65mm Bolts




F Flat Washer



G Lock Washer




H Wrench

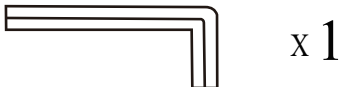


01

Take hardware and legs from under the seat

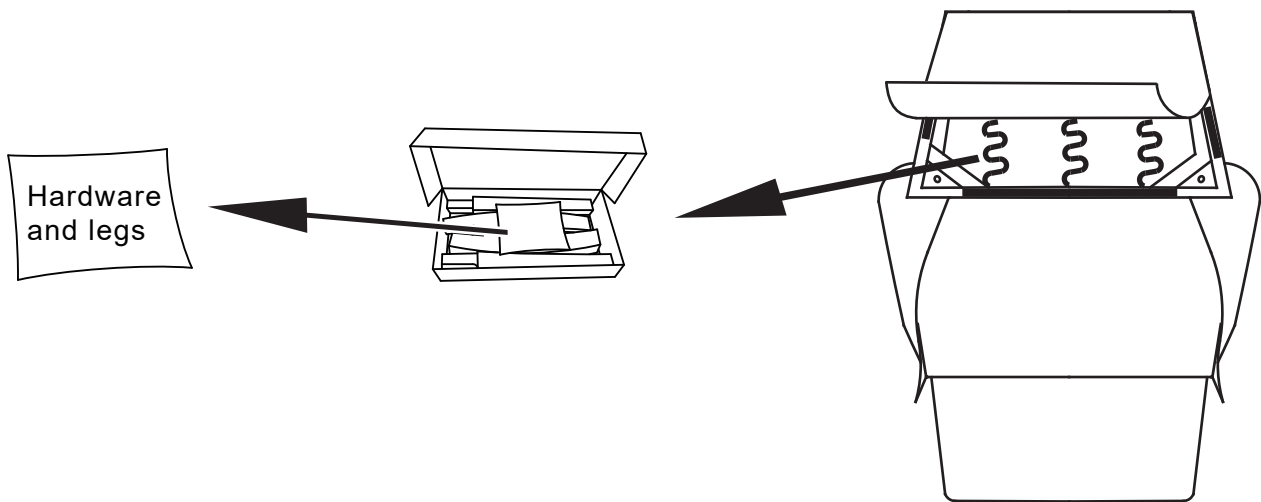

02


Install the two back legs

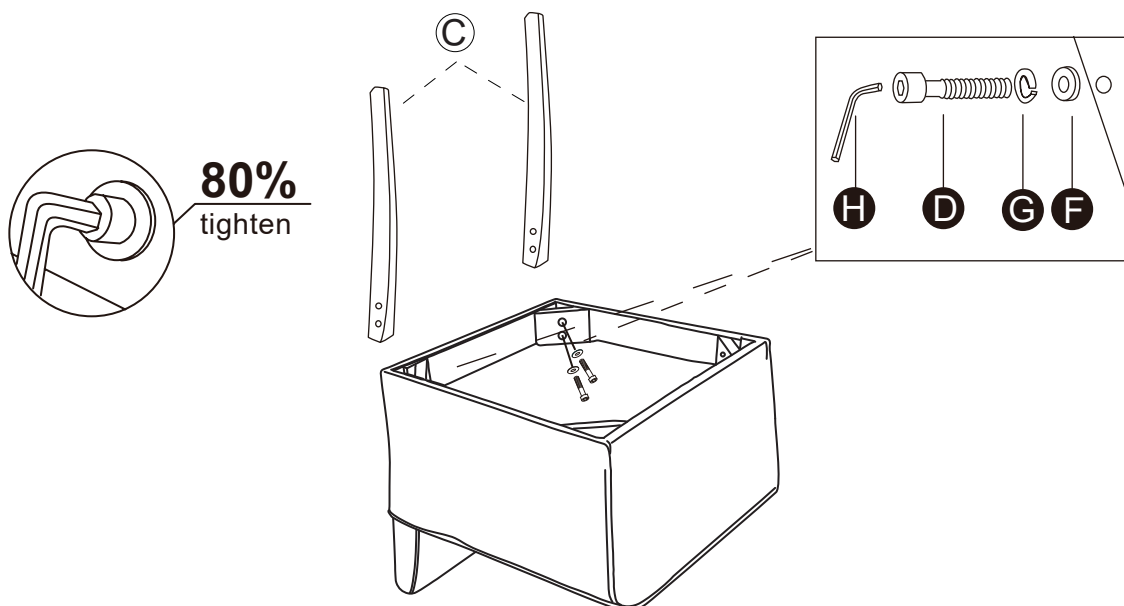

DO NOT over tighten the bolts, 80% is enough.



03

Install the two front legs

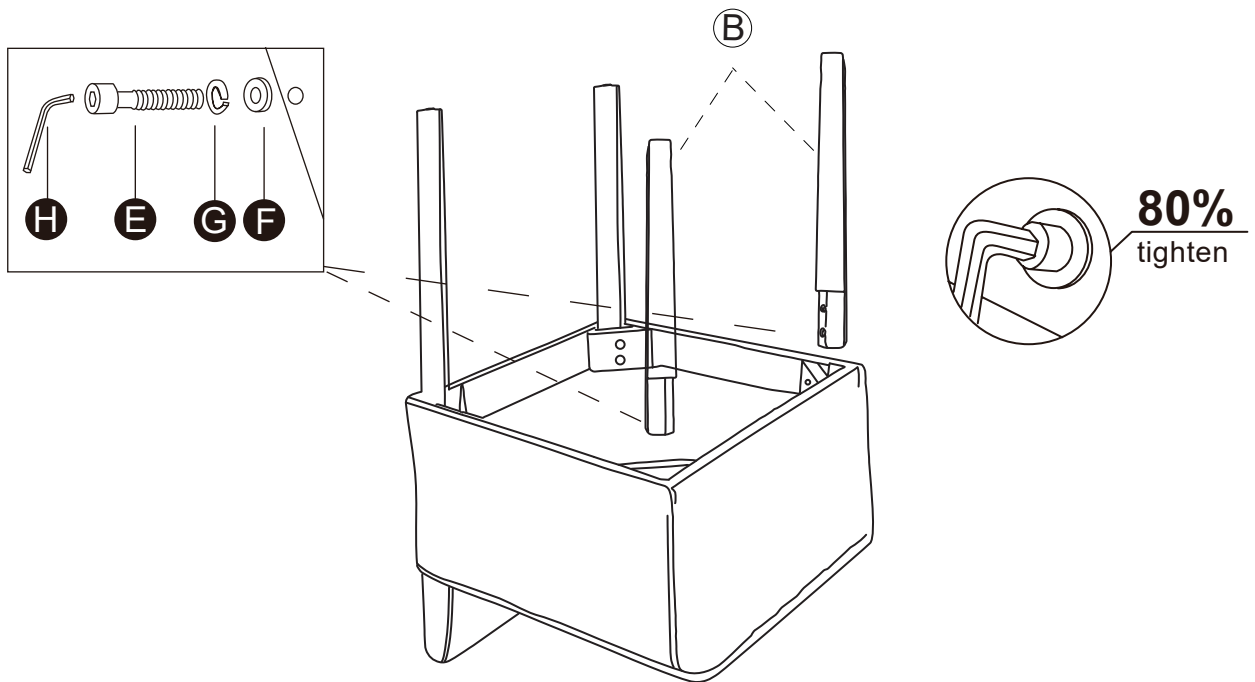

DO NOT over tighten the bolts, 80% is enough.

04 | Level & tighten bolts Installation complete

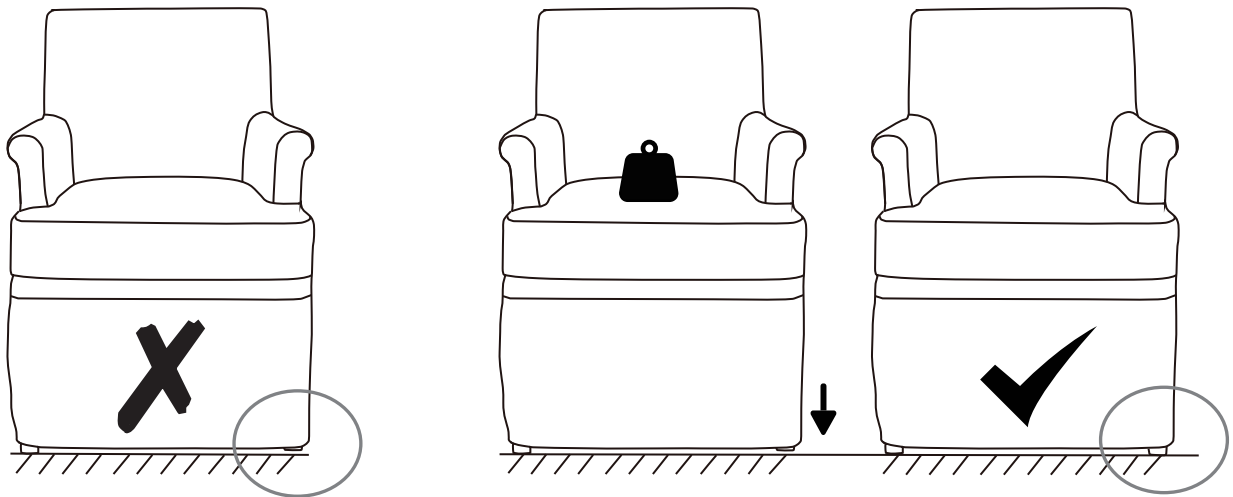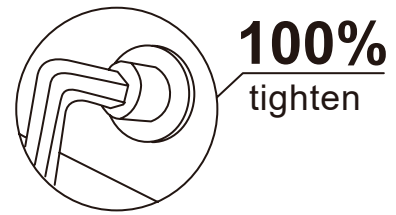


1. Check and tighten bolts

- Place the chair on a flat, level surface.
- Apply pressure to the seat (approx. 20kg/44lbs).
- Tighten all bolts gradually and evenly.
- Do not fully tighten one bolt before moving to the next, as this may warp the frame.

2. If the chair wobbles

- Lift the chair 12–20 inches / 30–50 cm above the ground, keeping feet clear.
- Drop it vertically so all four legs hit the ground at the same time (this helps align connections).
- Recheck stability on a level surface. If stable, fully tighten all bolts.

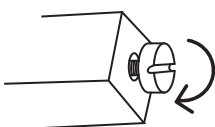

If still uneven, adjust the foot pegs at the bottom of the front legs.



WARNING! Do not use the chair if it is unstable, as this may cause product damage or personal injury.

WARNING INFORMATION



- To prevent the chair from tipping over, sit down gently and **DO NOT** jump or throw yourself onto it. Move the chair into the reclining position slowly, and ensure no children or pets are nearby.



- **DO NOT** allow children to play on or around the chair, especially when it is reclined.



- Avoid contact with sharp objects to prevent puncturing the fabric.



- This chair is designed for use by **one adult** at a time.




- Maximum weight capacity: **300 lbs.**



- Every 6 months or whenever needed, check all bolts and screws to ensure they are tight.

CARE & MAINTENANCE

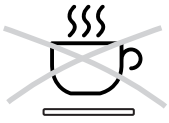

- **Do not** place hot items directly on the furniture surface.




- **Do not** clean the furniture with harsh cleansers or polish.



- **Do not** place the furniture under direct sunlight.



- **Do not** place the furniture near heating or cooling vents.

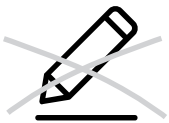

- **Do not** write on the furniture without a padded barrier to protect the surface.



- **Do not** use or place the furniture outdoors; for indoor use only.



- Stains may be removed with a mild soap solution and a damp cloth.



- Dust the furniture and wipe up spills using a clean, non-colored, lint-free cloth.