 


INSTALLATION

 
 
Product Manual

Version: KF670025US-01CN

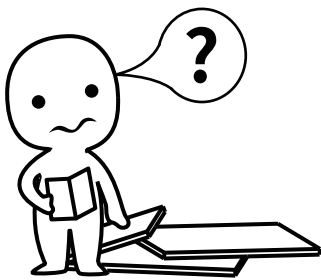


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

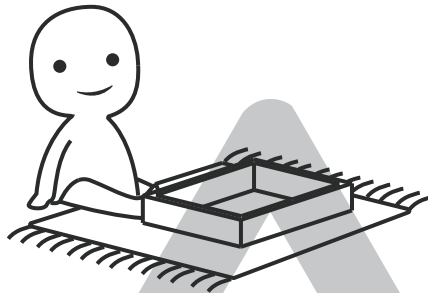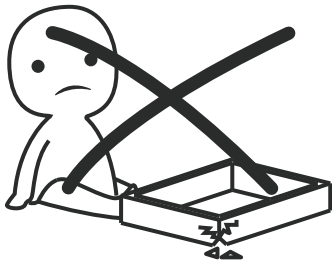



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

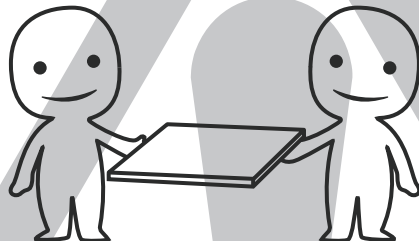

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

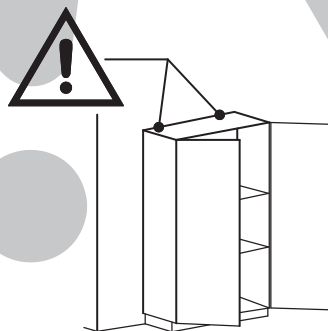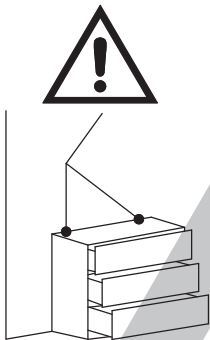

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

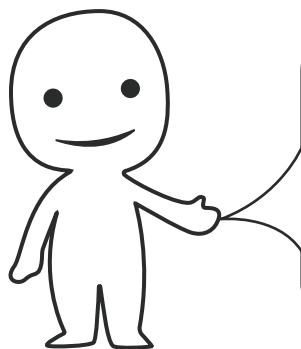


Please prepare the following tools

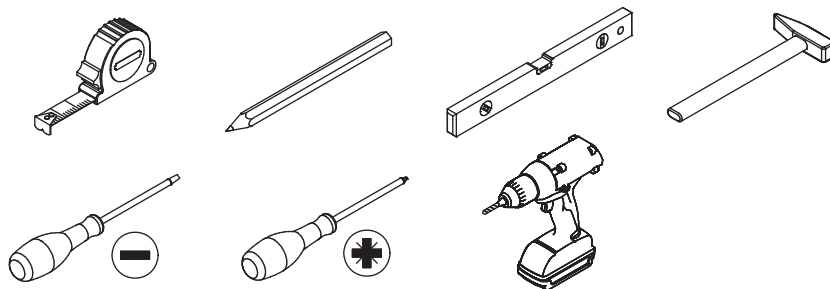 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 106

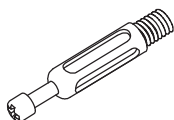


Ø7 x 35 mm

B x 106



Ø15x9.5mm

 C x 64




Ø6x30mm

D x 3




M6x30mm

 E x 2

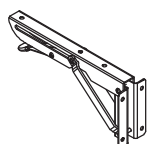


F x 52

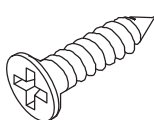 


Ø3.5x12mm

 G x 20

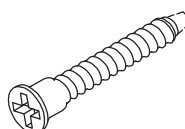


Ø5x40mm

 
H x 2

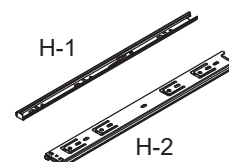


I x 9

 


J x 2

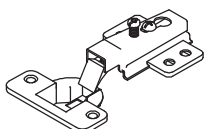 

K x 2

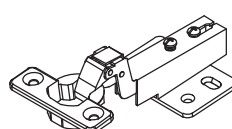 

L x 4

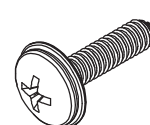 


Ø3x16 mm

M x 2



M6x10 mm

 N x 1

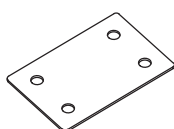


O x 88




Ø21 mm

 P x 18



Ø21 mm

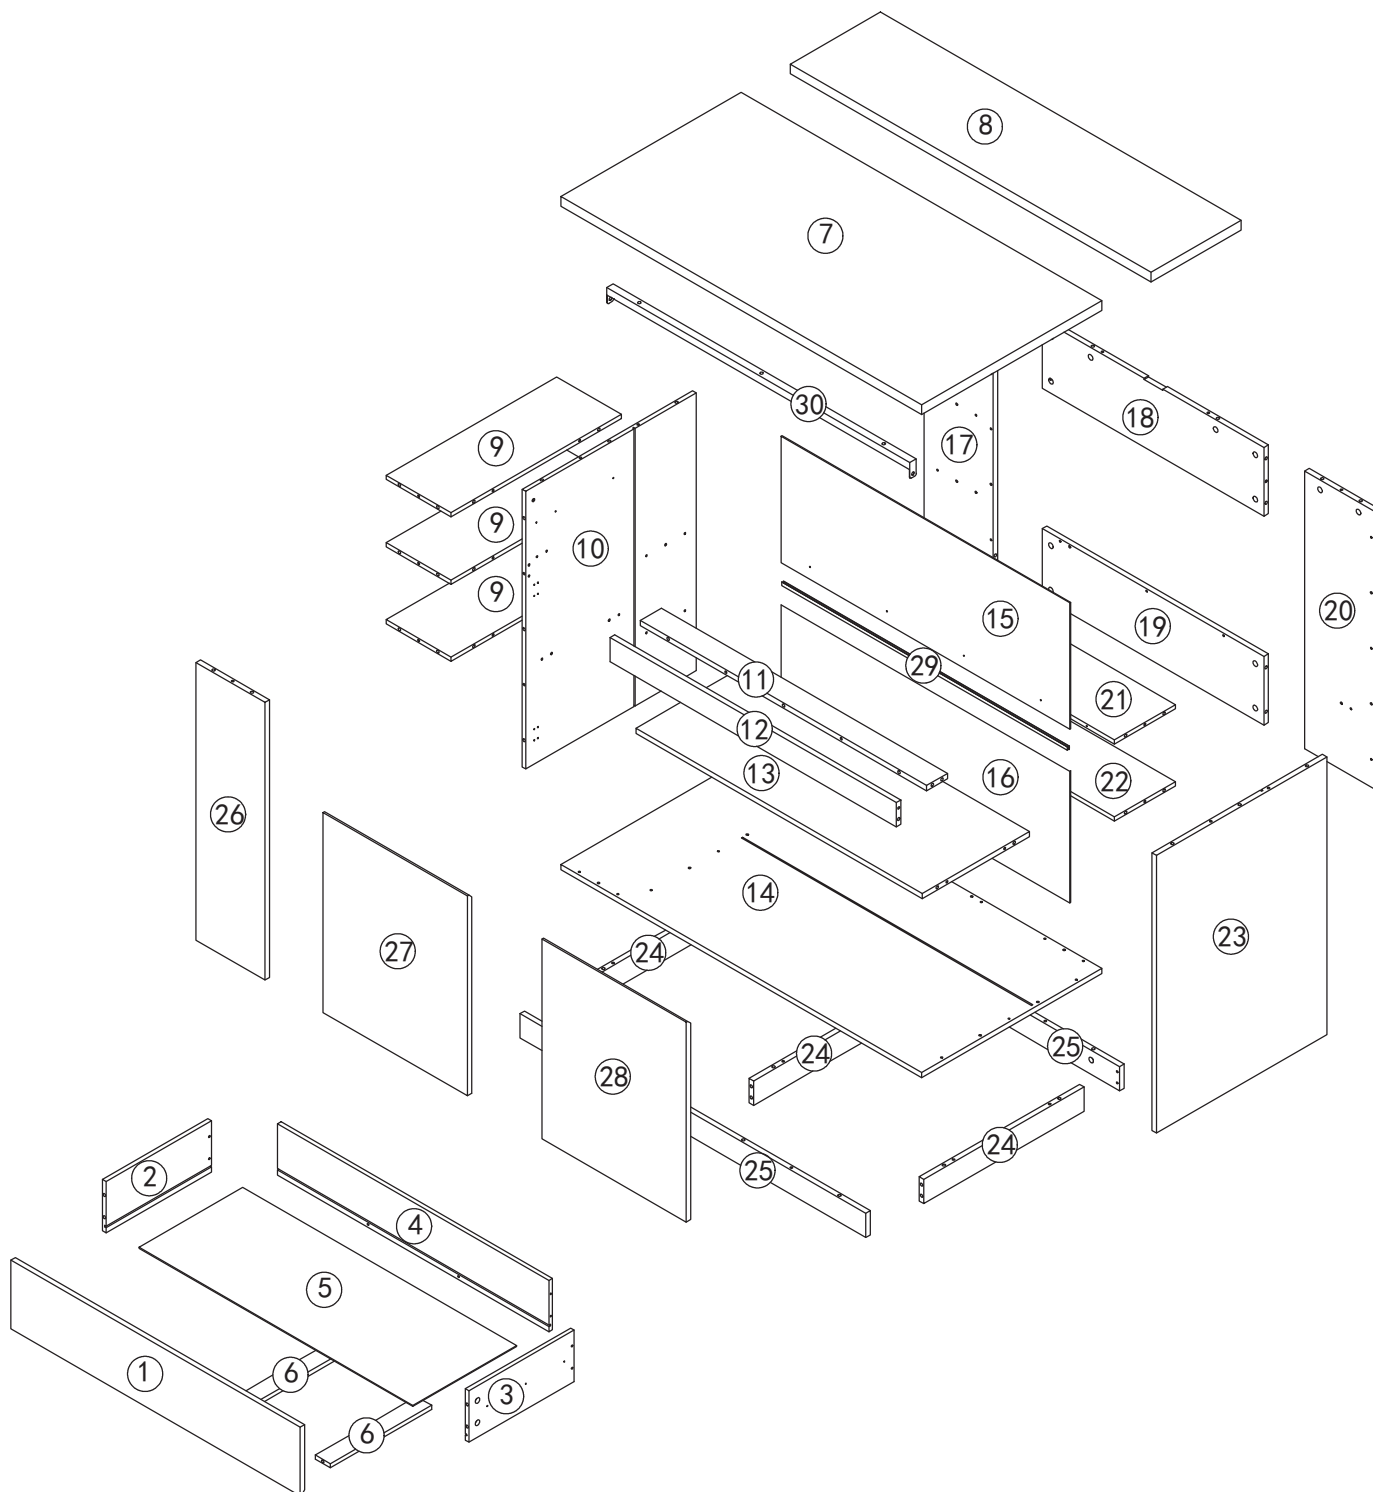 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*



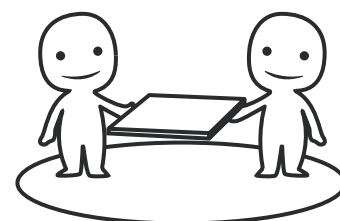


ASSEMBLED BY 2 ADULTS

 
 
1

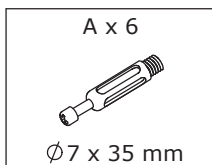

  
 
Screw the eccentric rod (A) into Plate 1.

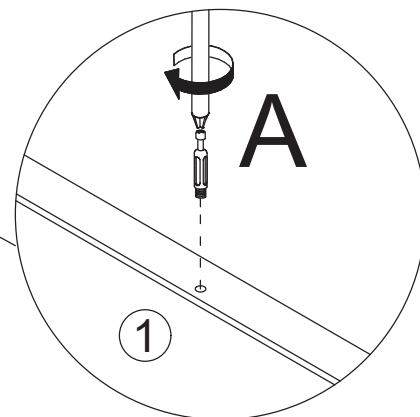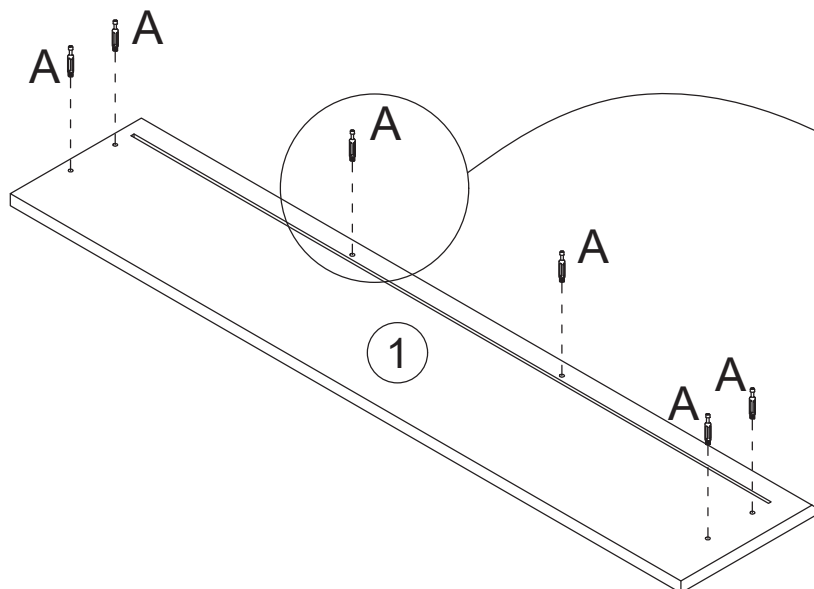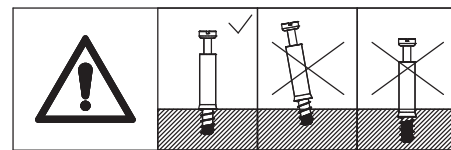


2

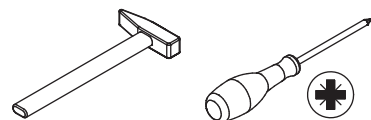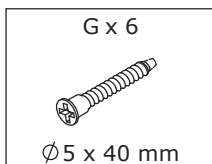  

  
Use screws (G) to secure panels 2, 3, and 6 to panel 4.

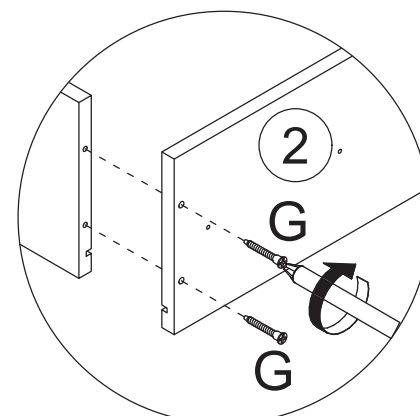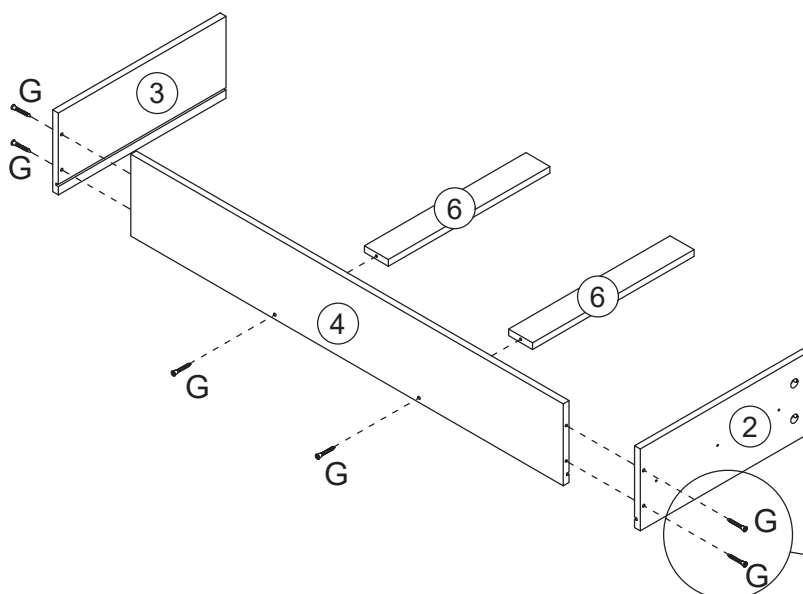

3

 

 Insert board 5 into the available slots .

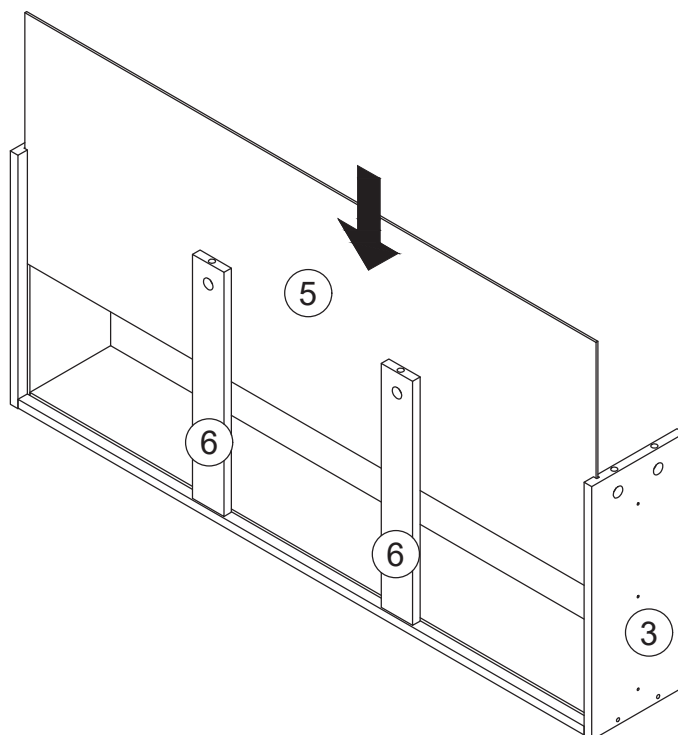


4




B x 6




 
Ø15 x 9.5 mm



   Connect Plate 1 to Plates 2 and 3, then turn the eccentric wheel (B) clockwise to tighten.

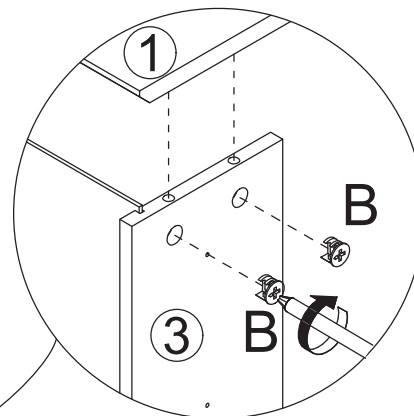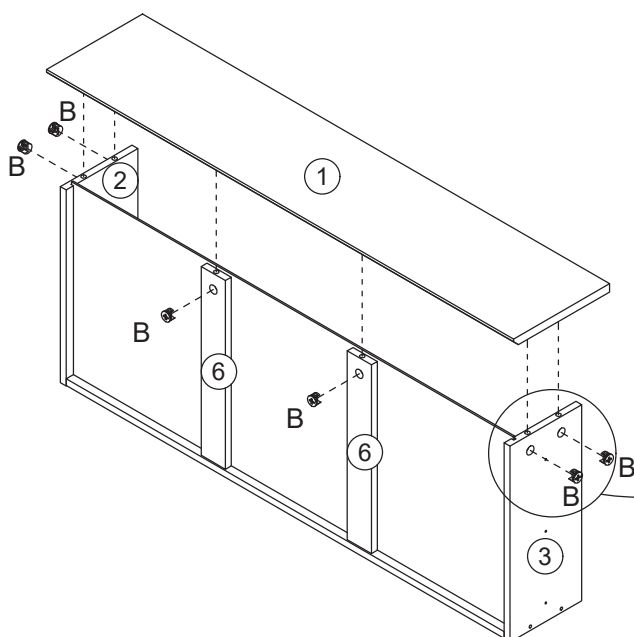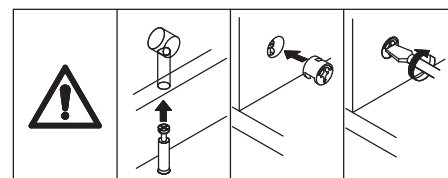


5

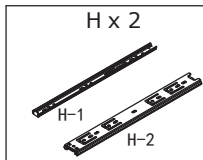  

TIPS

How To Separate The Ball Bearing Slider:

 1). Pull the slider in the direction of the arrow until it stops, then flip it over.




2). Push the plastic lever down and pull the slider apart at the same time.



3). After disassembly



 
How to Assemble the Slider



Align the outer track (H-2) with the center of the inner track (H-1) and push in.


6

 F x 6





Ø 3.5 x 12 mm

 
H x 2






H-1

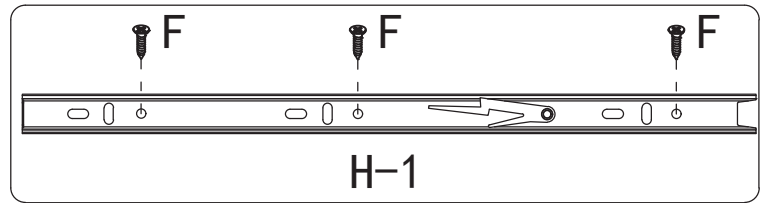  


 
Use screws (F) to secure the slide rails (H-1) to panels 2 and 3, respectively.

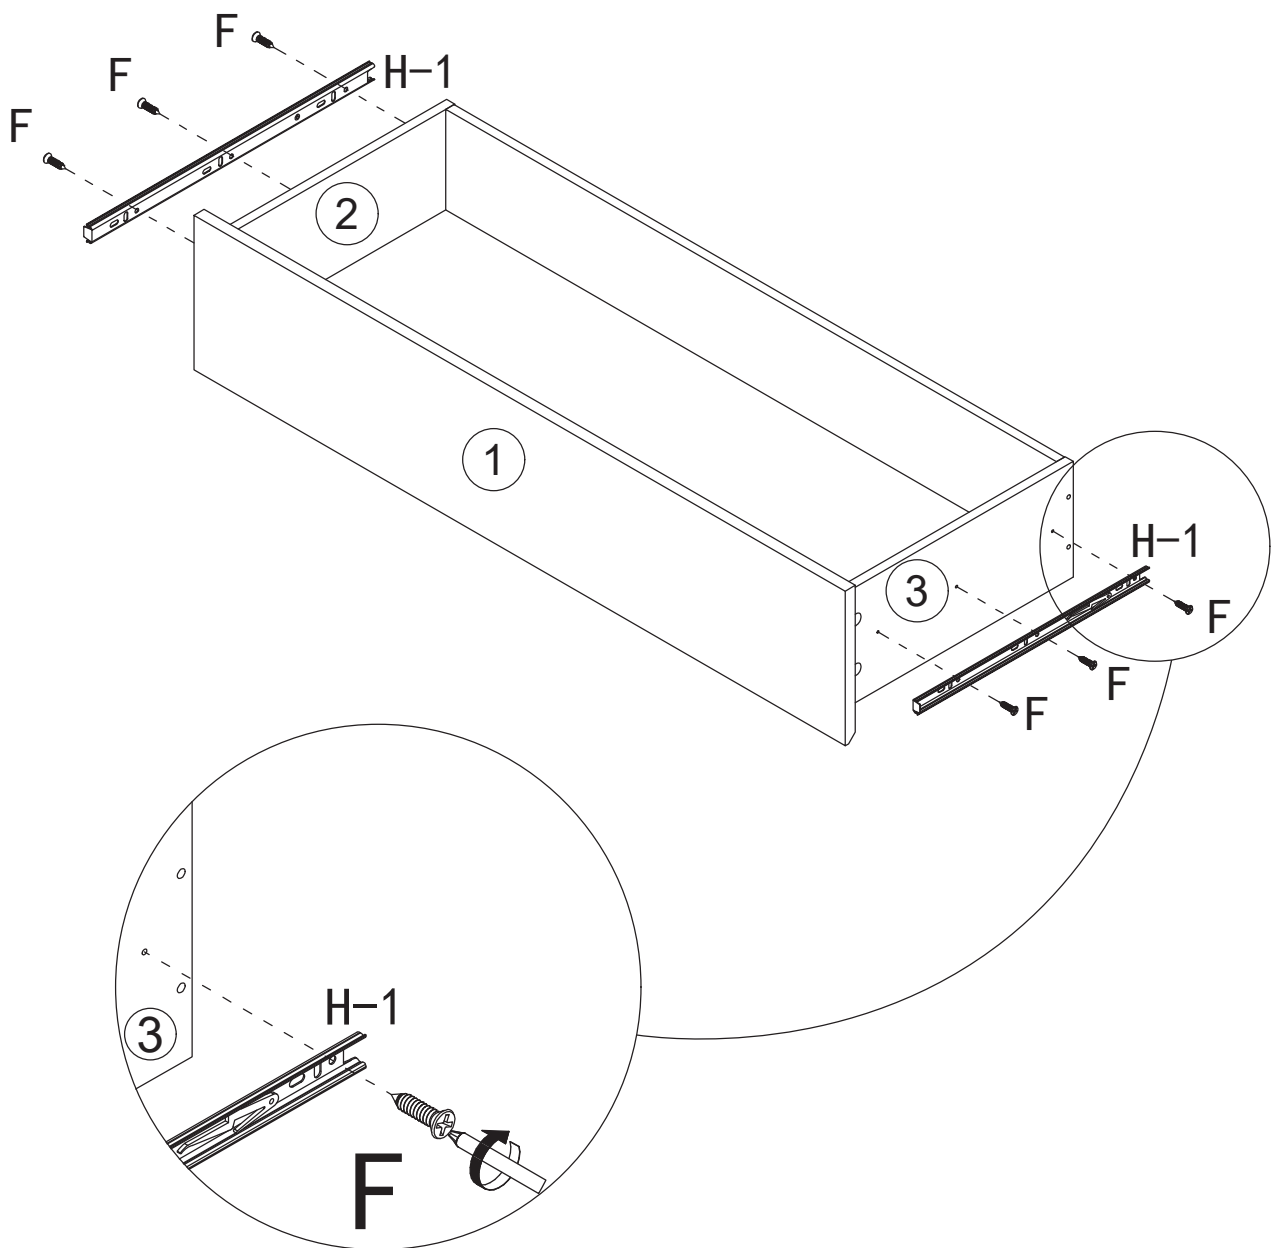



7

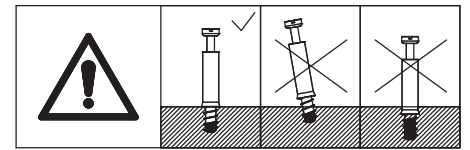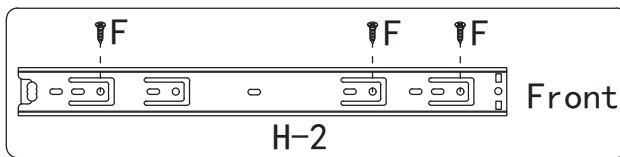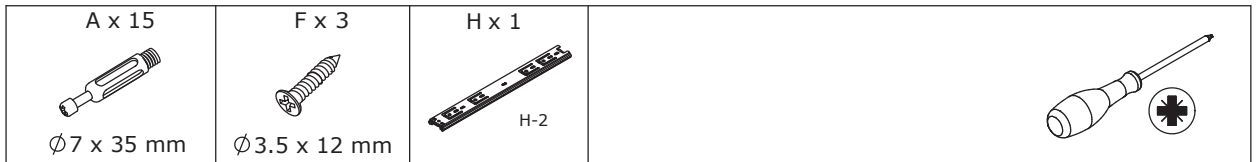   

  Use the screws (F) to secure the slide rail (H-2) to panel 10 and screw the eccentric rod (A) into panel 10. Flip the same board to other side, screw the eccentric rod (A) into panel 10.

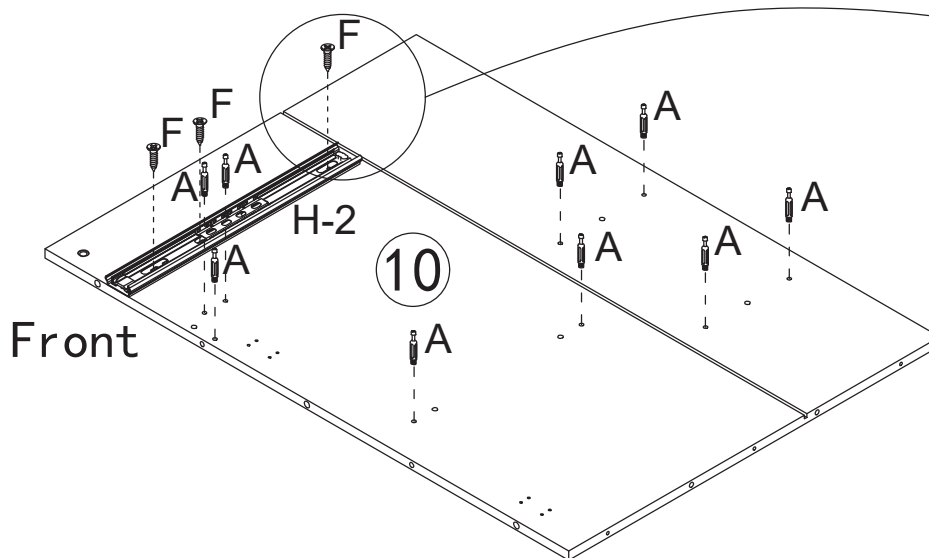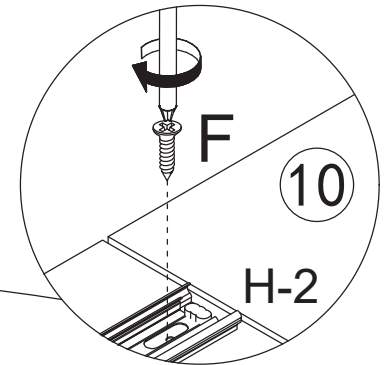

Flip

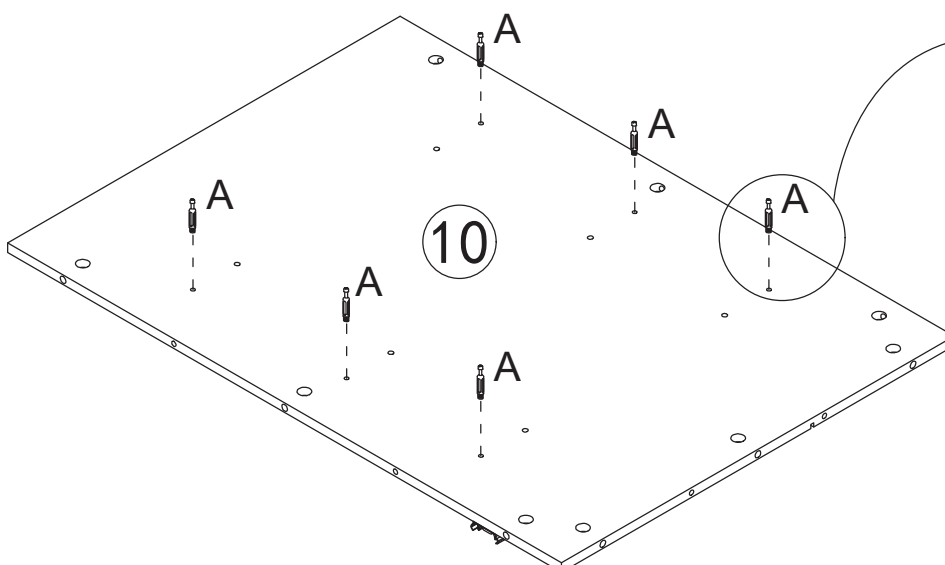 
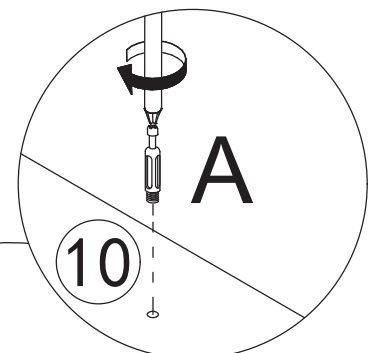 


8



B x 2

 $\varnothing 15 \times 9.5 \text{ mm}$

  C x 2

 $\varnothing 6 \times 30 \text{ mm}$ 

  Use the wooden dowel (C) to connect plate 9 to plate 10, then turn the eccentric wheel (B) clockwise to tighten it.

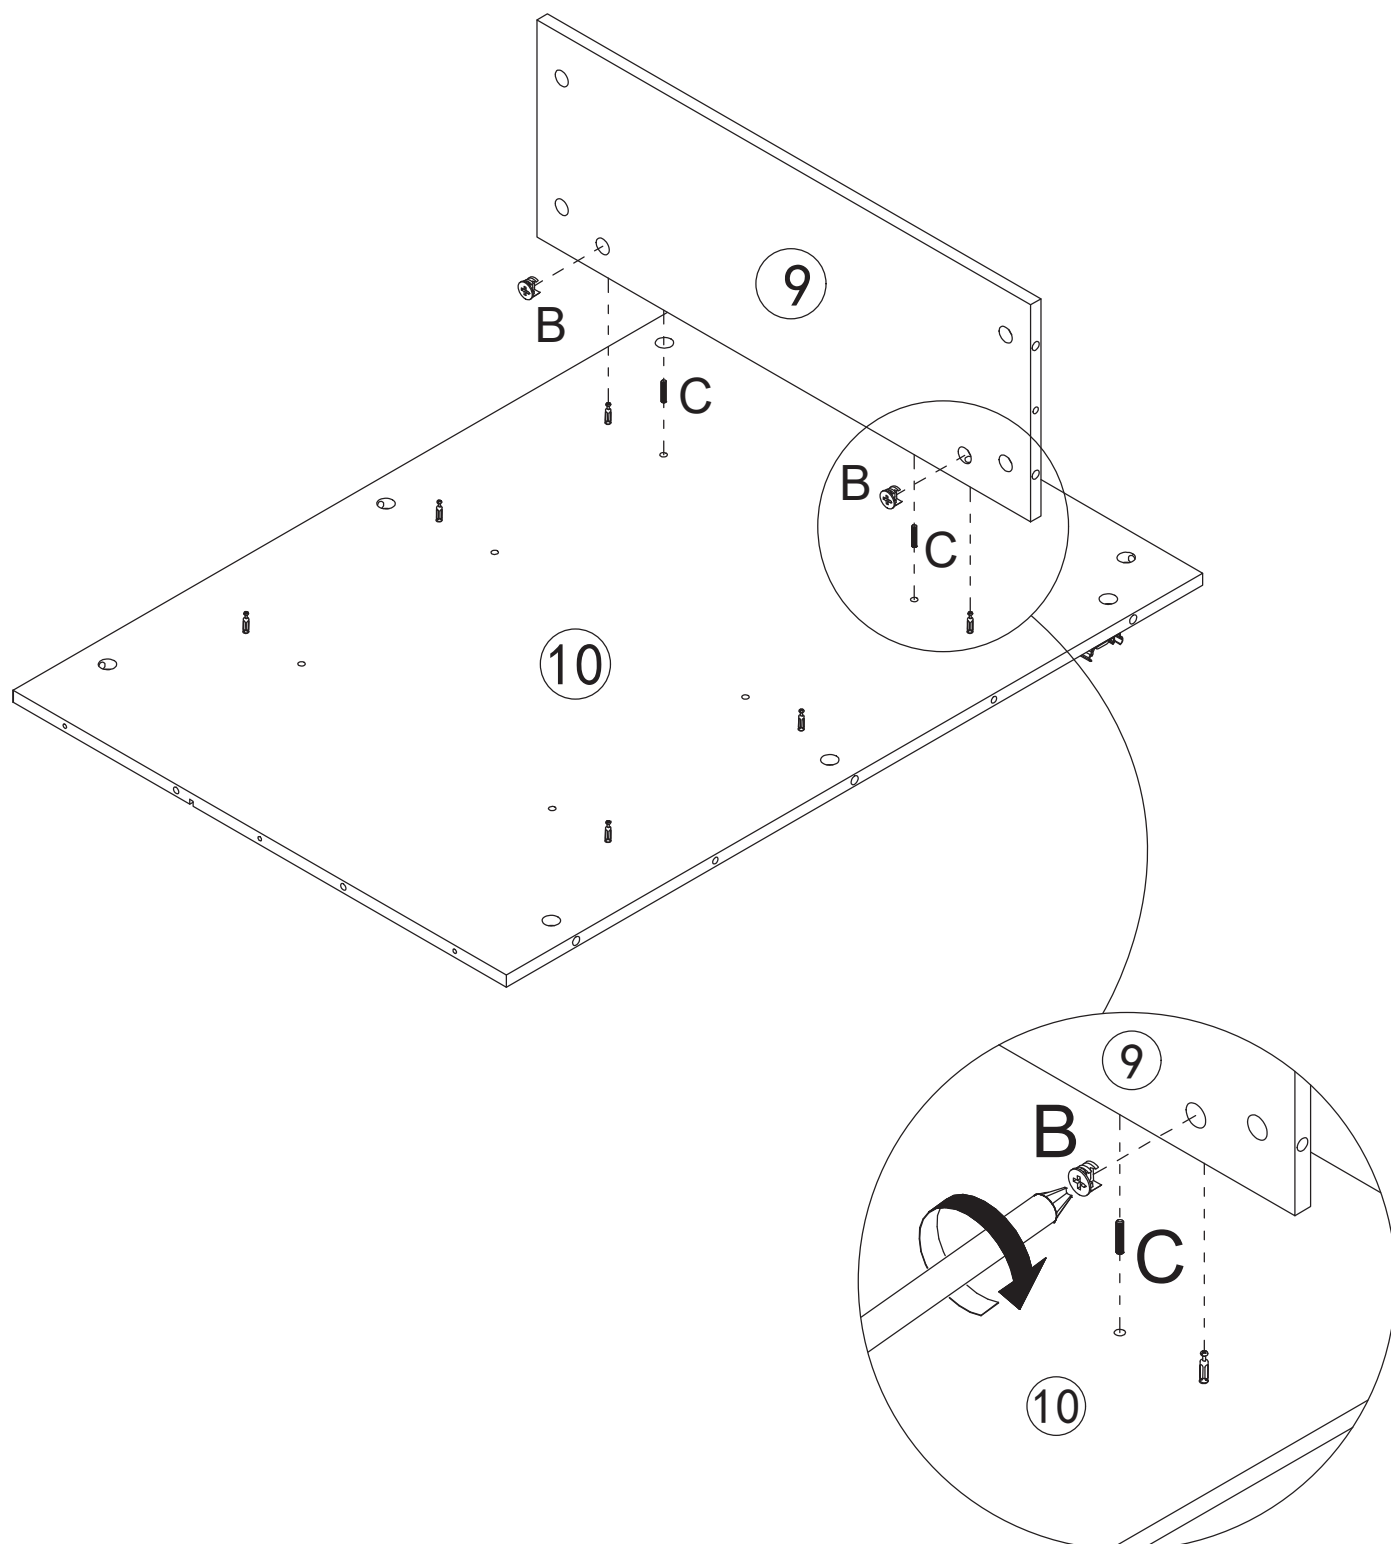
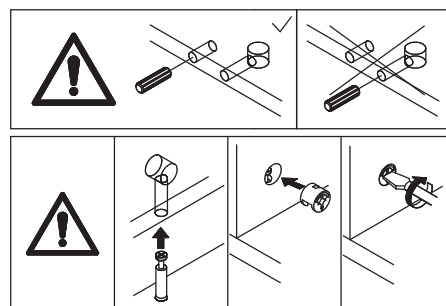


9




B x 2

 $\varnothing 15 \times 9.5 \text{ mm}$

  C x 2

 $\varnothing 6 \times 30 \text{ mm}$ 

   Use the wooden dowel (C) to connect plate 9 to plate 10, then turn the eccentric wheel (B) clockwise to tighten it.

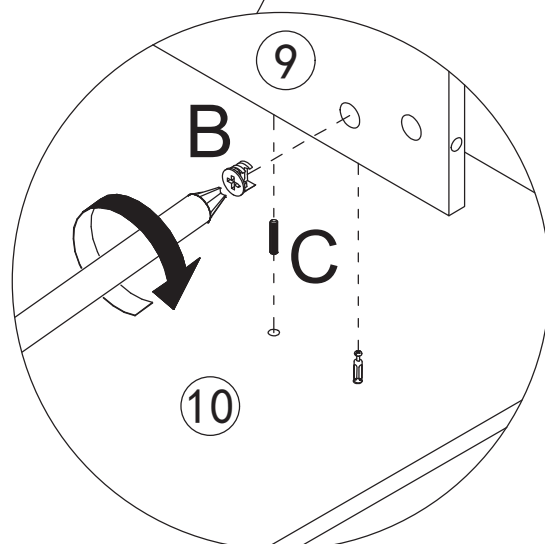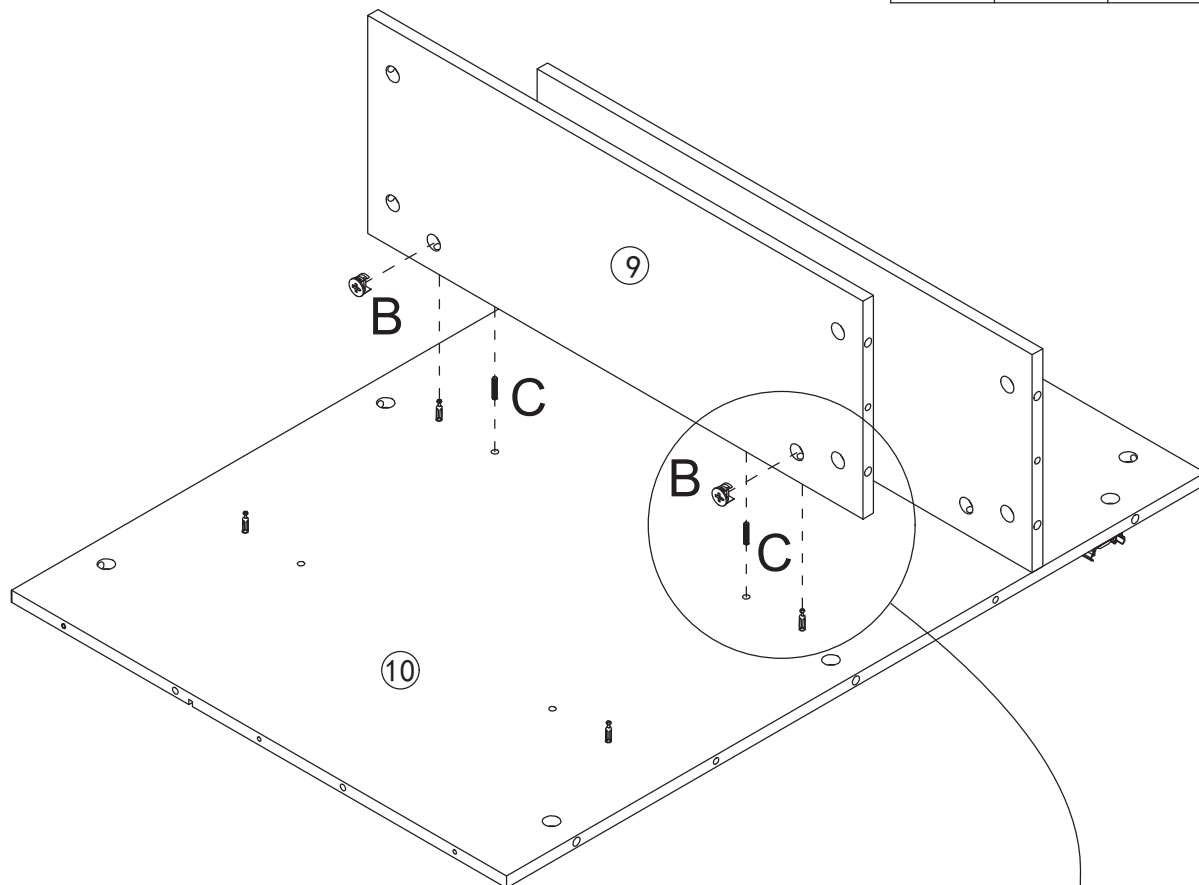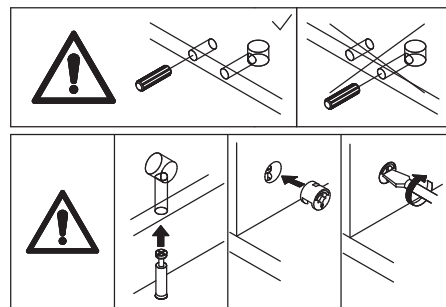


10

B x 2




Ø 15 x 9.5 mm



 
C x 2





Ø 6 x 30 mm

 

  
 
Use the wooden dowel (C) to connect plate 9 to plate 10, then turn the eccentric wheel (B) clockwise to tighten it.

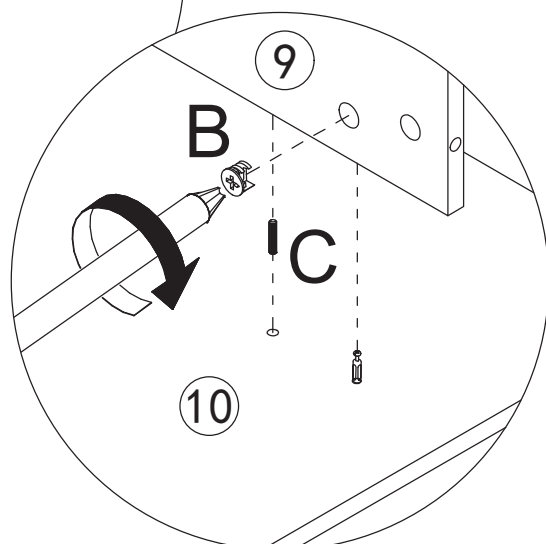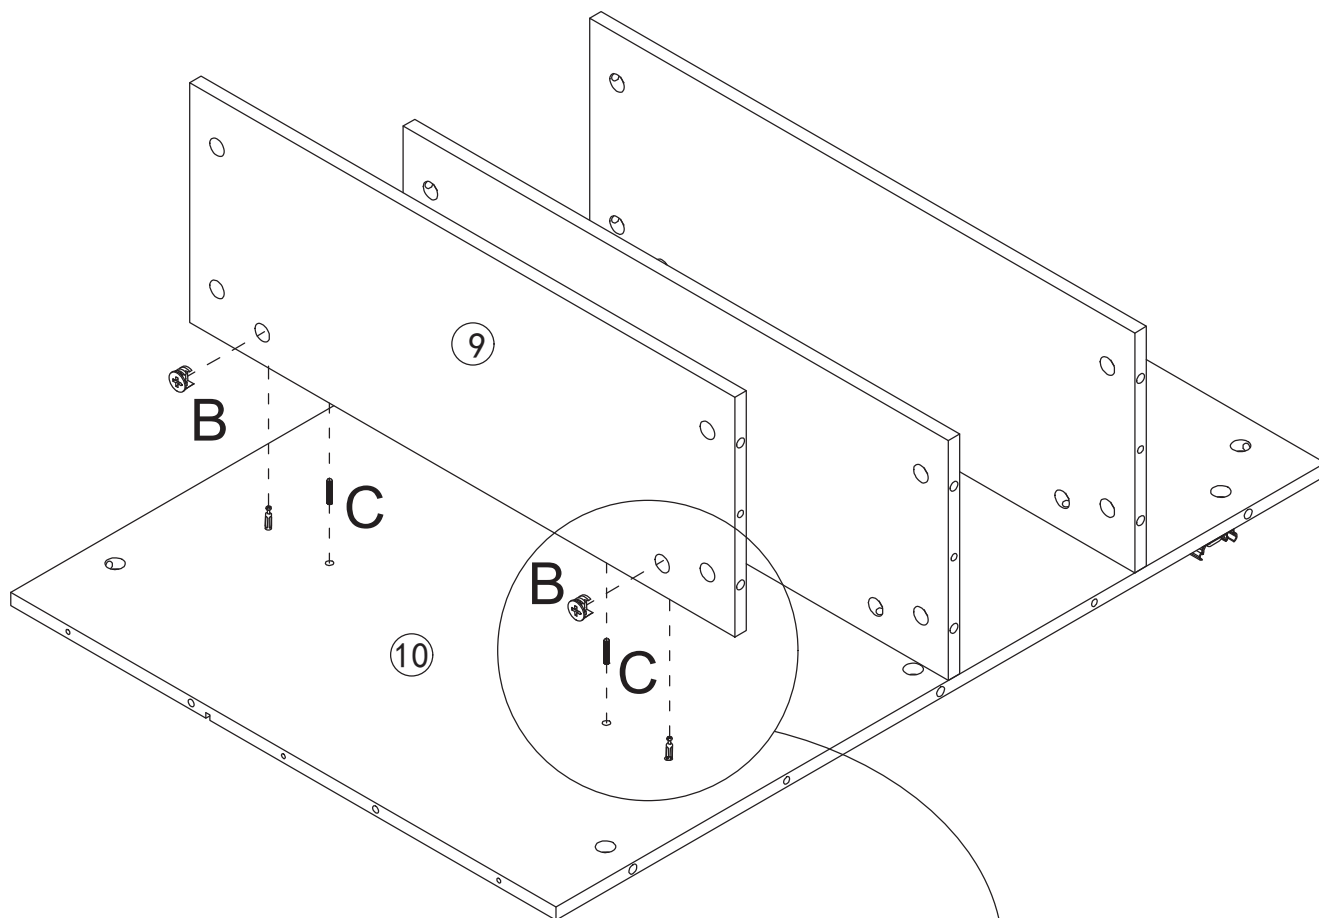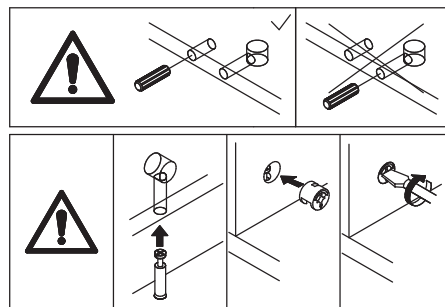

11

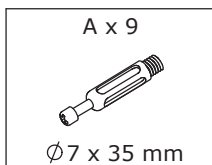  

  Screw the eccentric rod (A) into Plate 26.

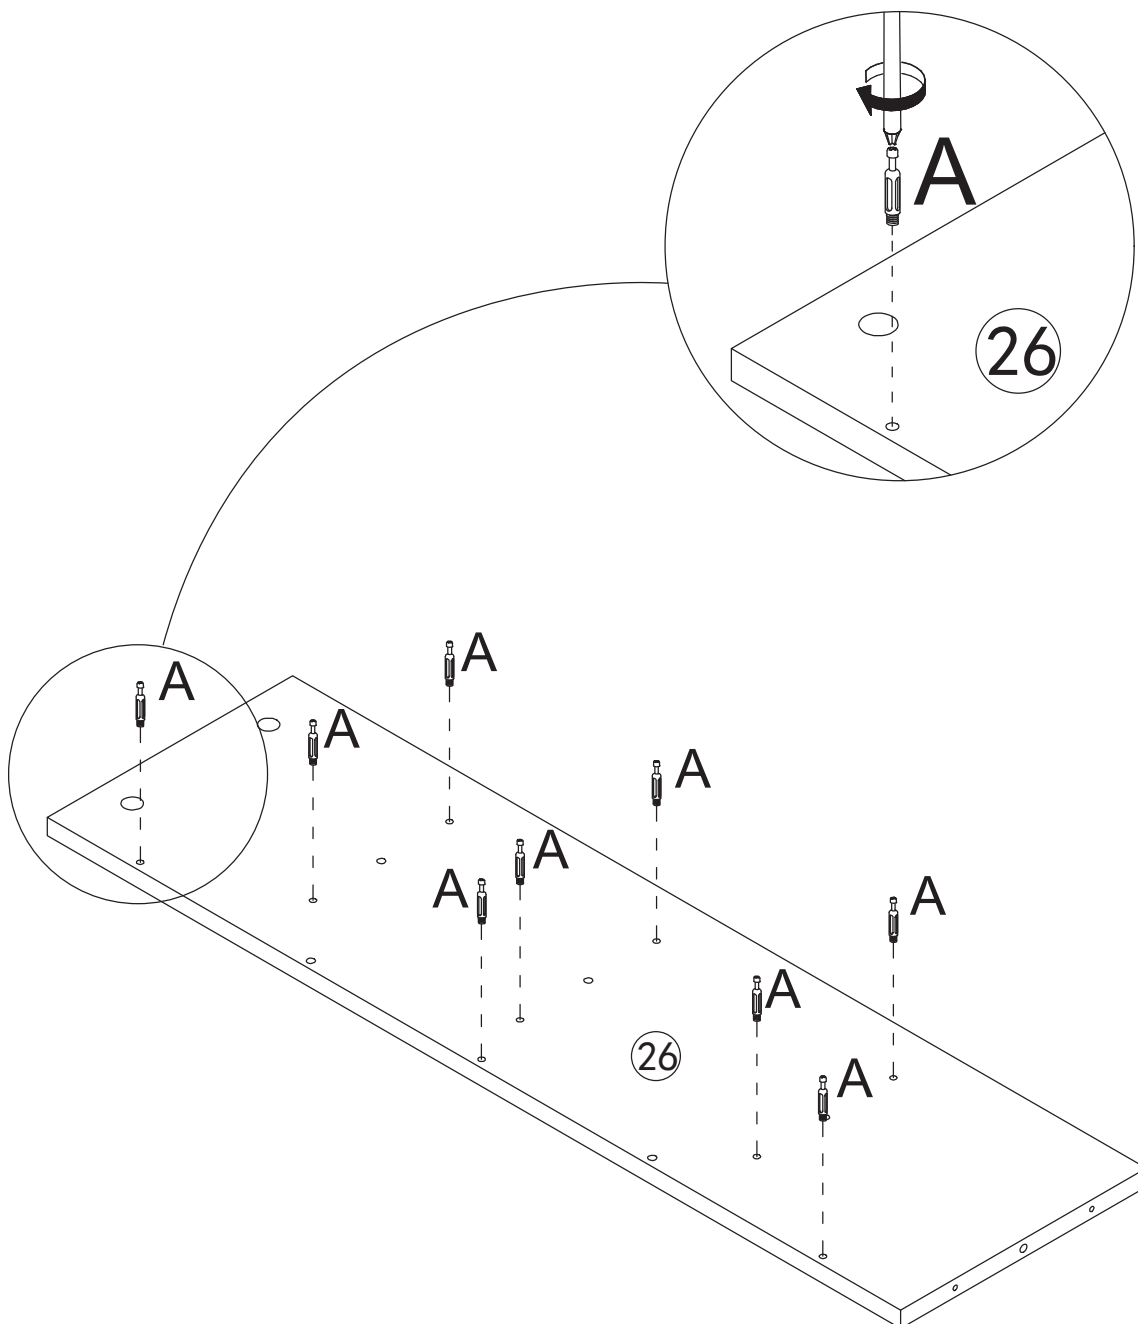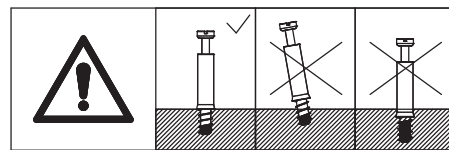


12

B x 9




Ø 15 x 9.5 mm



 
C x 5



Ø 6 x 30 mm

 

   Use the wooden dowel (C) to connect plate 26 to plate 9 and plate 10, then turn the eccentric wheel (B) clockwise to tighten it.

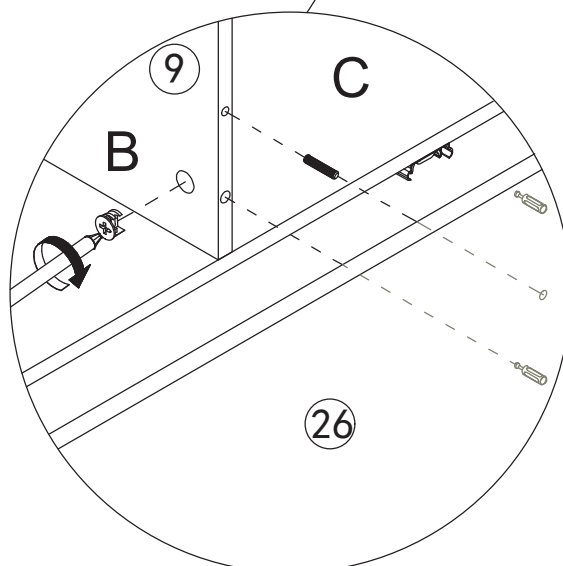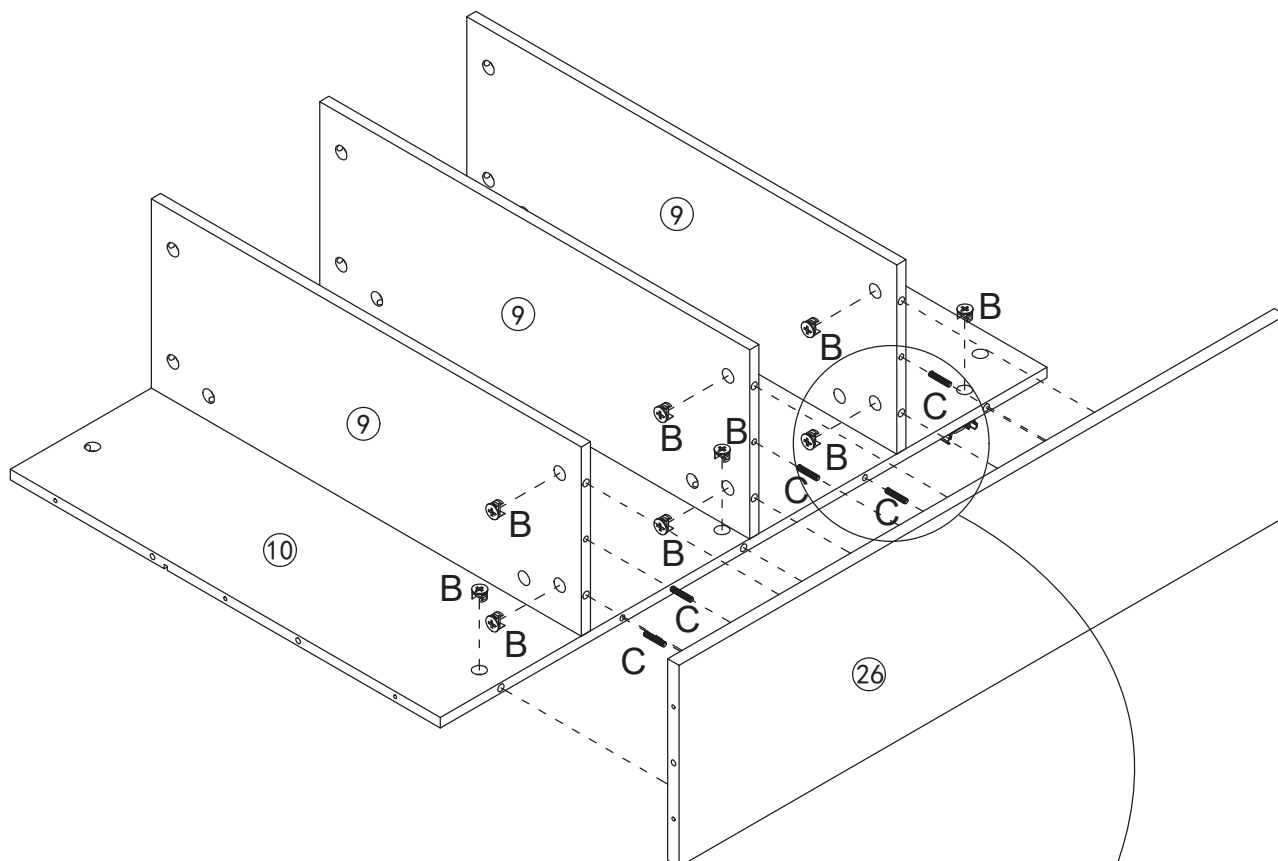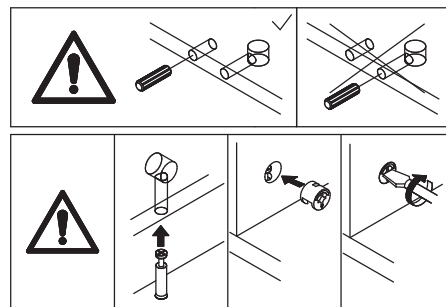


13

B x 4




Ø 15 x 9.5 mm


 
C x 2





Ø 6 x 30 mm

 

 
 
Use the wooden dowel (C) to connect plate 21 and plate 22 to plate 10, then turn the eccentric wheel (B) clockwise to tighten it.

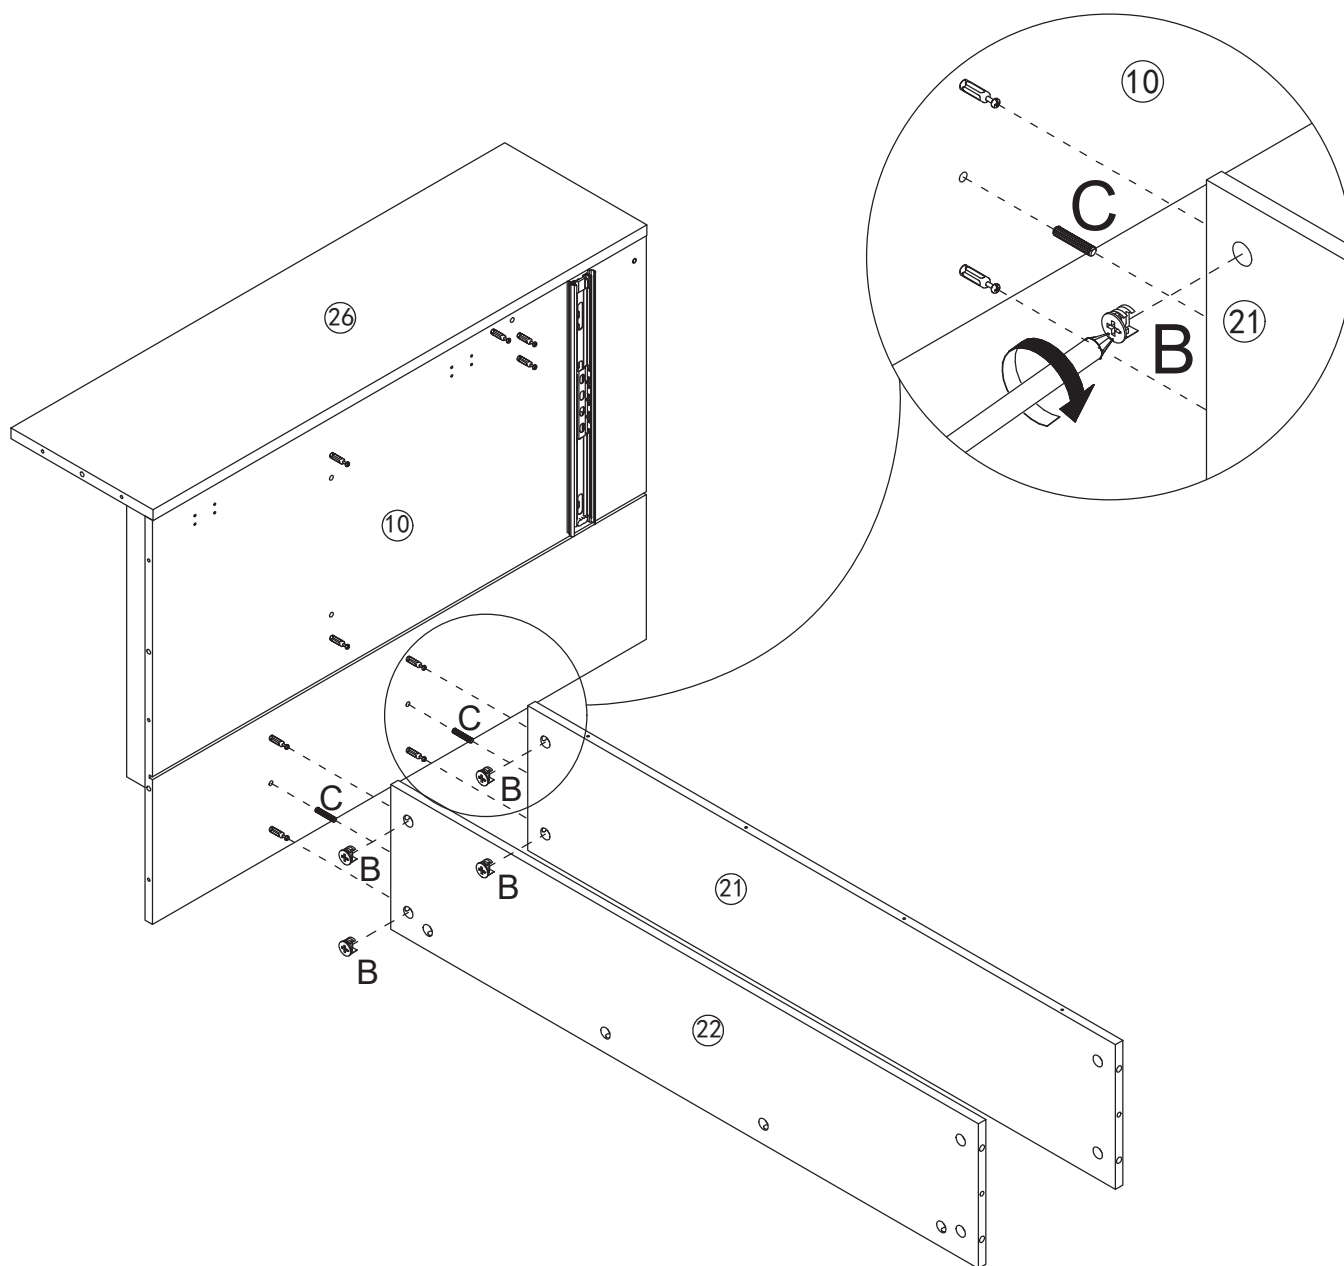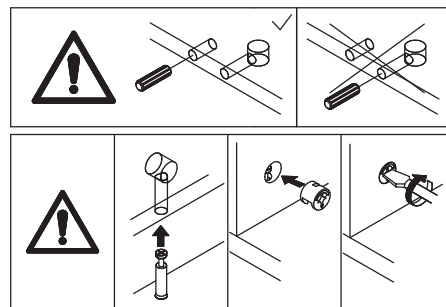

14

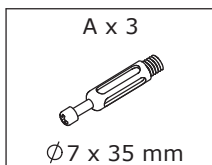  

  Screw the eccentric rod (A) into Plate 12.

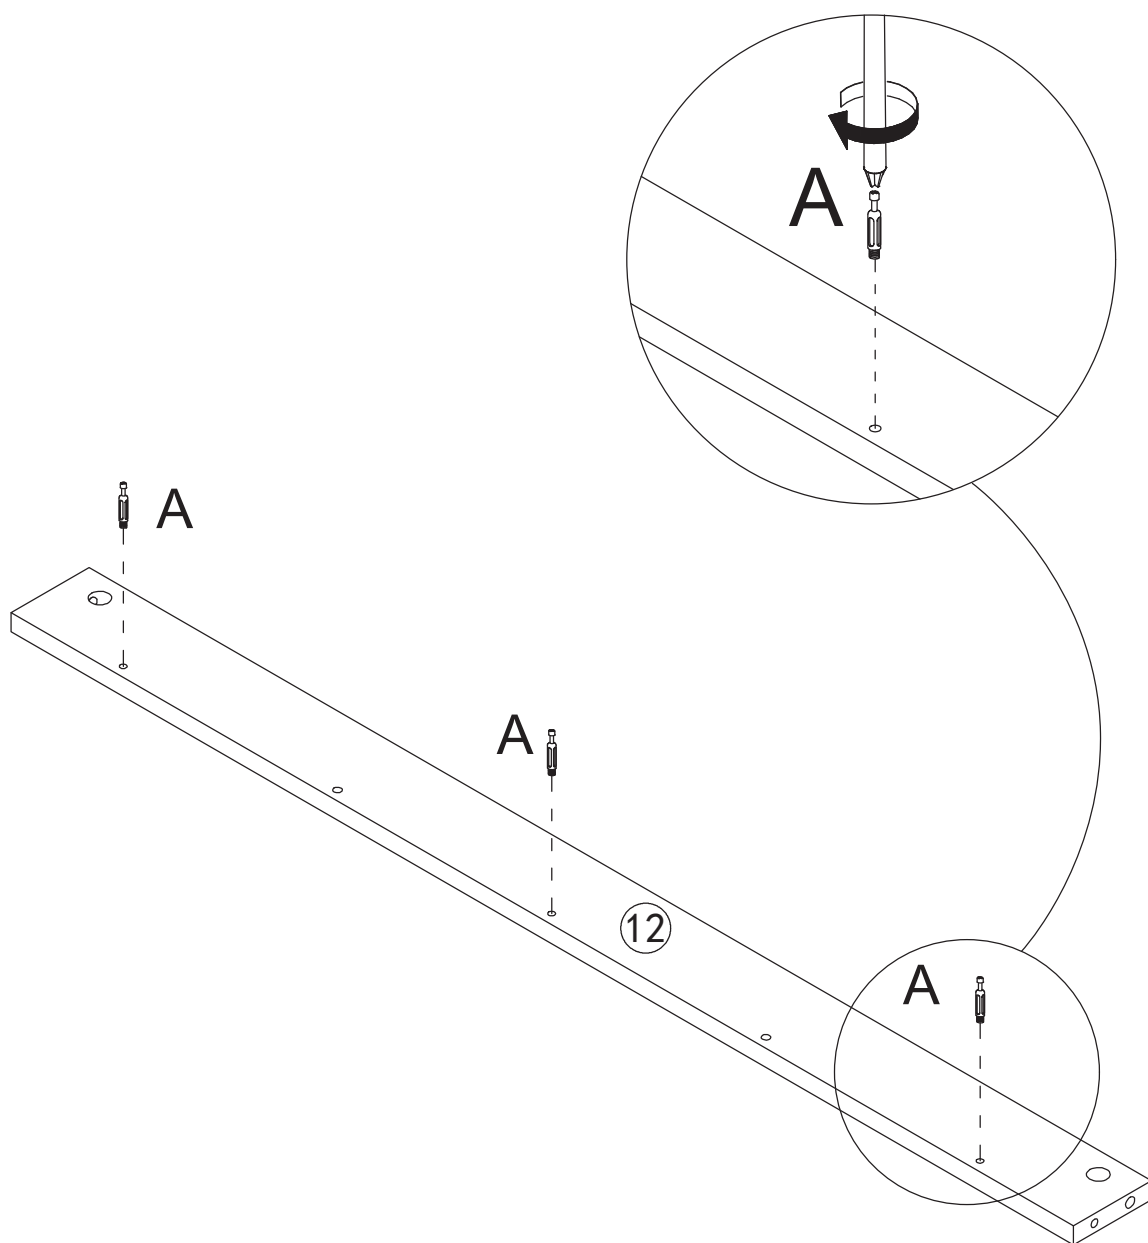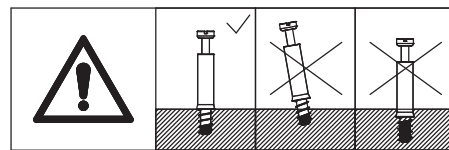


15

B x 3




Ø 15 x 9.5 mm


 
C x 2






Ø 6 x 30 mm

 

  
Use the wooden dowel (C) to connect plate 12 to plate 11, then turn the eccentric wheel (B) clockwise to tighten it.

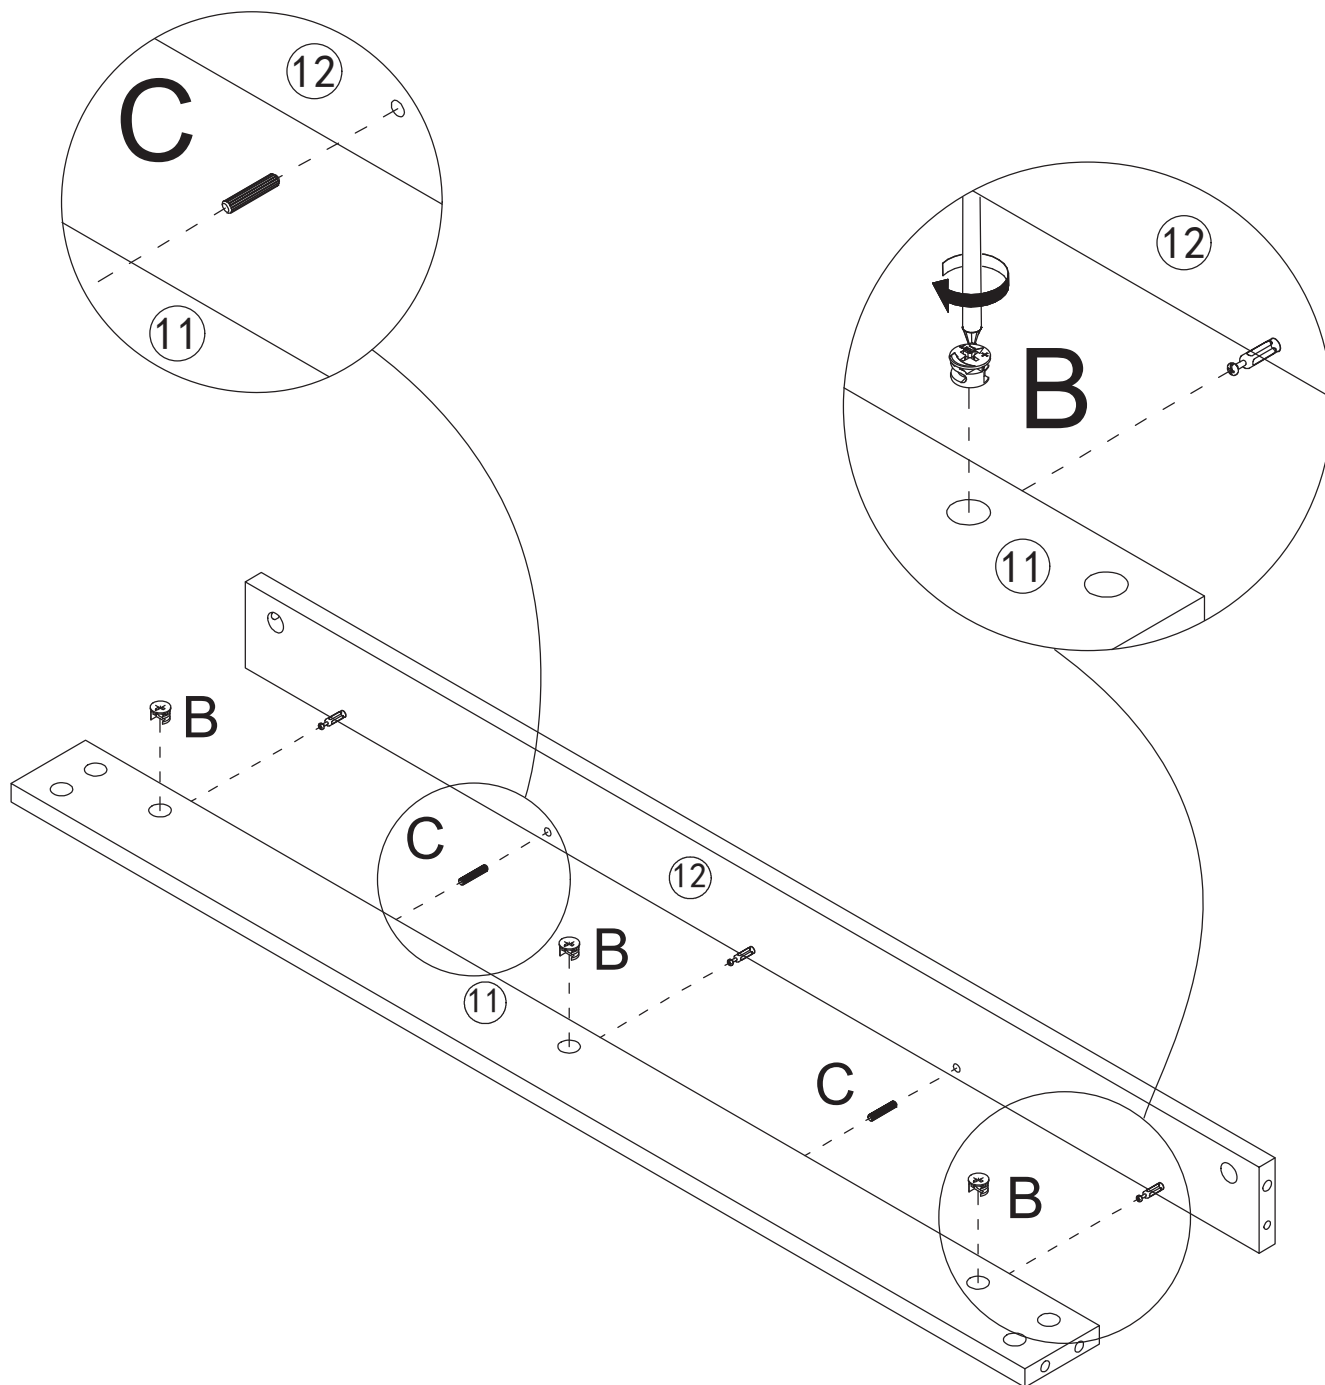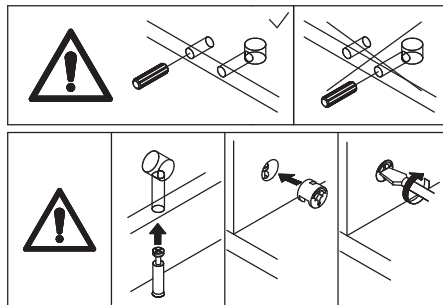

16

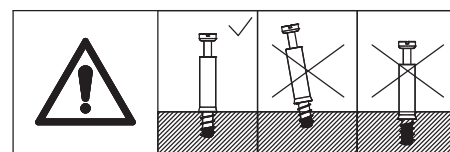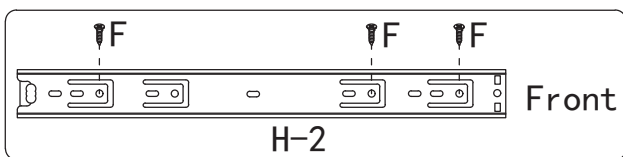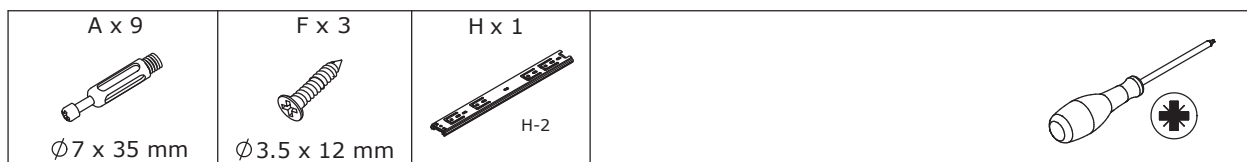   

 Use the screws (F) to secure the slide rail (H-2) to panel 23 and screw the eccentric rod (A) into panel 23.

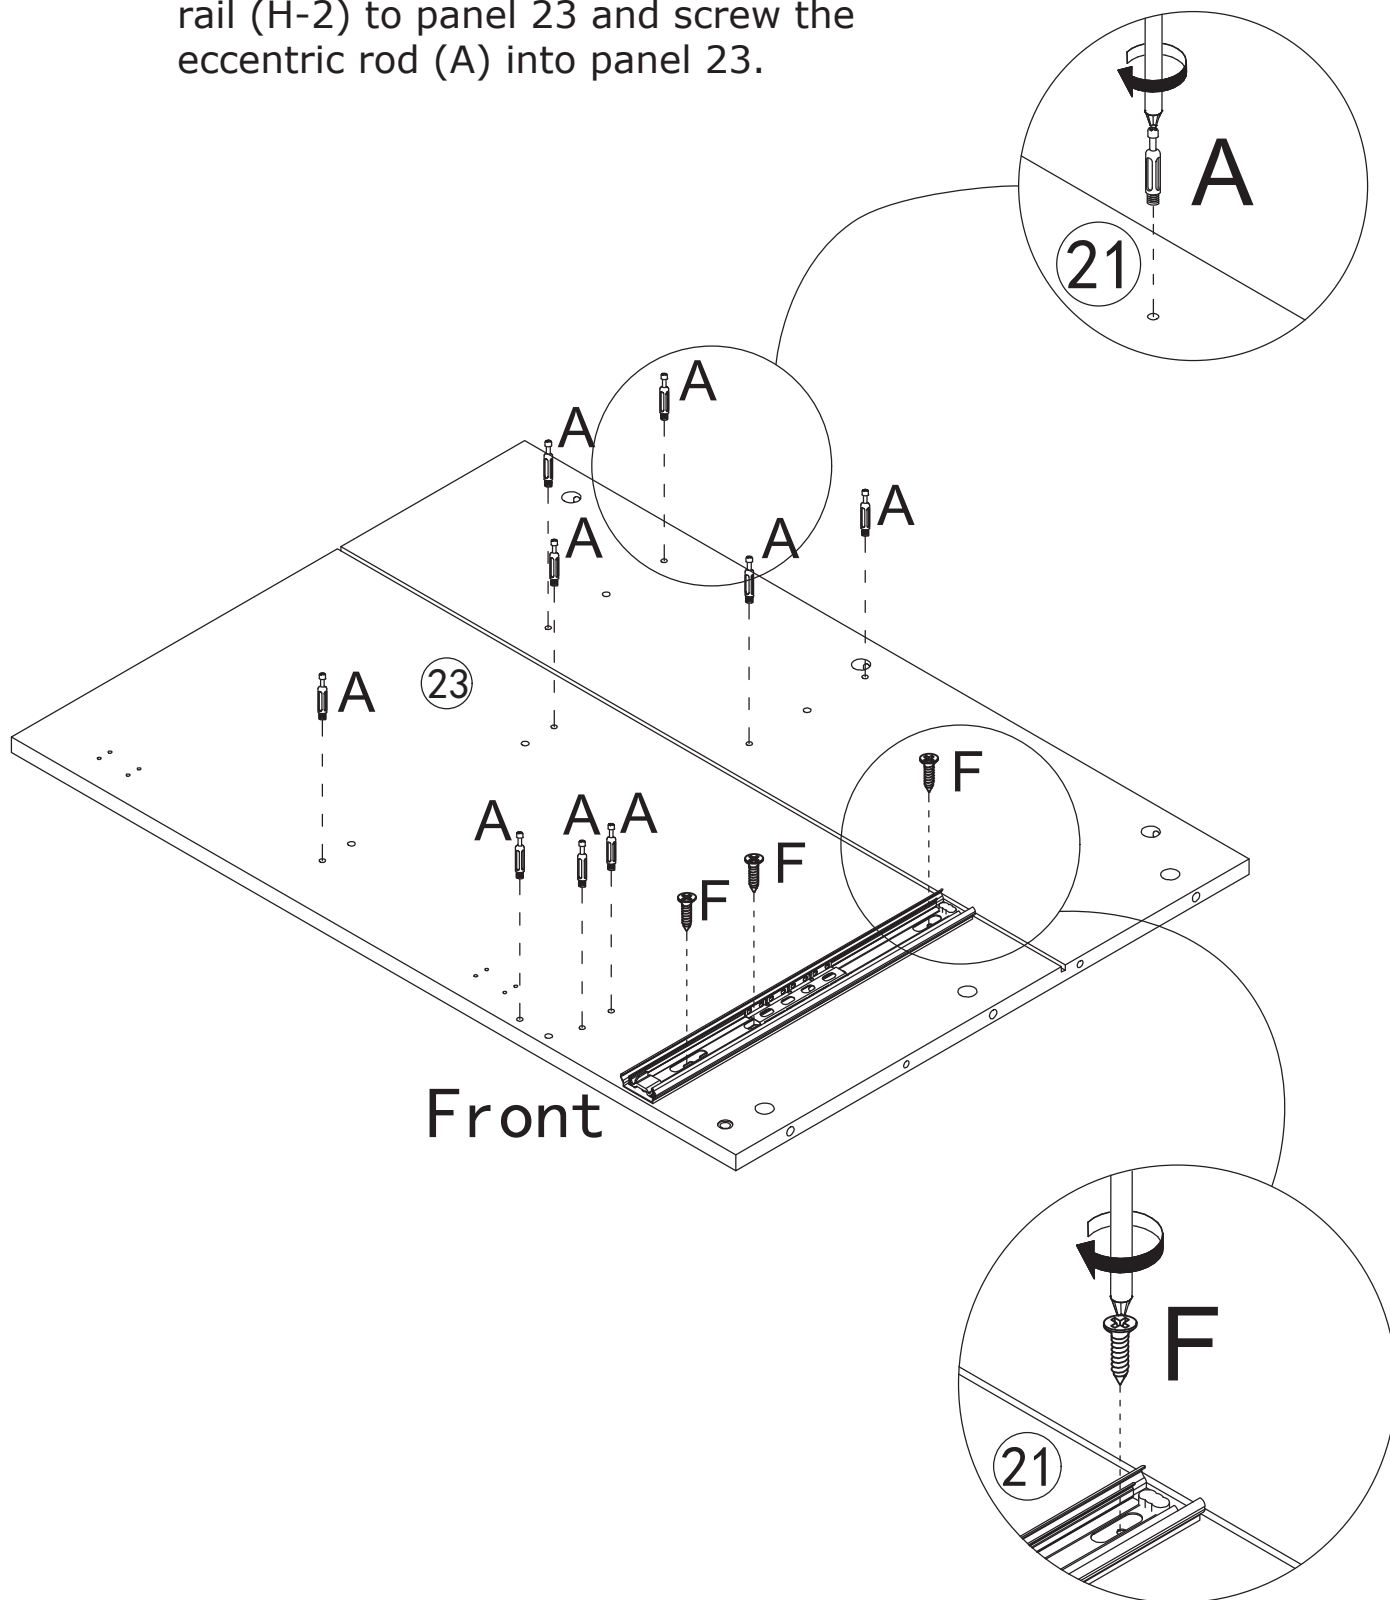

17

B x 14

 


Ø 15 x 9.5 mm




C x 8



Ø 6 x 30 mm




   Use the wooden dowels (C) to connect panels 11, 12, 13, 21 and 22 to panels 10 and 23, respectively, then turn the eccentric wheel (B) clockwise to tighten them.

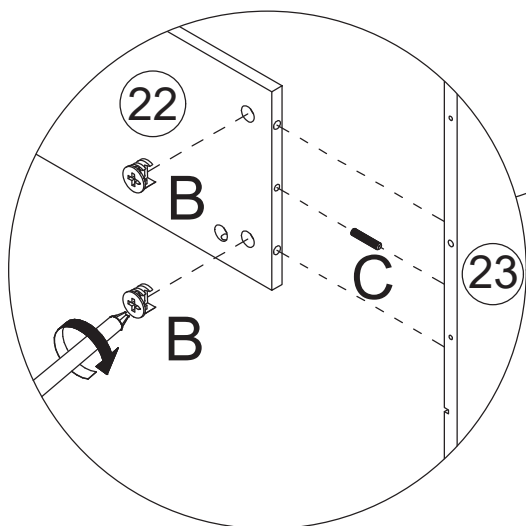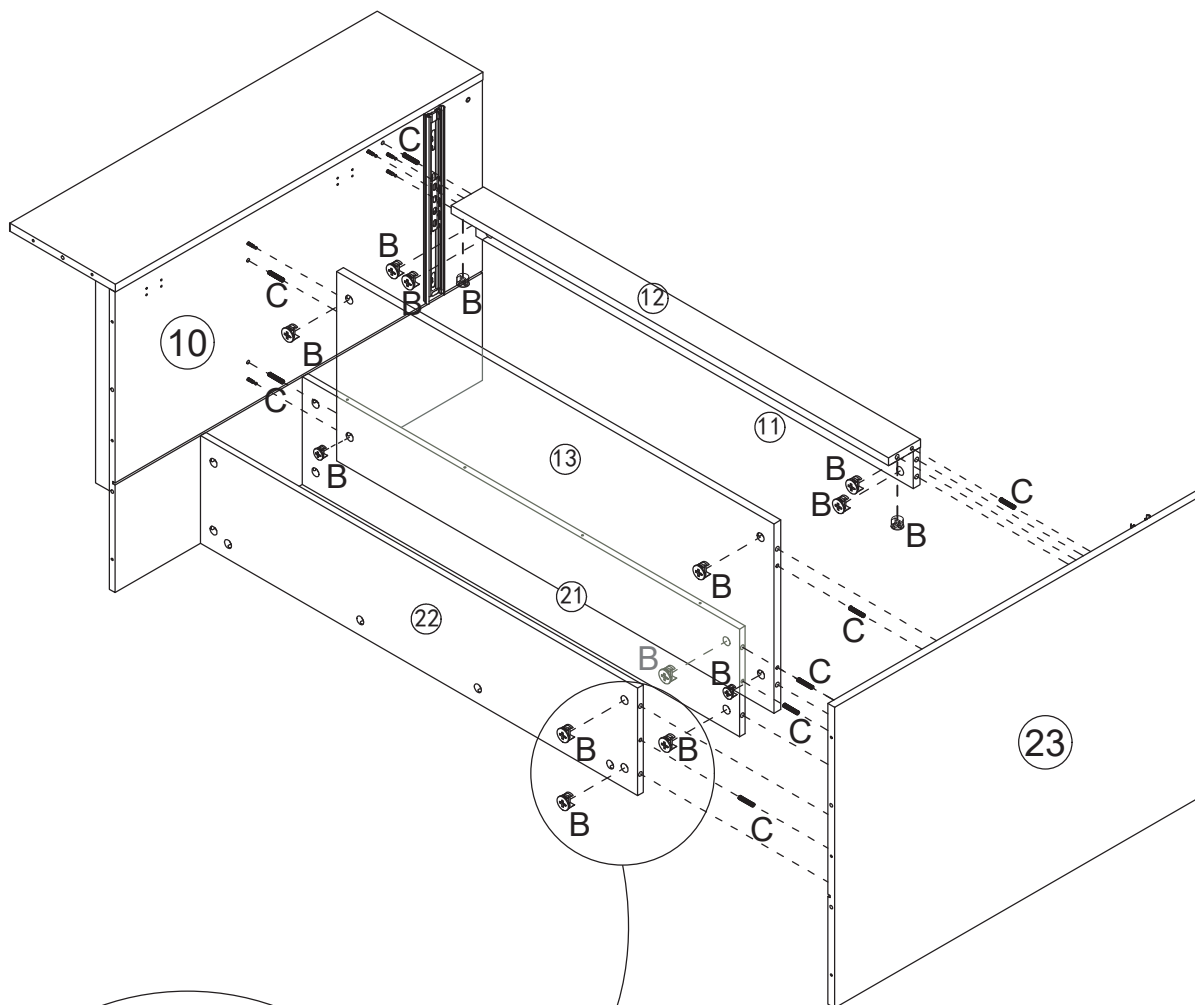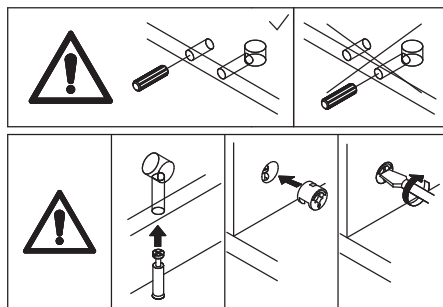


18


 
A x 24



Ø7 x 35 mm

 

  Screw the eccentric rod (A) into Plate 17, 19 and 20 .

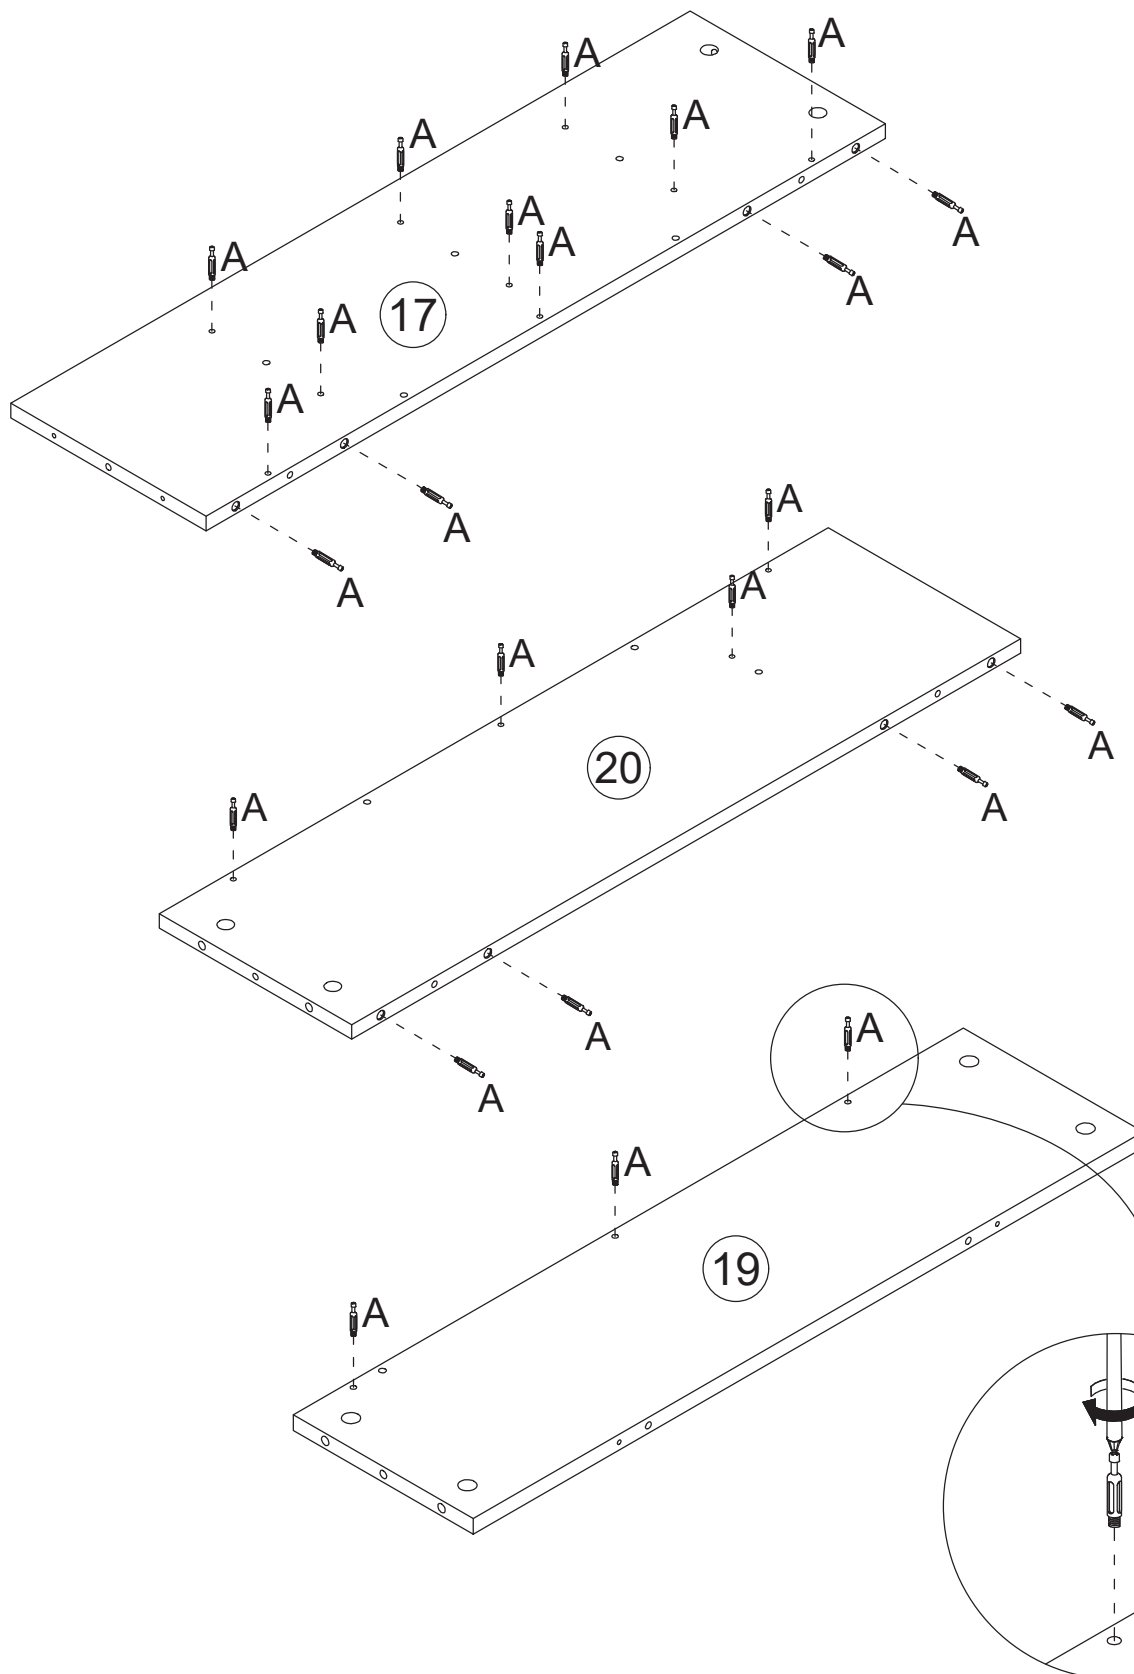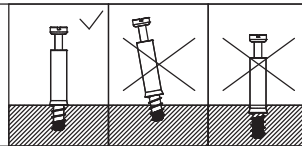


19

B x 8




Ø 15 x 9.5 mm


 
C x 4



Ø 6 x 30 mm

 

  Use the wooden dowels (C) to connect panels 18 and 19 to the sides of panels 17 and 20 that have six pilot holes, then turn the eccentric wheel (B) clockwise to tighten them.
Note: Panel 18 is mounted on top.

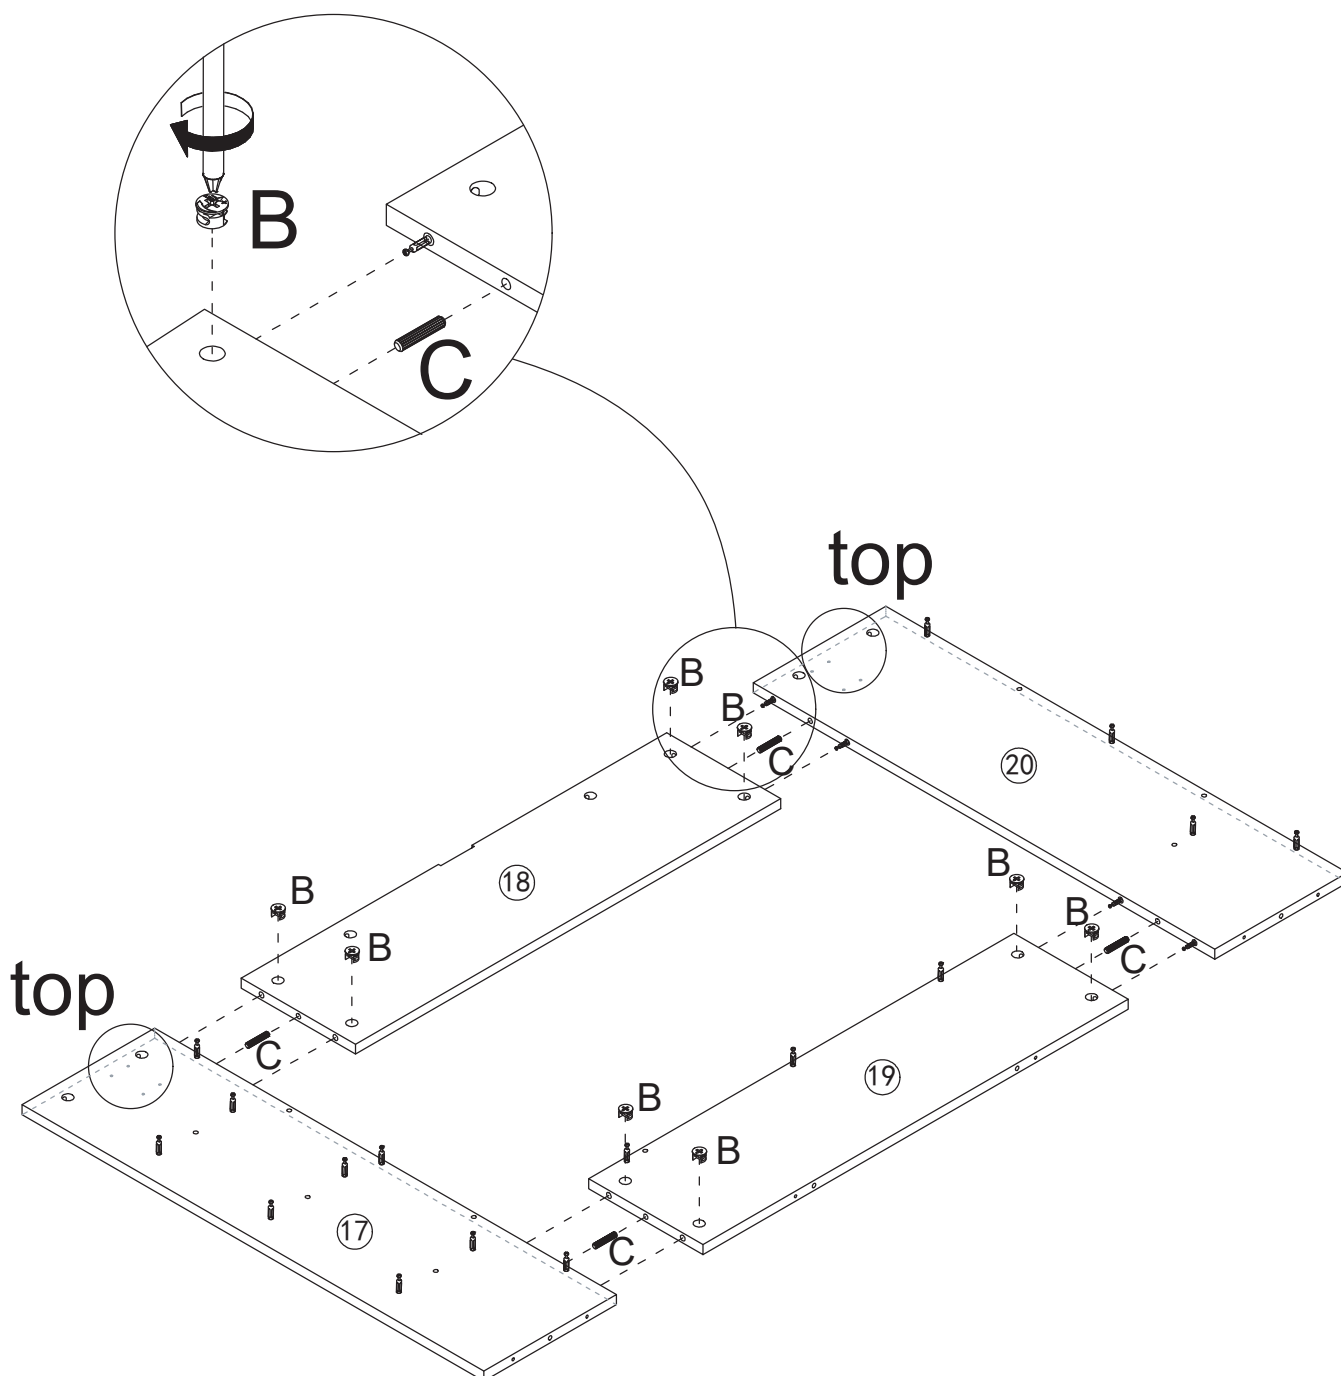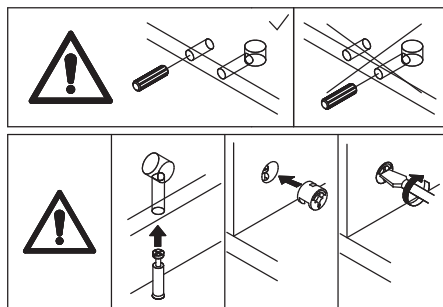


20

B x 16




Ø 15 x 9.5 mm


 
C x 9



Ø 6 x 30 mm

 

  Use the wooden dowels (C) to connect panels 17, 18, 19 and 20 to panels 9, 10, 22 and 23 respectively, then turn the eccentric wheel (B) clockwise to tighten them.

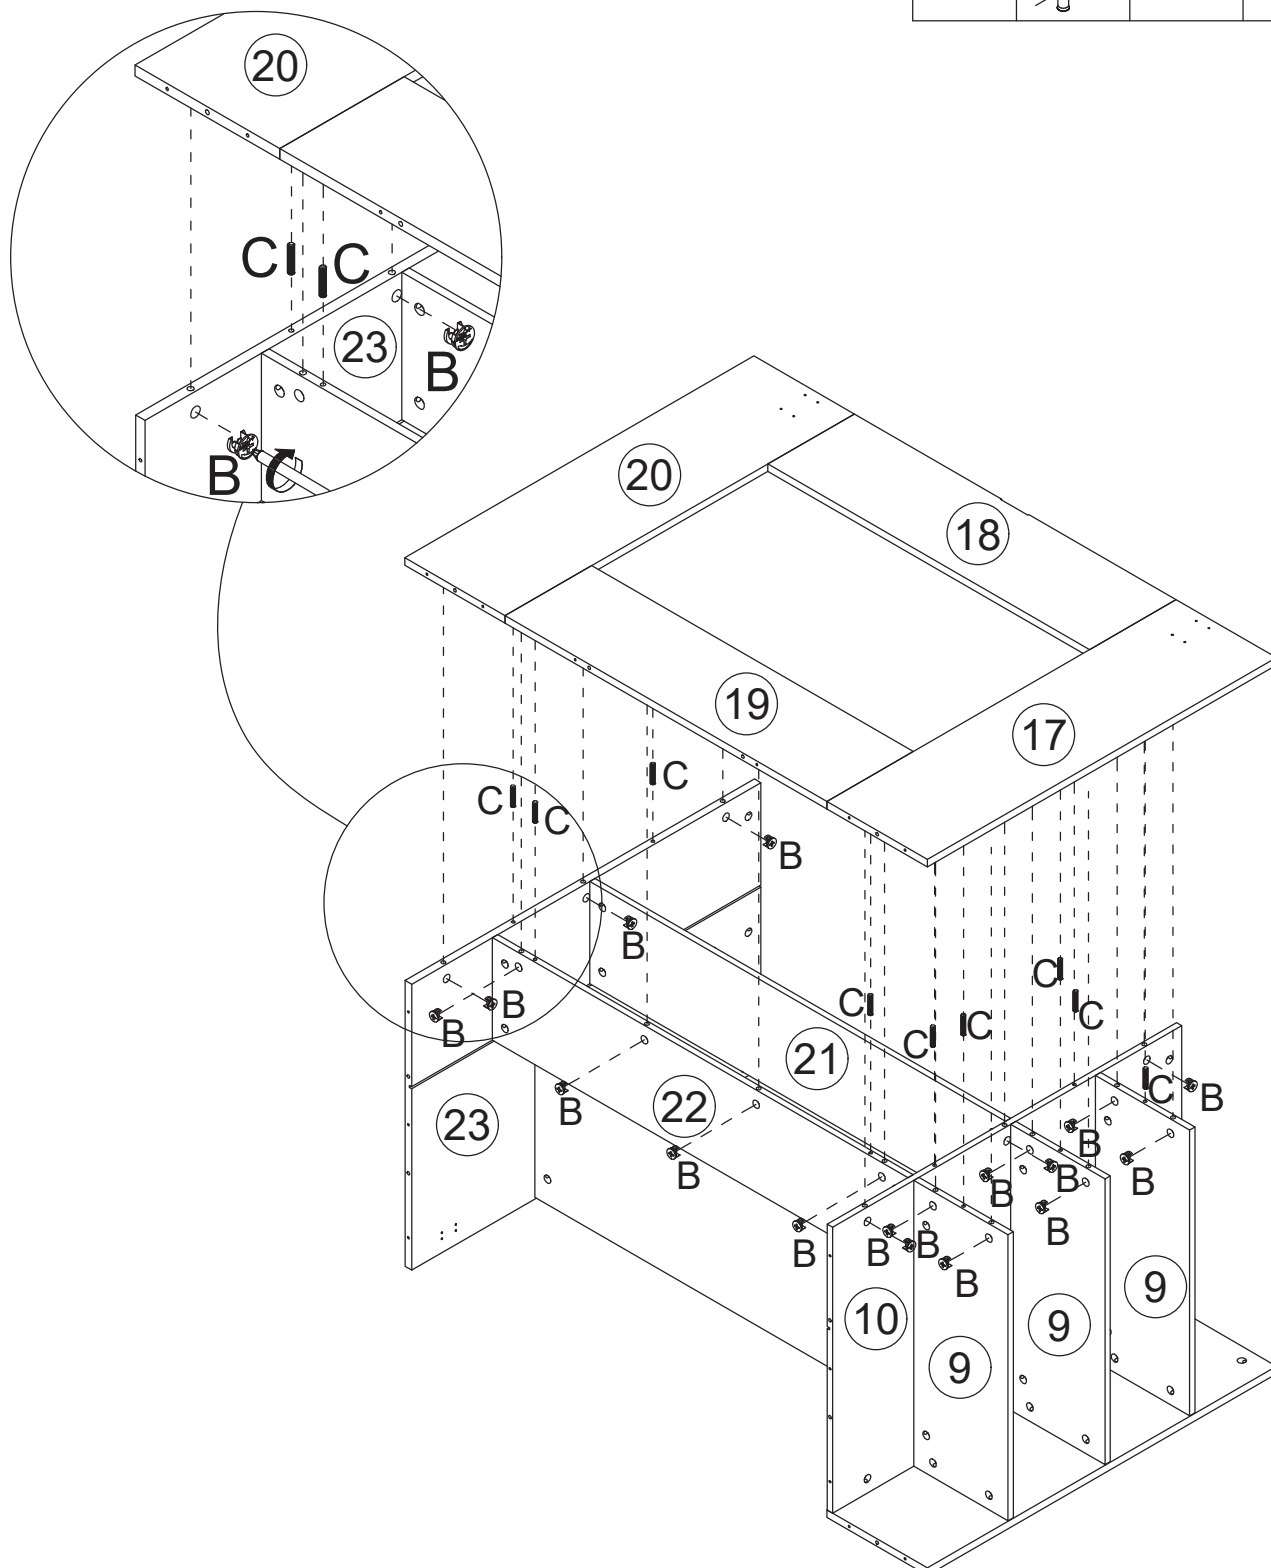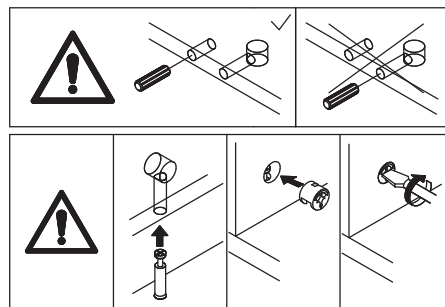


21



M x 2





 
M6x10 mm



 
 
Secure the metal component 15 to plates 10 and 23 using screws (M).

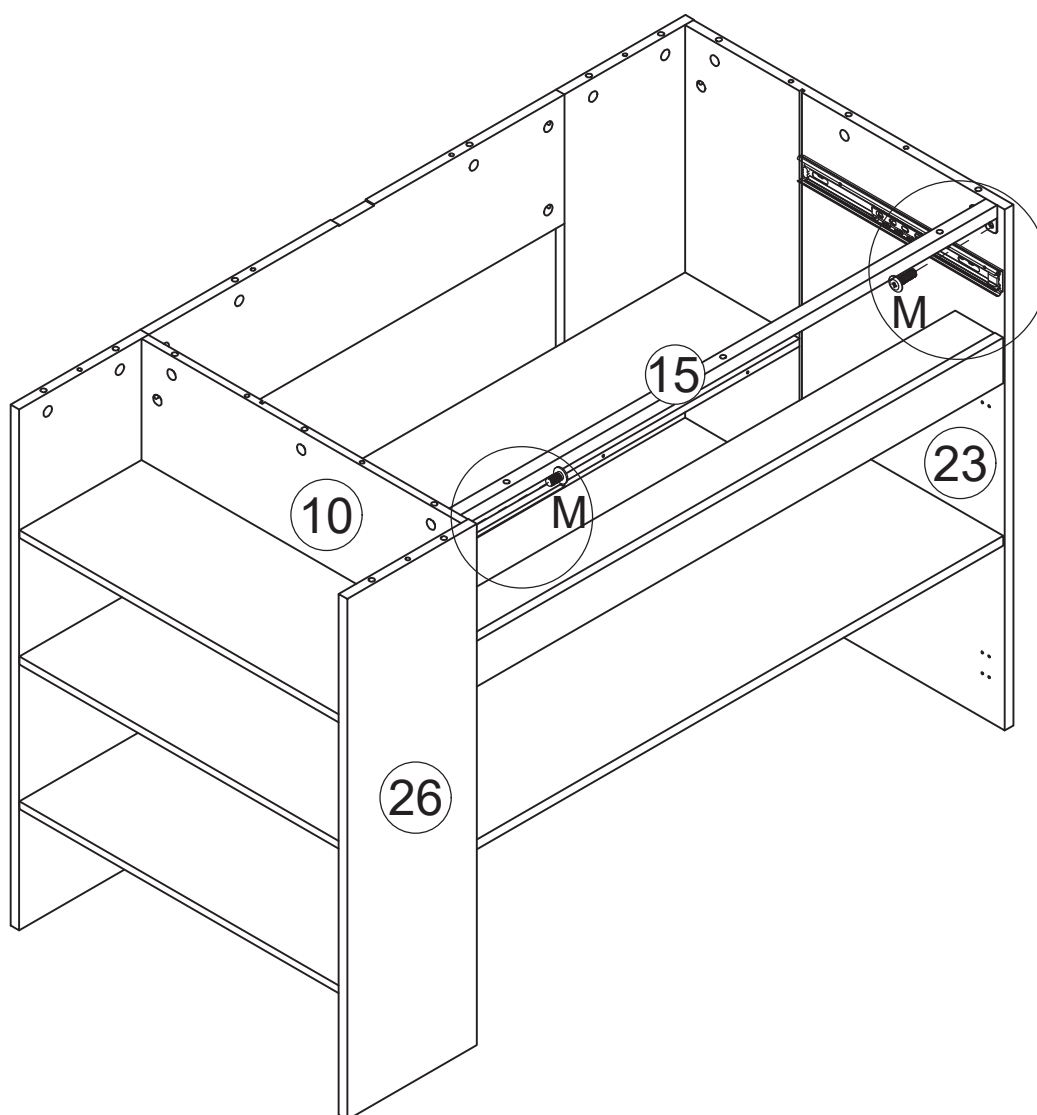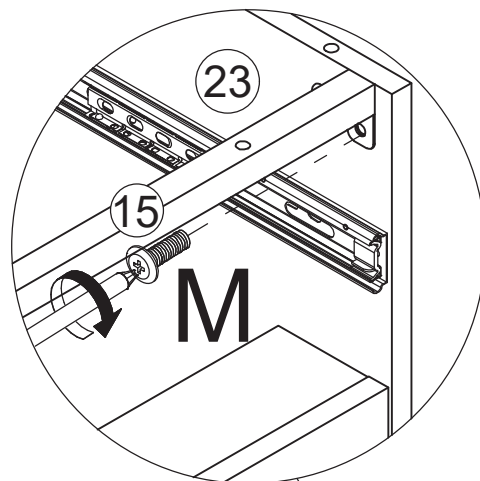

22

   A x 14  Ø7 x 35 mm	F x 2  Ø3.5 x 12 mm	N x 1 	
---	--	--	---

  Screw the eccentric rod (A) into plate 7 and secure the metal plate (N) to plate 7 using screws (F).

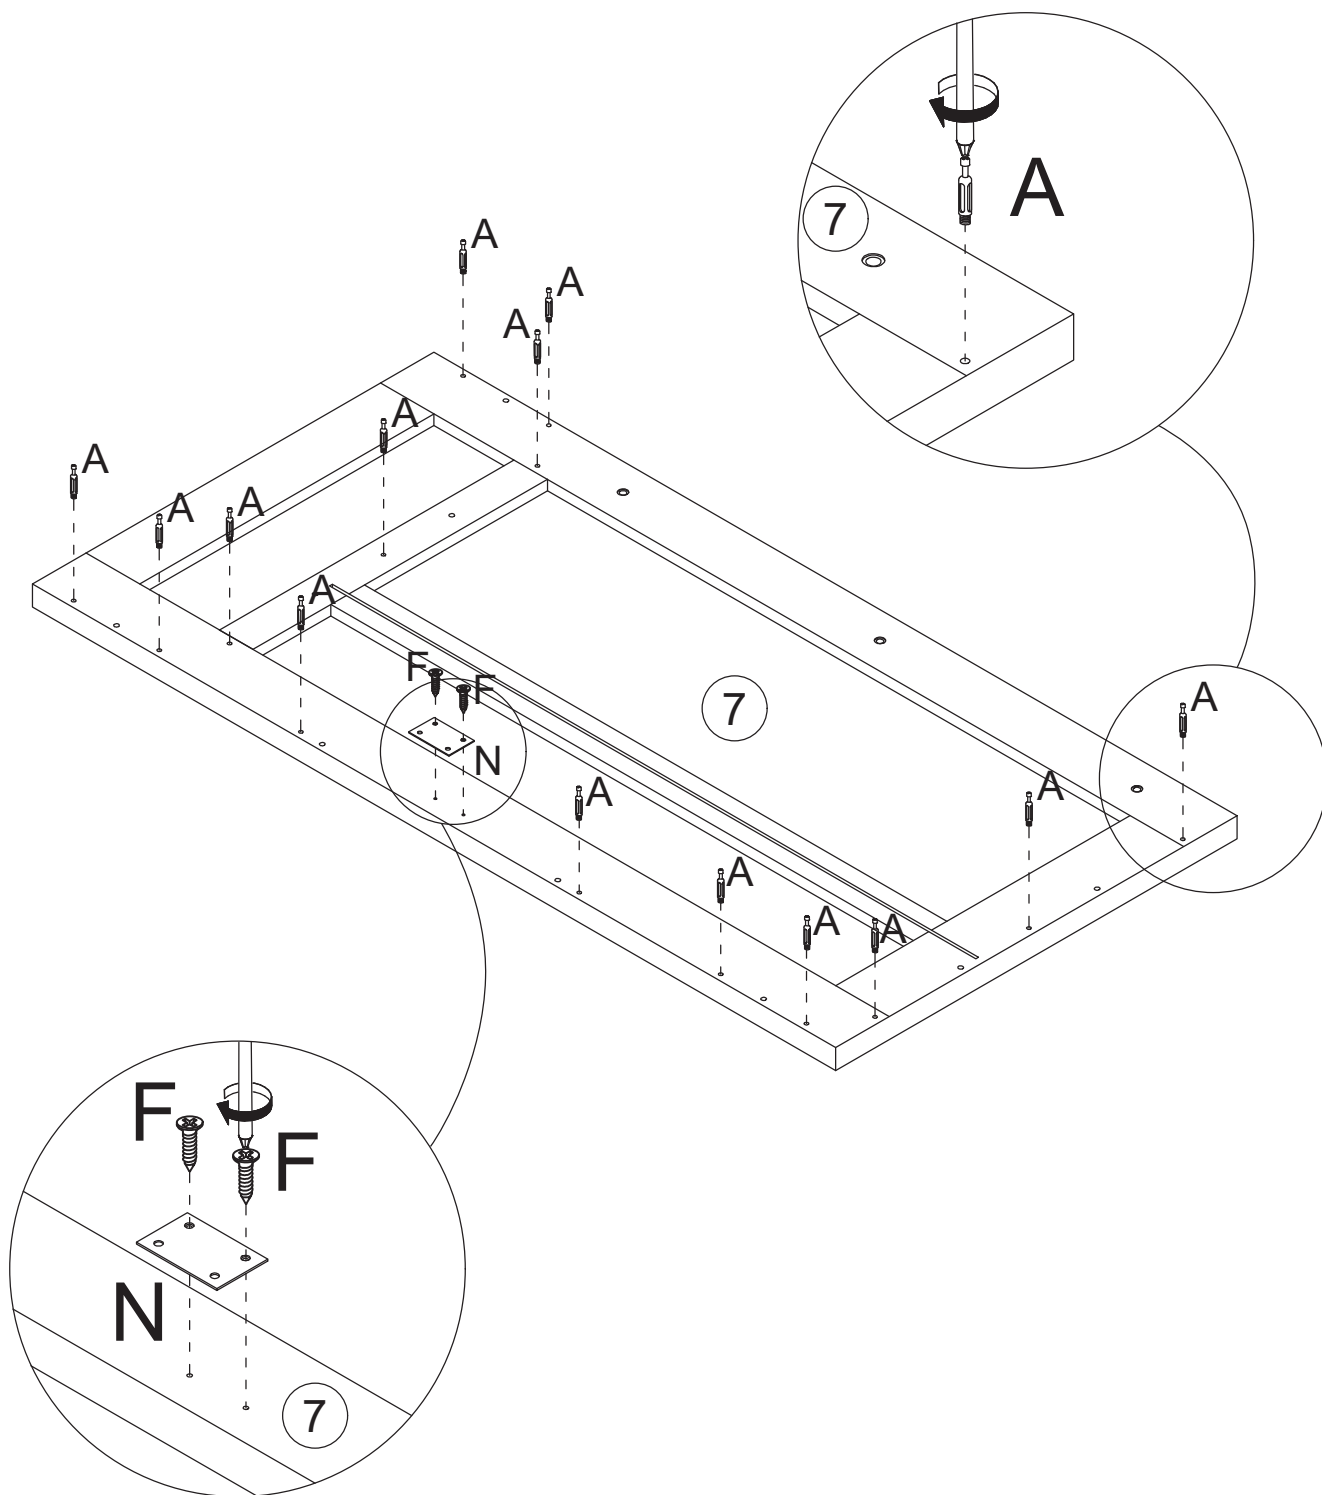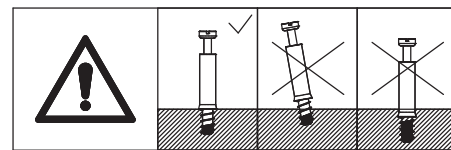


23

B x 14



Ø 15 x 9.5 mm

 C x 9




Ø 6 x 30 mm





D x 3



 M6 x 30 mm




    Use the wooden dowels (C) to connect panel 7 to panels 10,17,18,20,23 and 26, respectively, then turn the eccentric wheel (B) clockwise to tighten them.

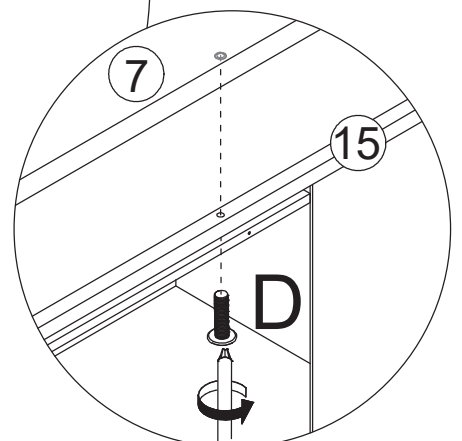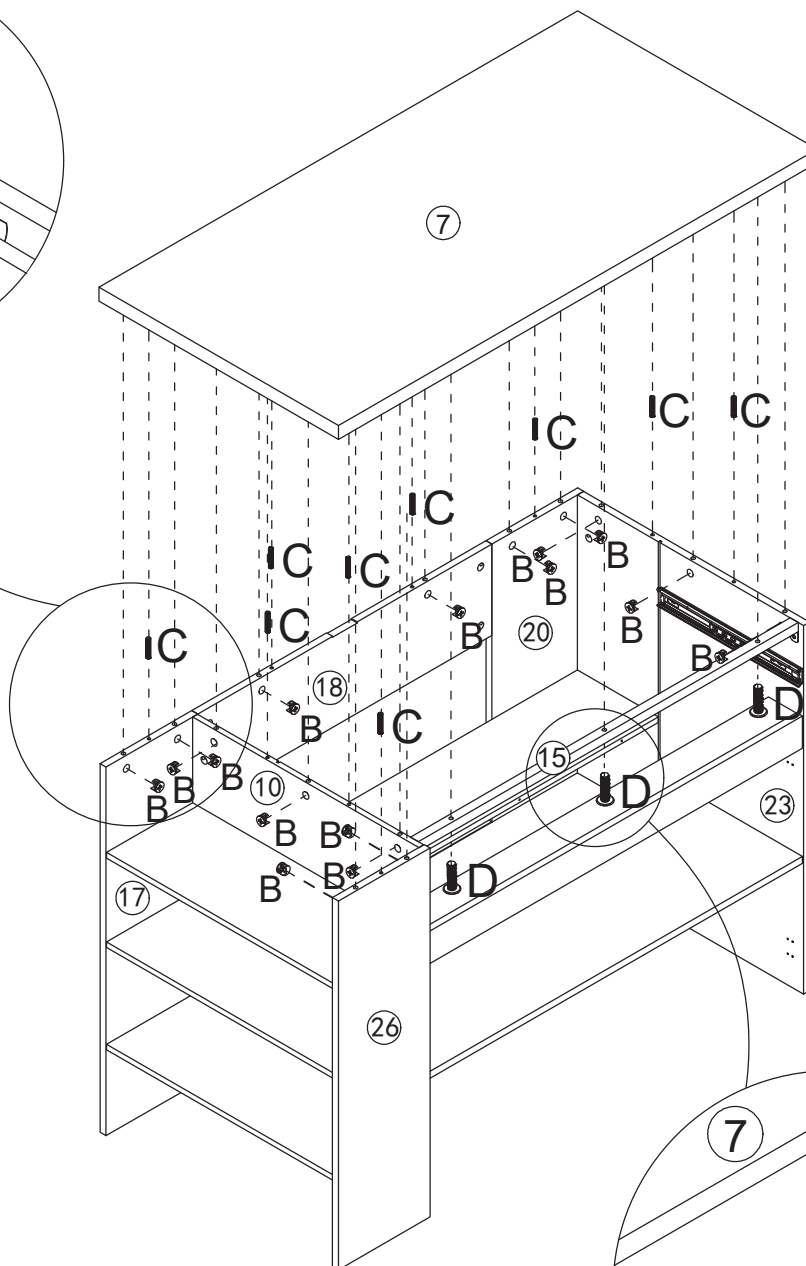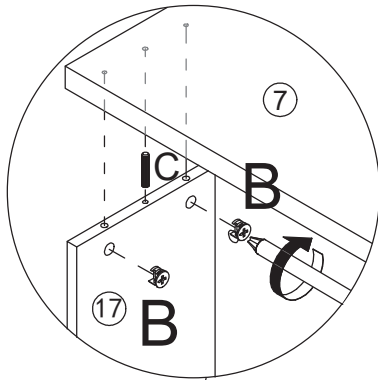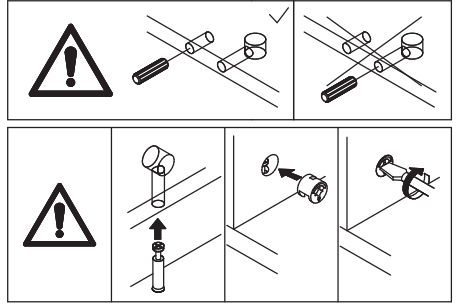


Use screw (D) to secure metal part 15 to panel 7

 24



 Insert panel 15, the retaining strip (29) and panel 16 into the slots in that order.

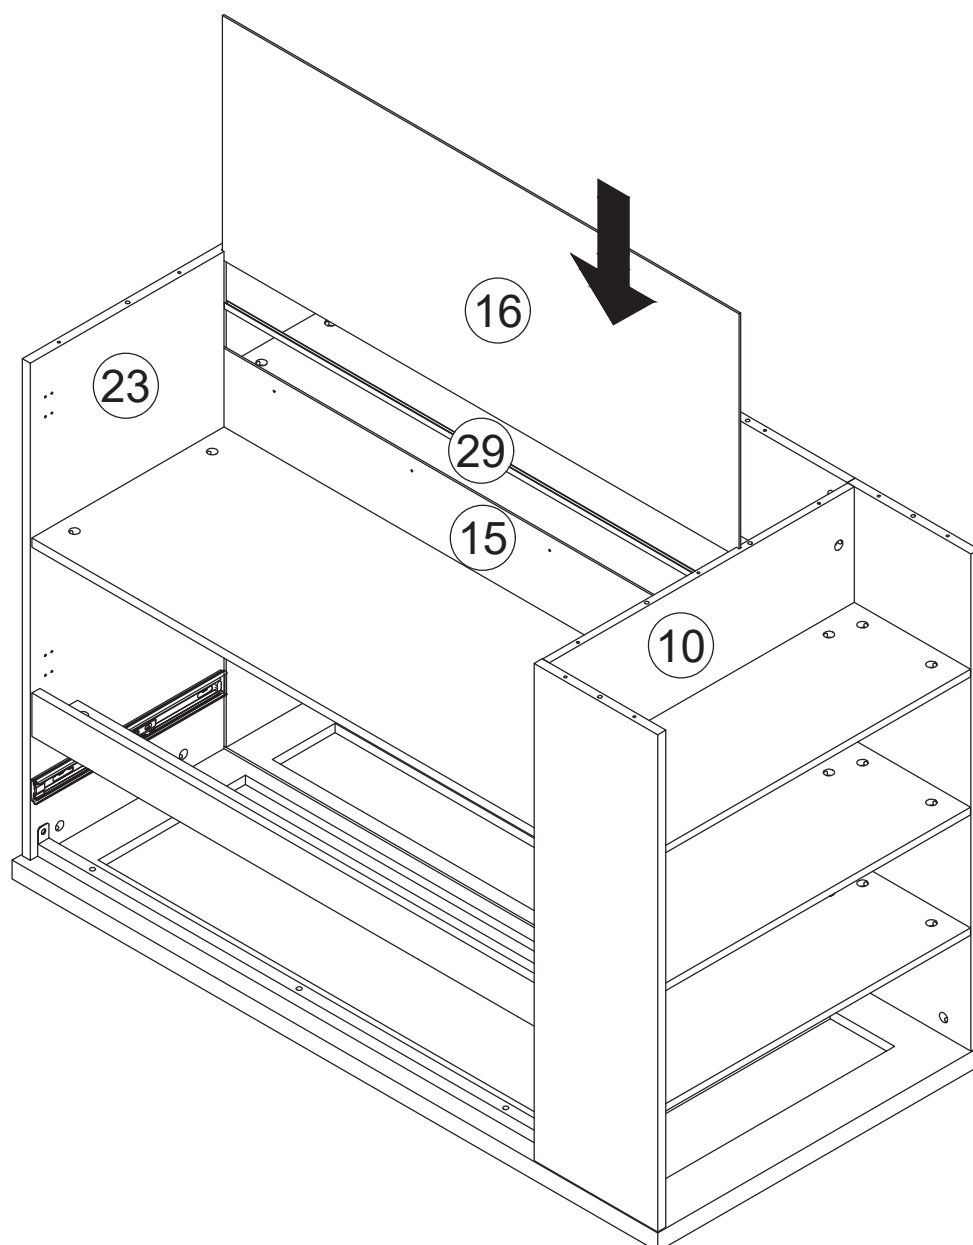


25



Lx 4



 Ø3 x 16 mm




  Use screws (L) to secure panel 15 to panel 21.

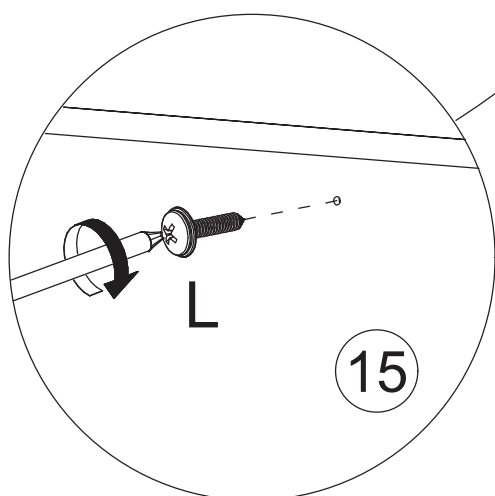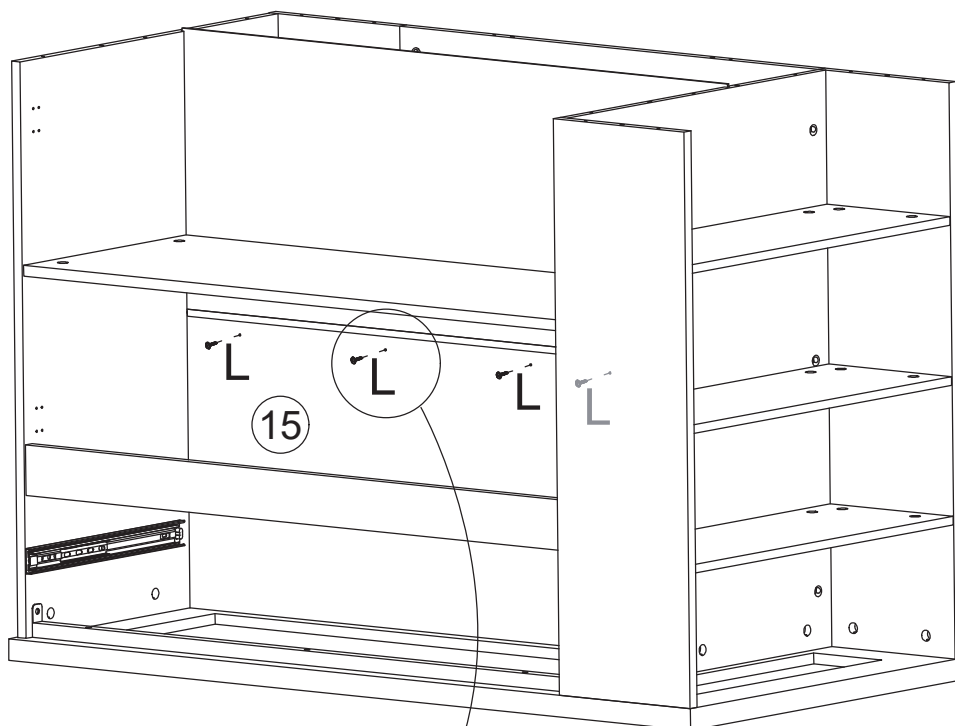


26


 
A x 14



Ø7 x 35 mm

 

  Screw the eccentric rod (A) into Plate 14.

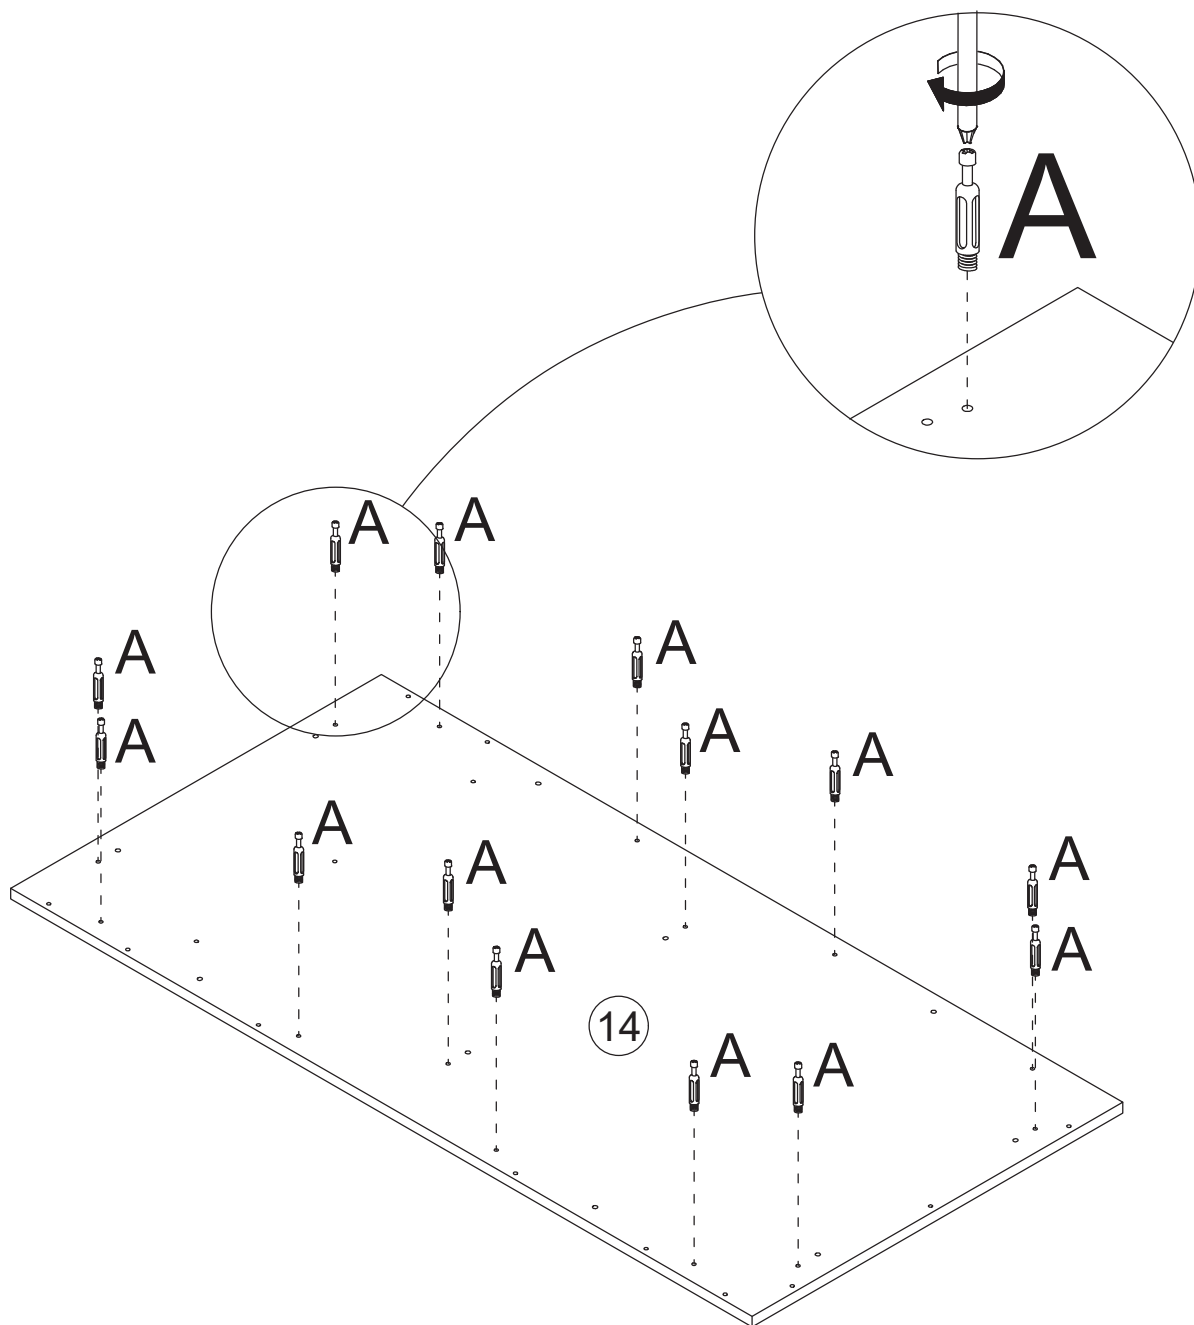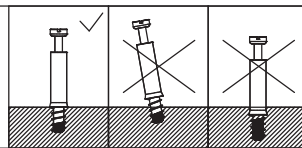


27

C x 9




Ø6 x 30 mm



 
G x 14





Ø5 x 40 mm

 

  
 
Use the wooden dowels (C) to connect panel 14 to panels 10, 17, 19, 20, 23, and 26, then secure them with screws (D).

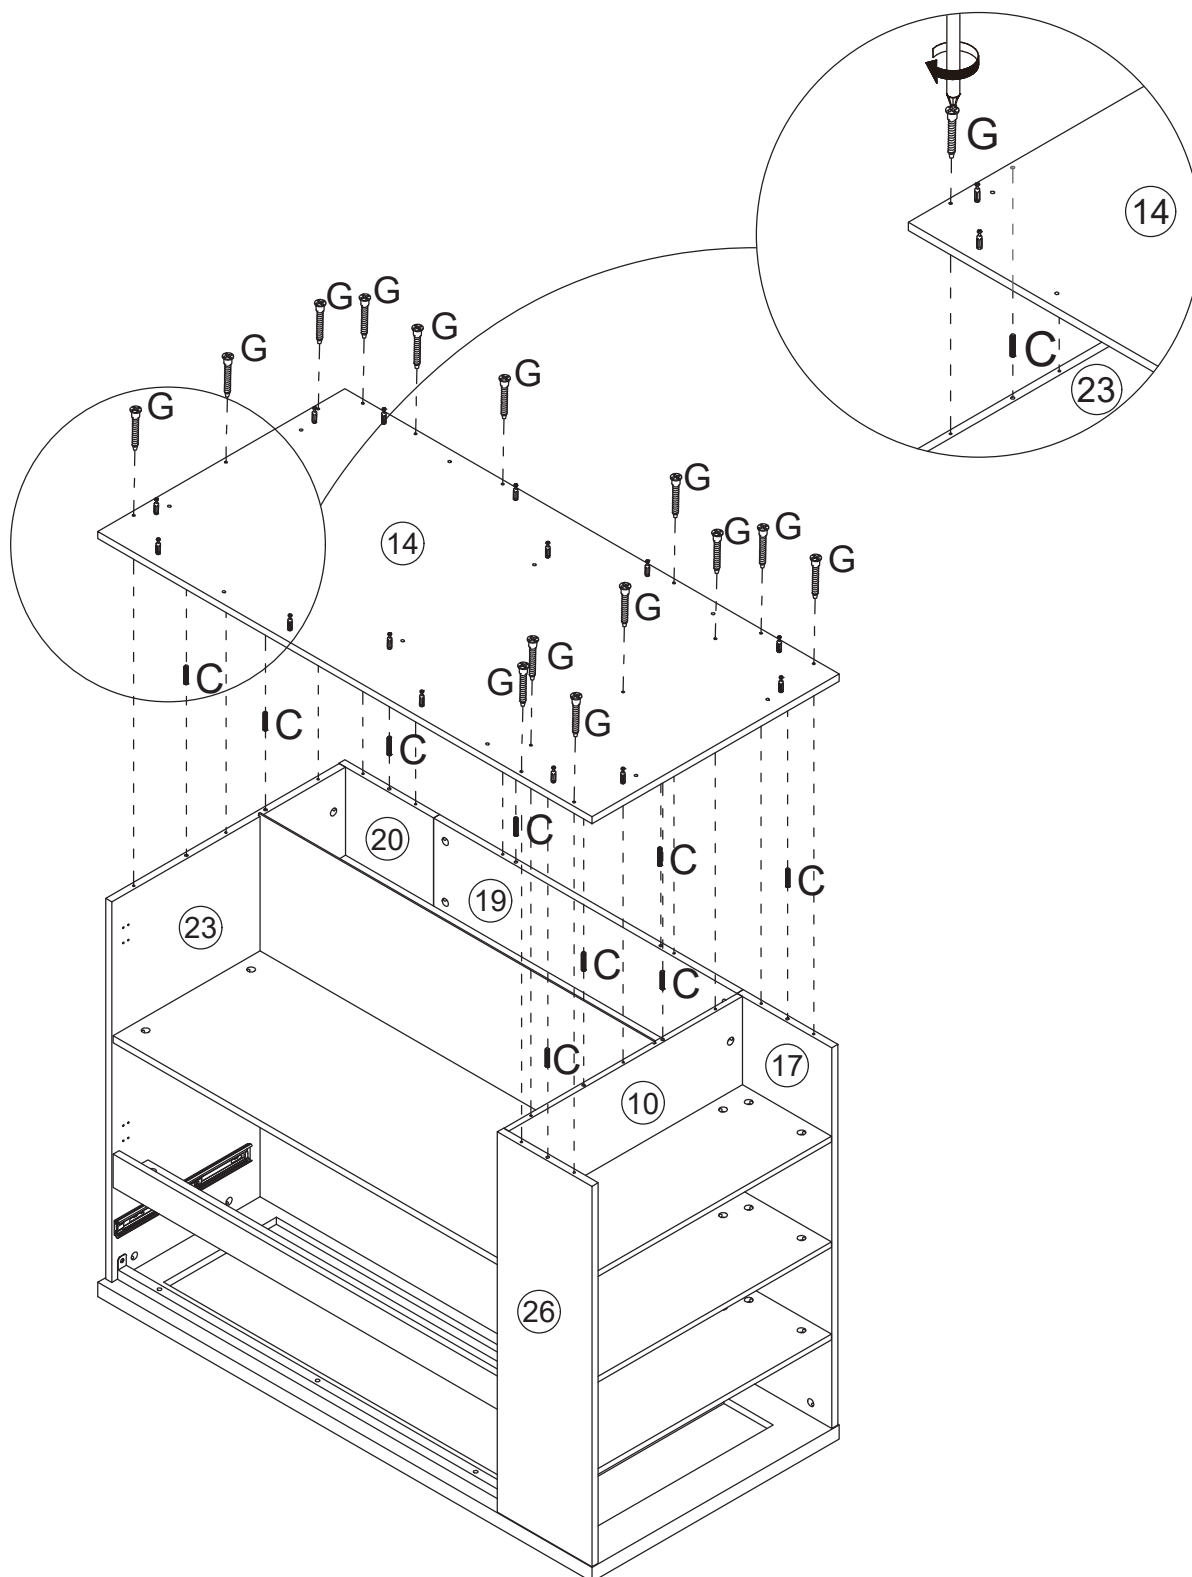

28

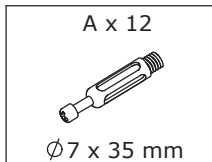  

  Screw the eccentric rod (A) into Plates 25.

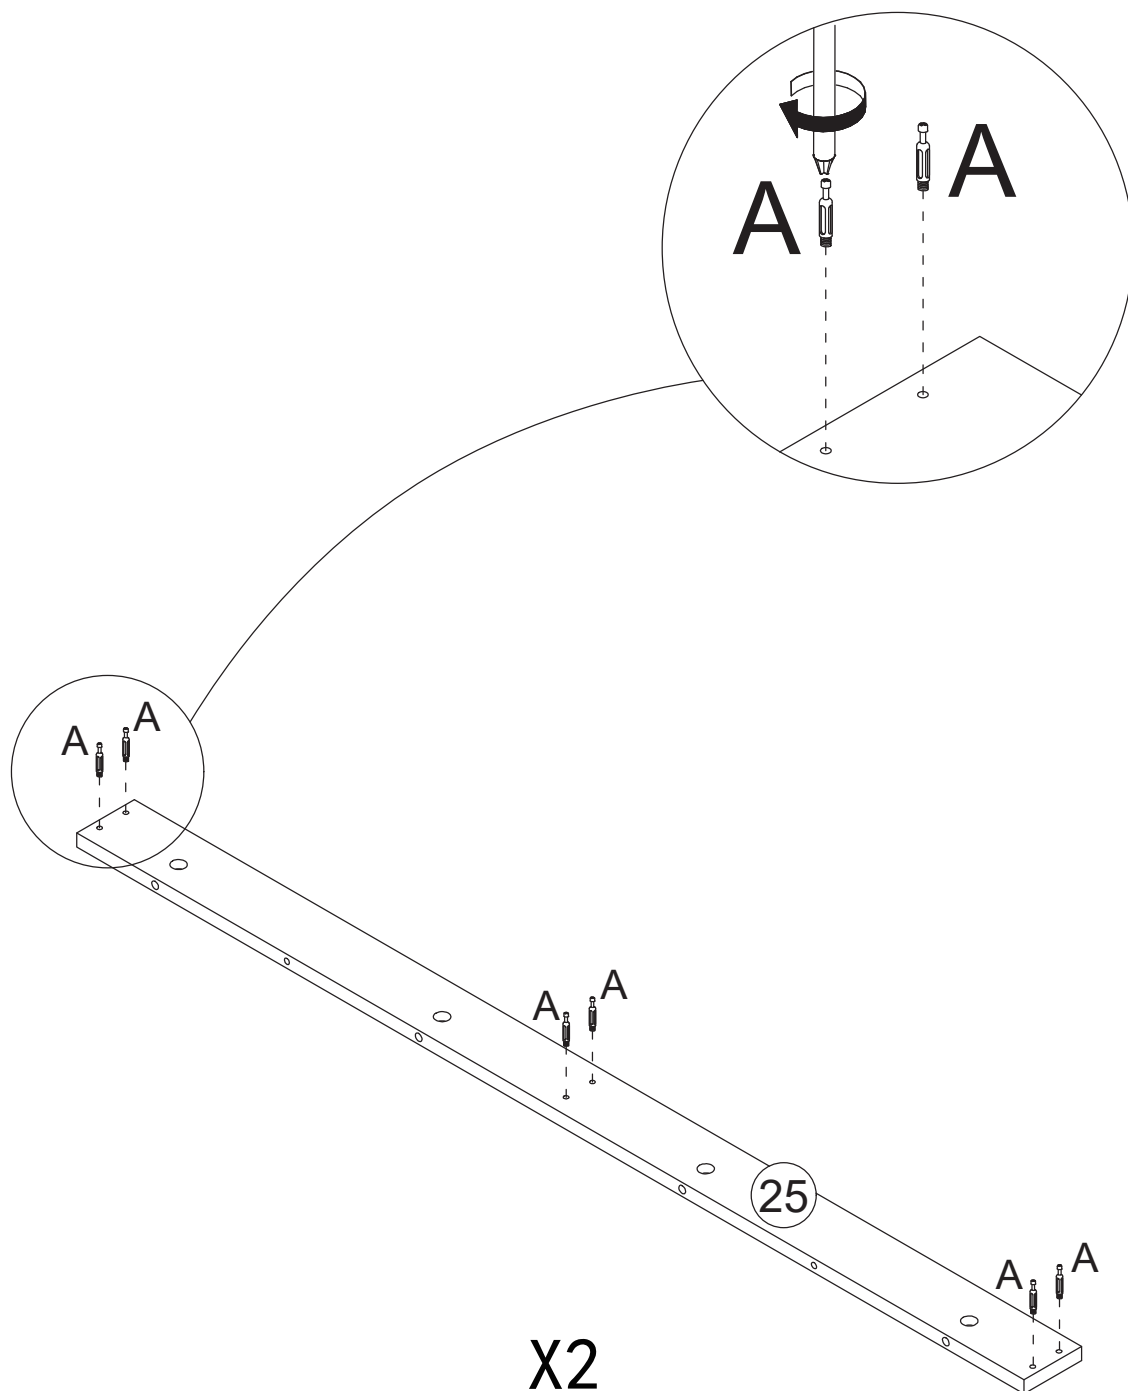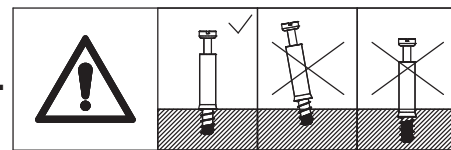


29

B x 12





Ø 15 x 9.5 mm

 I x 9



  Use the eccentric wheel (B) to secure panels 24 and 25.

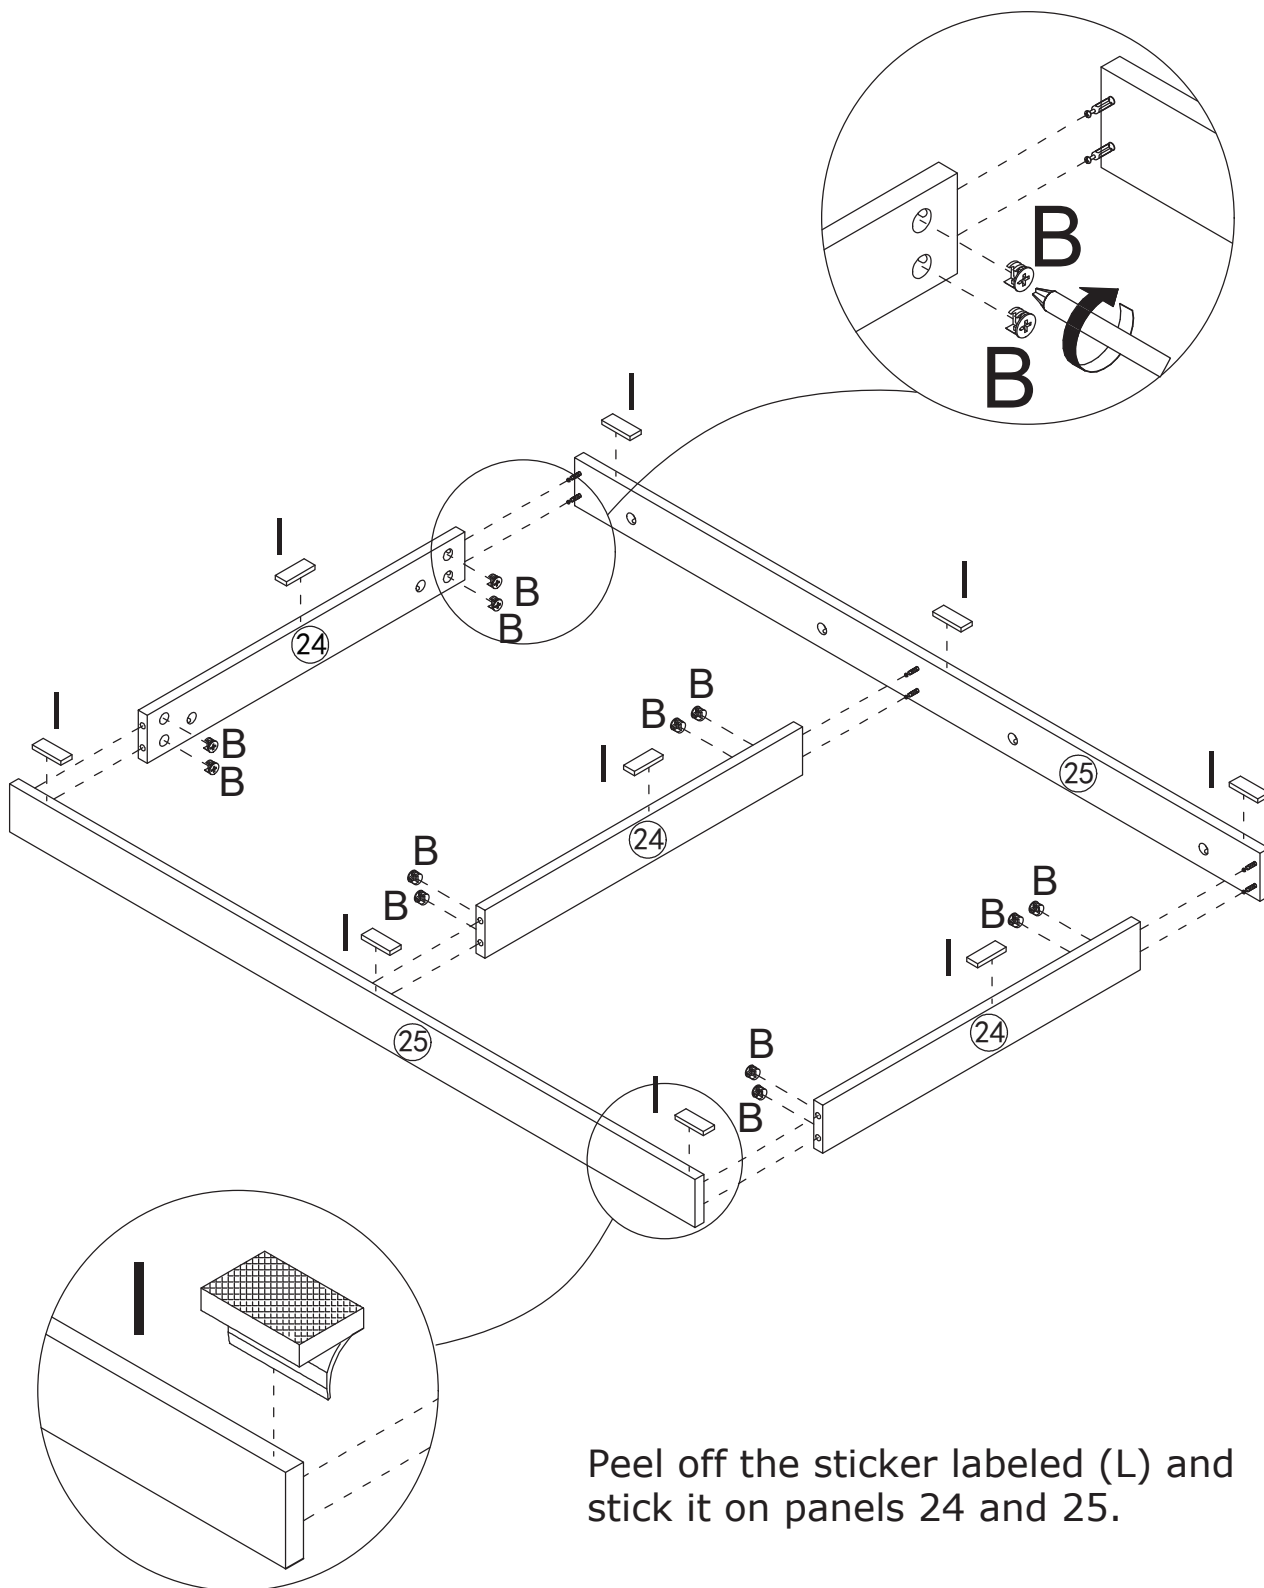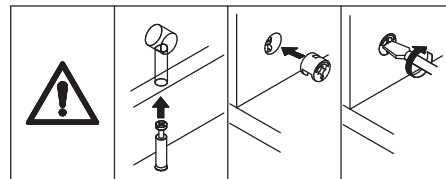

Peel off the sticker labeled (L) and stick it on panels 24 and 25.

 
30

B x 14




Ø 15 x 9.5 mm



C x 10



Ø 6 x 30 mm

 

  Use the wooden dowels (C) to connect panels 24 and 25 to panel 14, respectively, then turn the eccentric wheel (B) clockwise to tighten them.

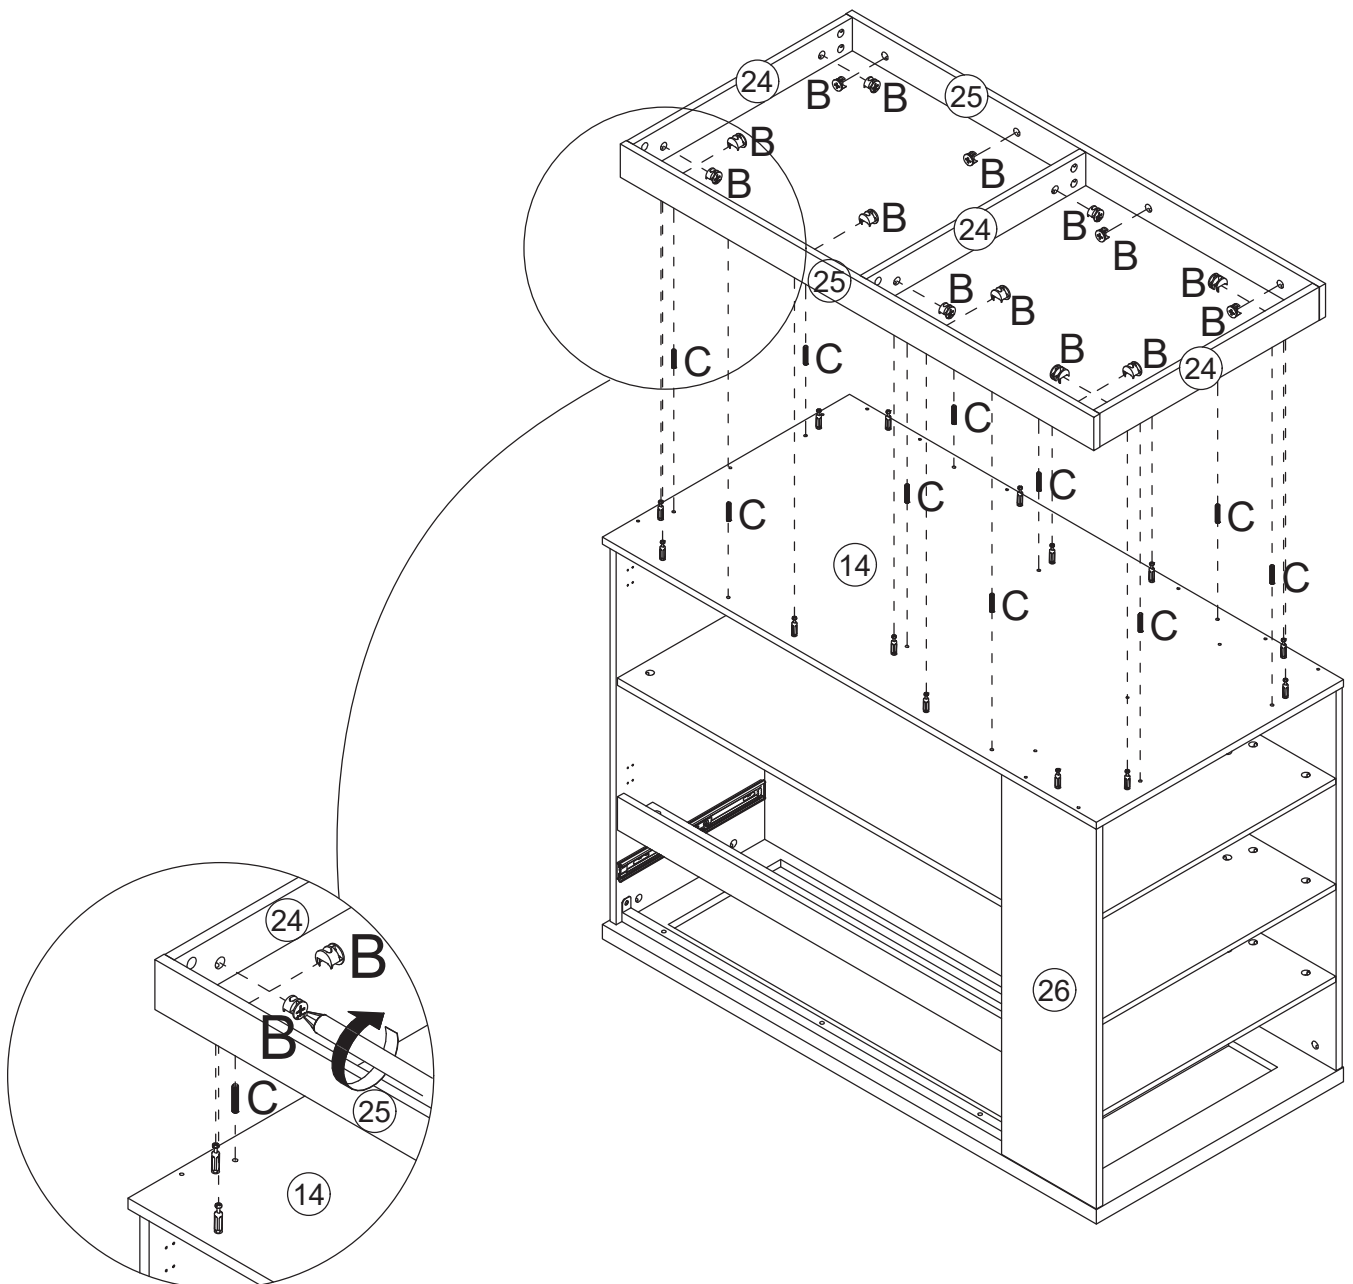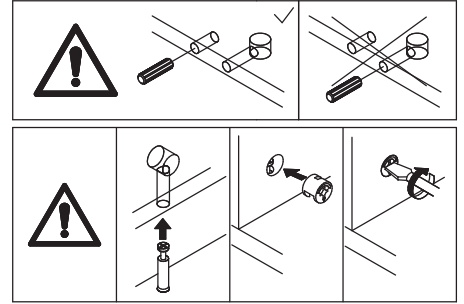


31

F x 6




Ø 3.5 x 12 mm

 E x 2




 Secure the support bracket (E) to panel 8 using screws (E).


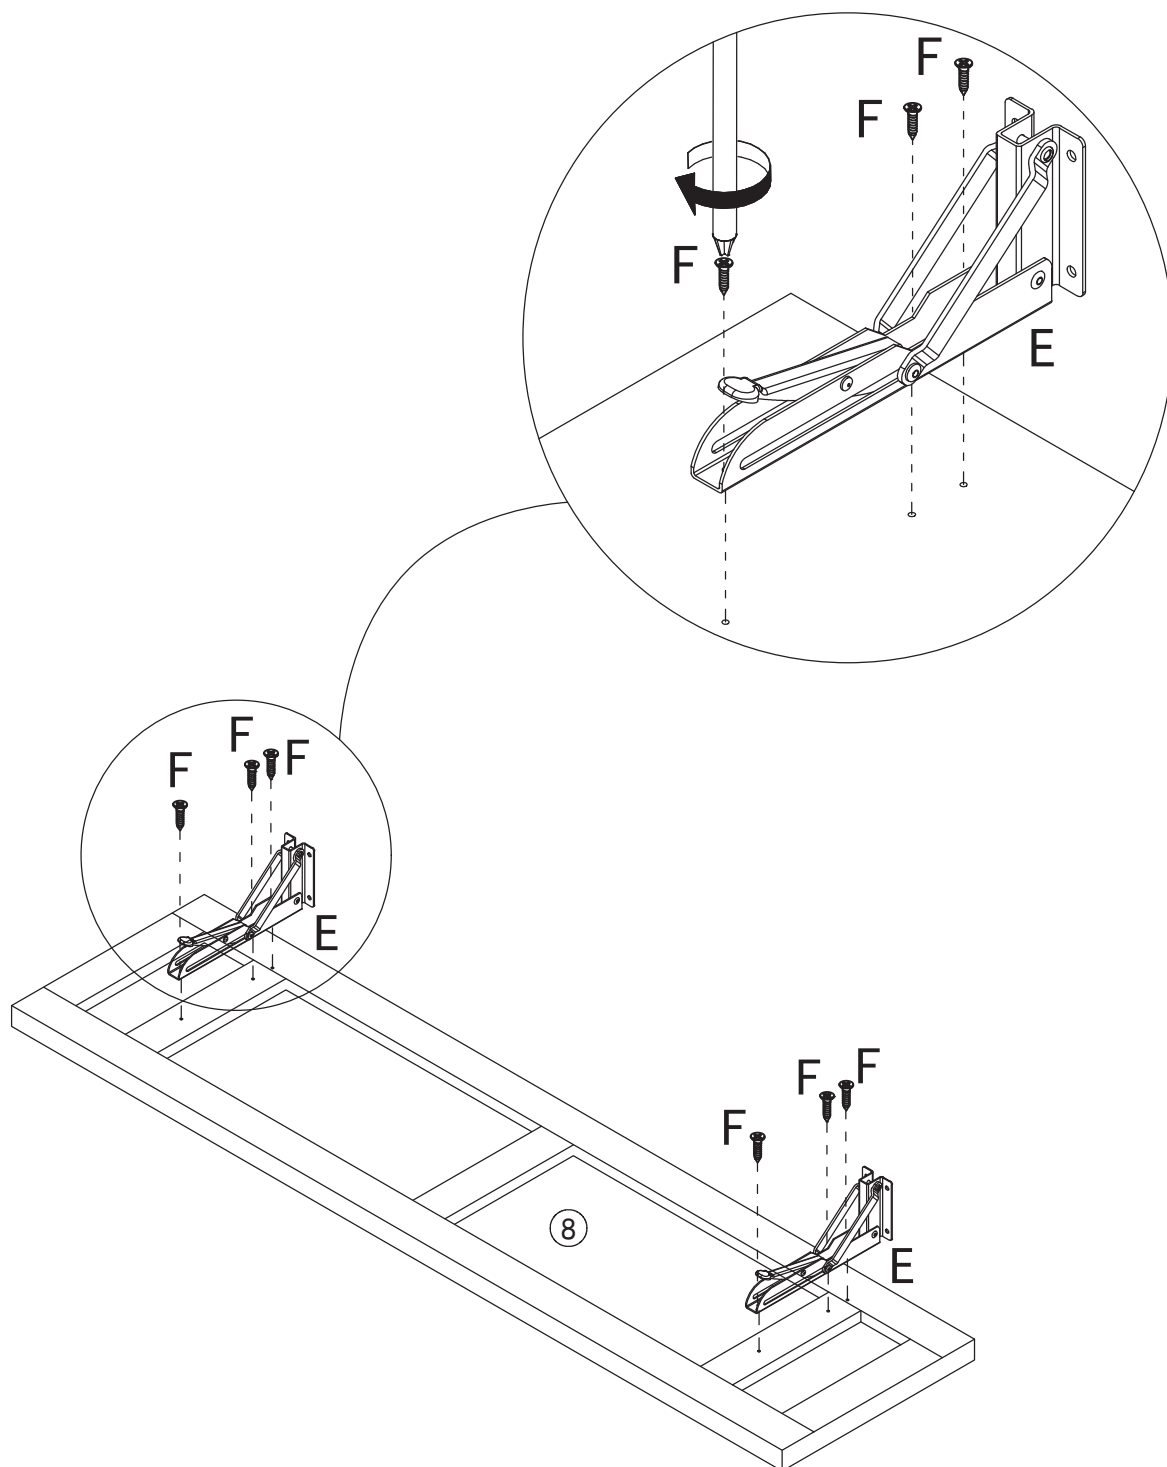


32

 F x 8

 $\varnothing 3.5 \times 12 \text{ mm}$ 

  Secure the support bracket (E) to panels 17 and 20 using screws (E).

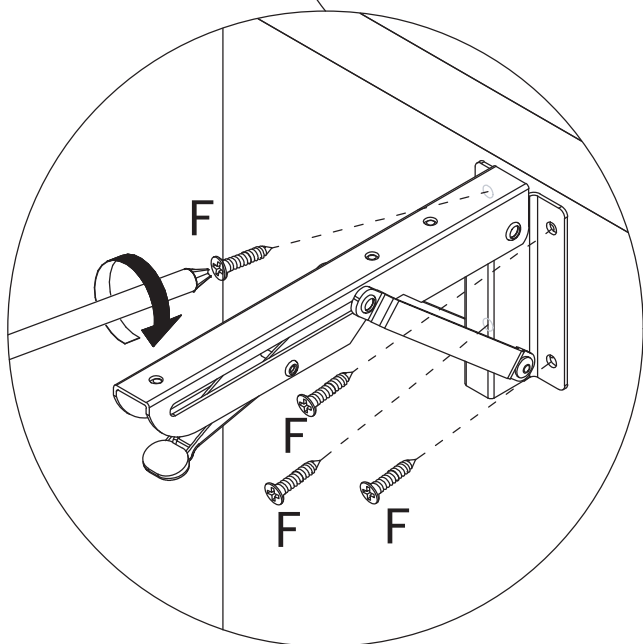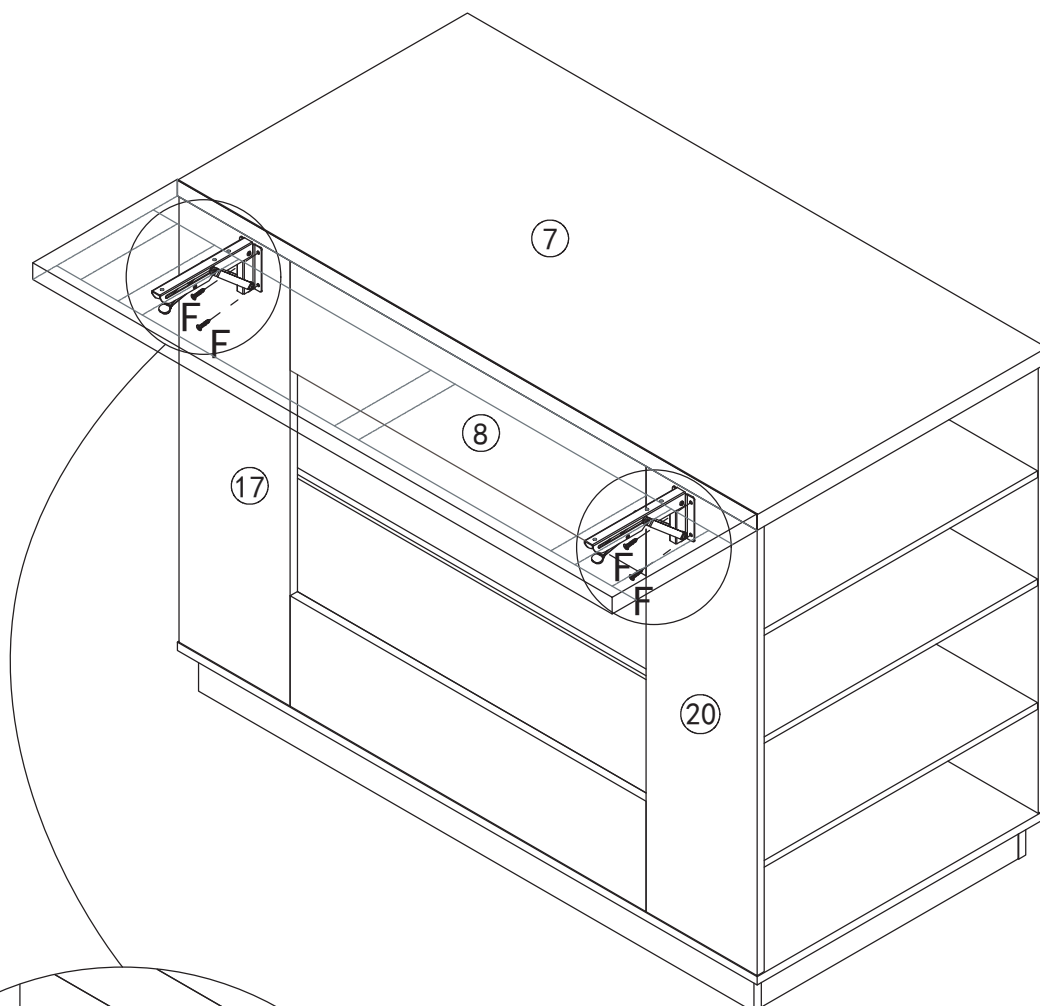


33

F x 8





Ø 3.5 x 12 mm

 
J x 2



K x 2

  

 Secure the soft-close hinge (K) to panel 27 using screws (F), and secure the soft-close hinge (J) to panel 28 using screws (F).

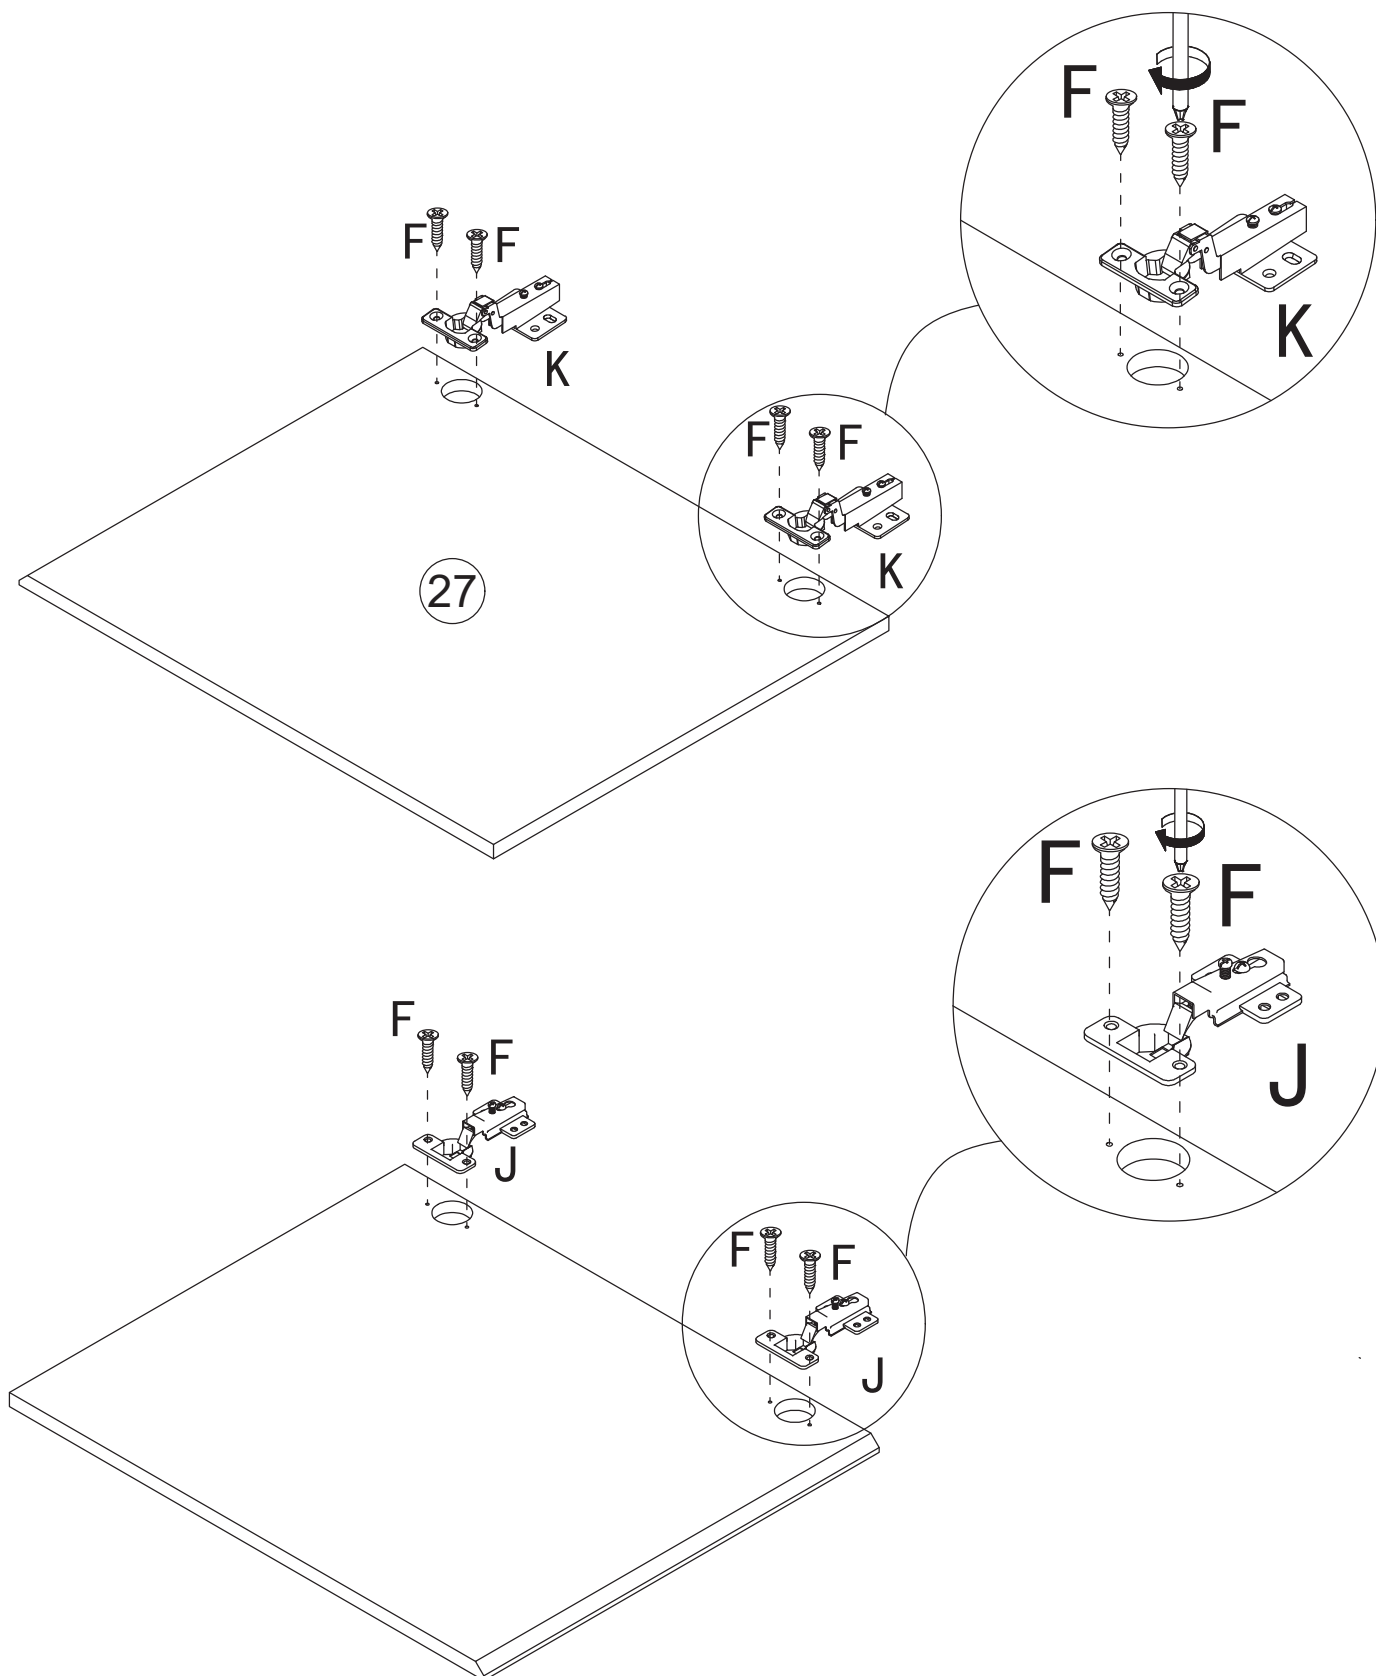


34




F x 16



 Ø 3.5 x 12 mm



   Secure panel 27 to panel 10 using screws (F),
and secure panel 28 to panel 23 using screws (F).

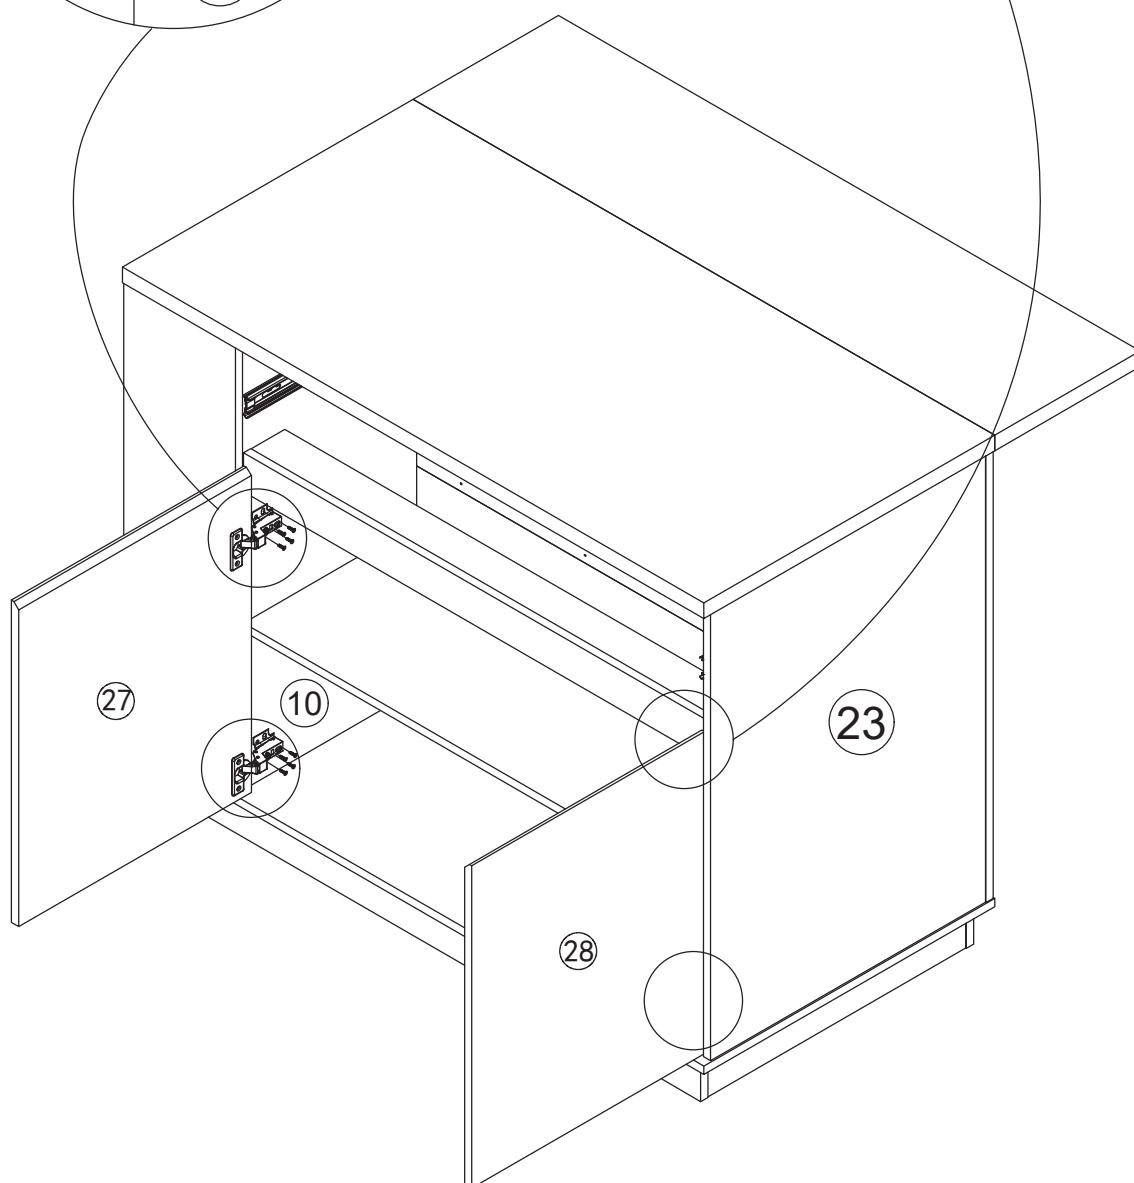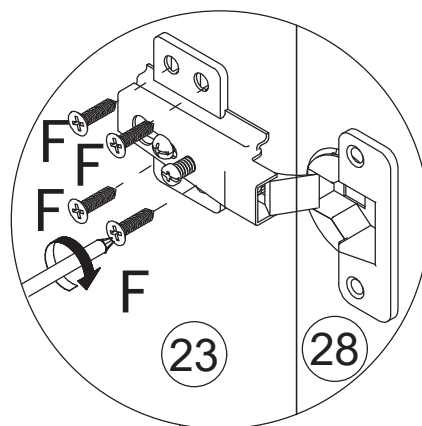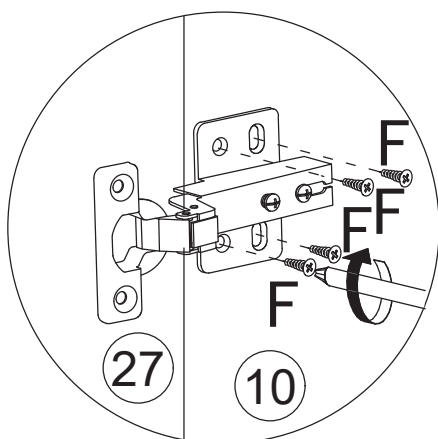

35

O x 88

 
 


Ø21



P x 18




Ø21

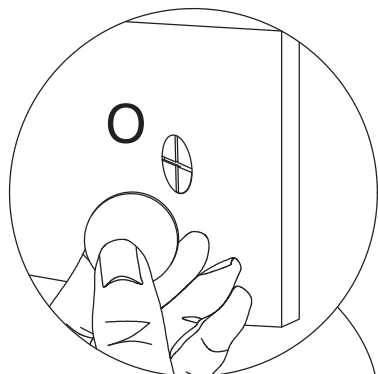

  
Install part (O) into the eccentric wheel hole on the matching-color plate.

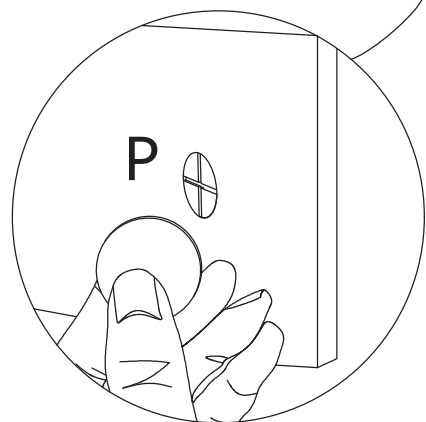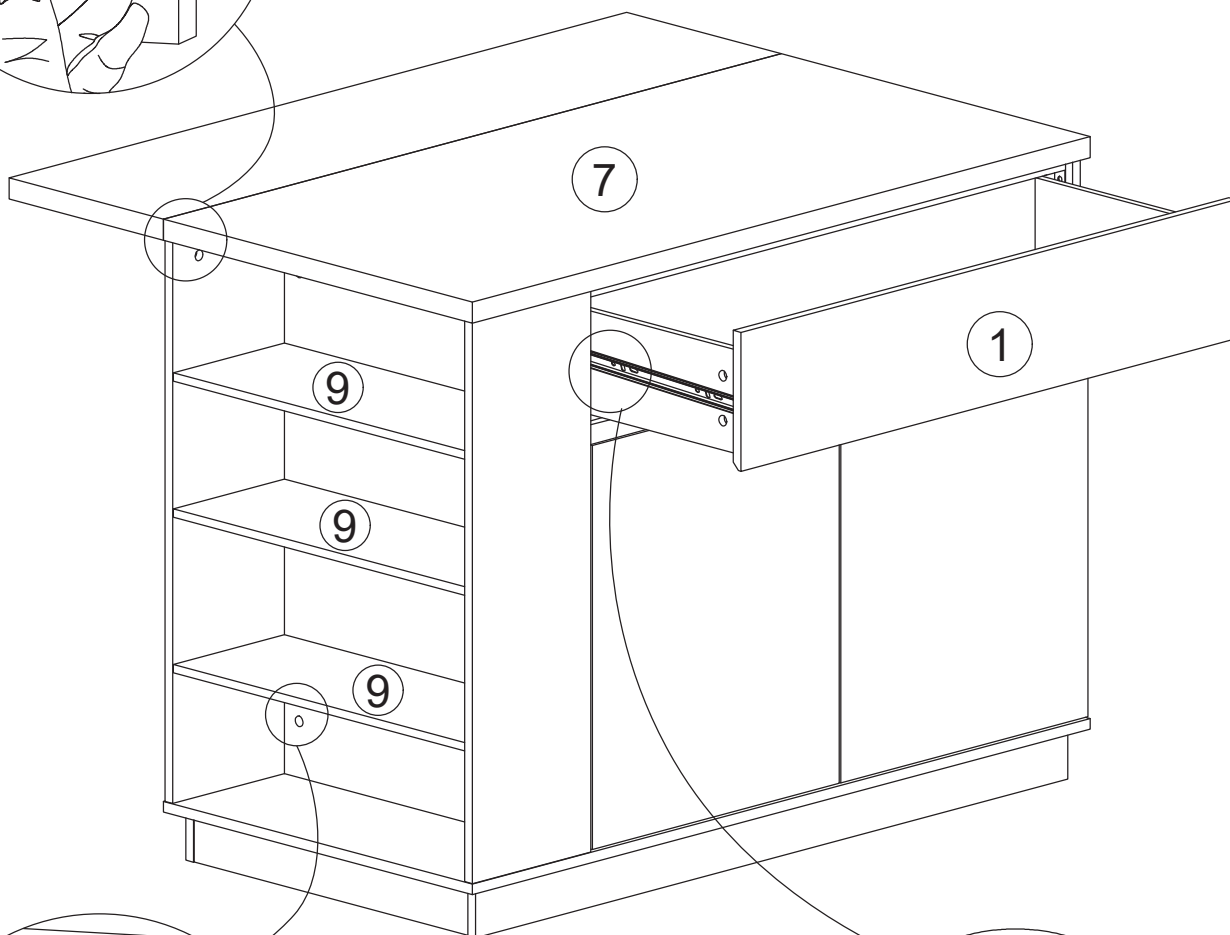

 Install part (P) into the eccentric wheel hole on the matching-color plate.

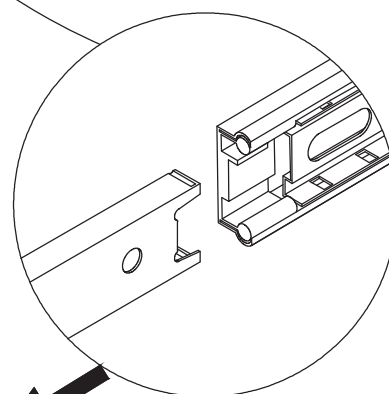


 
First, slide the track slider all the way to the top. Then, align the outer track with the center of the inner track and push it inward.




If doors are still not aligned if the hinges are properly correctly, please watch the video.

<https://youtu.be/n0Lb36SoODM>

  
If there is misalignment after you install, adjust the screw to the best condition

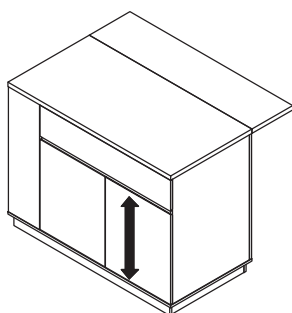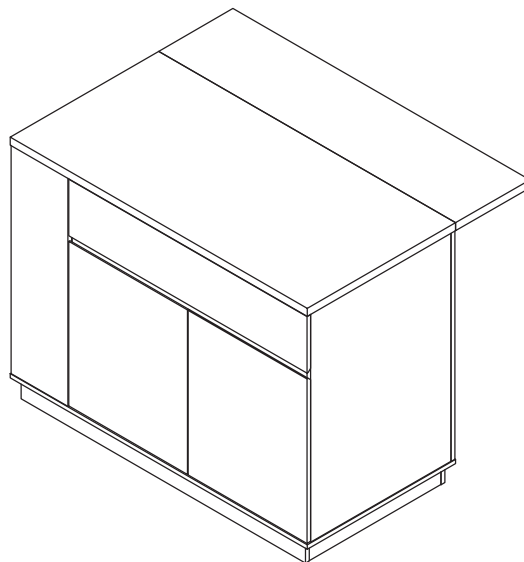



I

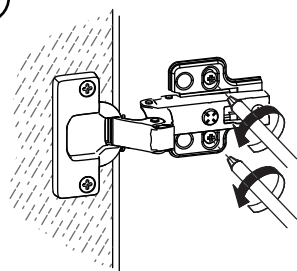 


II

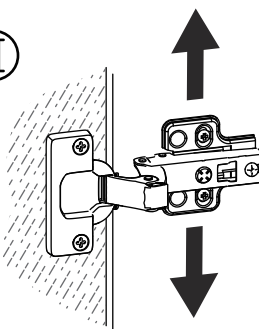 


III

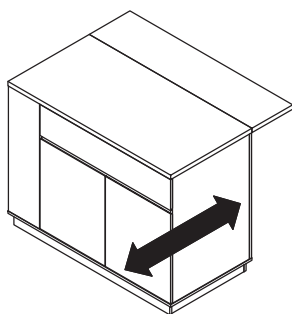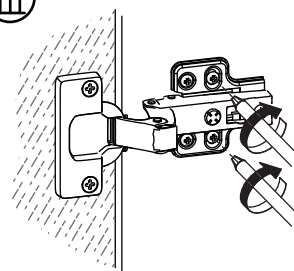  



I

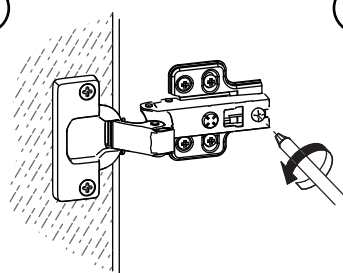 


II

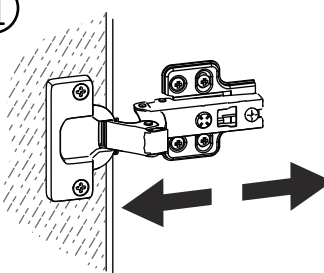 


III

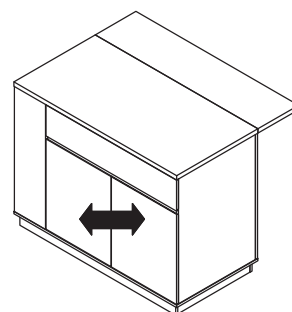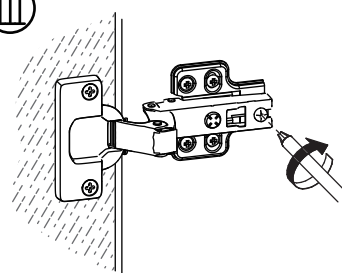  

I

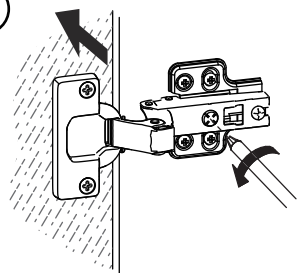 

II

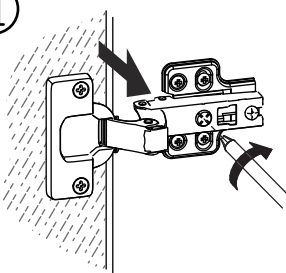 

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068