

Animated Elf Building Snowman



Animated Elf Building Snowman is made in two pieces, one elf holding snowball and one snowman body. Plug the male end of the snowball the elf is holding into the first female end on the 2-channel controller. Using the provided extension cord, plug the male end of the cord going to the snowman head into the female end of the extension cord. Plug the extension cord male end into the second female end on the provided 2-channel controller. The elf and bottom of snowman's body plug straight into power. Plug the controller directly into power. Adjust the speed by turning the knob at the top of the controller. This will create animation to look like the elf is placing the snowball at the top of the snowman body.

We advise that you cover the animation controller with a plastic bag and point the animation cords downward to reduce potential water damage. Leave one side of the bag open to reduce condensation. Please do not place the animation controller on the ground.