 


CONSOLE TABLE

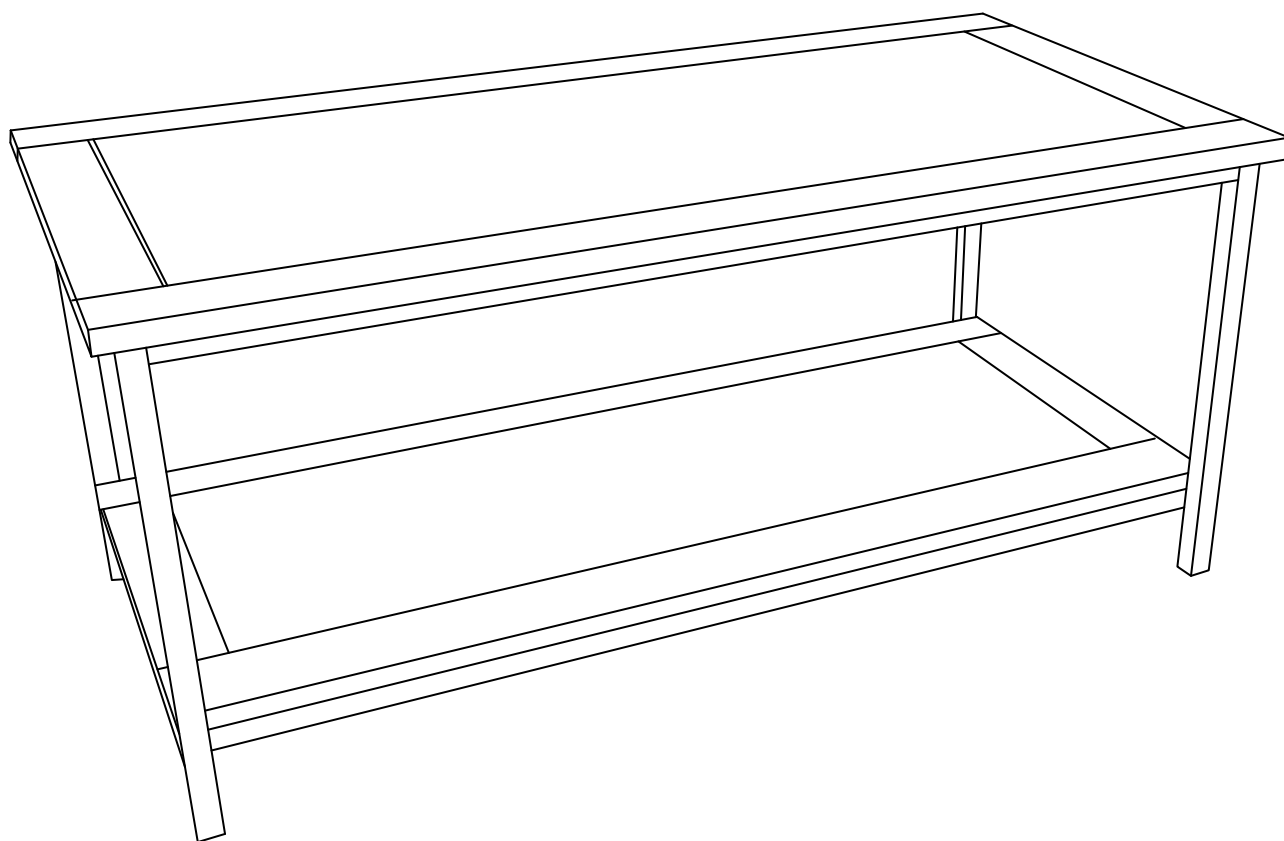



**FOR REPLACEMENT PARTS OR HELP WITH
ASSEMBLY PLEASE CONTACT US**

**PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR INSTRUCTION BOOKLET**

**TO RETURN THE PRODUCT:
PLEASE CONTACT THE RETAILER
WHERE THE ITEM WAS PURCHASED FROM**

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish.

Do not leave liquids or damp cloths on this furniture.

 
To avoid dulling of the finish, do not place furniture in direct sunlight.

Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

PRE-ASSEMBLY INFORMATION


PARTS DESCRIPTION

A

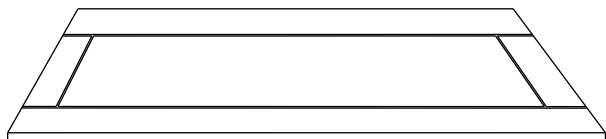


TOP
QTY 1

 B

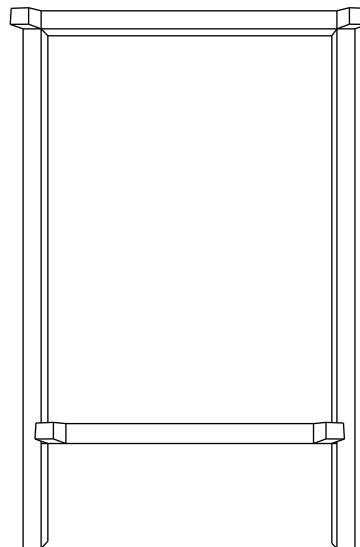

LEG
QTY 2

 C

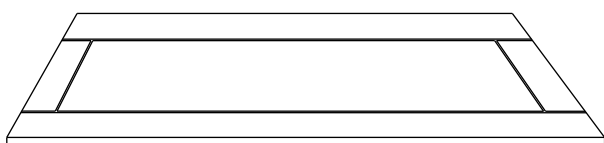


BOTTOM SHELF
QTY 1

PRE-ASSEMBLY INFORMATION


HARDWARE DESCRIPTION

 1

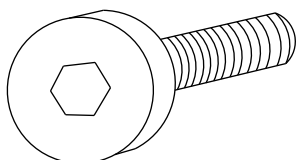


ALLEN KEY BOLT
M6 X 18 mm
QTY 24

 2

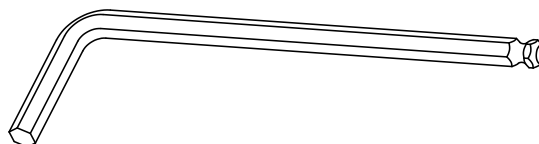


ALLEN KEY
QTY 1

 3

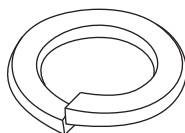

LOCK WASHER
QTY 16

 
4

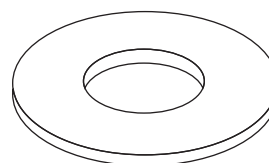

WASHER
Ø14 mm
QTY 8


NEED HELP? For help with assembly or if you are missing a part,
Please call customer service

 COMPONENTS – KEY DIAGRAM

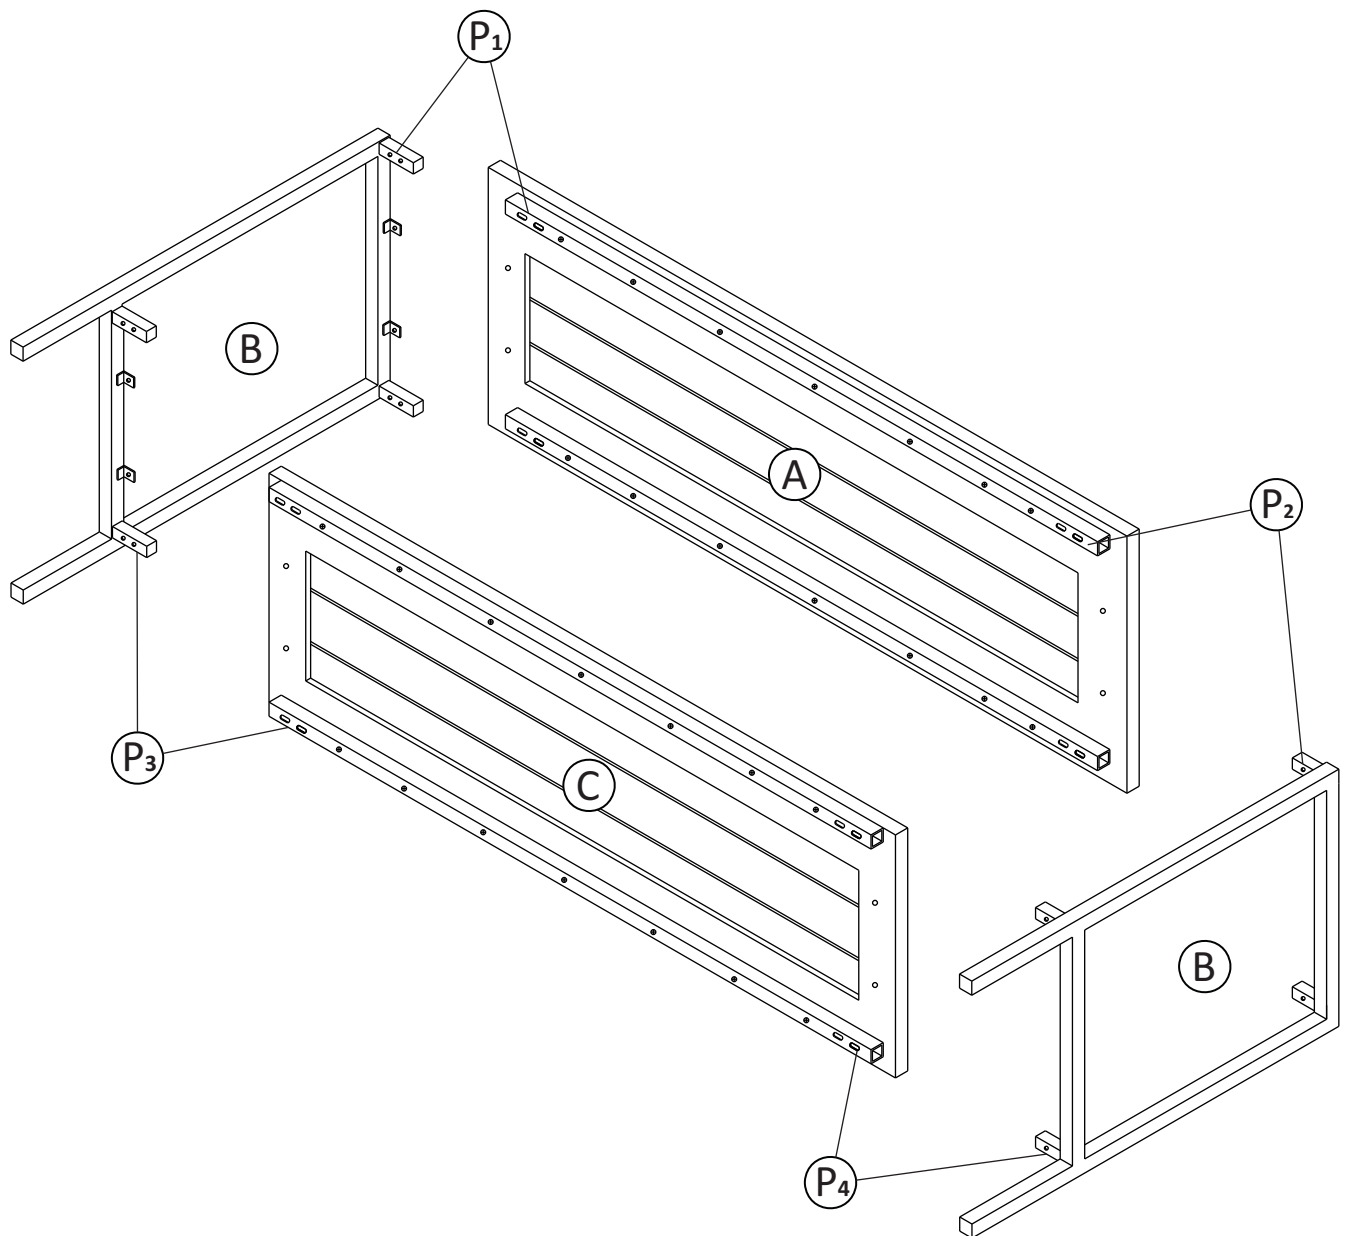

ASSEMBLY

 
STEP 1

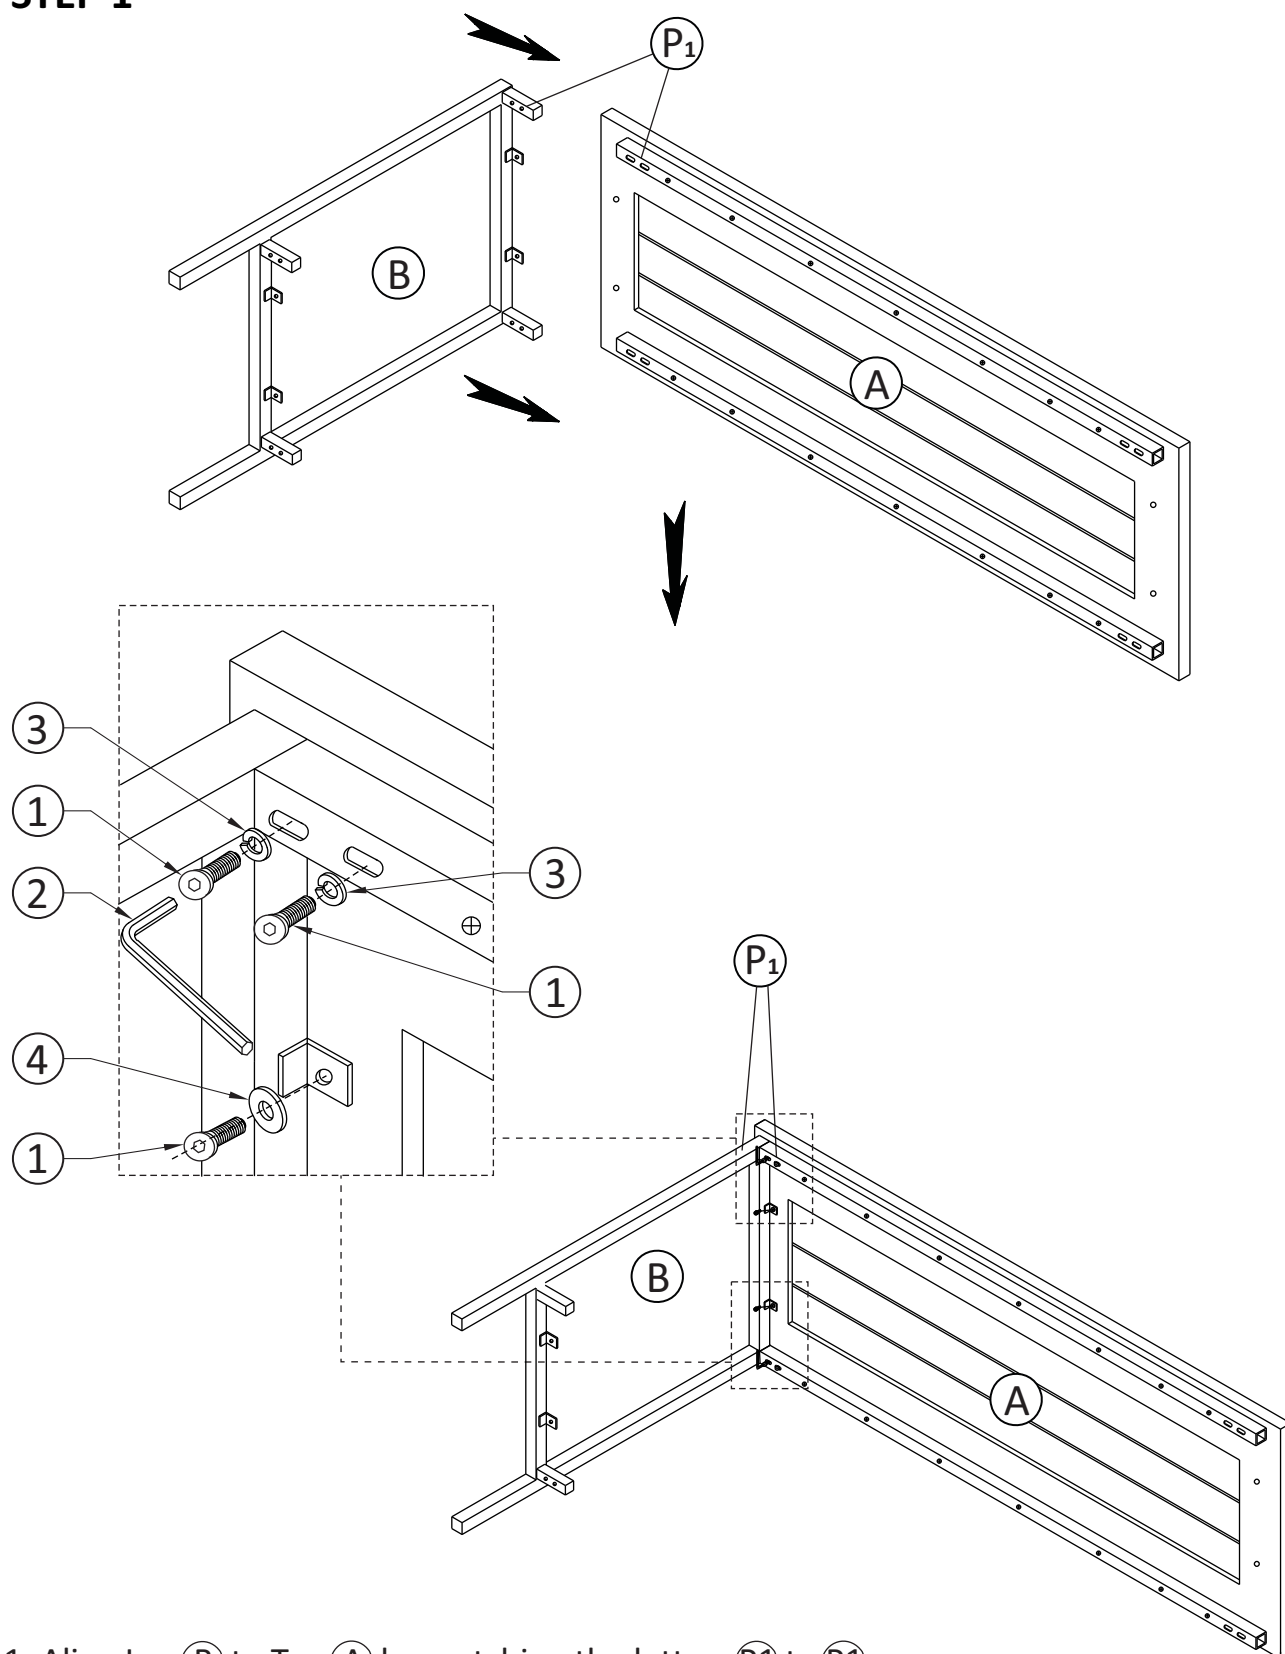

1. Align Leg (B) to Top (A) by matching the letters (P1) to (P1).
2. Use four Allen Key Bolts (1) and four Lock Washers (3) to attach Top (A) and Leg (B) (front and back of Leg).
3. Use two Allen Key Bolts (1) and two Washers (4) to secure Top (A) and Leg (B) (middle of Leg).
4. Use Allen Key (2) to tighten Bolts. Do not over-tighten.

ASSEMBLY

 
STEP 2

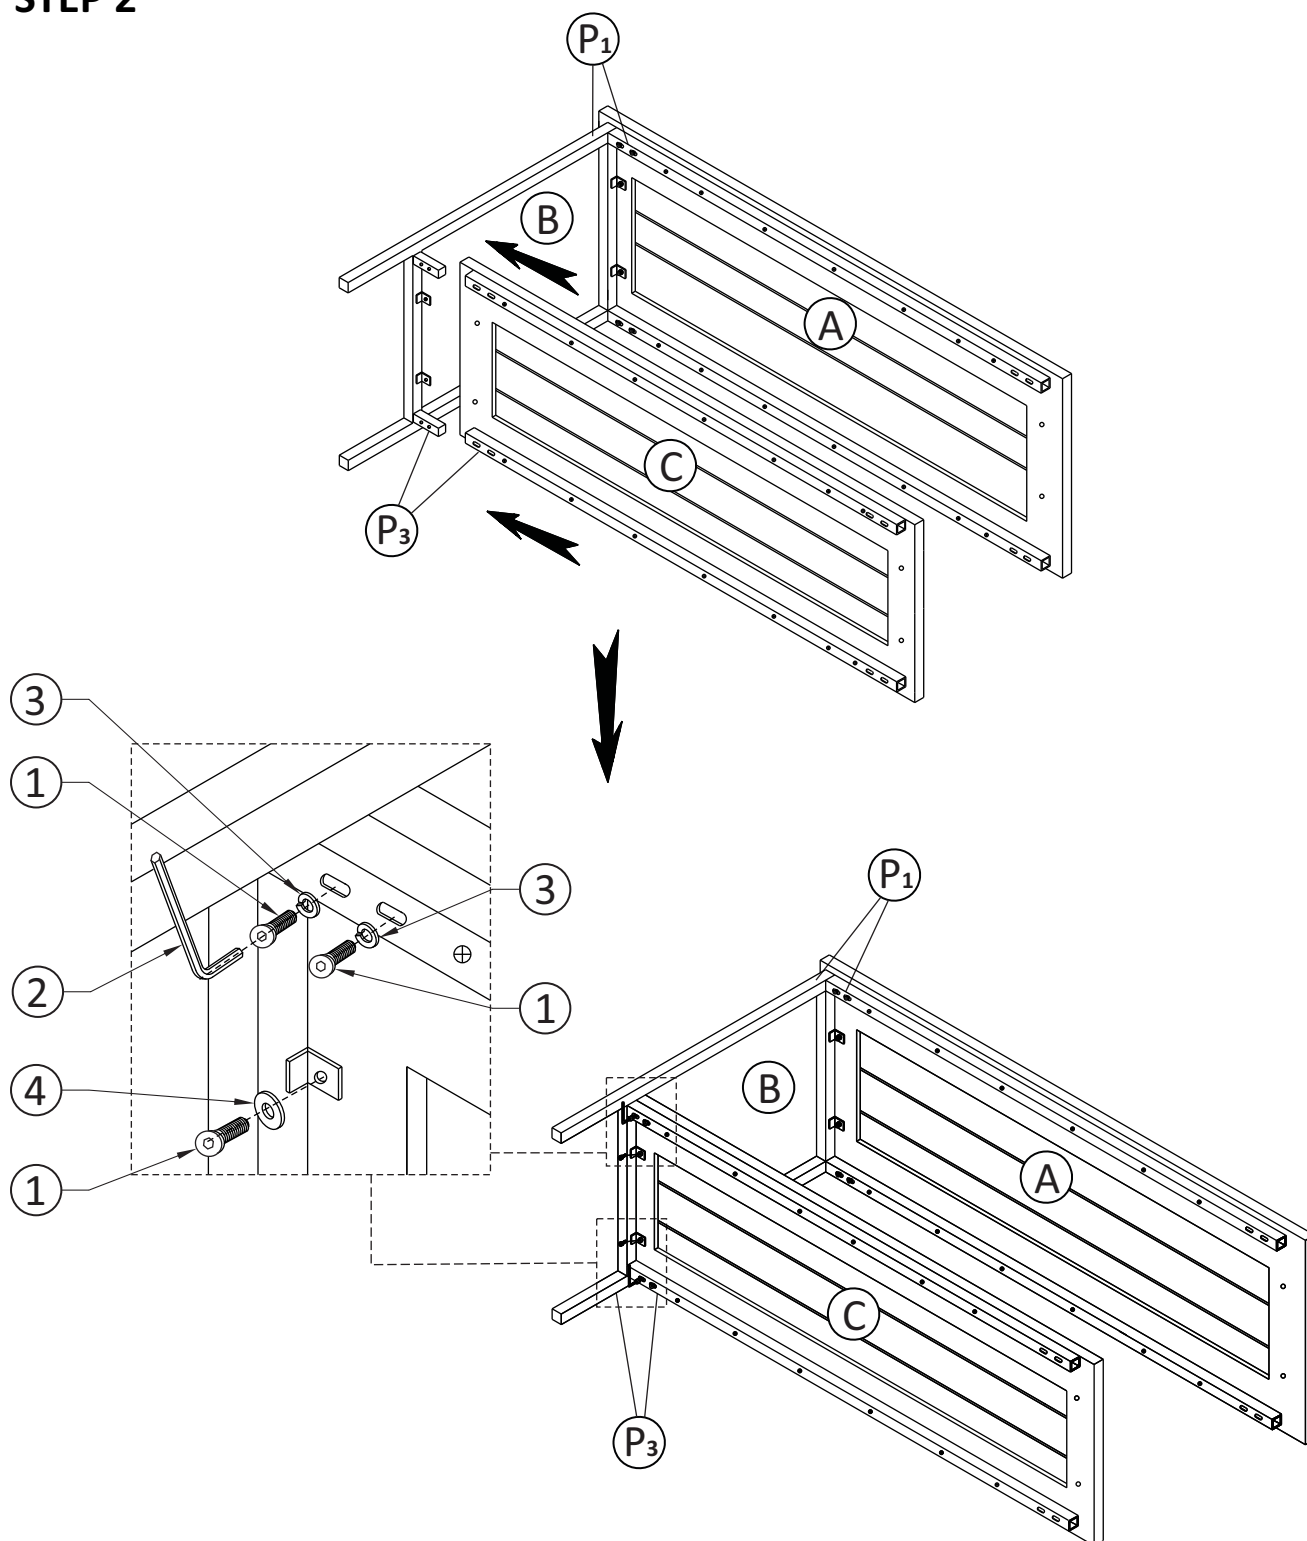

1. Align Leg (B) to Bottom Shelf (C) by matching the letters P₃ to P₃.
2. Use four Allen Key Bolts (1) and four Lock Washers (3) to attach Bottom Shelf (C) and Leg (B) (front and back of Leg).
3. Use two Allen Key Bolts (1) and two Washers (4) to secure Bottom Shelf (C) and Leg (B) (middle of Leg).
4. Use Allen Key (2) to tighten Bolts. Do not over-tighten.

ASSEMBLY

 
STEP 3

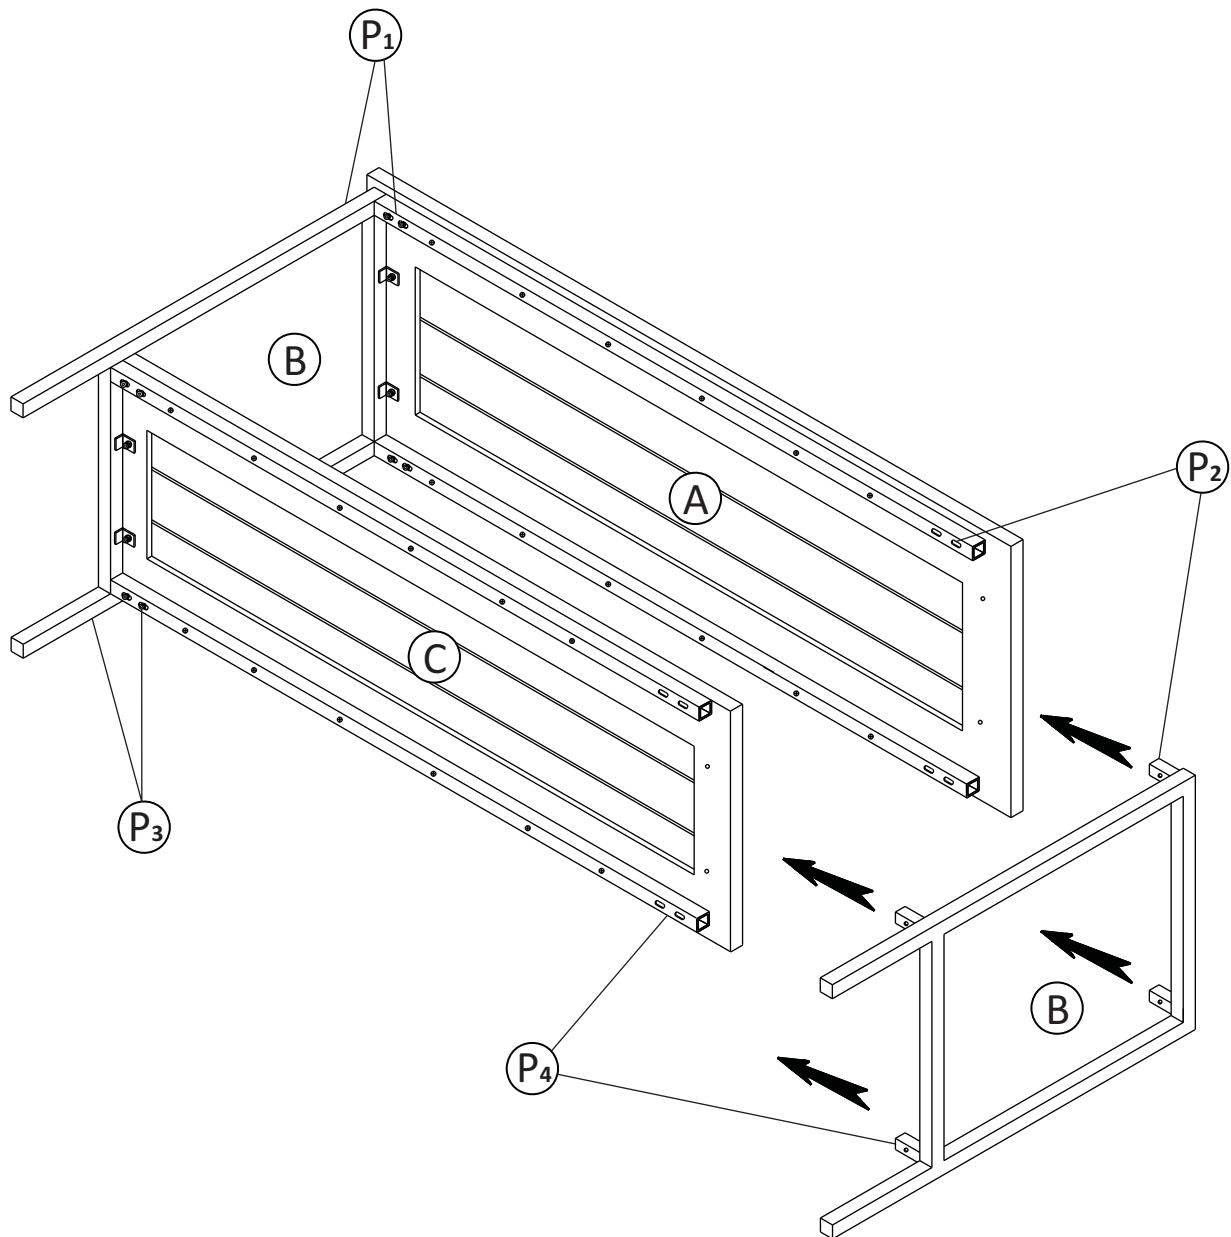

1. Align other Leg (B) to Top (A) and Bottom Shelf (C) by matching the letters (P2) to (P2) and (P4) to (P4).

ASSEMBLY

 
STEP 4

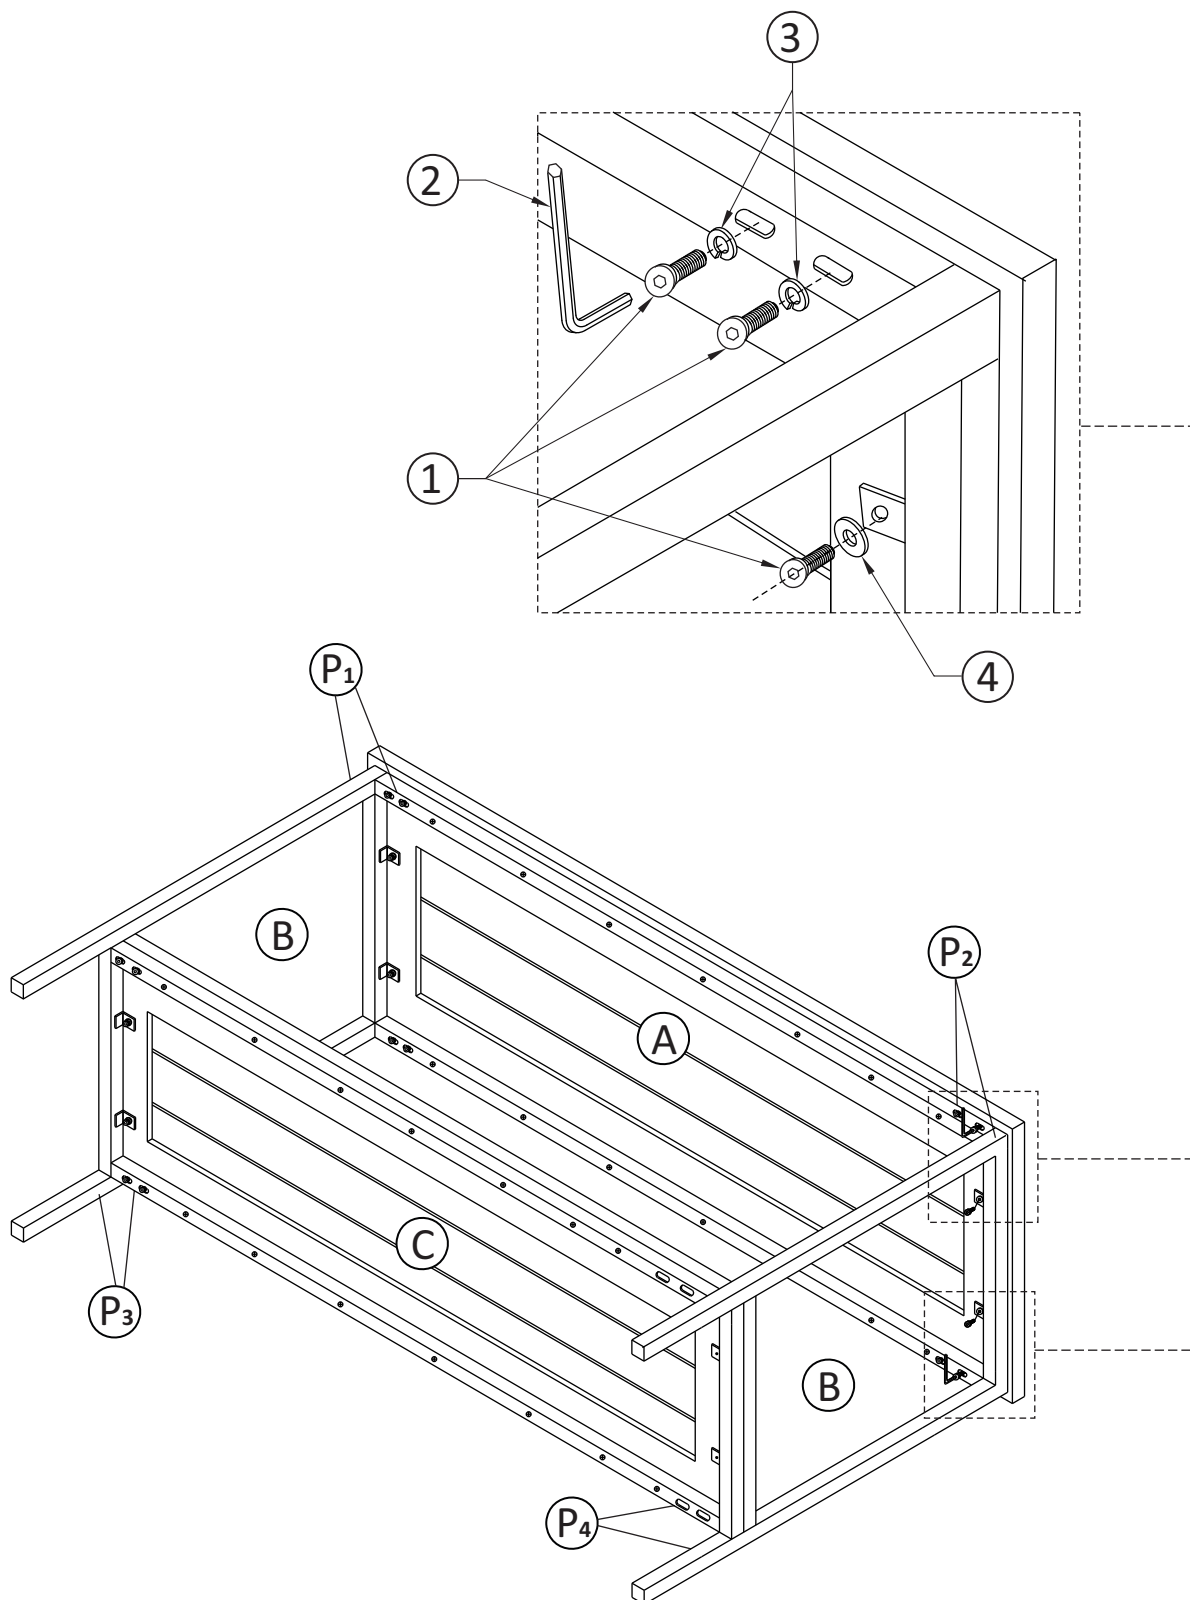

1. Align other Leg (B) to Top (A) by matching the letters P2 to P2.
2. Use four Allen Key Bolts (1) and four Lock Washers (3) to attach Top (A) and Leg (B) (front and back of Leg).
3. Use two Allen Key Bolts (1) and two Washers (4) to secure Top (A) and Leg (B) (middle of Leg).
4. Use Allen Key (2) to tighten Bolts. Do not over-tighten.

ASSEMBLY

 STEP 5

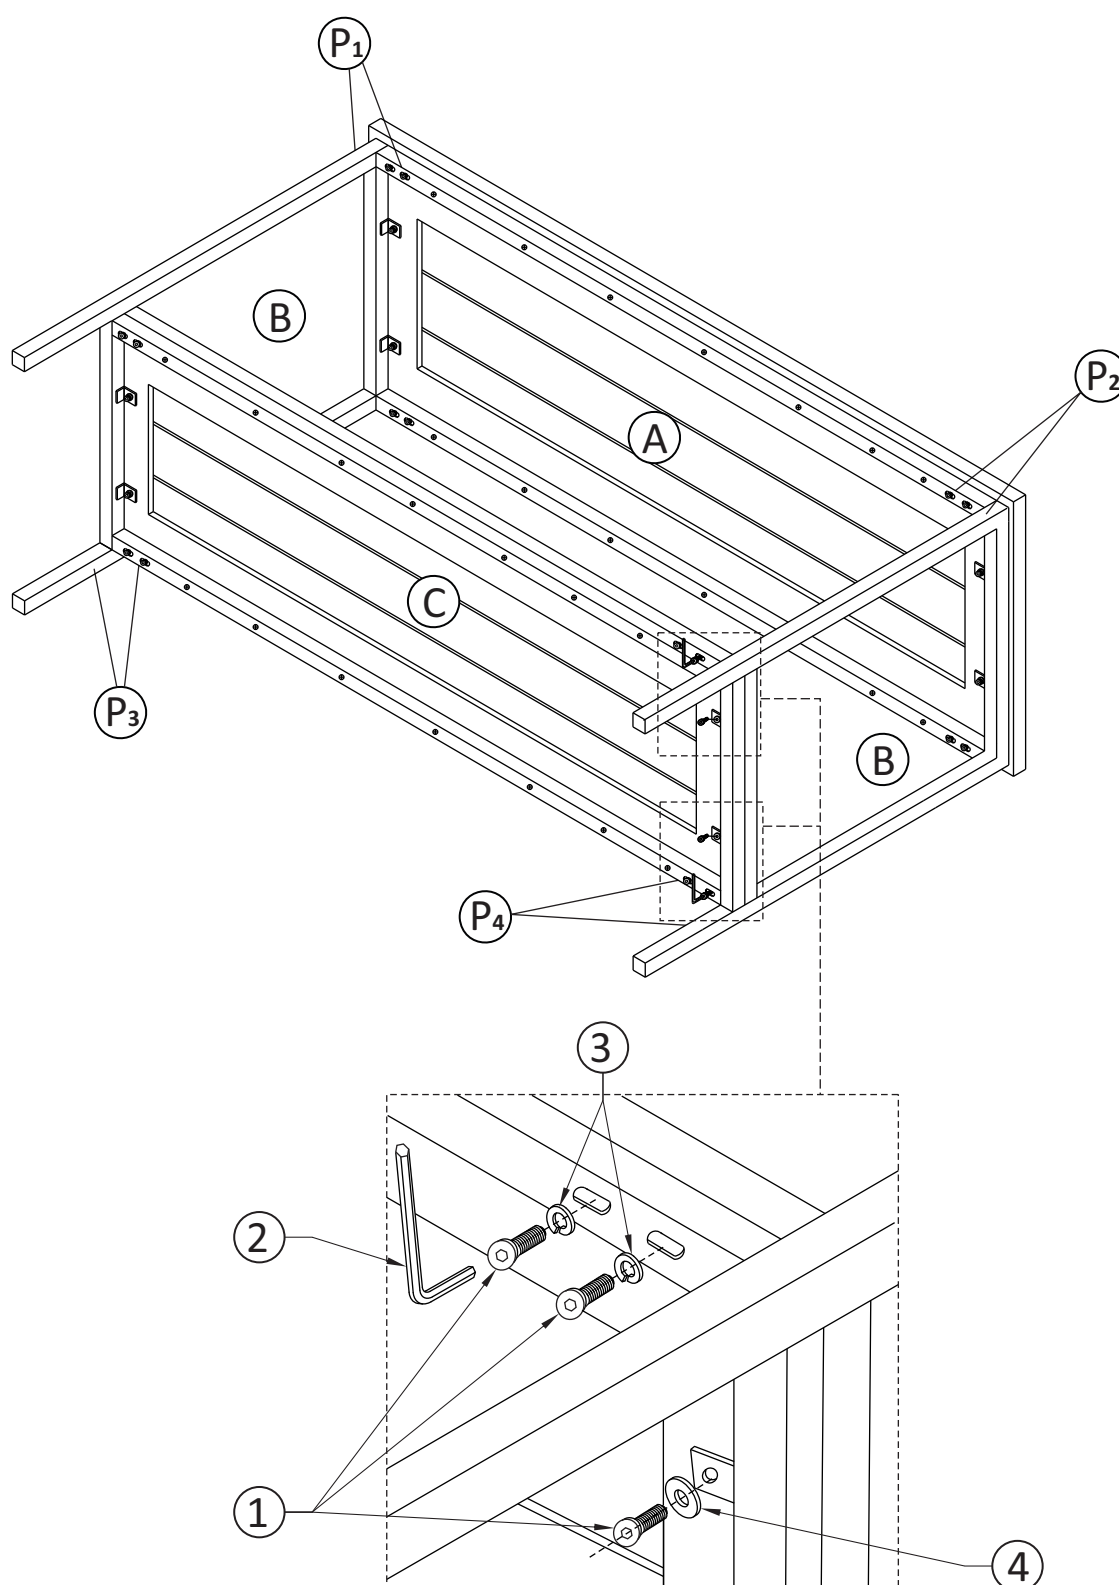

1. Align Leg **(B)** to Bottom Shelf **(C)** by matching the letters **(P₄)** to **(P₄)**.
2. Use four Allen Key Bolts **(1)** and four Lock Washers **(3)** to attach Bottom Shelf **(C)** and Leg **(B)** (front and back of Leg).
3. Use two Allen Key Bolts **(1)** and two Washers **(4)** to secure Bottom Shelf **(C)** and Leg **(B)** (middle of Leg).
4. Use Allen Key **(2)** to tighten Bolts. Do not over-tighten.

WARRANTY

Thank you for purchasing our product.

These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.