 


Vanity Light

[Instruction Manual]

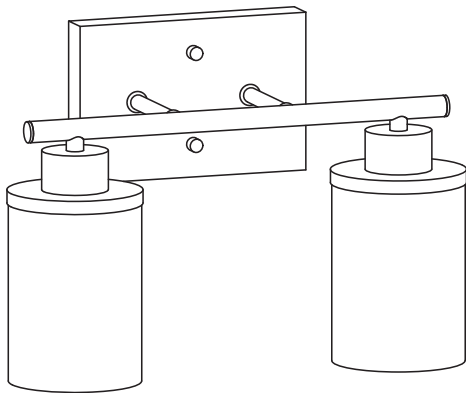

Warning:

Risk of fire. Min 75°C supply conductors. Consult a qualified electrician to ensure correct installation. Before installation, please turn off the main power of the circuit breaker to prevent possible electric shock.

Installation Instructions

FIG.1. Turn the wall switch to the "OFF" position.

Depending on which type of fuse box in your home:

FIG.2. Either turn the main (Master) switch to the "OFF" position to cut off the power supply of the entire home, or turn off the individual switch that supplies power to where the fixture will be installed.

OR

FIG.3. Either turn the main (Master) switch to the "OFF" position to cut off the power supply of the entire home, or unscrew the fuse that supplies power to where the fixture will be installed.

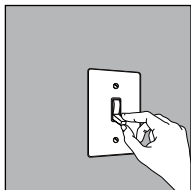 


FIG.1 WALL SWITCH

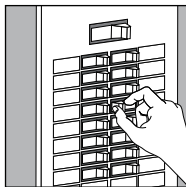 


FIG.2 BREAKER PANEL

 
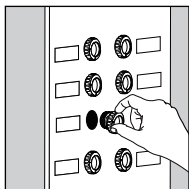 


FIG.3 FUSE BOX

Lighting Fixture Installation

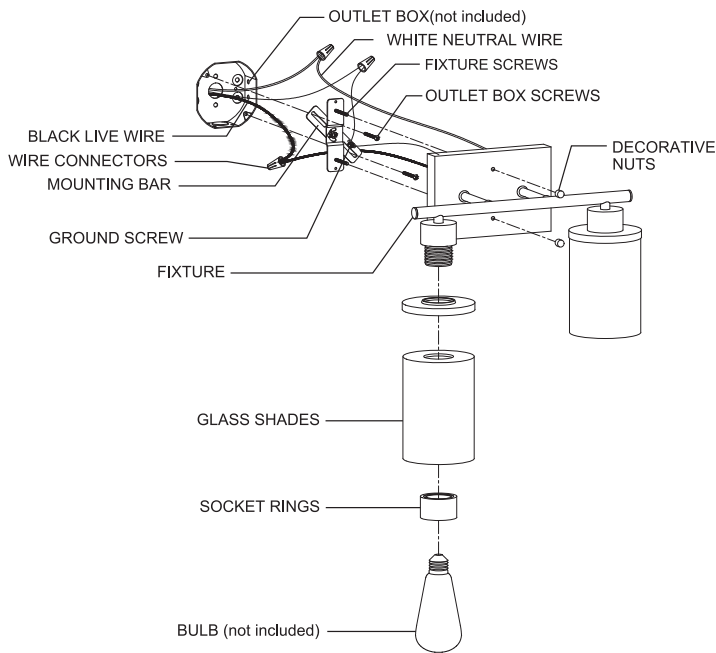

1. Take out all the parts in the package and place them on a clean surface.
2. Unscrew **DECORATIVE NUTS** and **FIXTURE SCREWS**, use **OUTLET BOX SCREWS** to connect **MOUNTING BAR** to **OUTLET BOX**.
3. Use **CONNECTORS** to connect the **BLACK WIRE** of the **FIXTURE** to the **BLACK WIRE** of the **OUTLET BOX**, connect **WHITE WIRE** of **FIXTURE** to **WHITE WIRE** of **OUTLET BOX** with **CONNECTORS**, use **CONNECTORS** to connect the **GROUND WIRE** of the **FIXTURE** to the **GROUND WIRE**

of the OUTLET BOX, use GREEN GROUND SCREW to connect GROUND WIRE of FIXTURE to MOUNTING BAR. Carefully put the wire back into the OUTLET BOX.

4. Use FIXTURE SCREWS to install FIXTURE on MOUNTING BAR and fix it with DECORATIVE NUTS.
5. Use SOCKET RING to fix GLASS SHADE to FIXTURE.
6. Install the bulbs.

Specifications

- Input Voltage: 120VAC 60Hz
- Max.load Power: Incandescent Bulb 60W x 2
- Socket Type: Standard Medium E26

One Year Limited Warranty

We warrant this product to be free from defects in material and workmanship for a period of one year from the date of purchase. Warranty is void if damage is caused by misuse or improper installation. Our dedicated customer service team will get back to you within 24 hours.