 
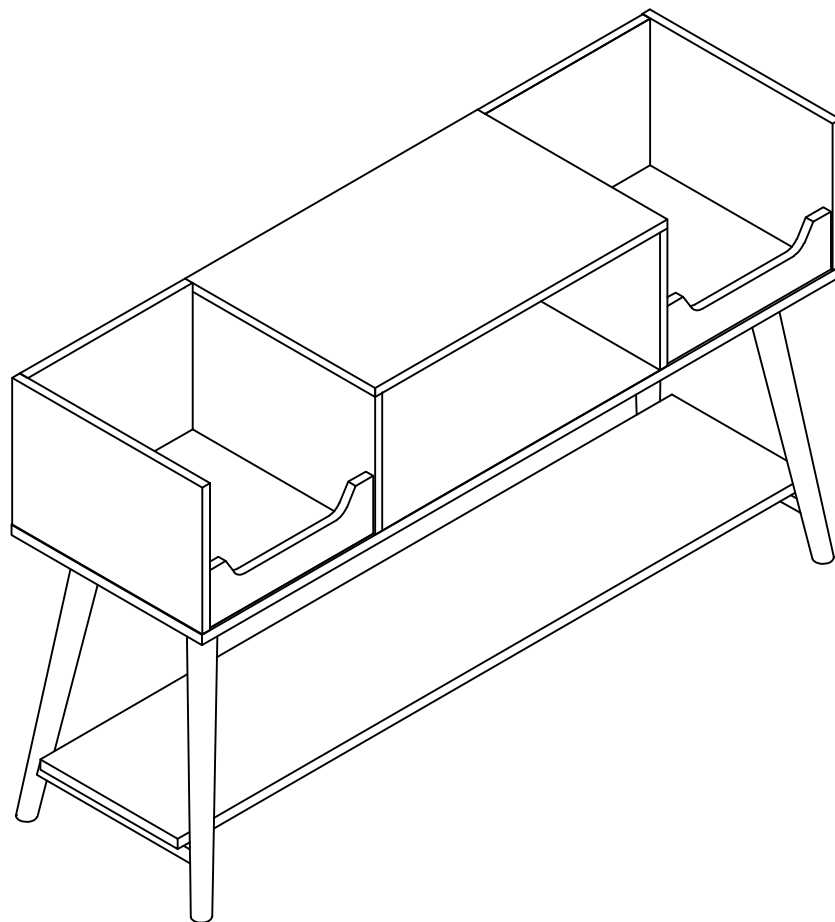 
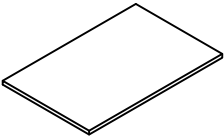 
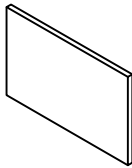 
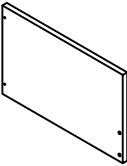 
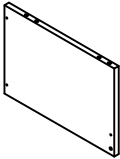 
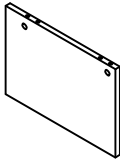 
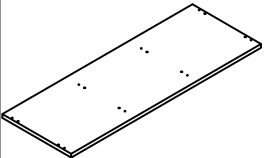 
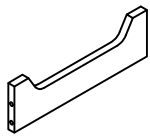 
 
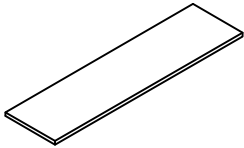 
 
 


CROSLEY
FURNITURE





Medium Record Player Stand
with Vinyl Storage
CF1227

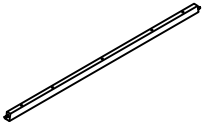

PARTS LIST


<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 	<div>E</div> 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Left Partition Panel 1 PC	Right Partition Panel 1 PC
<div>F</div> 	<div>G</div> 	<div>H</div> 	<div>I</div> 	<div>J</div> 
Bottom Panel 1 PC	Front Panel 2 PCS	Back Panel 2 PCS	Shelf Panel 1 PC	Leg 2 PCS
<div>K</div> 	<div>L</div> 			
Bottom Rail 1 PC	Shelf Rail 1 PC			

    HARDWARE LIST

<div>#1</div>  <div>1/4"*38mm</div>	<div>#2</div>  <div>1/4"*10mm</div>	<div>#3</div>  <div>1/4"*13mm</div>	<div>#4</div>  <div>7*38mm</div>	<div>#5</div>  <div>Cam Bolt 16 PCS (Extra 1)</div>
<div>Bolt 13 PCS (Extra 1)</div>	<div>Spring Washer 13 PCS (Extra 1)</div>	<div>Flat Washer 13 PCS (Extra 1)</div>	<div>Tapping Bolt 8 PCS (Extra 1)</div>	
<div>#6</div>  <div>8*30mm</div>	<div>#7</div>  <div>Cam Lock 16 PCS (Extra 1)</div>	<div>#8</div>  <div>8*4*31mm</div>	<div>#9</div>  <div>M4</div>	<div>#10</div>  <div>Cam Sticker 16 PCS (Extra 1)</div>
<div>Wood Dowel 18 PCS (Extra 1)</div>	<div>Cam Lock 16 PCS (Extra 1)</div>	<div>Screw 4 PCS (Extra 1)</div>	<div>Allen Wrench 1 PC</div>	
<div>#11</div> 				
<div>Safety Strap Kit 1 SET</div>				

ADDITIONAL TOOLS (Not Provided)

 Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Insert cam bolts (part #5) into panels (parts A, B, C, D & E) using phillips head screwdriver.

 Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.


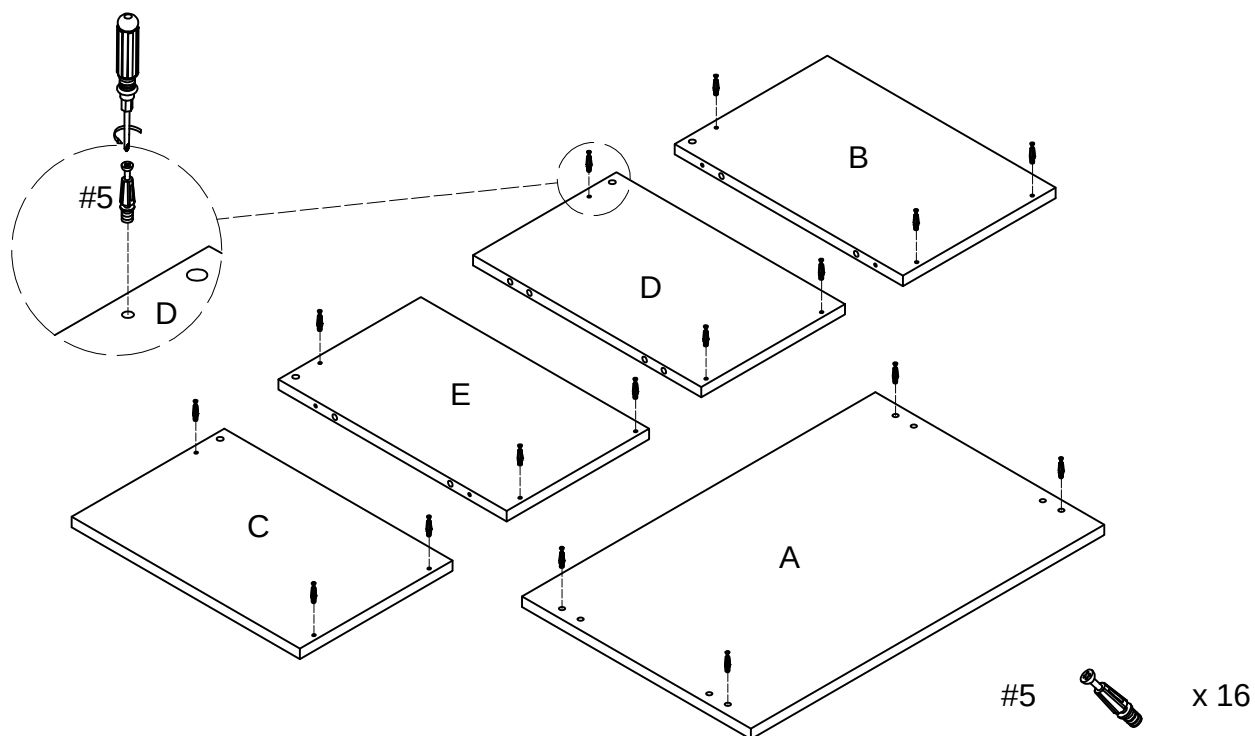


 Step 2. Attach shelf rail (part L) to shelf panel (part I) using bolts (part #1), spring washers (part #2), flat washers (part #3), wood dowels (part #6) and allen wrench (part #9).

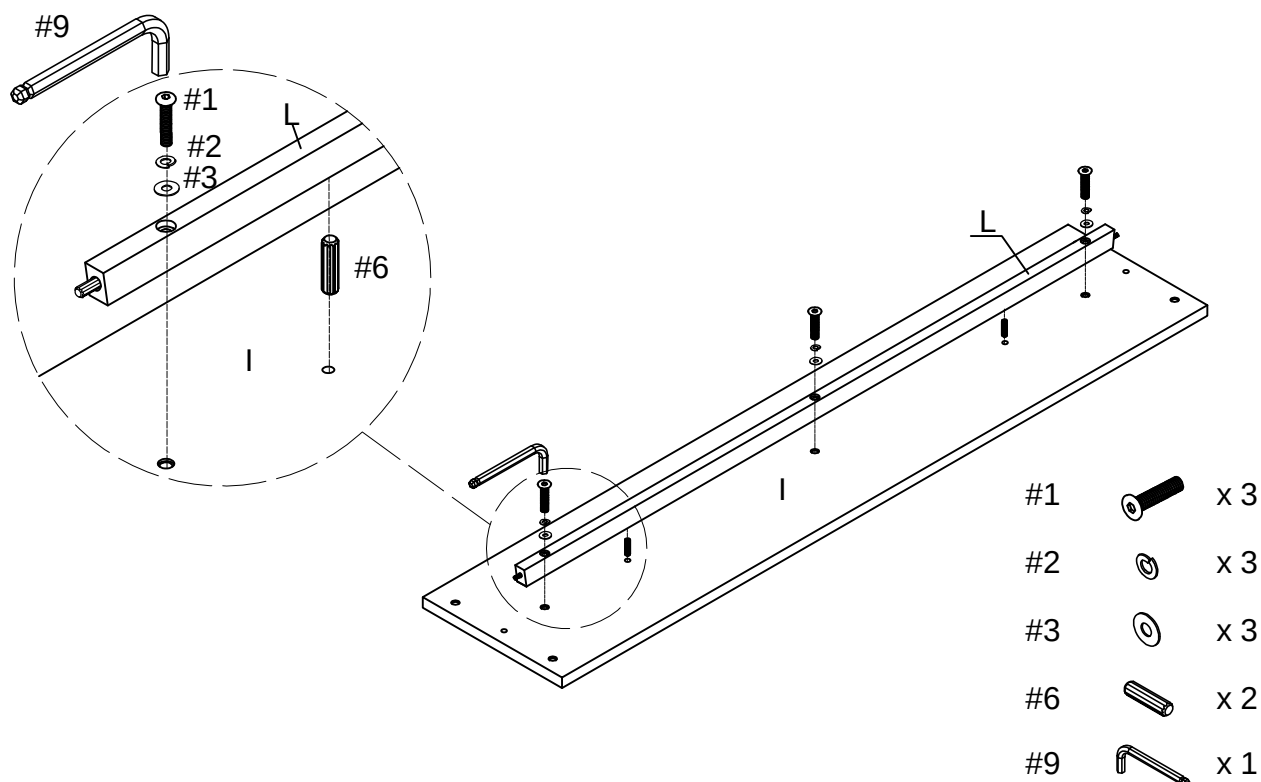

Step 3. Attach legs (part J) to assembled unit (parts I & L) using pre-assembled wood dowels, bolts (part #1), spring washers (part #2), flat washers (part #3), and allen wrench (part #9).

  
Note: Please do not fully tighten bolts until unit is fully assembled.

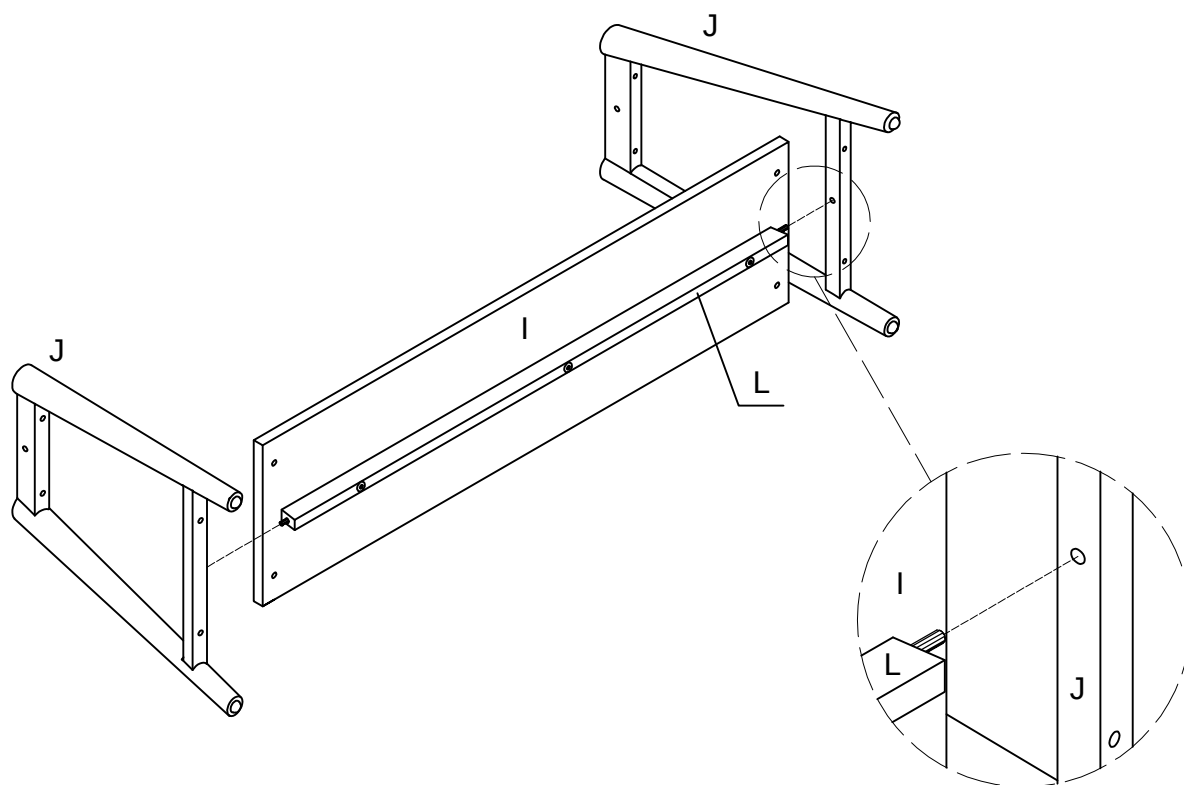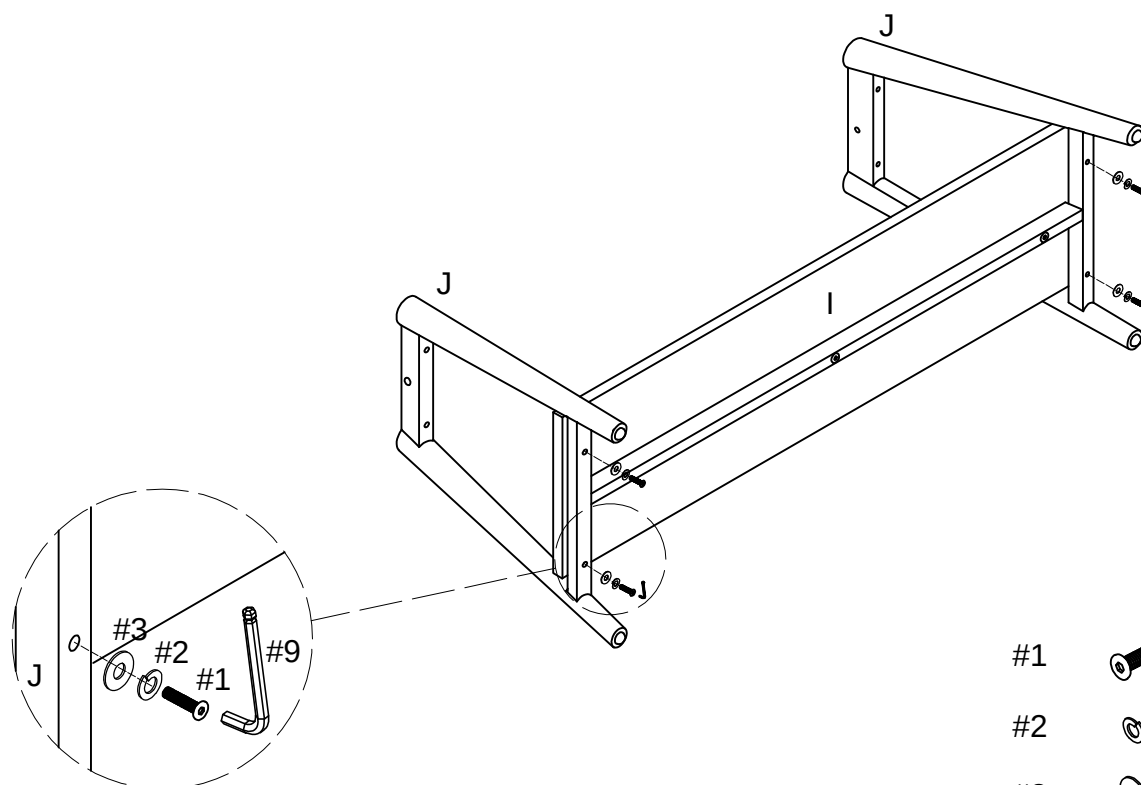

- | | | |
|----|--|-----|
| #1 | | x 4 |
| #2 | | x 4 |
| #3 | | x 4 |
| #9 | | x 1 |


Step 4. Attach bottom rail (part K) to legs (part J) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #9).

 Note: Please do not fully tighten bolts until unit is fully assembled.

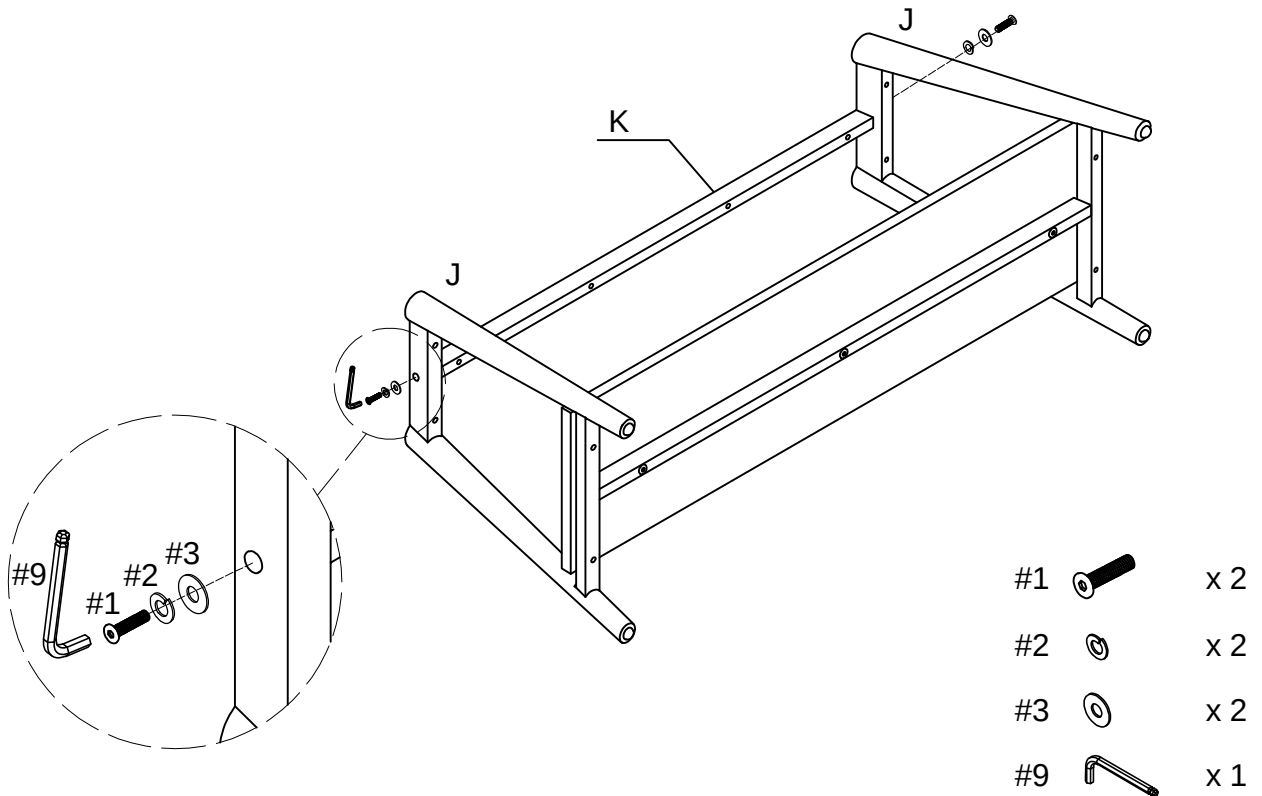


Step 5. Attach partition panels (parts D & E) to top panel (part A) using wood dowels (part #6), cam locks (part #7) and phillips head screwdriver.

 
Note: Cam locks must rotate a full 180°. See pictured insert.

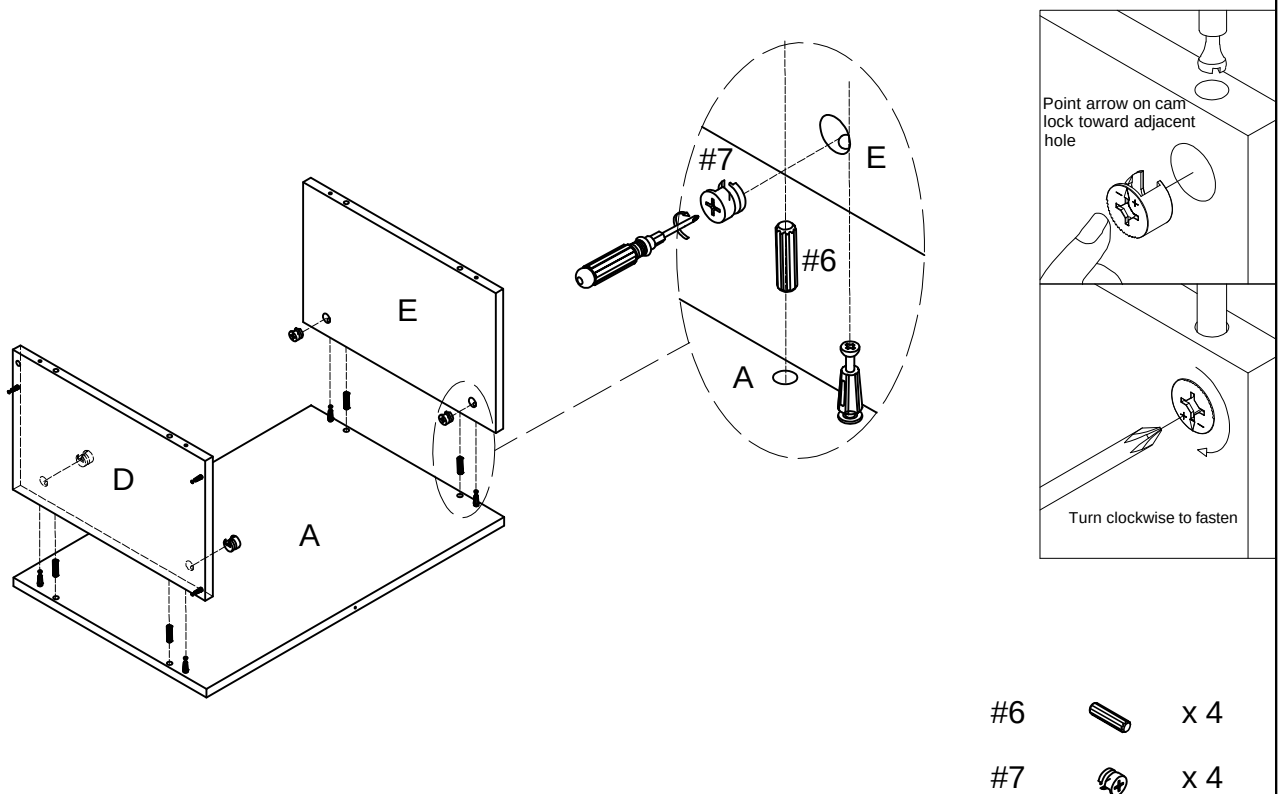

 
Step 6. Attach panels (parts G & H) to partition panels (parts D & E) using wood dowels (part #6), cam locks (part #7) and phillips head screwdriver.
 Note: Cam locks must rotate a full 180°. See pictured insert.

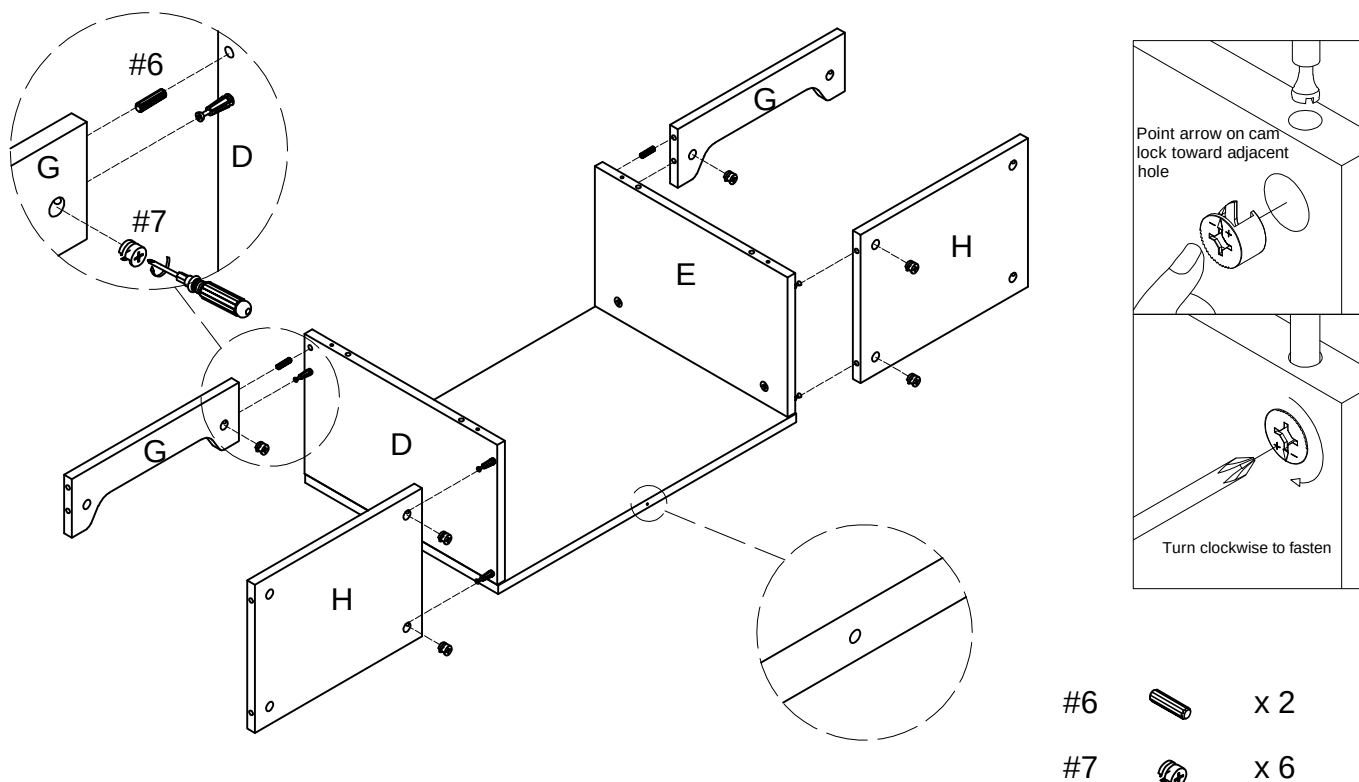

 Step 7. Attach panels (parts B & C) to assembled unit (parts G & H) using wood dowels (part #6), cam locks (part #7) and phillips head screwdriver.
 Note: Cam locks must rotate a full 180°. See pictured insert.

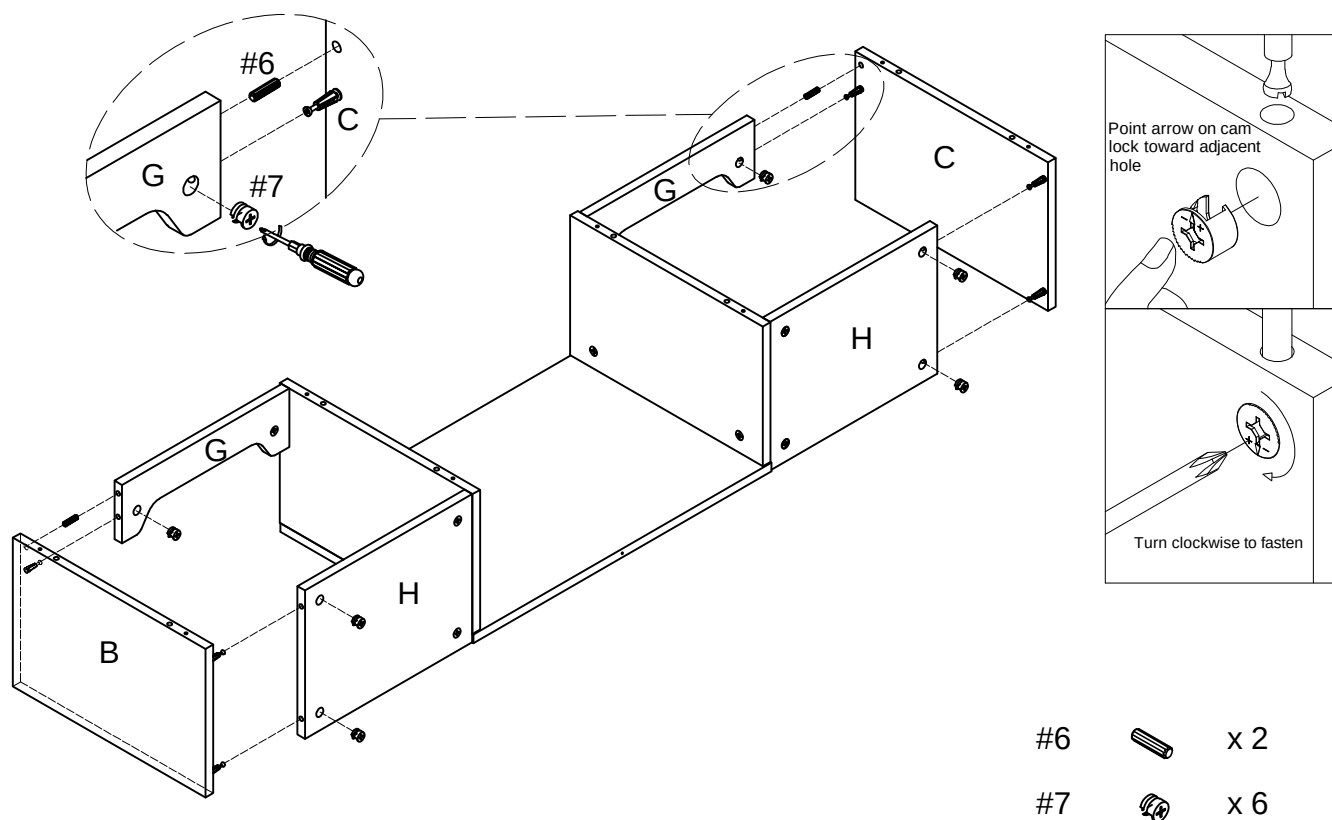

 
Step 8. Attach bottom panel (part F) to assembled unit (parts B, C, D & E) using tapping bolt (part #4), wood dowels (part #6) and allen wrench (part #9).

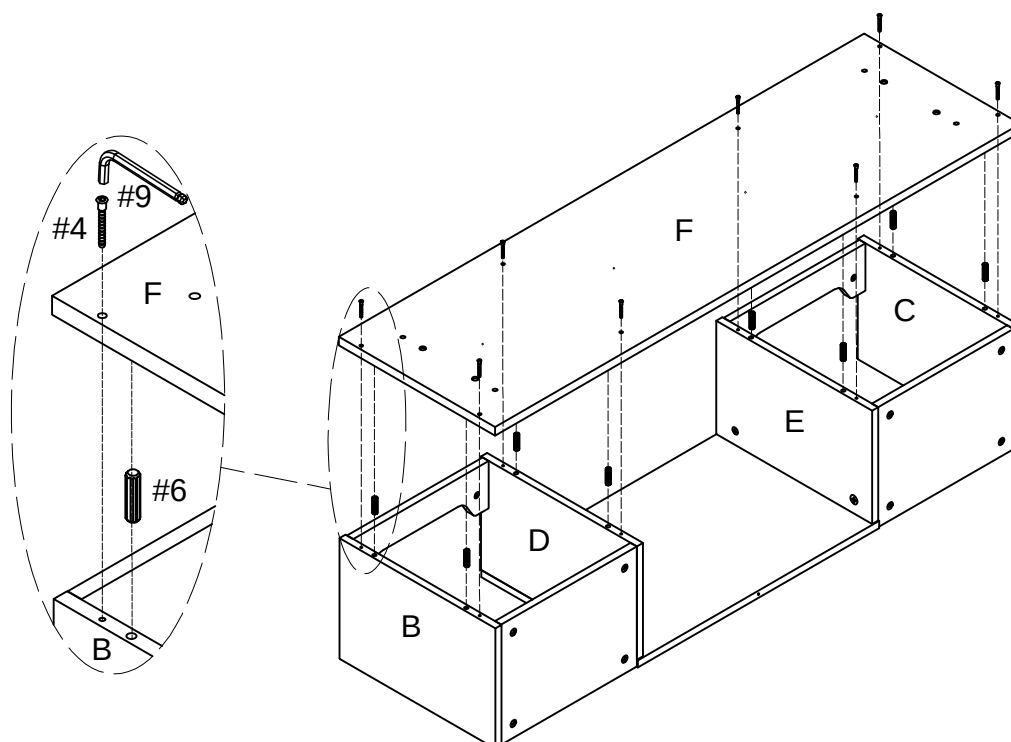

#4		x 8
#6		x 8
#9		x 1

Step 9. Attach assembled unit (parts J & K) to bottom panel (part F) using pre-assembled wood dowels, bolts (part #1), spring washers (part #2), flat washers (part #3), screws (part #8), allen wrench (part #9) and phillips head screwdriver.

 Note: Please fully tighten all bolts at this time.


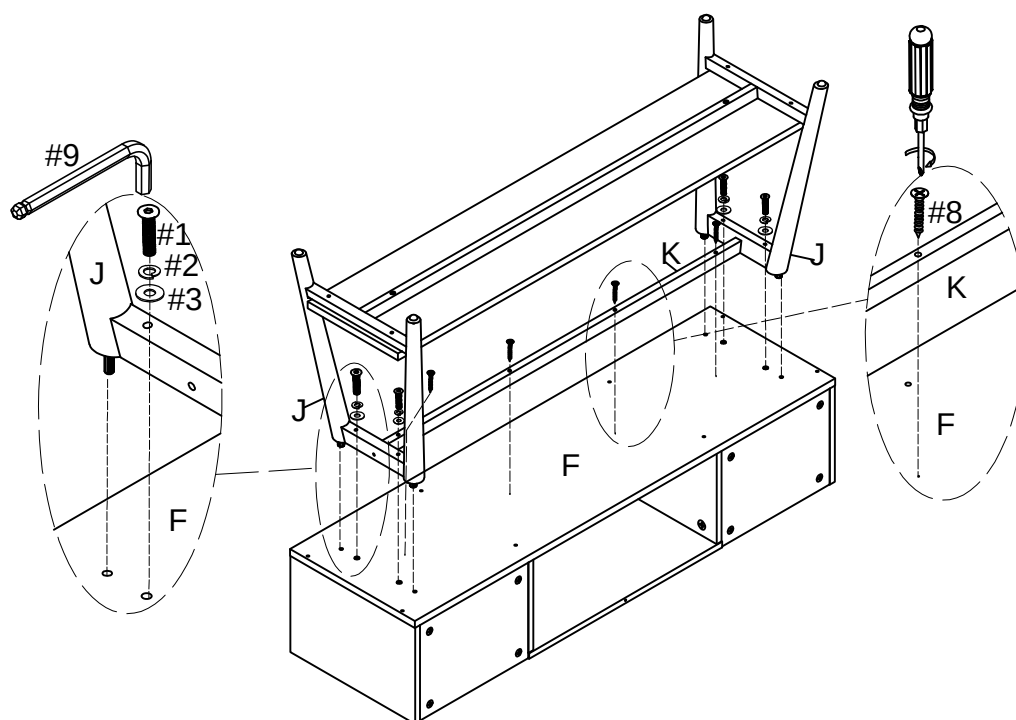


#1		x 4
#2		x 4
#3		x 4
#8		x 4
#9		x 1


Step 10. Carefully turn unit upright. Using cam stickers (part #10) cover all cam locks (part #7).



NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

  Important: Safety strap kit (part #11) must be installed to prevent tipping damage and/or injury.

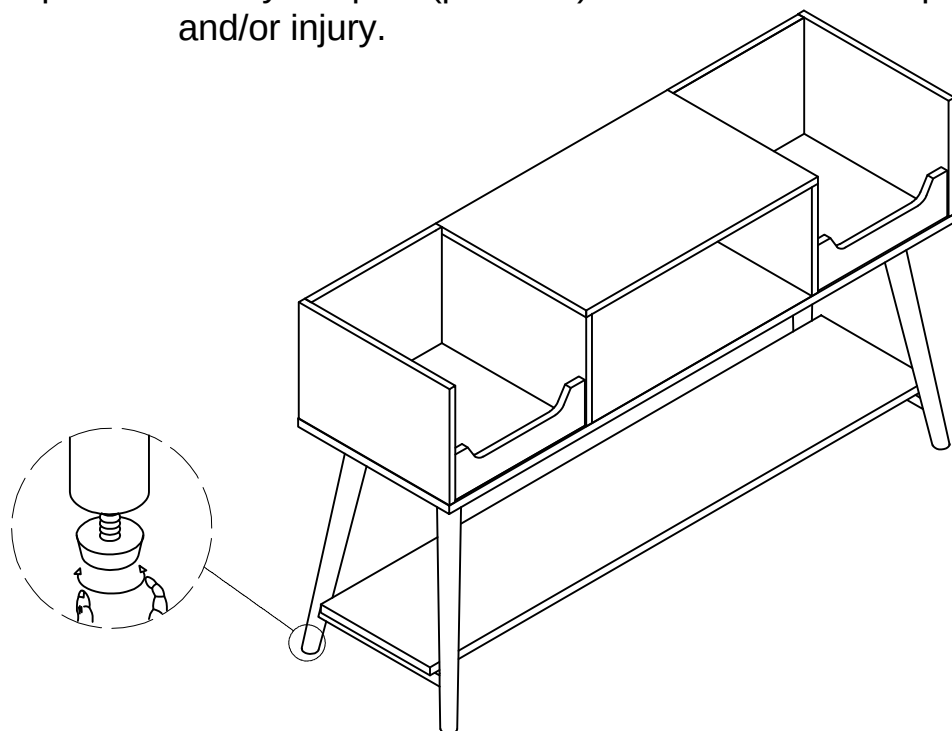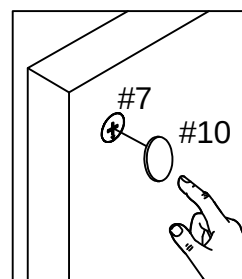

#10  x 16

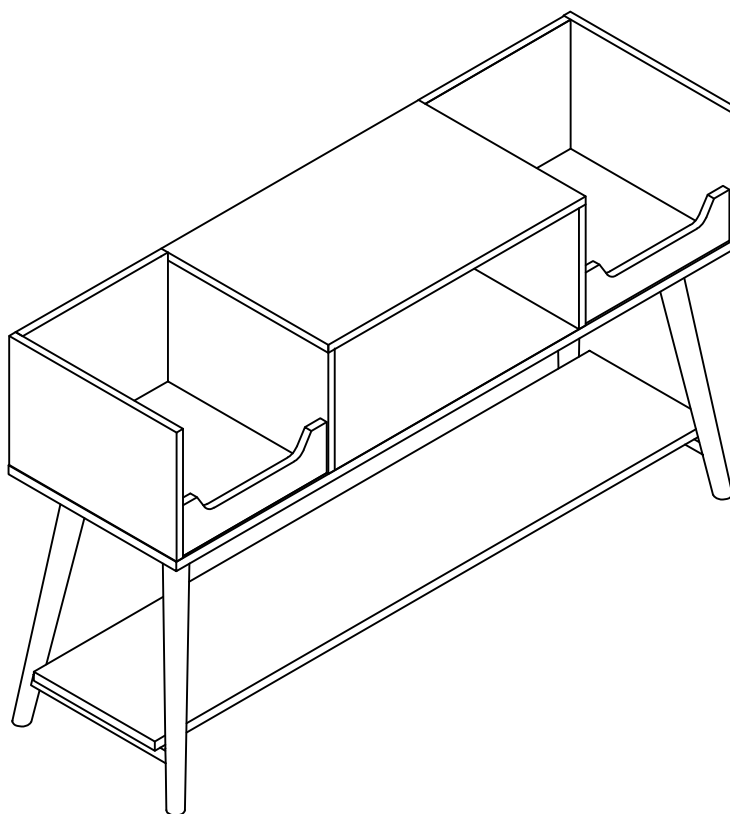 

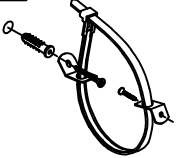  
#11	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

 Note: This item is not intended for clothing storage use.

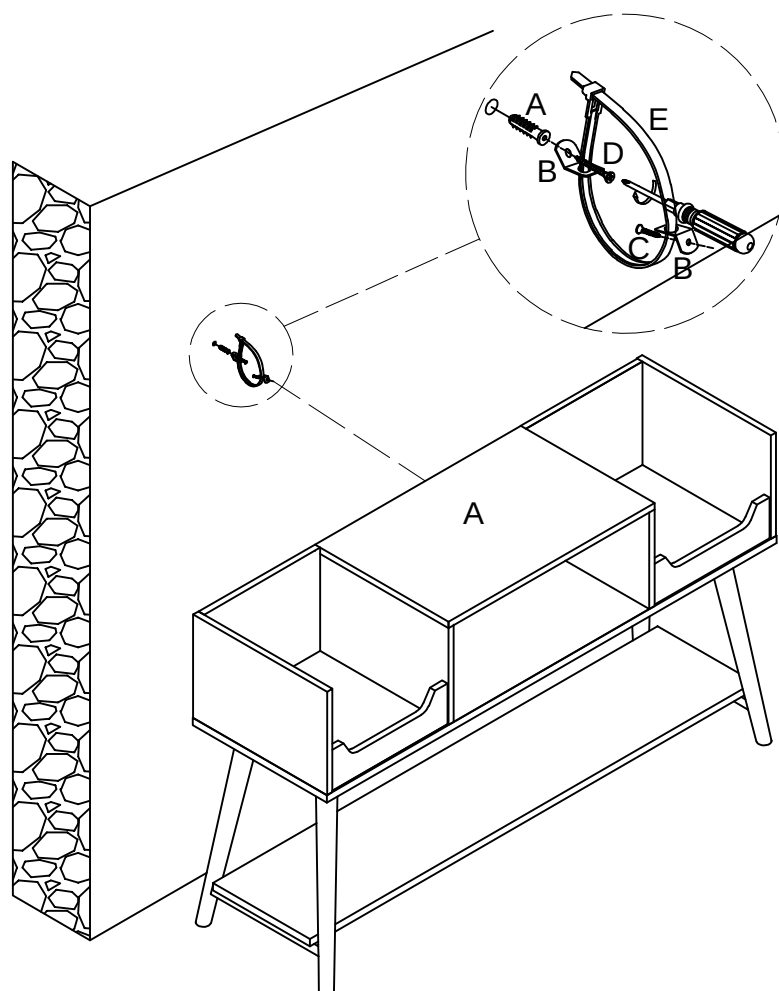

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



This is a permanent label.
Do not remove!