

1 - Unpack the metal base from the packaging of your Family Dress Form and install the 4 wheels provided in the carton to the base.
It should look like this:



2 - Insert the main pole into the metal base and securely fasten it with the provided Allen style bolt.
Please make sure the bottom part of the pole is inserted to the metal base.



TOP



BOTTOM

The pole after inserted should look like this. Pole should rest on the metal base form pedal.



3 - Now, take the body of the Family Dress Form out of the box.

4 – The top side of the main pole should look like this:



5- While stepping on the pedal on the metal base, hold the 2 triangle like metal pieces on the top of the pole together and fit the pole and pieces into the dress form body. You have to hold the 2 pieces together and stepping on the pedal at the same time to allow the pieces to fit together into the pole.



6 - Insert the dress form all the way in to the pole. You can now adjust the height of the dress form by holding the pedal down and moving the dress form to the desired height.

7 - Release the pedal to allow the dress form to stay in place. The Dress Form should look like this:
You are now ready to use your Family Dress Form.

