 




OFFICE DESK WITH 10 DRAWERS

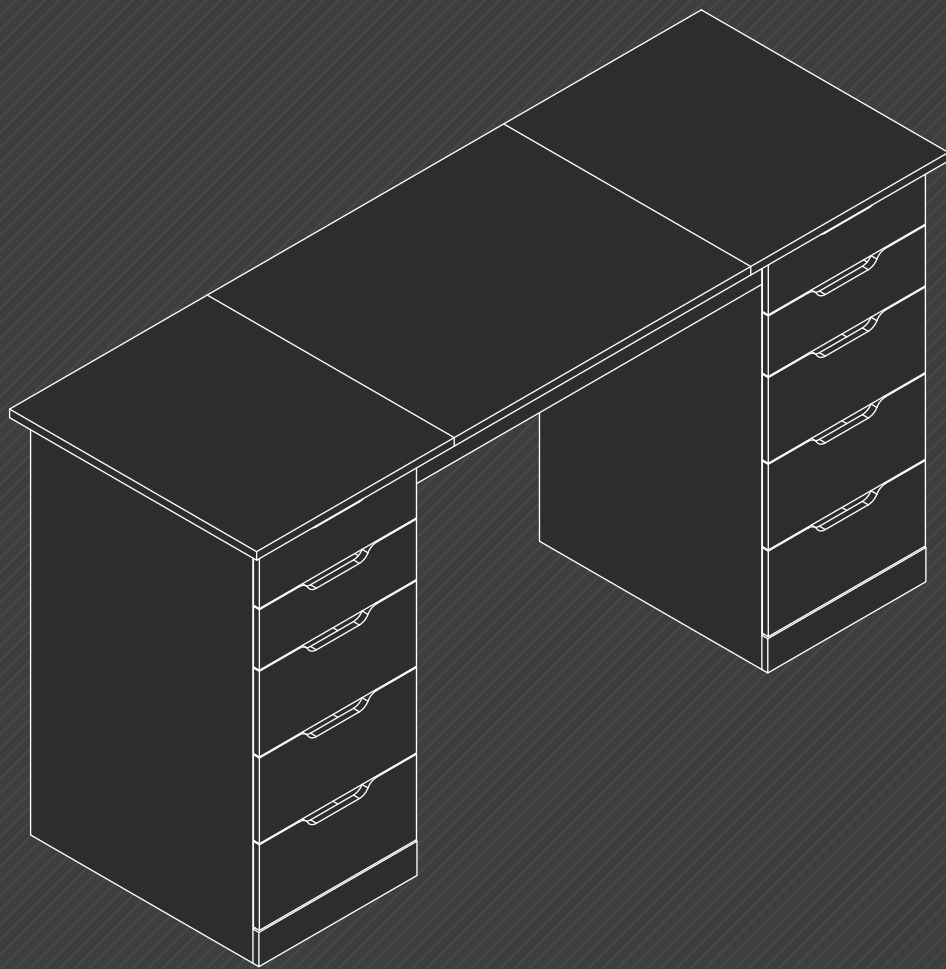

USER MANUAL



Contents


TOPIC	PAGE
01	
SAFETY INSTRUCTIONS	01-01
1-1	Thank You For Choosing Our Product 01
1-2	Precautions 01
02	
INSTALLING MODULES	02-30
2-1	Disassembly Diagram 02
2-2	Parts List 03-04
2-3	Assembly Instructions 05-30
03	
CUSTOMER SERVICE	31
3-1	30-Day Return Policy 31
3-2	1-Year Warranty 31
3-3	Quick Response Within 24 Hours 31
04	
PROBLEMS YOU MAY ENCOUNTER	32
4-1	Problems You May Encounter 32

Safety Instructions

Thank You For Choosing Our Product

Before assembly, please read this USER MANUAL first, and check according to Parts List to make sure all parts are included. Feel free to contact us if you have any concerns or questions about your product, we are always ready to help. Your satisfaction is our first priority!

 
Precautions

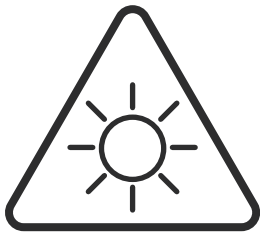


- Avoid long-term direct sunlight exposure.



 - Keep away from sharp objects.

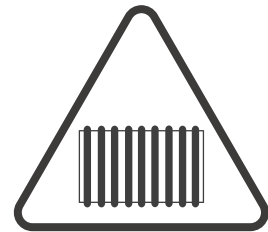


- Keep away from heat.

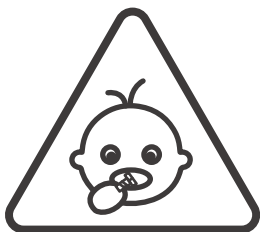 

- Keep infants/children away from assembly parts to avoid choking and suffocation.




 - Keep away from corrosive substances.

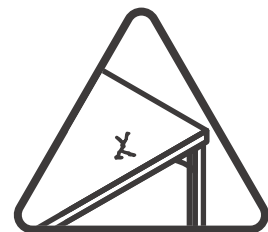

- Pay attention to avoid over-tightening fasteners, or they may induce cracking within the board.

 Helpful Tips

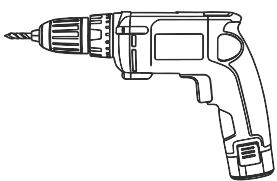

Drill Setting Guide

For easier installation, we recommend using a power drill; please set it to low speed gear 1 and adjust the torque to 4–10 to avoid excessive torque that may cause screw stripping and panel cracking.





Speed 1
(low speed)




Set Torque to 4–10

  
Disassembly Diagram

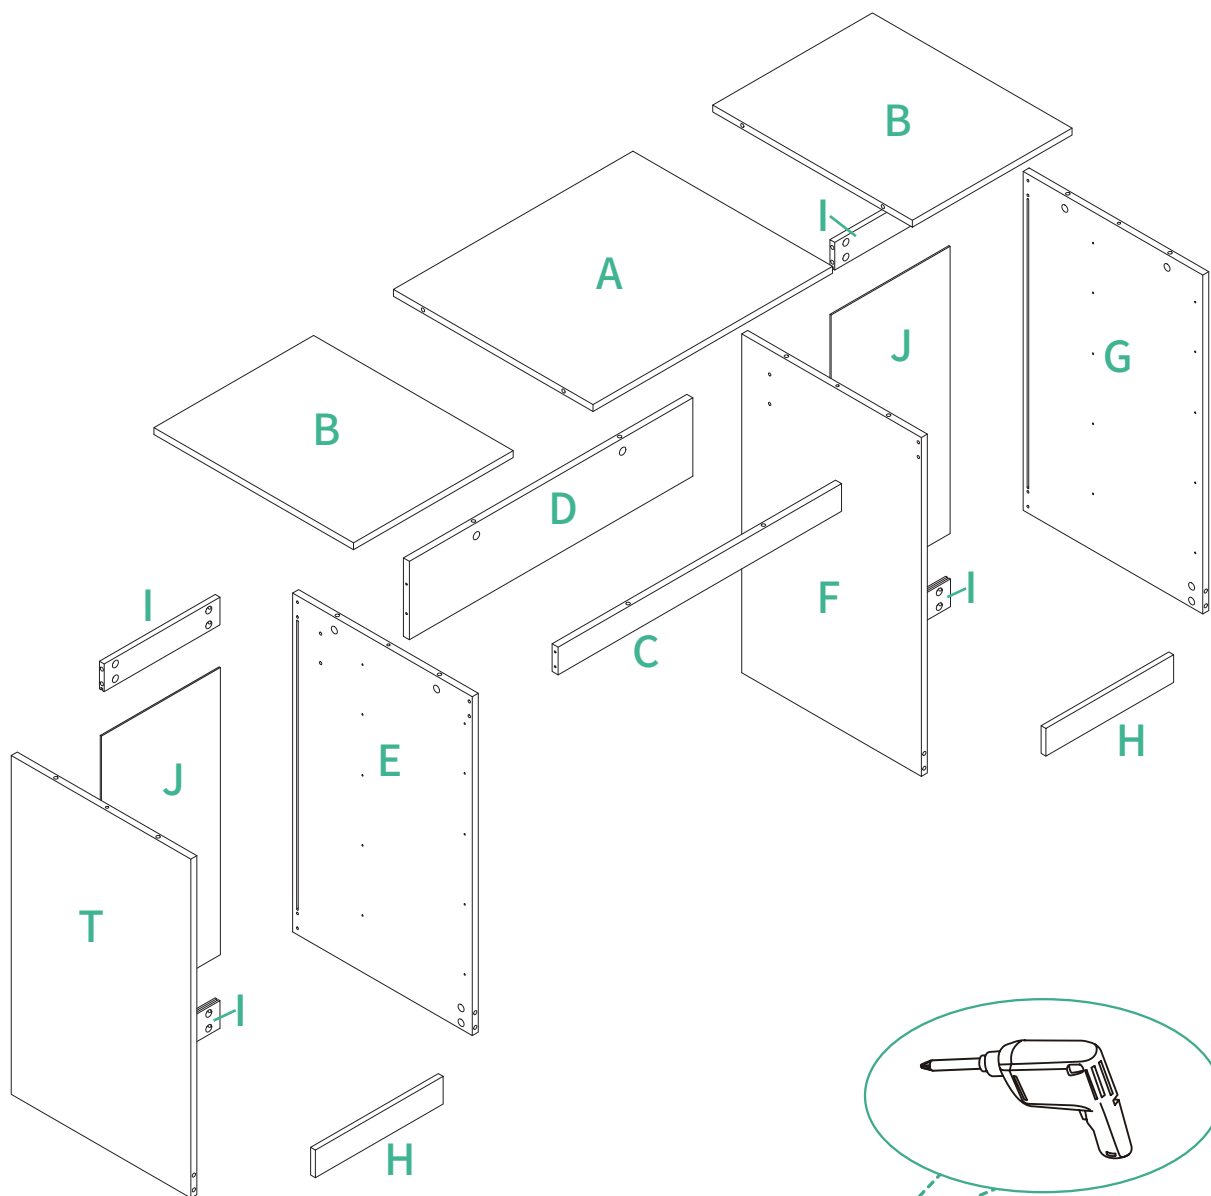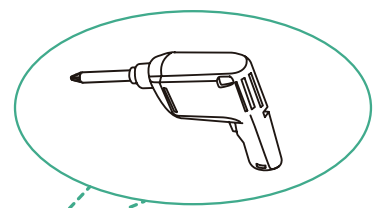

 An electric drill is recommended for assembly.

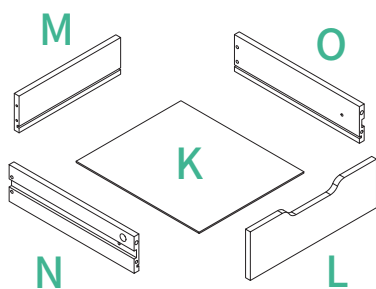



4 Sets



















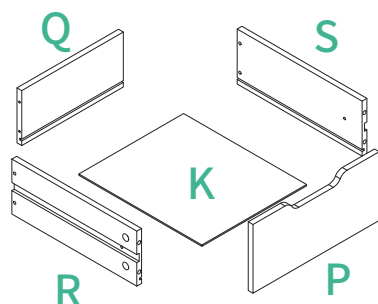 


6 Sets

Parts List

                    
 
For ease and safety, we recommend two people for assembly.










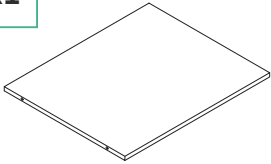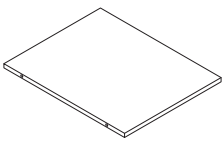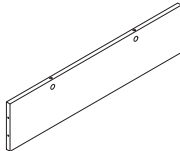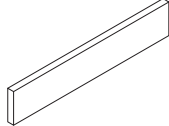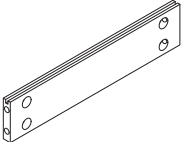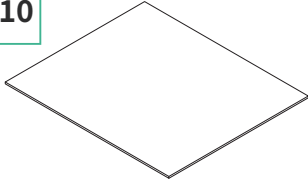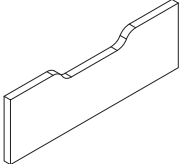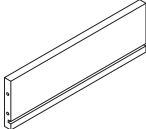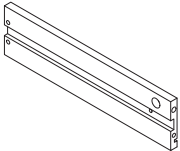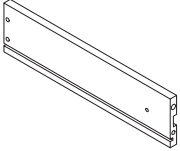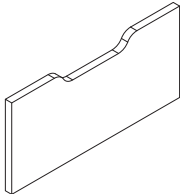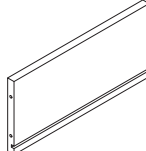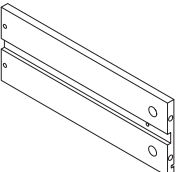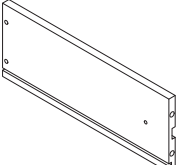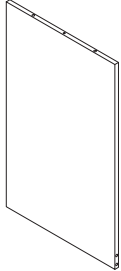A x1 	B x2 	C x1 	D x1 
E x1 	F x1 	G x1 	H x2 
I x4 	J x2 	K x10 	L x4 
M x4 	N x4 	O x4 	P x6 
Q x6 	R x6 	S x6 	T x1 

Parts List

         For ease and safety, we recommend two people for assembly.


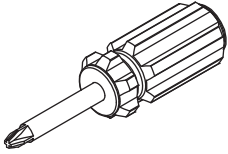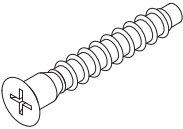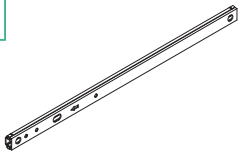
<p>① x71</p>  <p>35mm 3 Spares</p>	<p>② x18</p>  <p>φ6x30 2 Spares</p>	<p>③ x71</p>  <p>φ15x9.5 3 Spares</p>	<p>④ x1</p> 
<p>⑤ x51</p>  <p>ST5x40 3 Spares</p>	<p>⑥ x23</p>  <p>M4x8 3 Spares</p>	<p>⑦ x63</p>  <p>ST4x12 3 Spares</p>	<p>⑧ x5</p>  <p>1 Spare</p>
<p>⑨ x20</p> 	<p>⑩ x14</p>  <p>2 Spares</p>	<p>⑪ x35</p>  <p>3 Spares</p>	

Assembly Instructions

 
When installing, please lay soft pad on the ground to avoid scratch product.

1

First, align the rail holes with the holes on panel F as shown in the diagram. Then, slide the colored section and insert screw ⑦ into the correct hole.


Front

Back

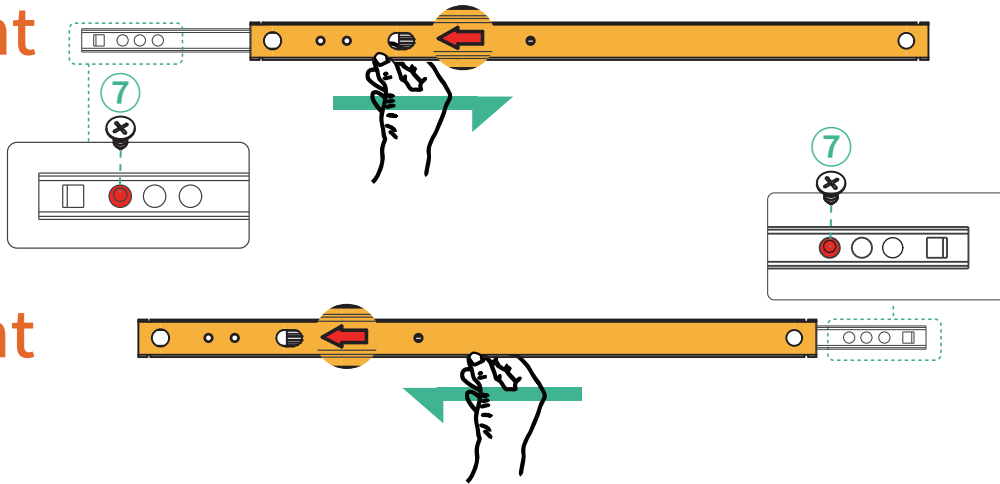

Front

 Back

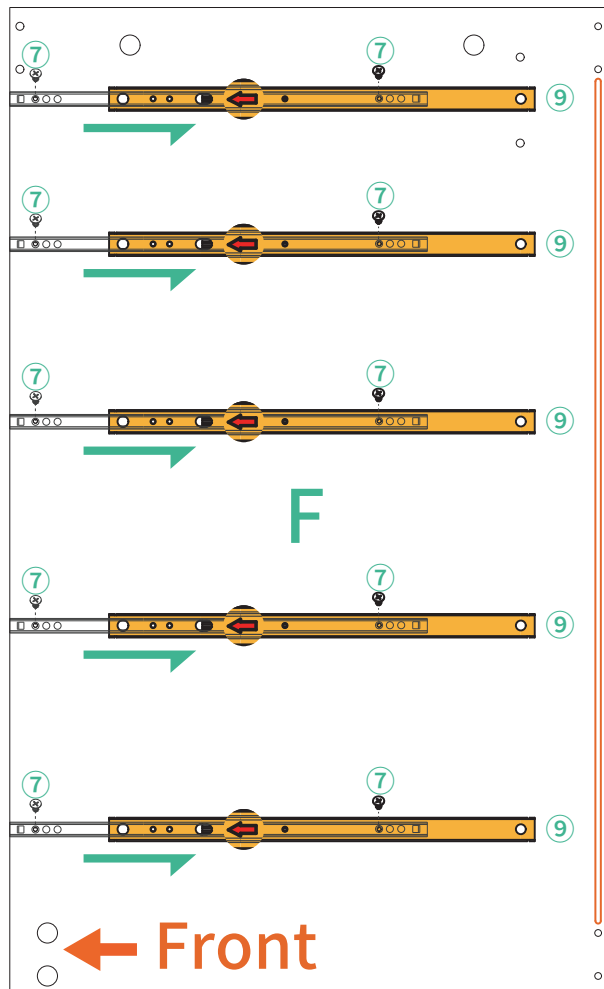


F x1	
9 x5	
7 x10	

Assembly Instructions

2


First, align the rail holes with the holes on panel G as shown in the diagram. Then, slide the colored section and insert screw ⑦ into the correct hole.

 Back

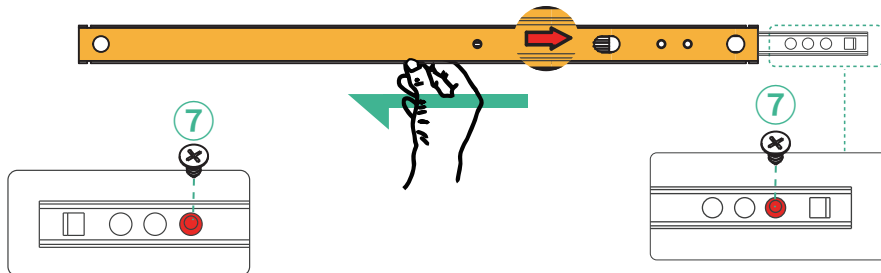


Front

 Back




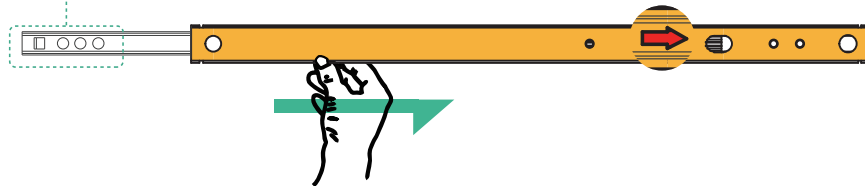


Front

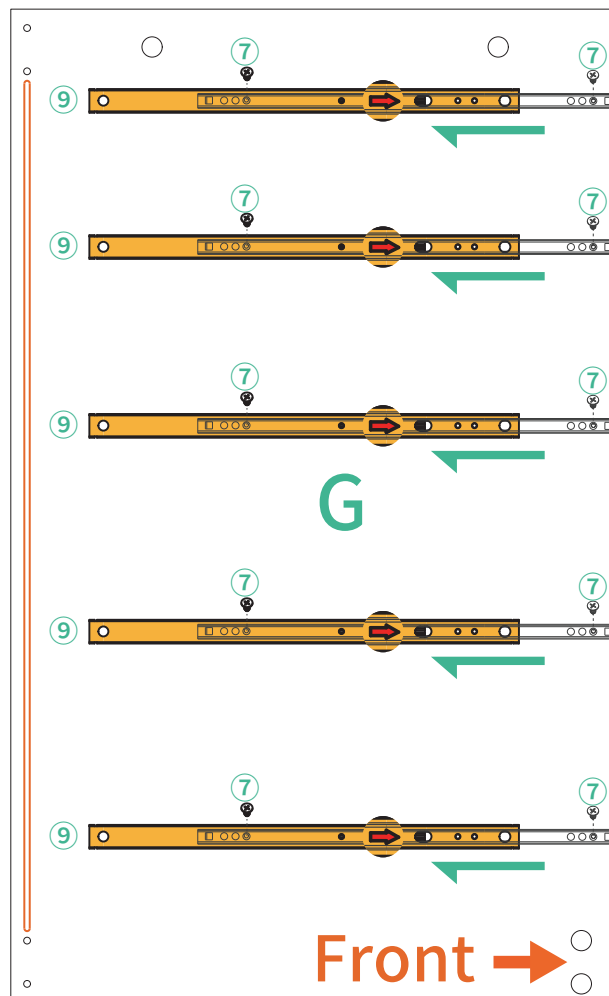 


G x1	
9 x5	
7 x10	

    3

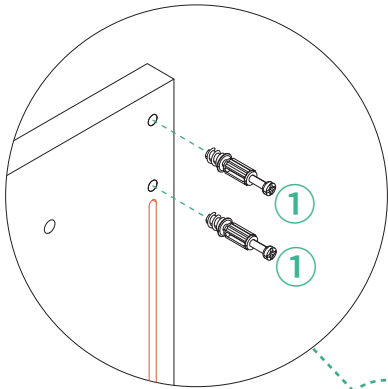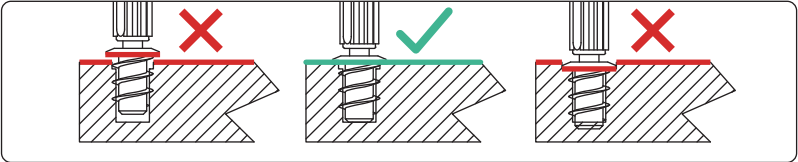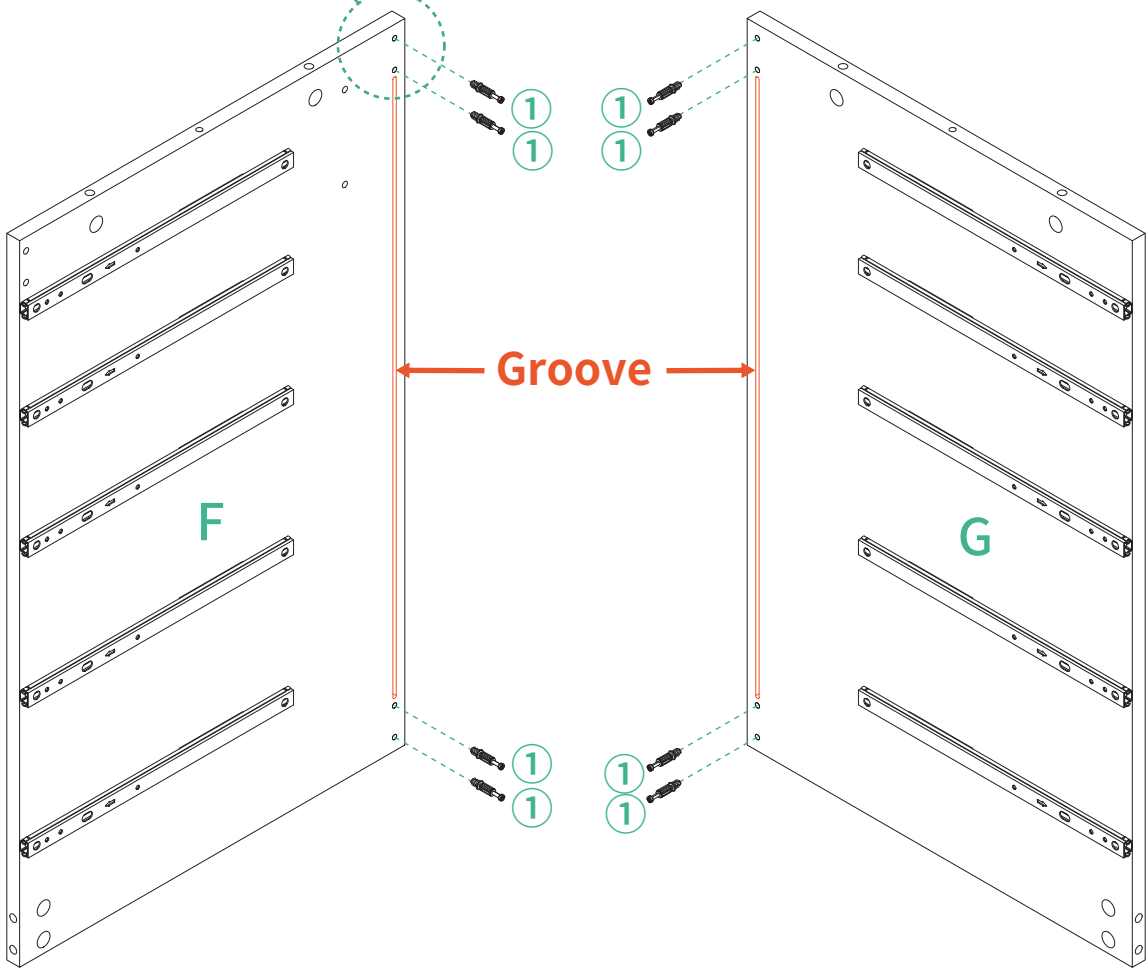


Assembly Instructions

 4 When installing Panel I, please note the orientation of the groove.

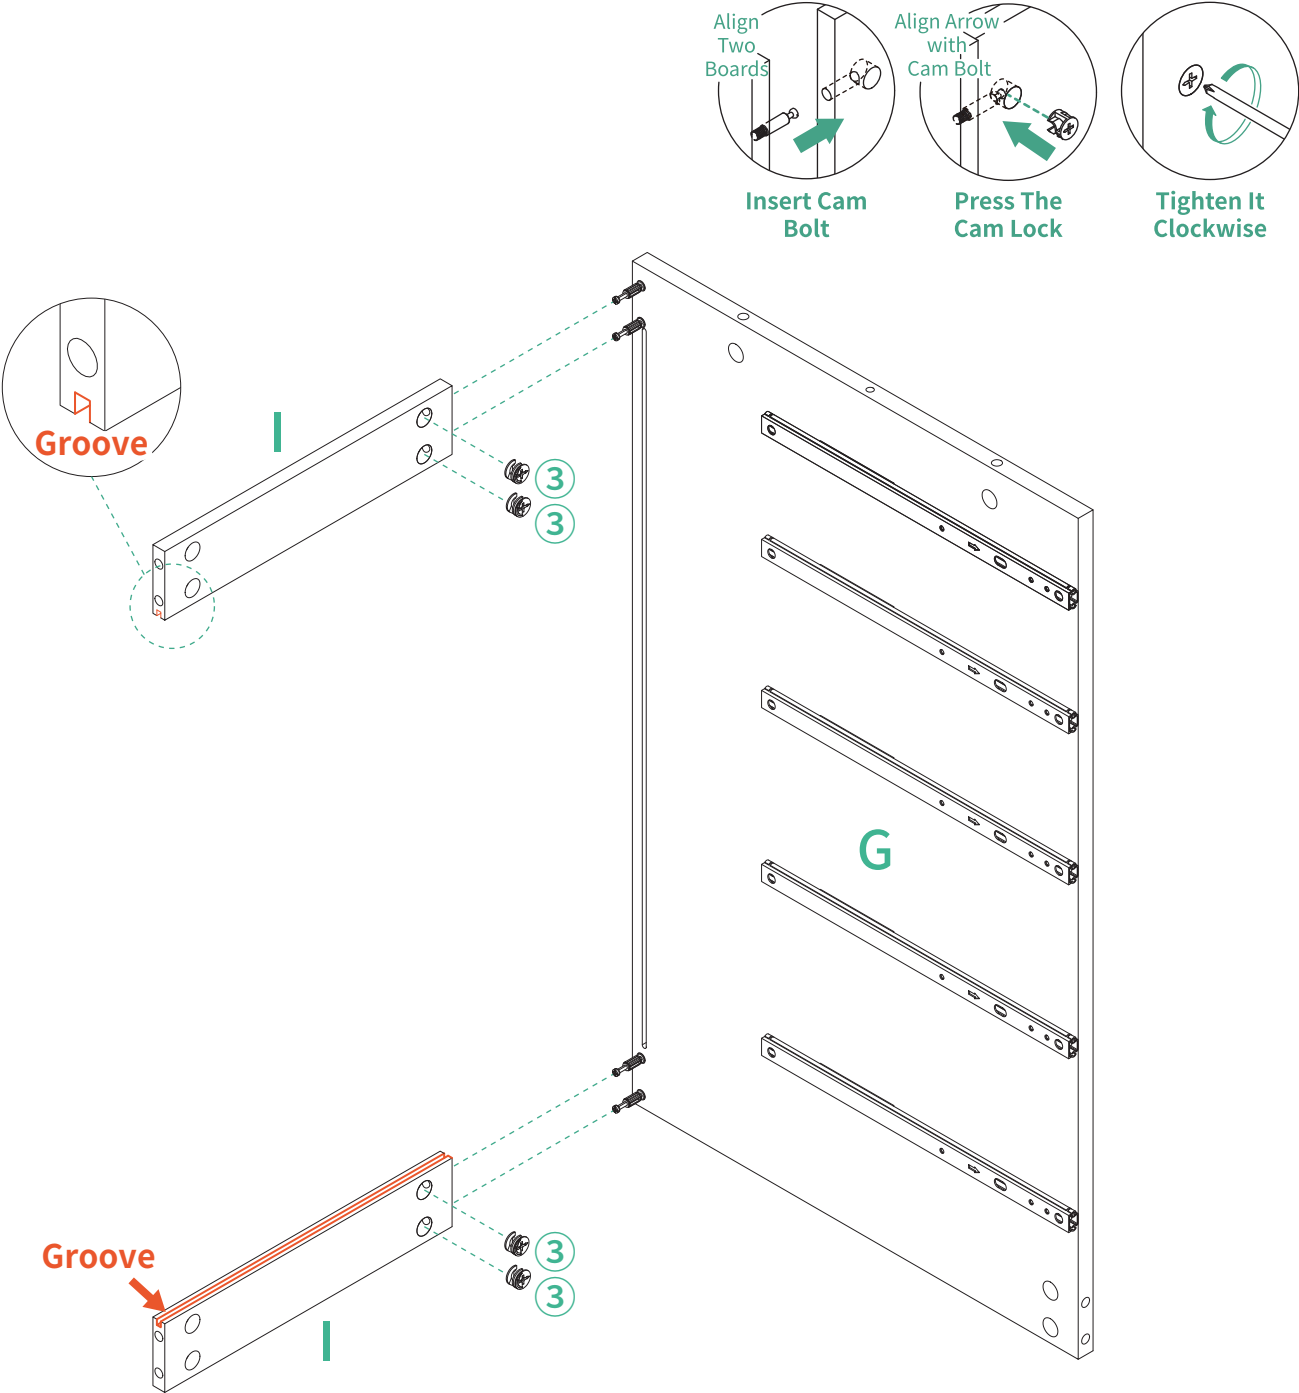



I		3		4	
x2		x4		x1	

 5

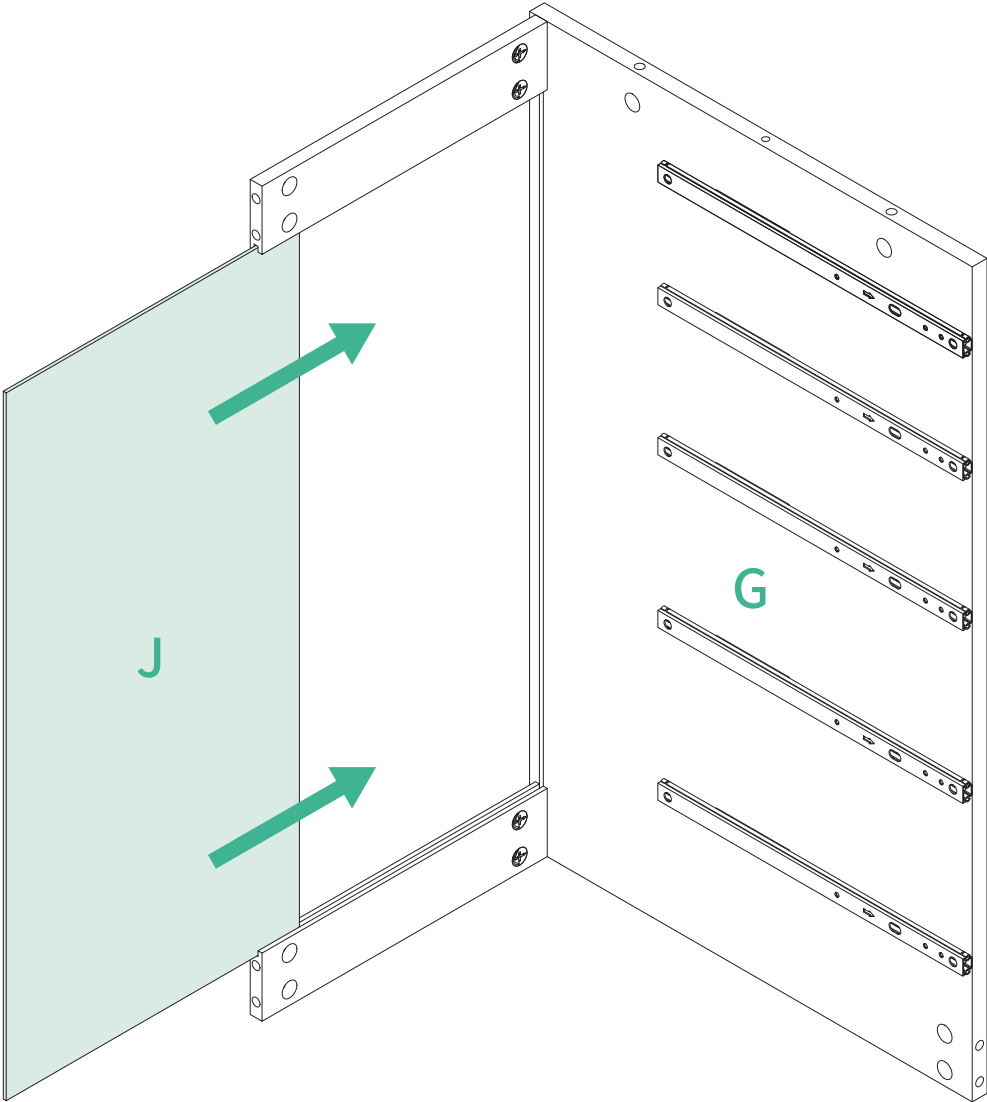


J	
x1	

  6

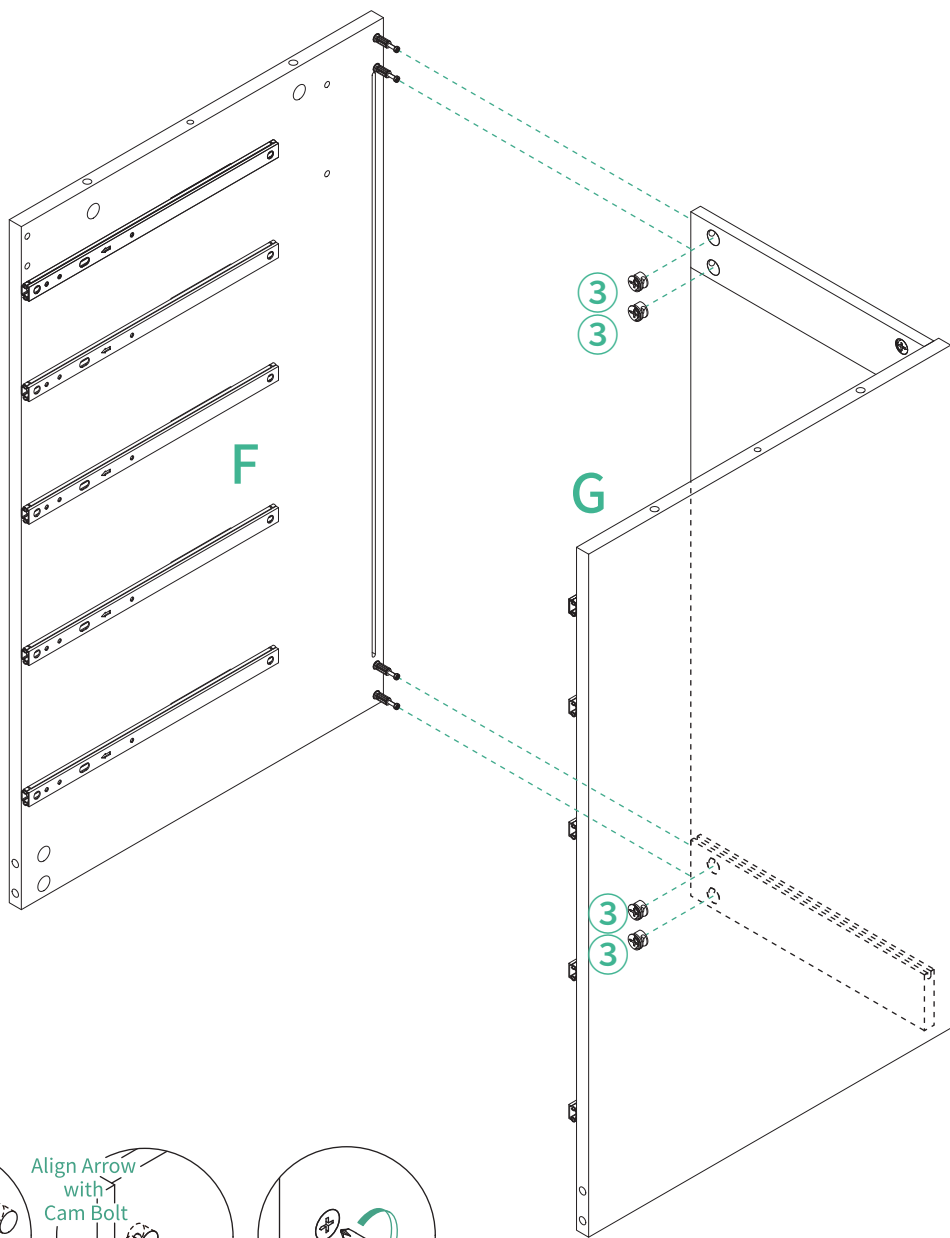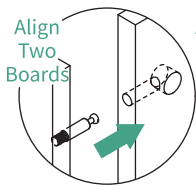


Align
Two
Boards

 Insert Cam
Bolt

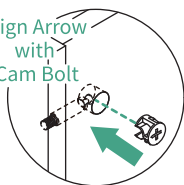


Align Arrow
with
Cam Bolt

 Press The
Cam Lock

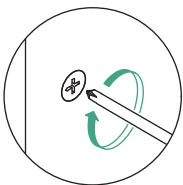



Tighten It
Clockwise

 F x1		3 x4		4 x1	
----------------	---	----------------	---	----------------	---



Assembly Instructions

7

  
1

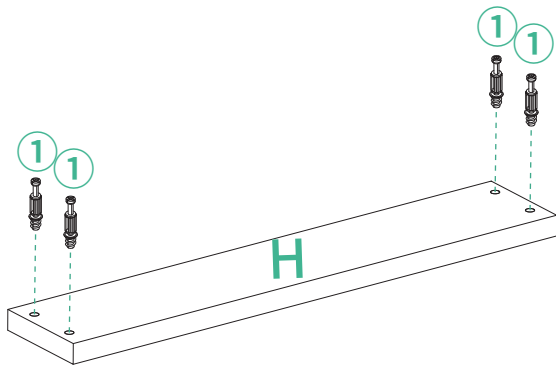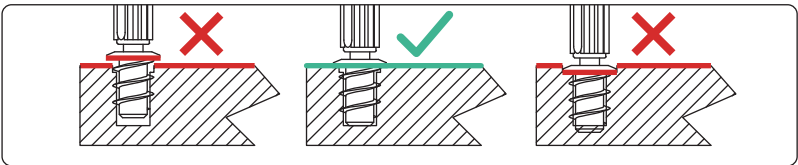


2

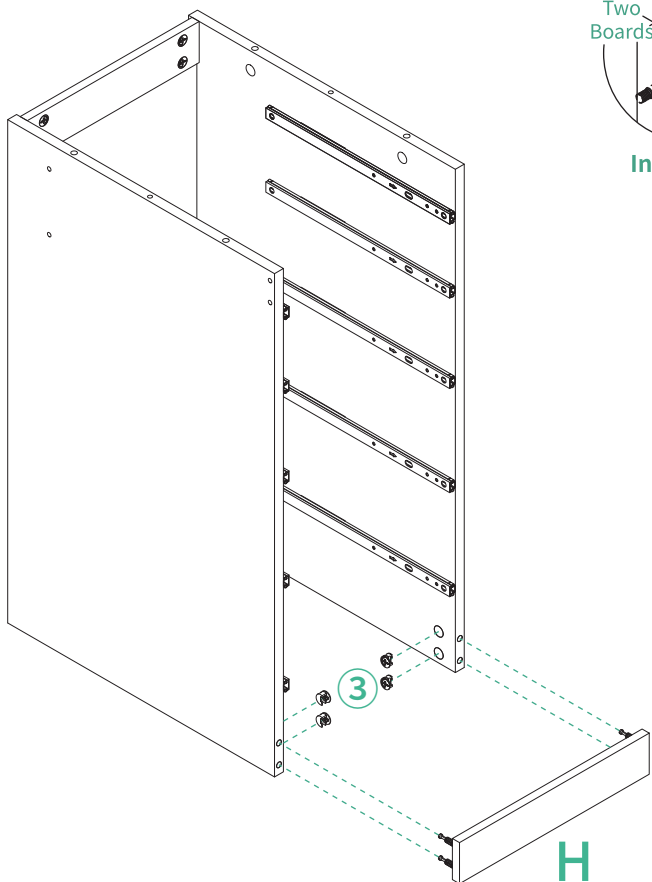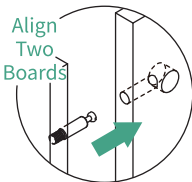  


Insert Cam Bolt

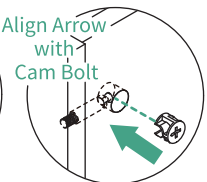 

Press The Cam Lock

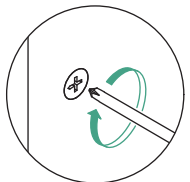 

Tighten It Clockwise

 H x1		1 x4		3 x4		4 x1	
----------------	---	----------------	---	----------------	---	----------------	---

 
Assembly Instructions

8

First, align the rail holes with the holes on panel T as shown in the diagram. Then, slide the colored section and insert screw ⑦ into the correct hole.


Front

Back

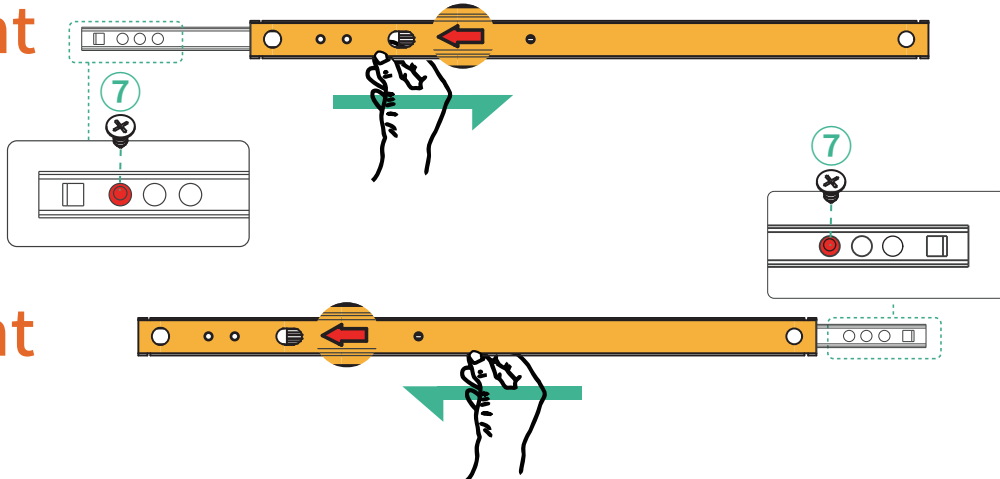

Front

 Back

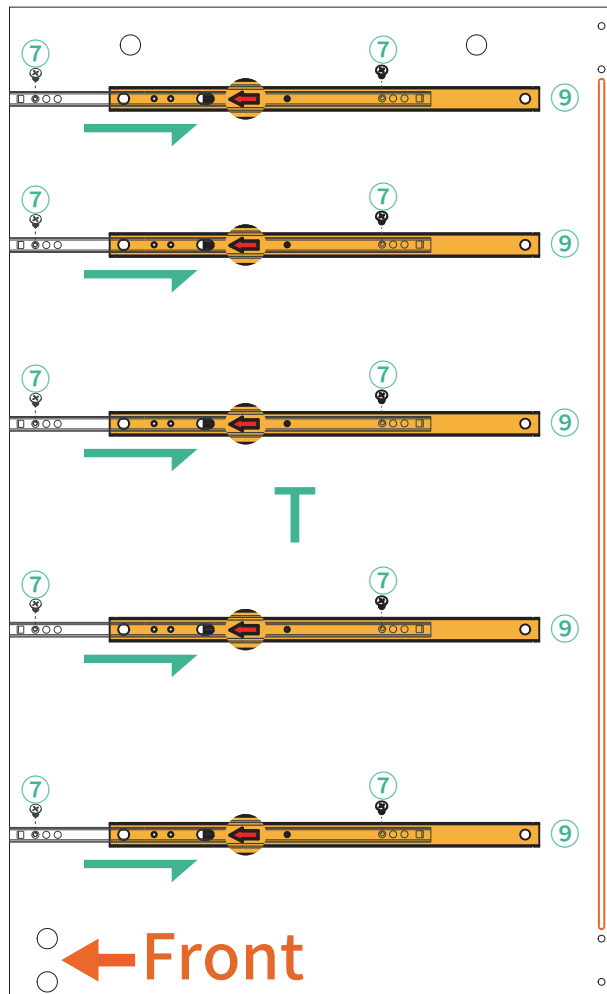


T x1	
9 x5	
7 x10	

Assembly Instructions

9


First, align the rail holes with the holes on panel E as shown in the diagram. Then, slide the colored section and insert screw ⑦ into the correct hole.

 Back

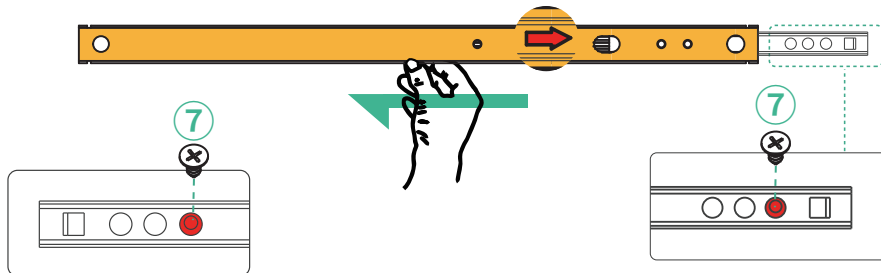


Front

 Back




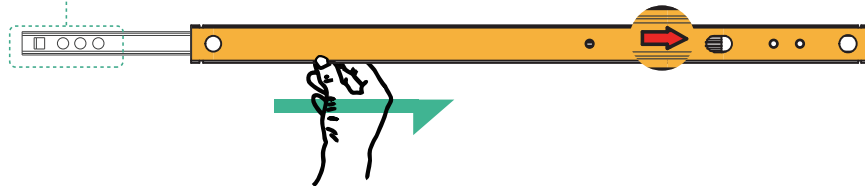


Front

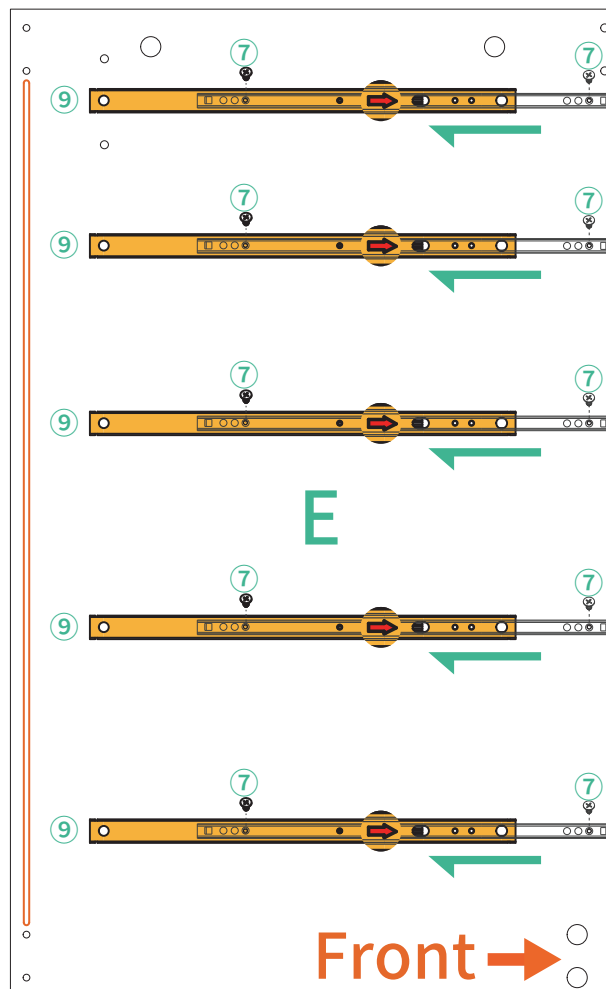 

E	
x1	
9	
x5	
7	
x10	

   
 
10

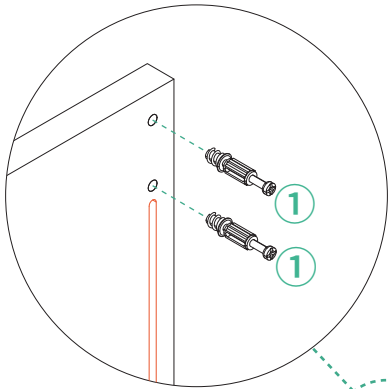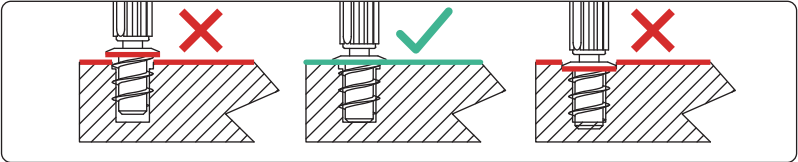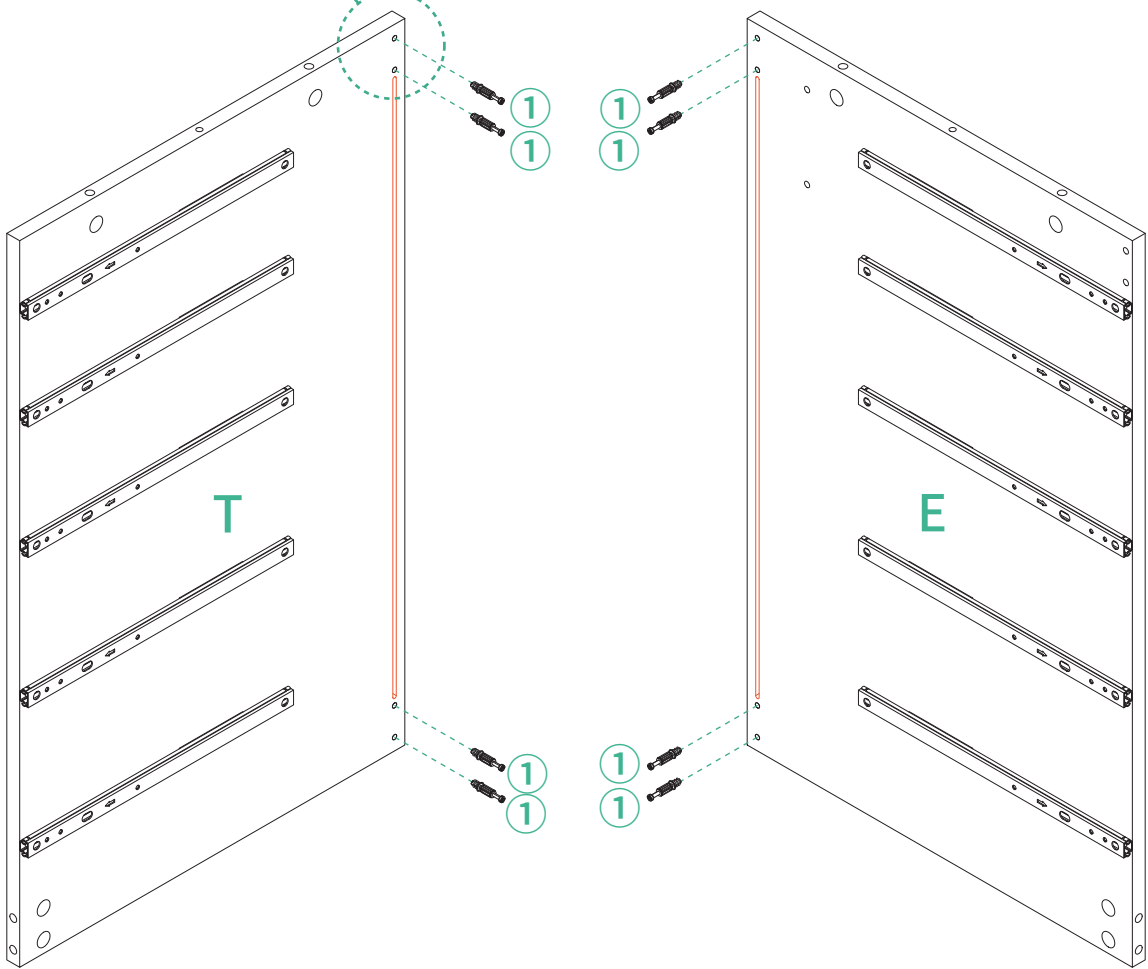

Assembly Instructions



11

  When installing Panel I, please note the orientation of the groove.

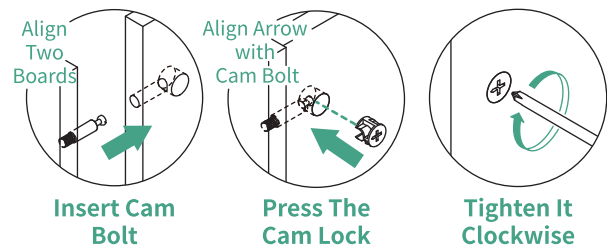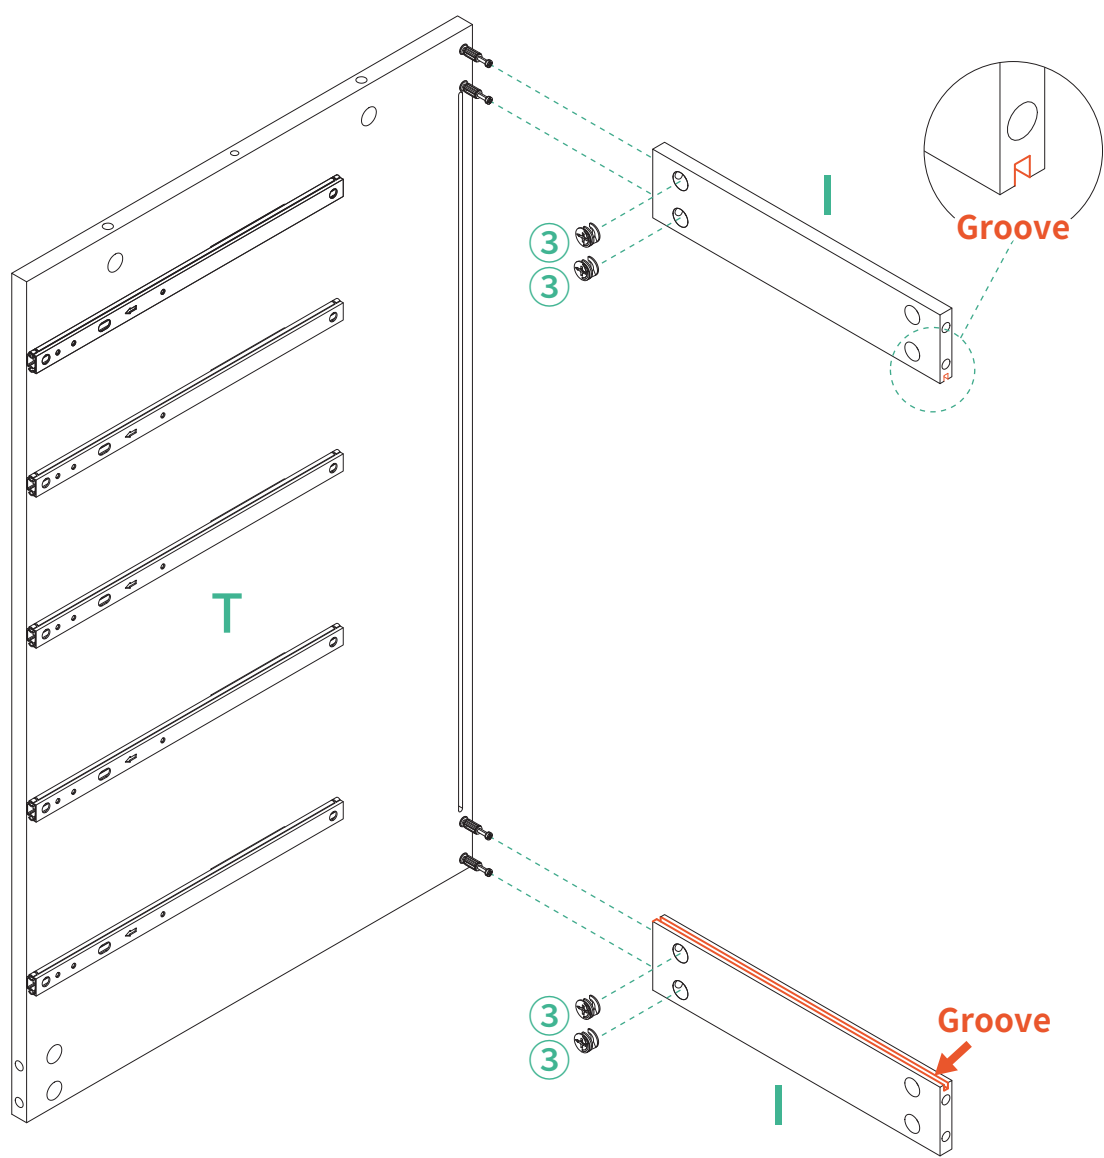



I		3		4	
x2		x4		x1	

  
12

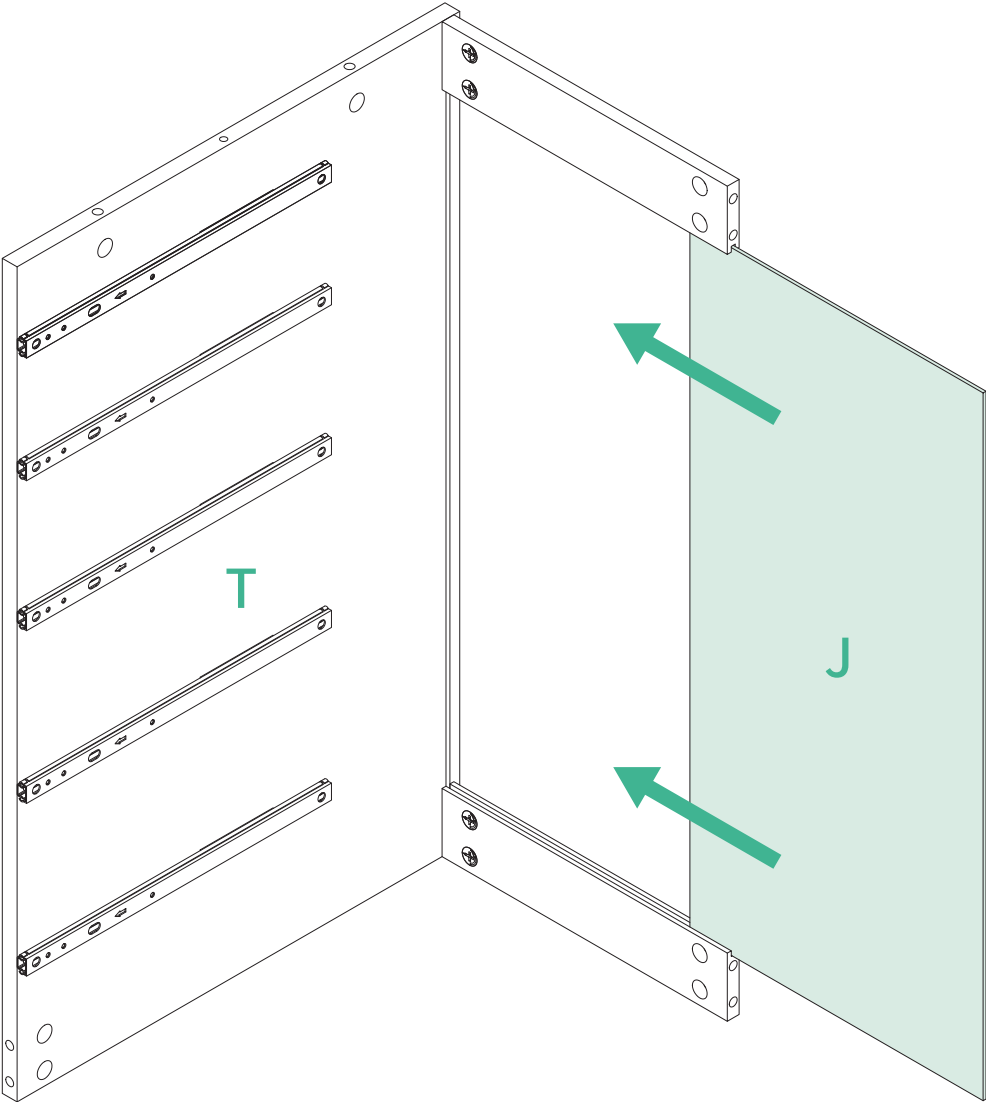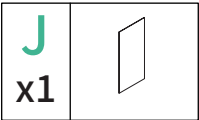

Assembly Instructions

   
13

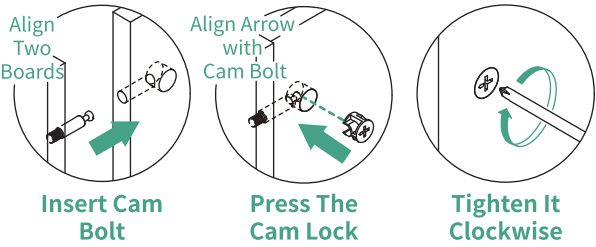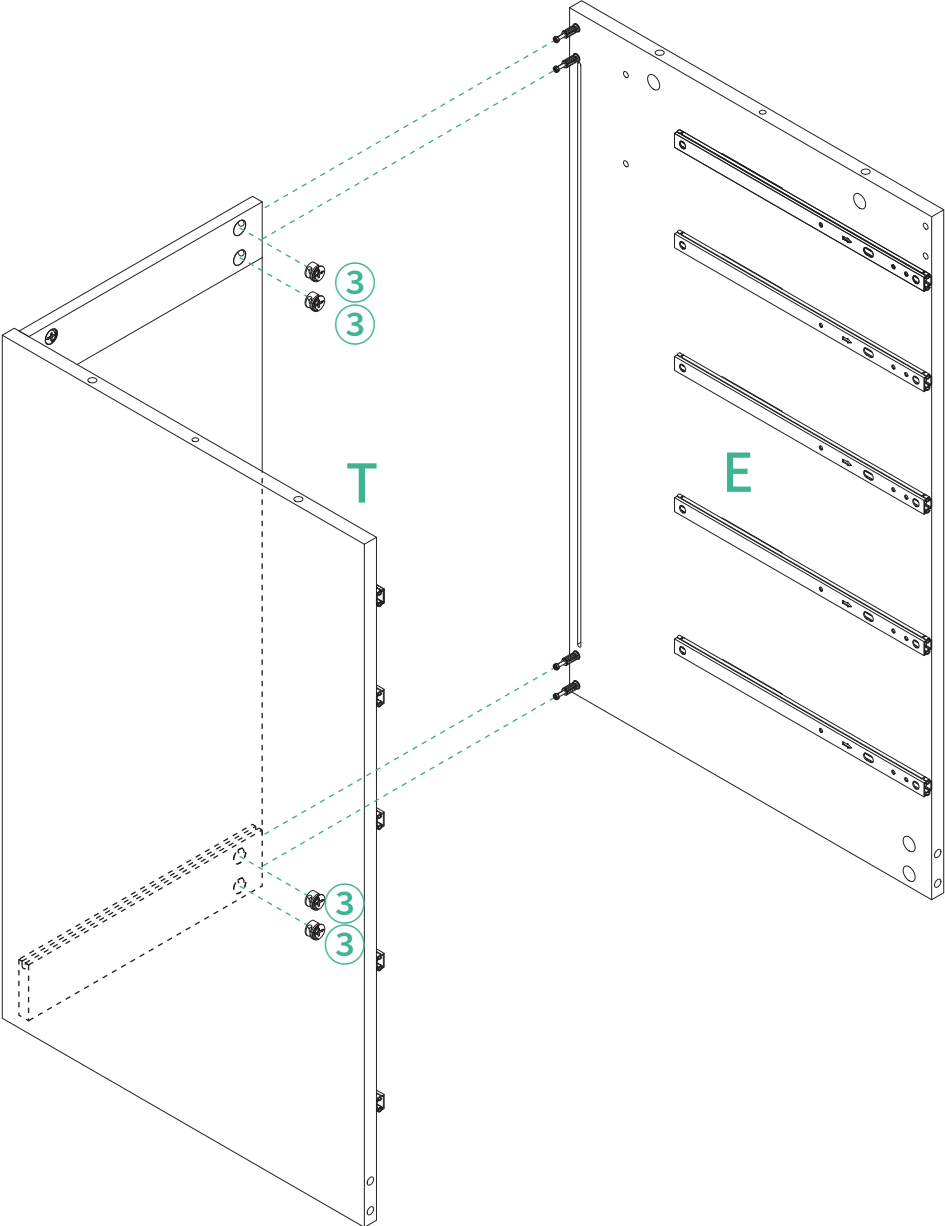


E x1		3 x4		4 x1	
----------------	---	----------------	---	----------------	---

Assembly Instructions


 
14

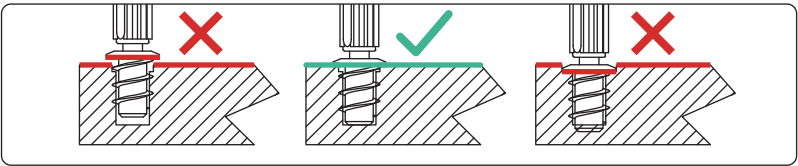


1

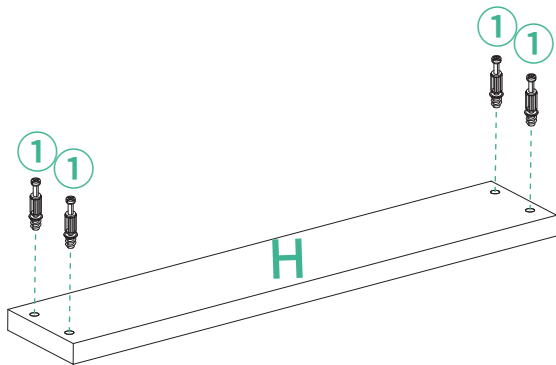 


2

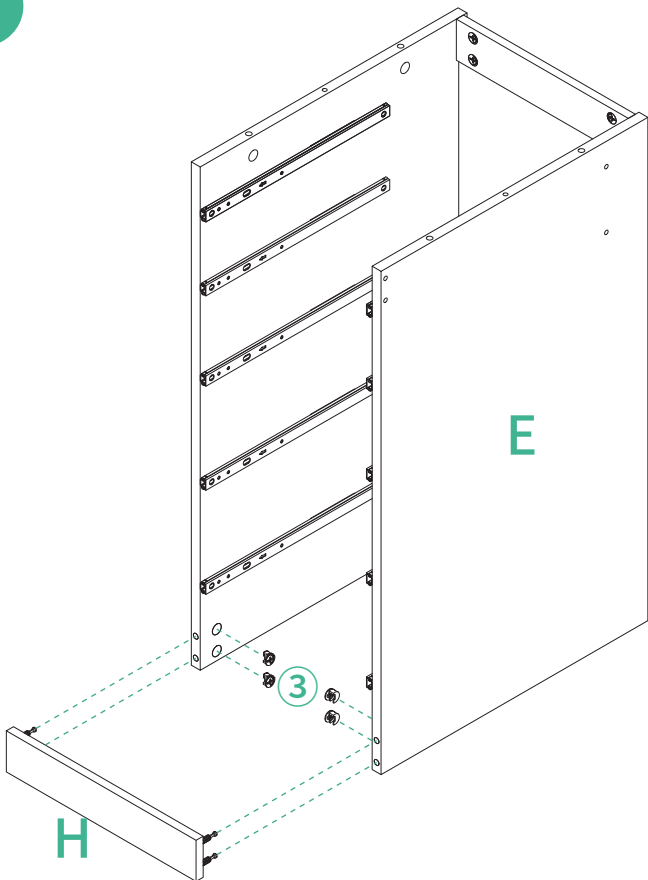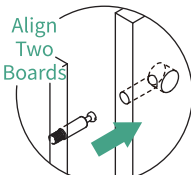  

Insert Cam Bolt

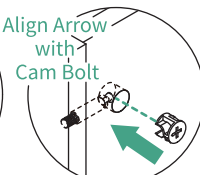 

Press The Cam Lock

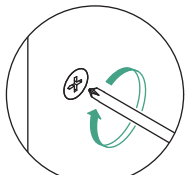 



Tighten It Clockwise

H x1		1 x4		3 x4		4 x1	
----------------	--	----------------	--	----------------	--	----------------	--

Assembly Instructions

15

 
 
When installing Panel D, please make sure the hole marked with the arrow faces upward.

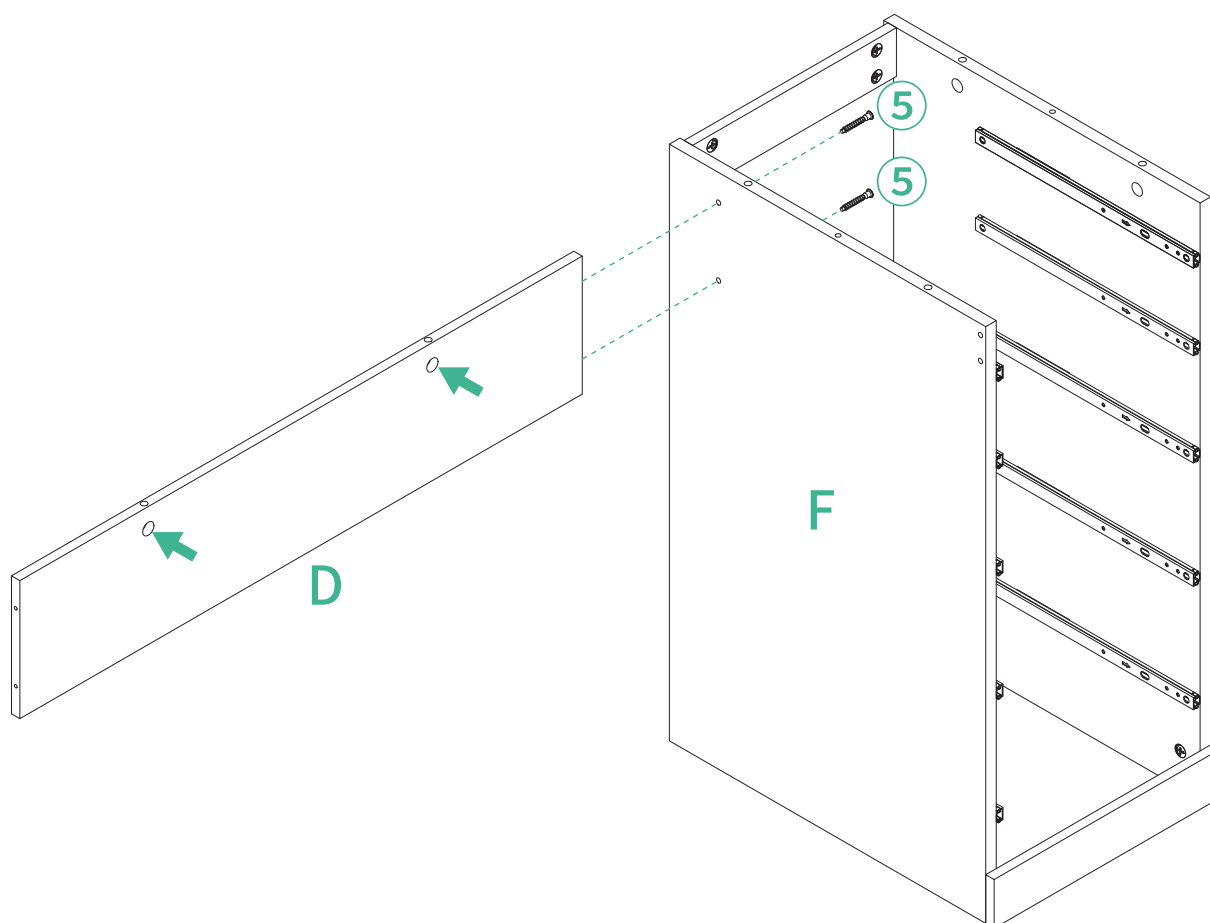


Assembly Instructions

16


 
 
When installing Panel C, please make sure the hole marked with the arrow faces upward.

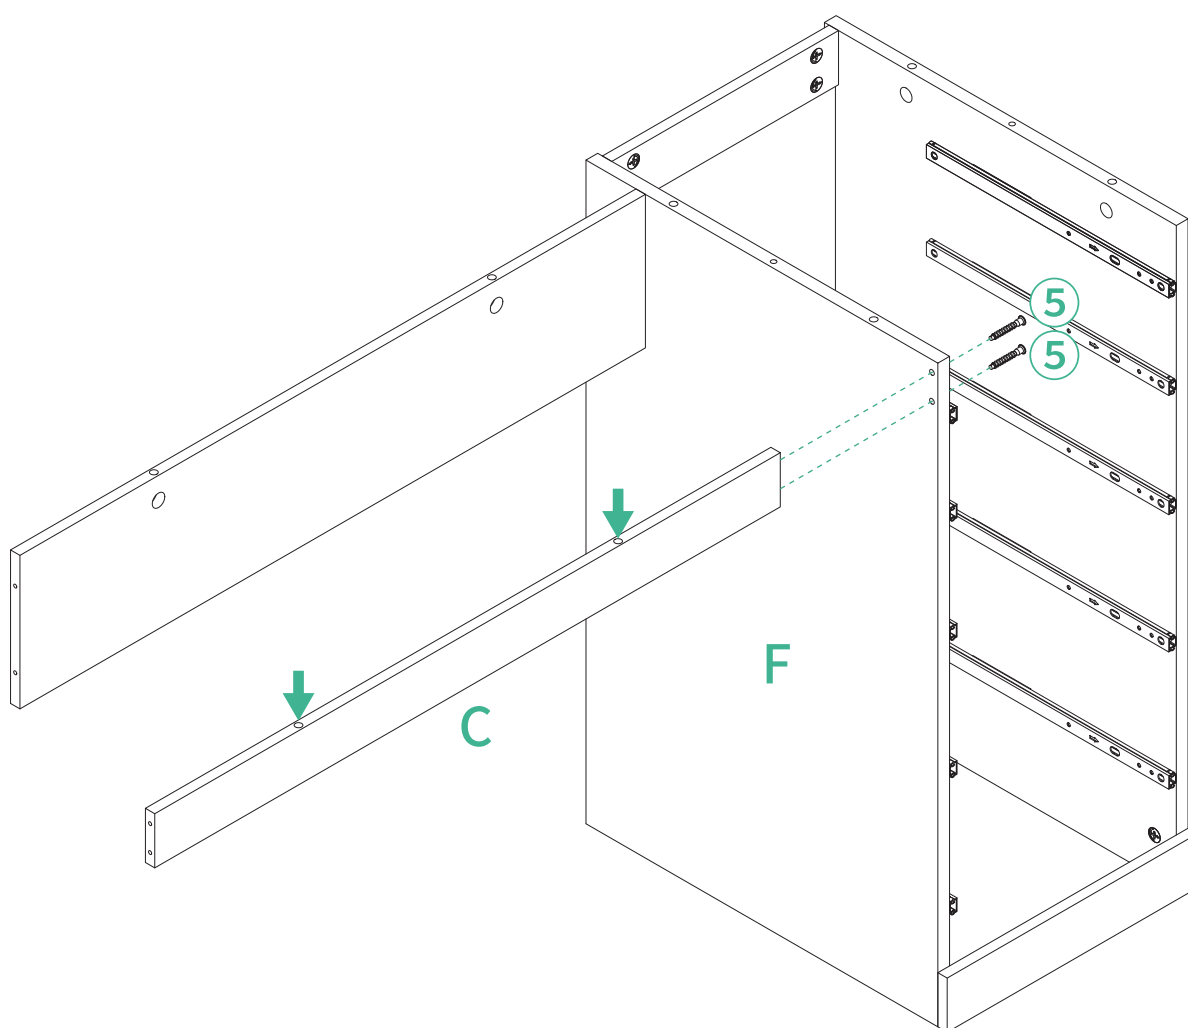



17

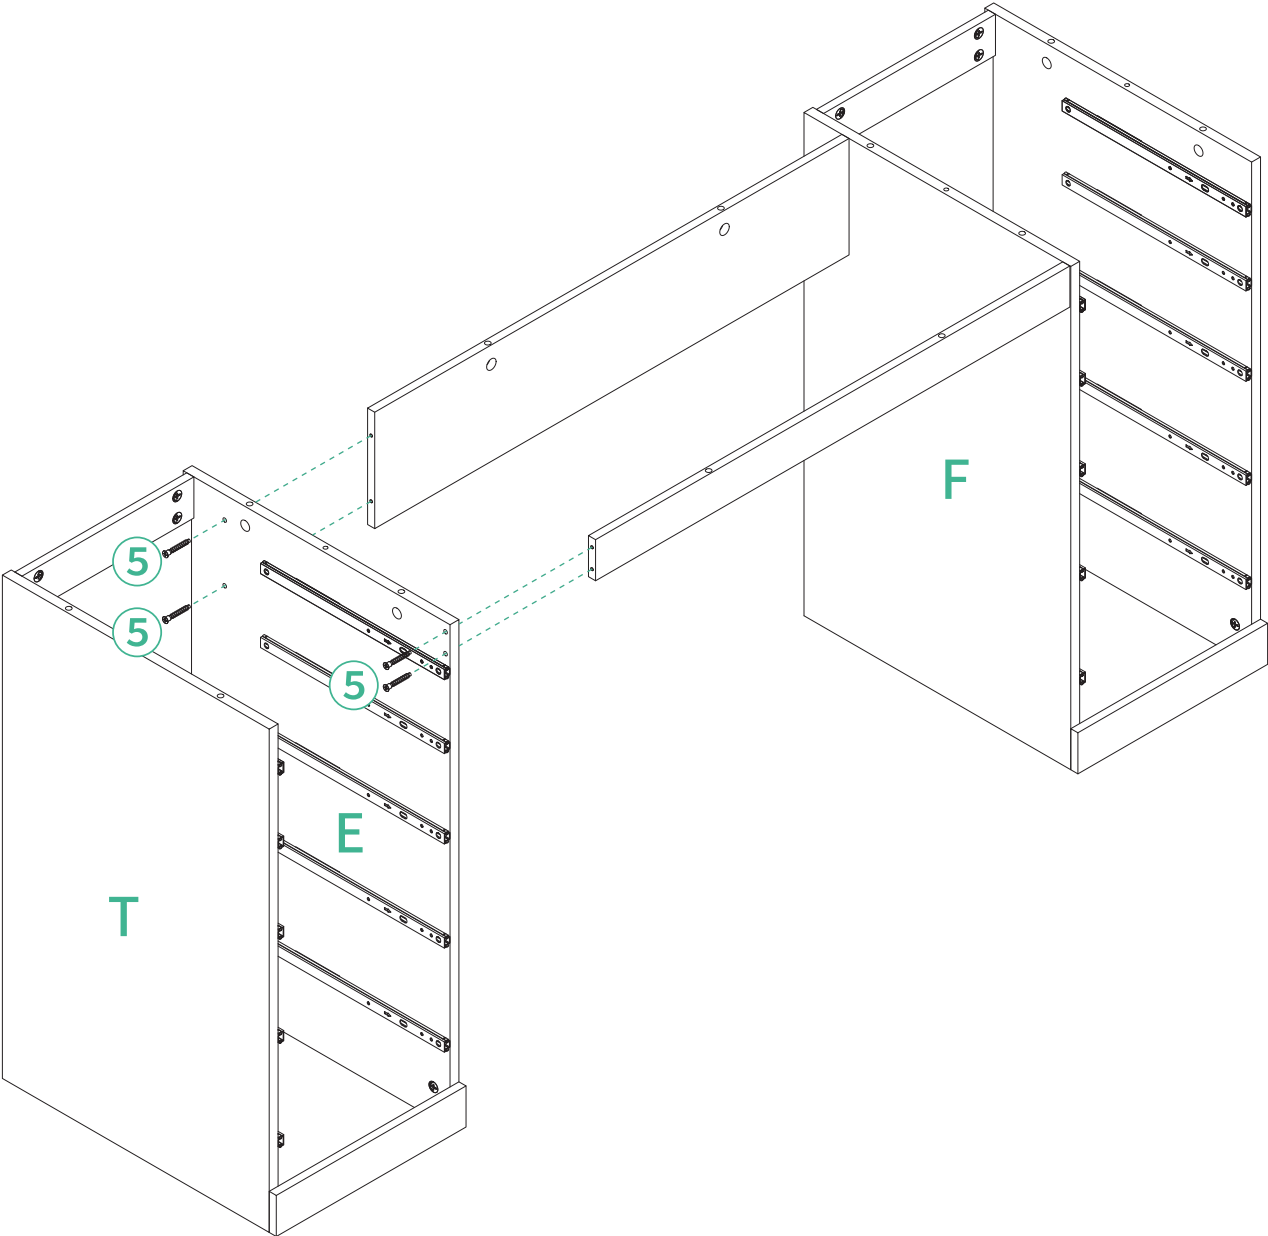 


18

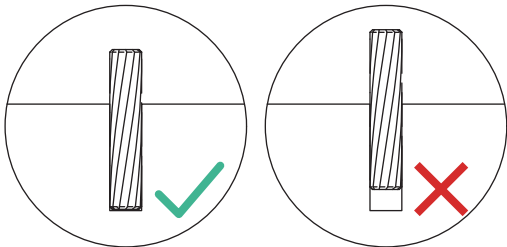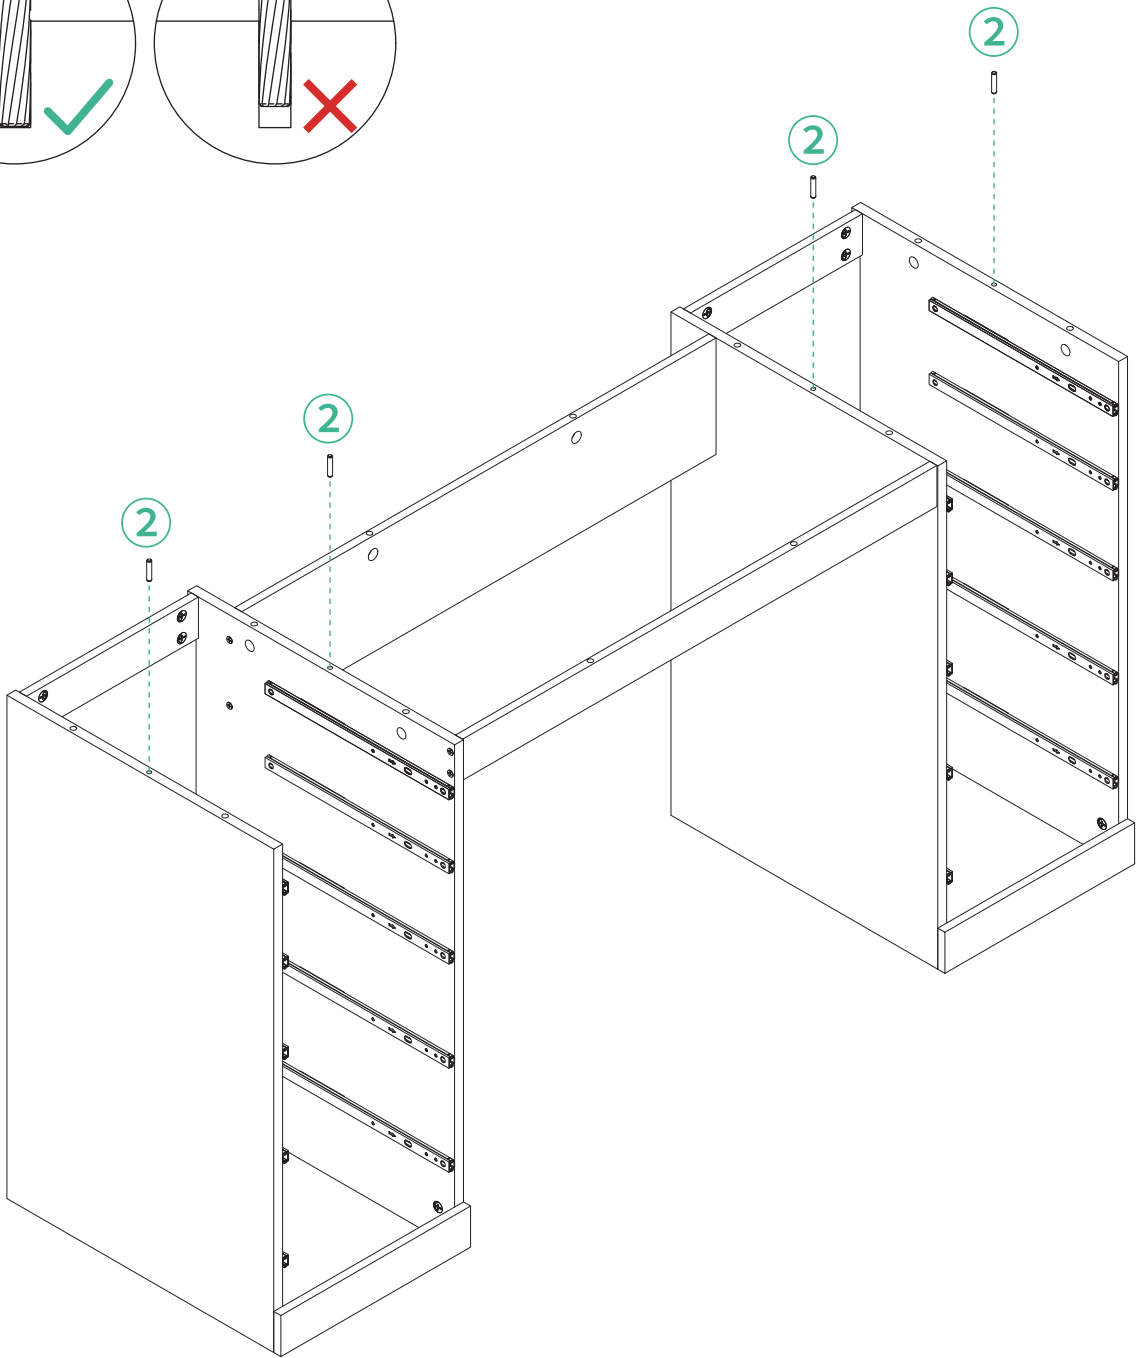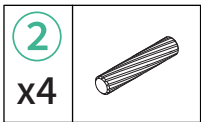   




19

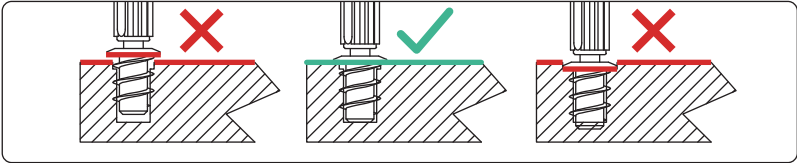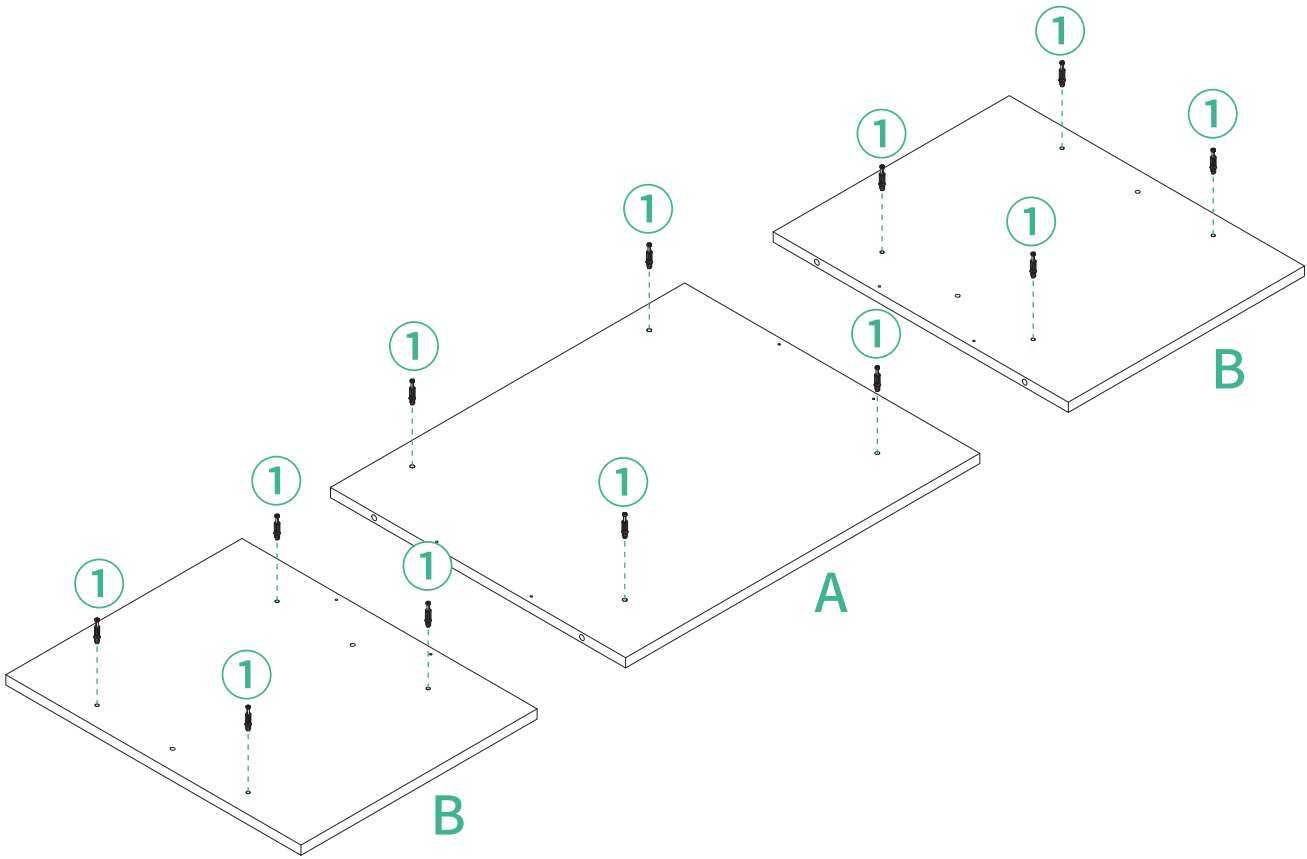  

 A		B		1	
x1		x2		x12	

   20

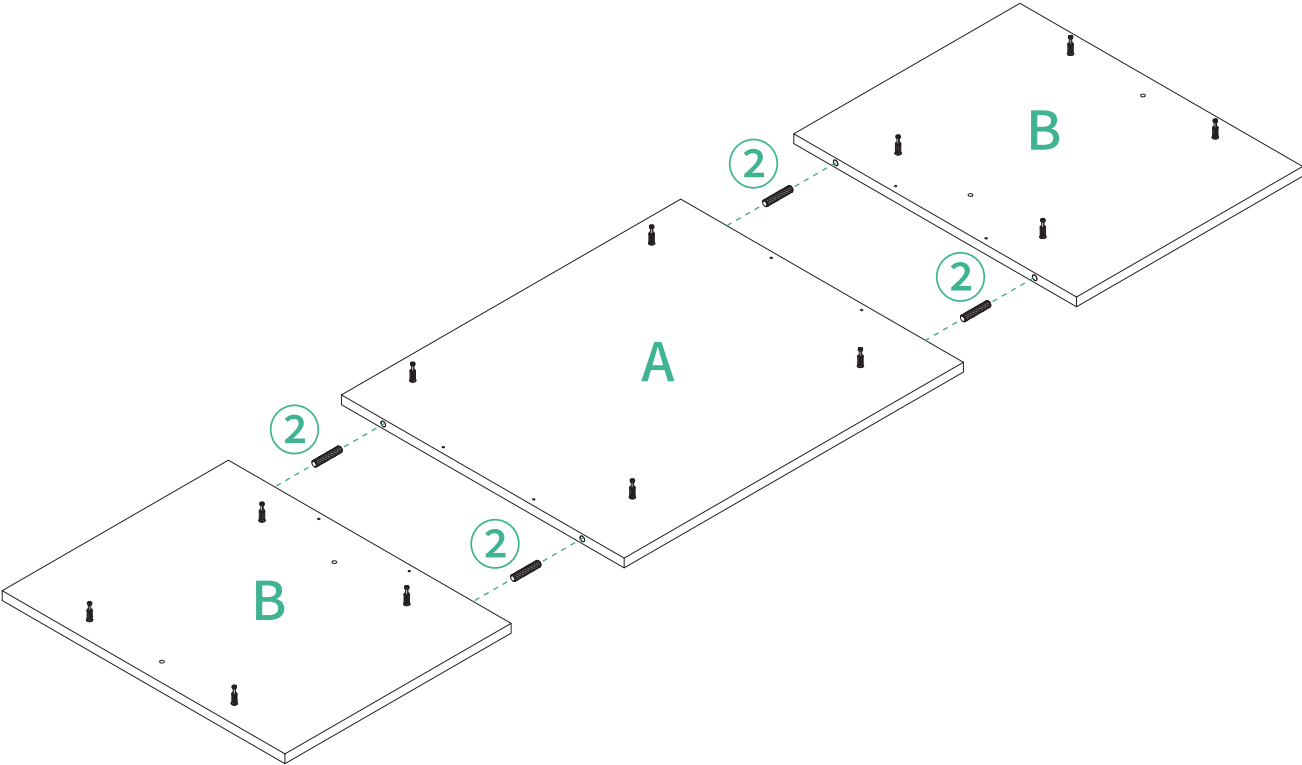


A		B		2	
x1		x2		x4	

Assembly Instructions

21

 
Ensure Panel A and Panel B are assembled seamlessly, then fasten Iron Sheet ⑧ with Screw ⑦.

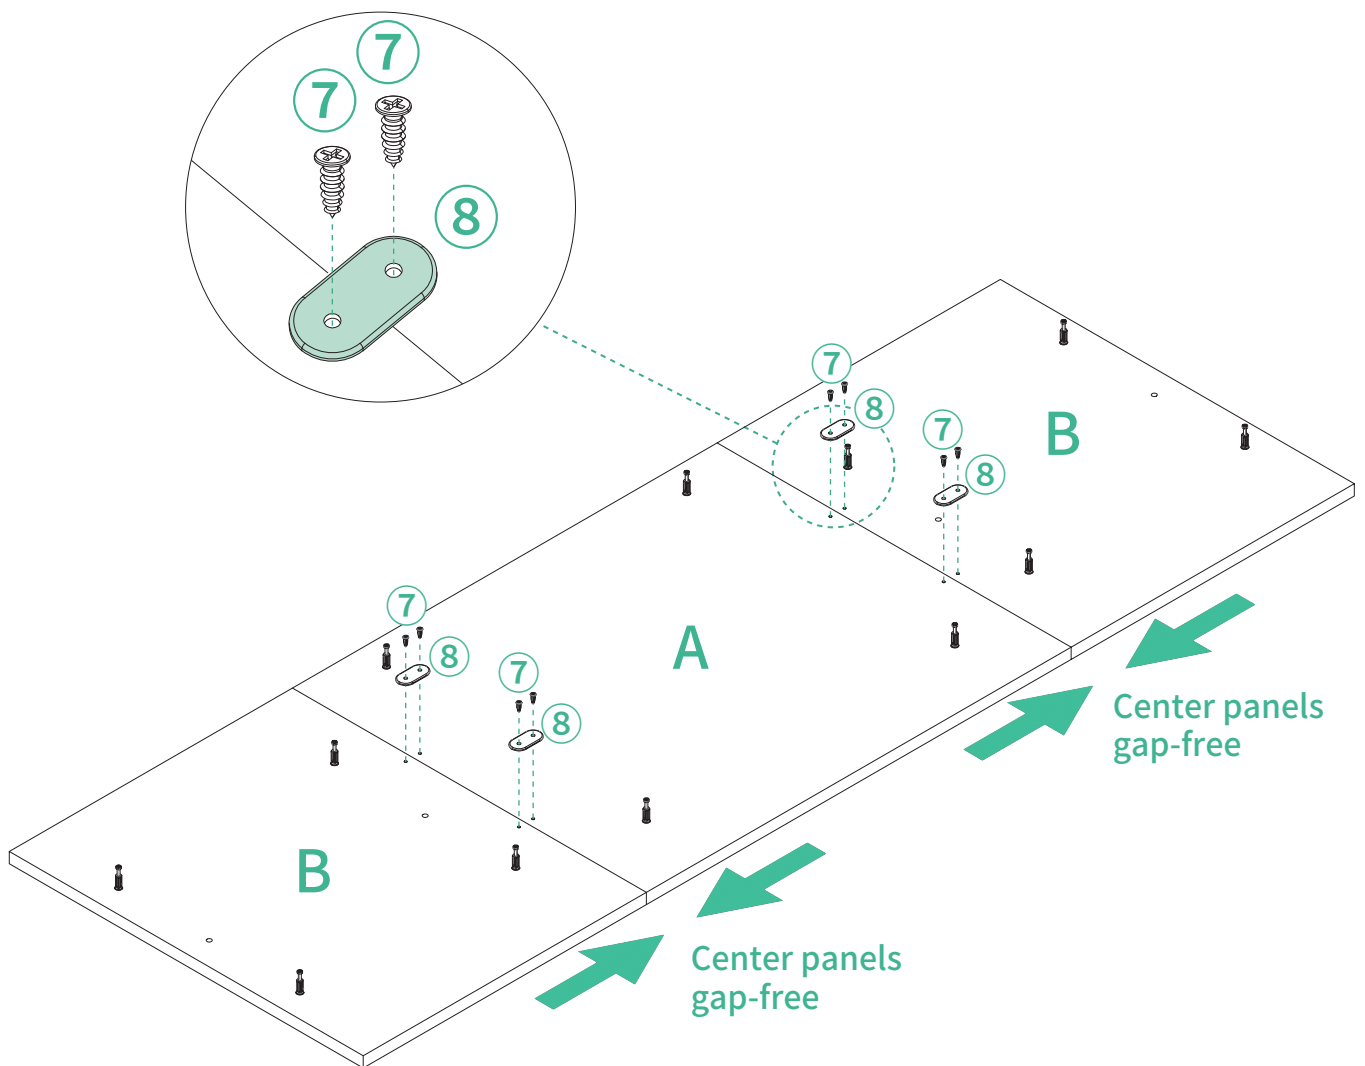


A x1		B x2		⑦ x8		⑧ x4	
----------------	---	----------------	---	----------------	---	----------------	---

Assembly Instructions


 
22

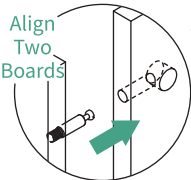

Insert Cam Bolt

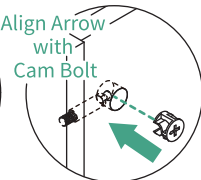 


Press The Cam Lock

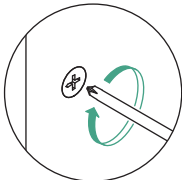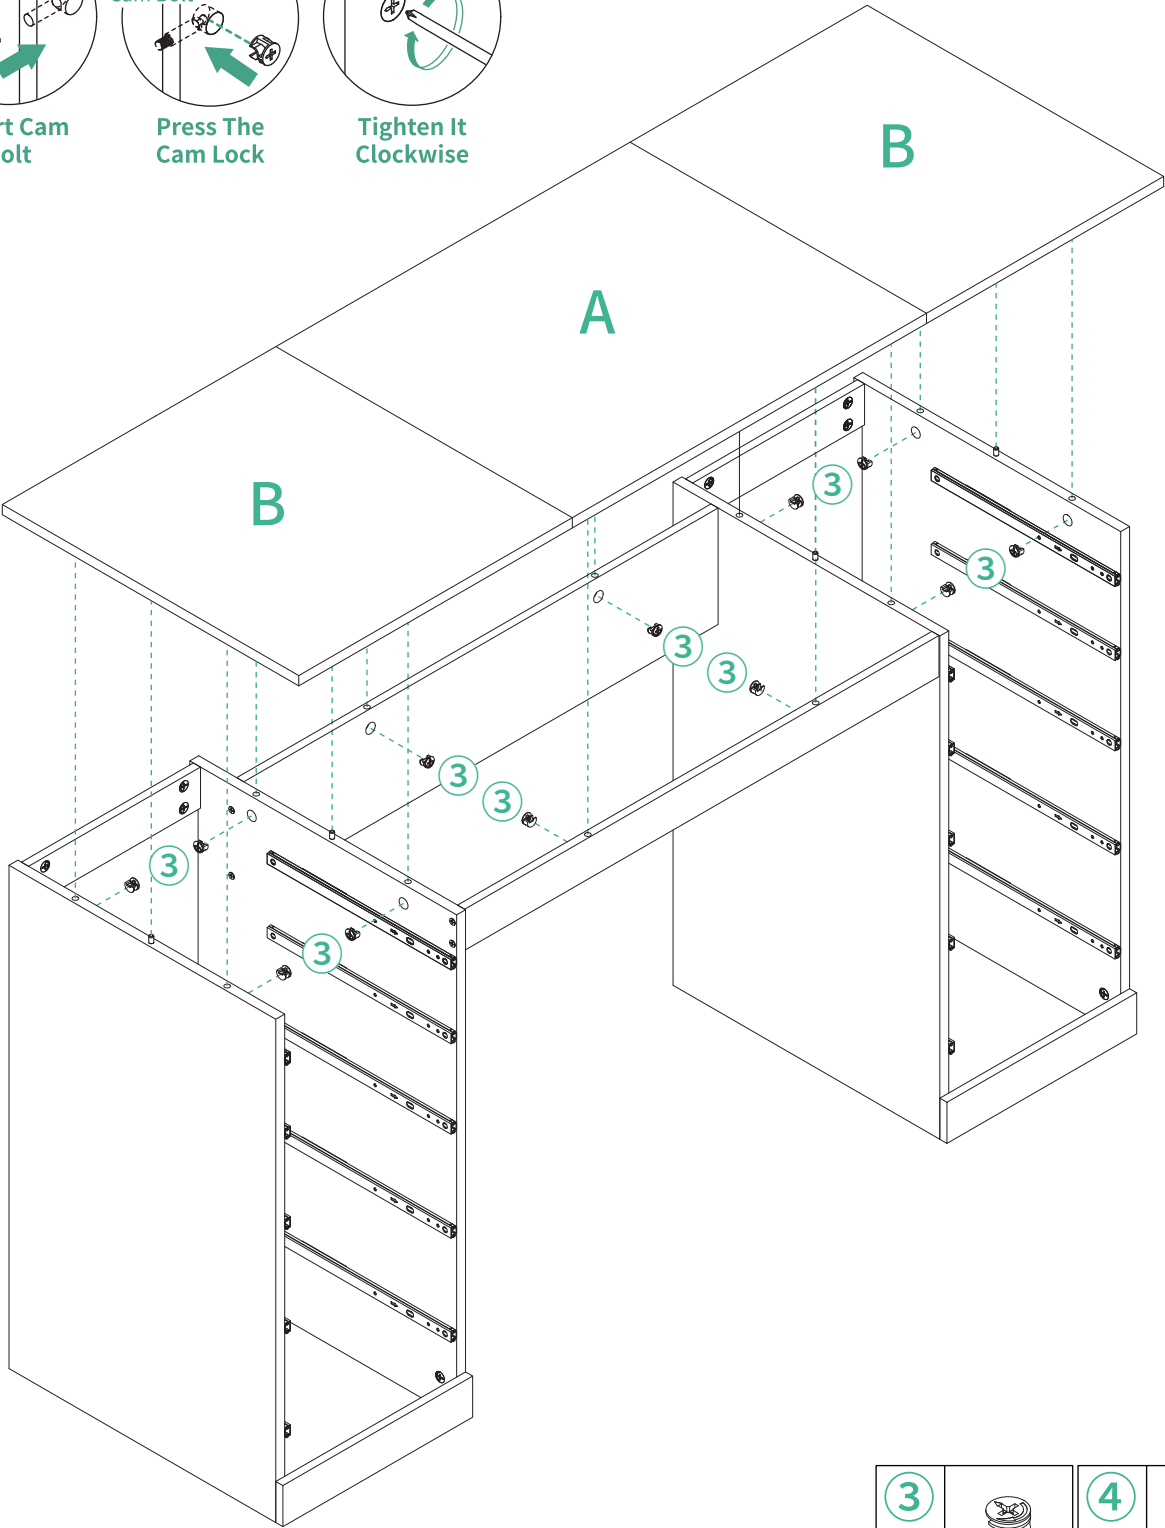  

3
x12



 4
x1




Assembly Instructions


23

4 Sets

 
1

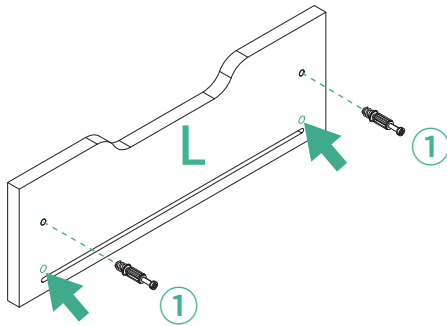



2

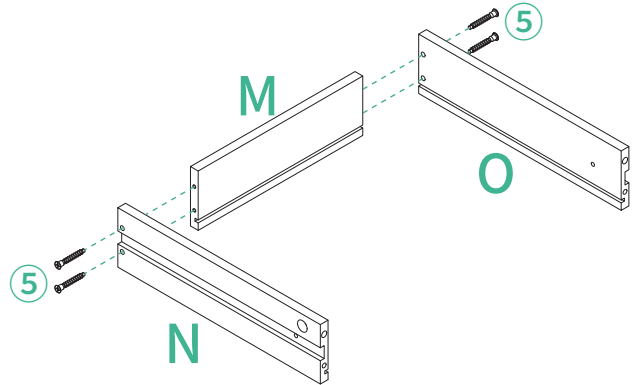 


3

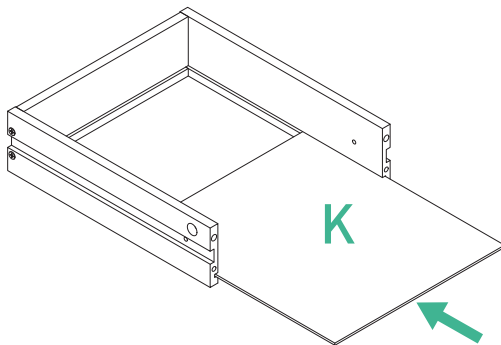 


4

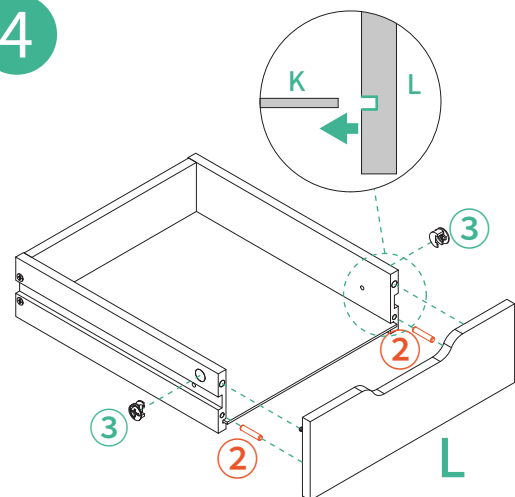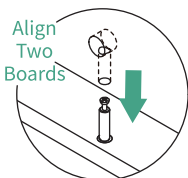  


Align Two Boards
Insert Cam Bolt

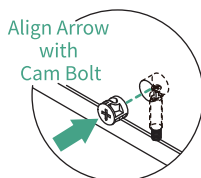 

 Align Arrow with Cam Bolt
Press The Cam Lock

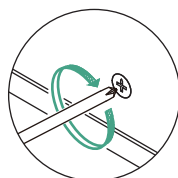

Tighten It Clockwise

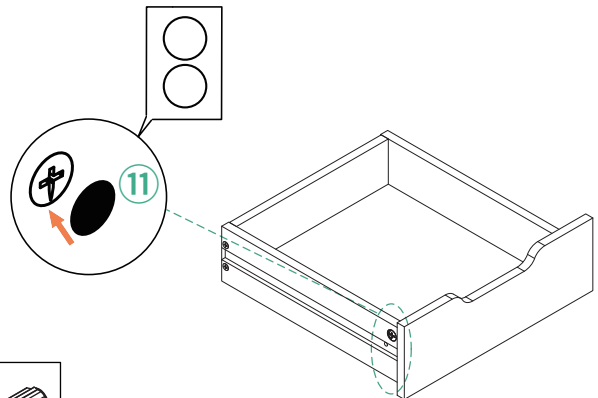 

③ x8		⑤ x16		⑪ x8		④ x1	
K x4		L x4		M x4		N x4	


O x4		① x8		② x8	
---------	--	---------	--	---------	--

Assembly Instructions


24

6 Sets

 
1

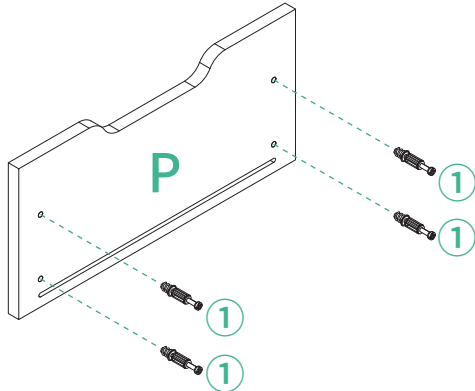



2

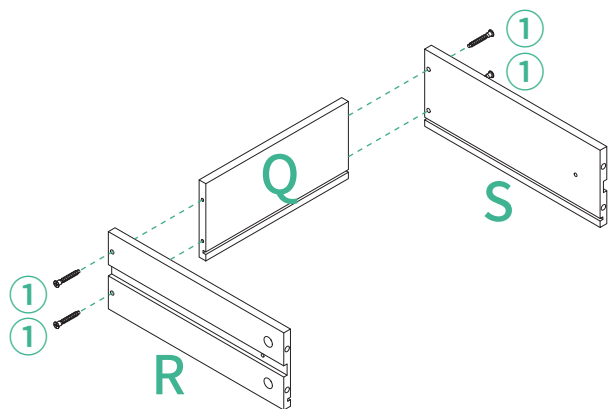 


3

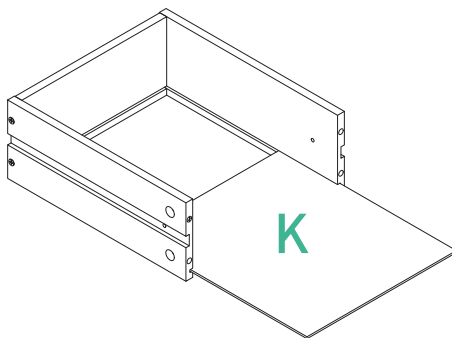 



4

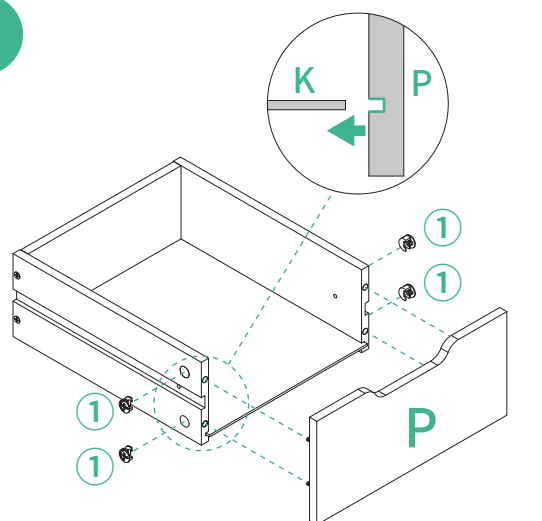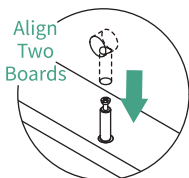  

Insert Cam Bolt

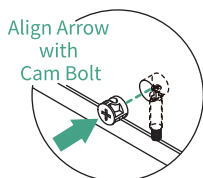 

Press The Cam Lock

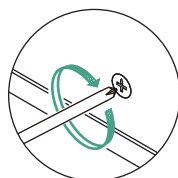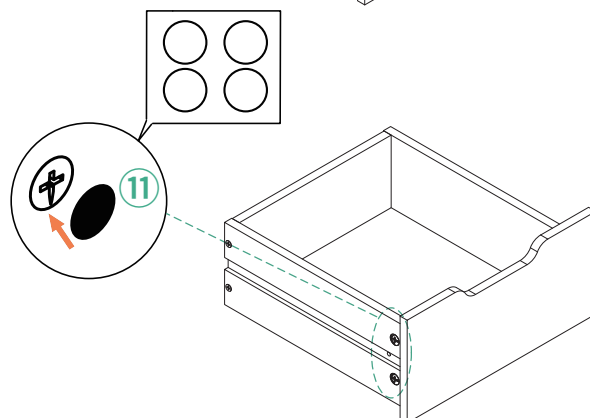  

5		11		4	
x24		x24		x1	

K		P		Q		R		S		1		3	
x6		x6		x6		x6		x6		x24		x24	

 
 
 
 
 
Assembly Instructions

25




Install the ten drawers in the order shown in the enlarged picture.

1. Pull the slide rail to the maximum position.
2. Align the drawer groove with the slide rail, then push it in.
3. Ensure the slide rails are perfectly flush with the front of the drawer. Use a tool if necessary.
4. Finally, press the slide rail by hand, then secure the drawer and slide rail with screw ⑥.

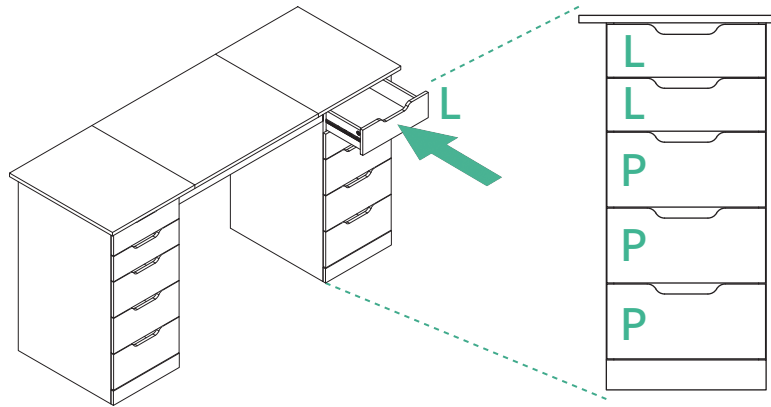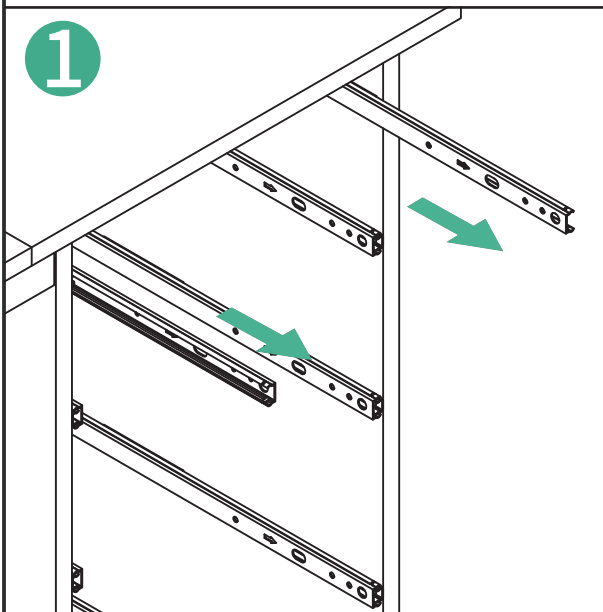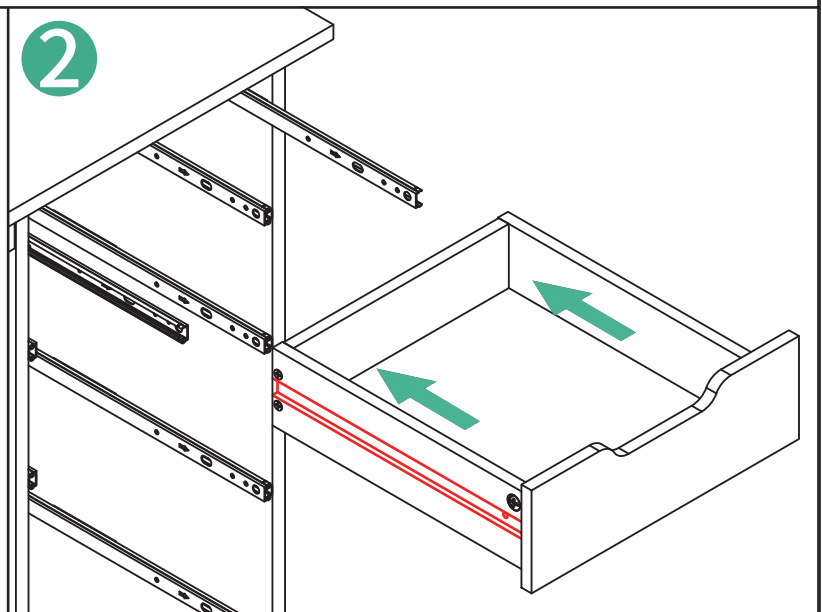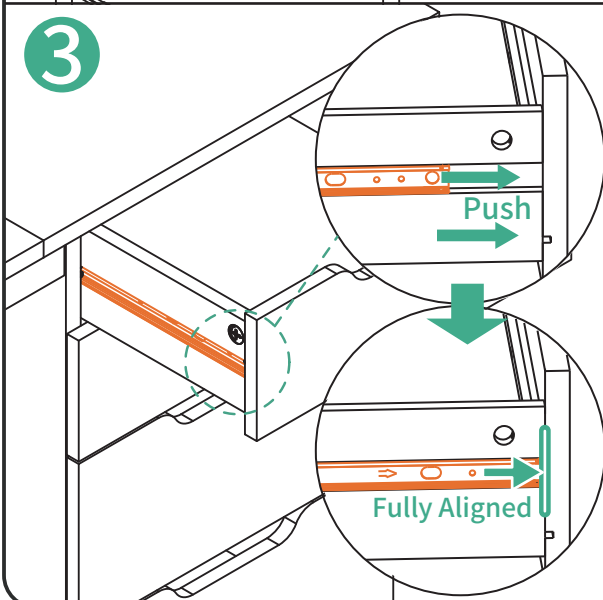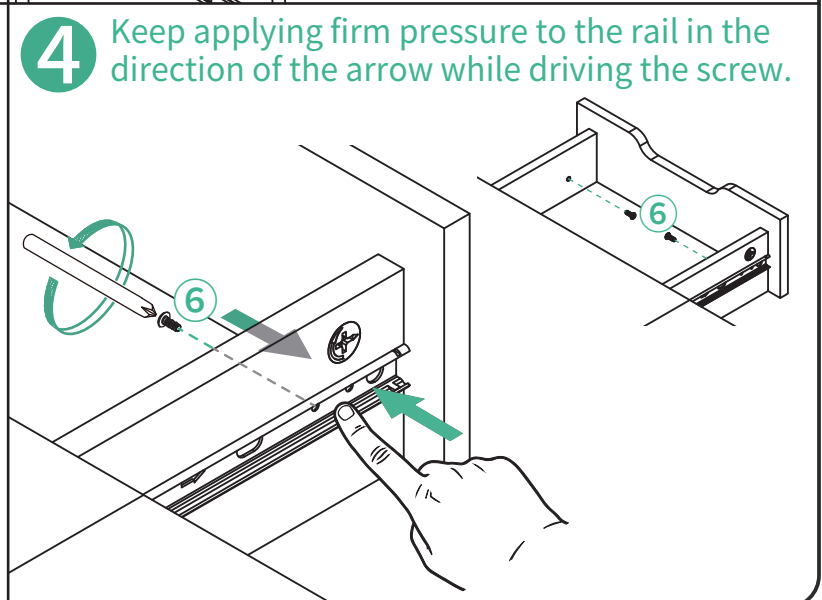

26

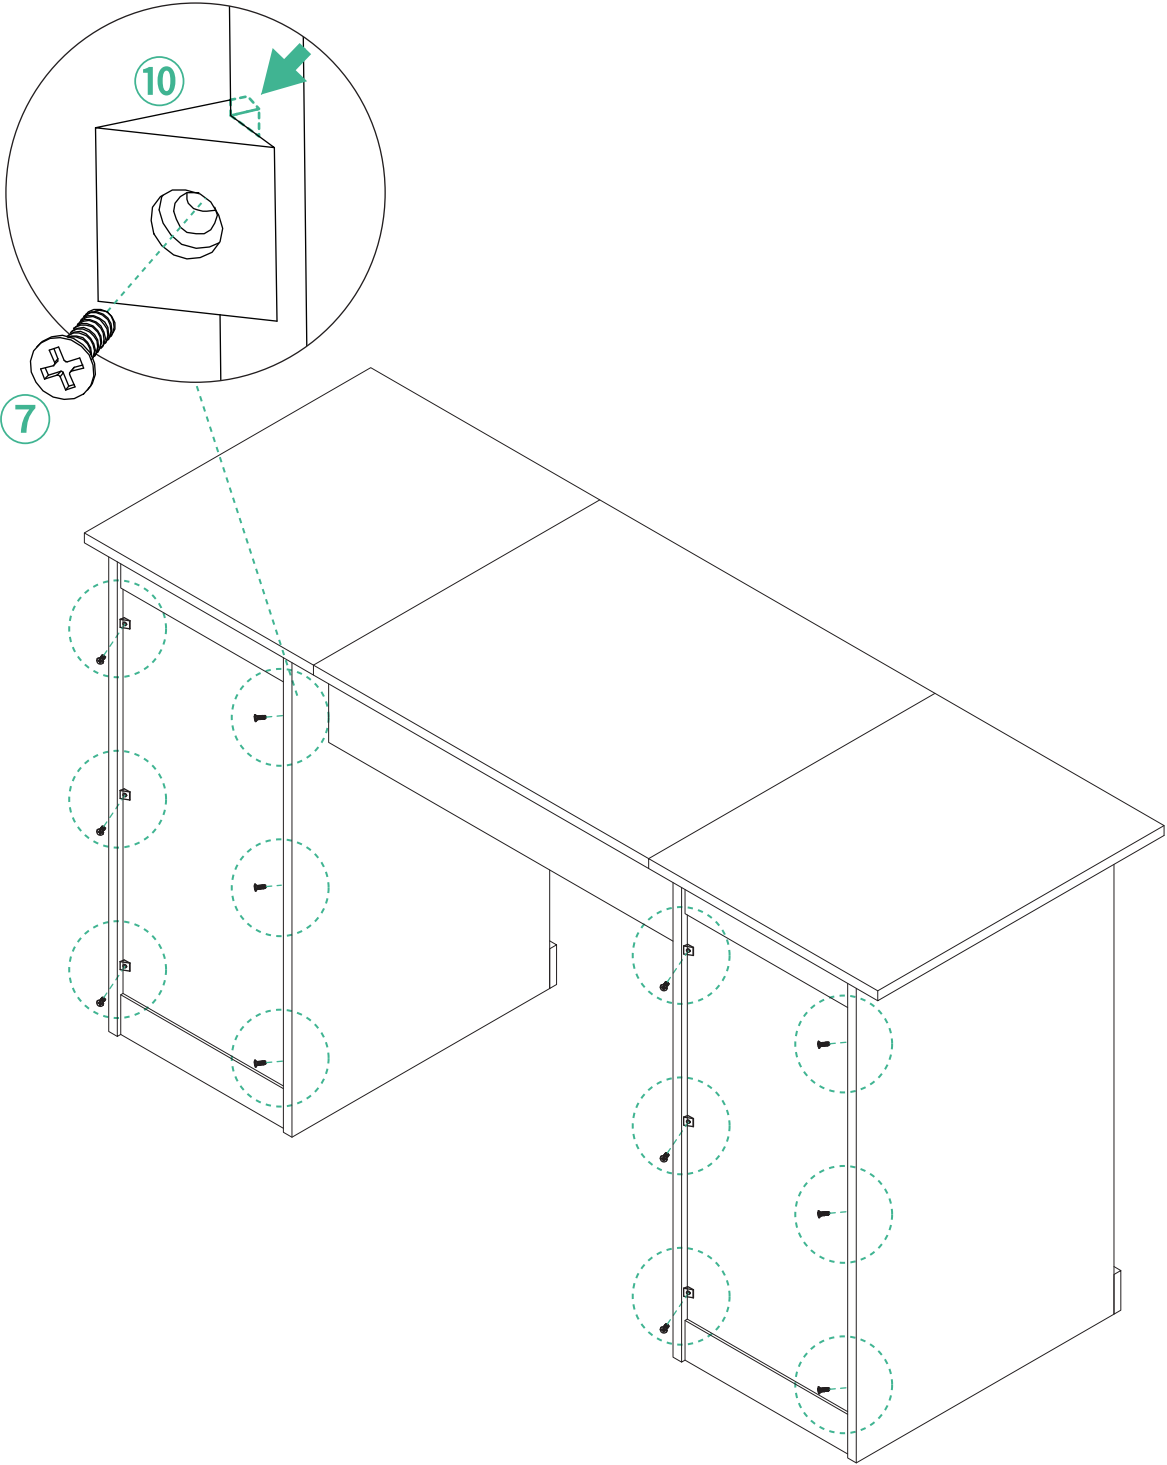 

7		10	
x12		x12	



30 DAY Return Policy

If you're not completely satisfied with your purchase, please return the merchandise via our Official Customer Support. Unused merchandise can be refunded or exchanged within 30 days of purchase.



1-Year Warranty

We guarantee your product is free from defects in product material and workmanship for one (1) year starting from the date of purchase during normal use of household conditions. If your appliance fails to operate properly within our warranty period, we will arrange a new one. Replacement is free and all shipping costs are covered.



Quick Response within 24 Hours

If you are still unable to resolve the issue you are experiencing, please contact us immediately via our support email. It doesn't matter if the product has been installed or not, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem to us is to attach a video, which illustrates your product issues.

Problems You May Encounter

PART	PROBLEM	SOLUTION
Whole Product	Parts are missing, defective or having wrong parts in package.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	Having issue(s) while reading the instruction or completing the assembly.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	Encountering non - human caused damage during use.	If the product is damaged due to non - human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Furniture Surface	Surface is broken, scratched or lack of some screw holes.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	The screw holes that on the board and the frame don't line up.	1. Tighten the screws only 70% of the way. Do not fully tighten the screws until all parts are aligned. 2. Adjust the board and frame until the holes align, then fully tighten all screws.
	Surface is uneven or not tight that has gaps after being assembled.	1. Loosen the screws in the uneven or gap positions; adjust until the surface is flat and tight, and then tighten the screws. 2. If your problem still can't be solved, please feel free to contact us.
Structure Frame	Components are bent, broken, chipped, rusted, or damaged.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	The furniture is unstable after being assembled.	1. Check if all screws are fully tightened. 2. Read through the manual and check if any parts are installed incorrectly or missing. 3. If the problem persists, please contact us.
	Encountering non - human caused damage during use.	If the product is damaged due to non - human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.

We are committed to providing our customers with premium quality products and convenient customer service.

MADE IN MALAYSIA