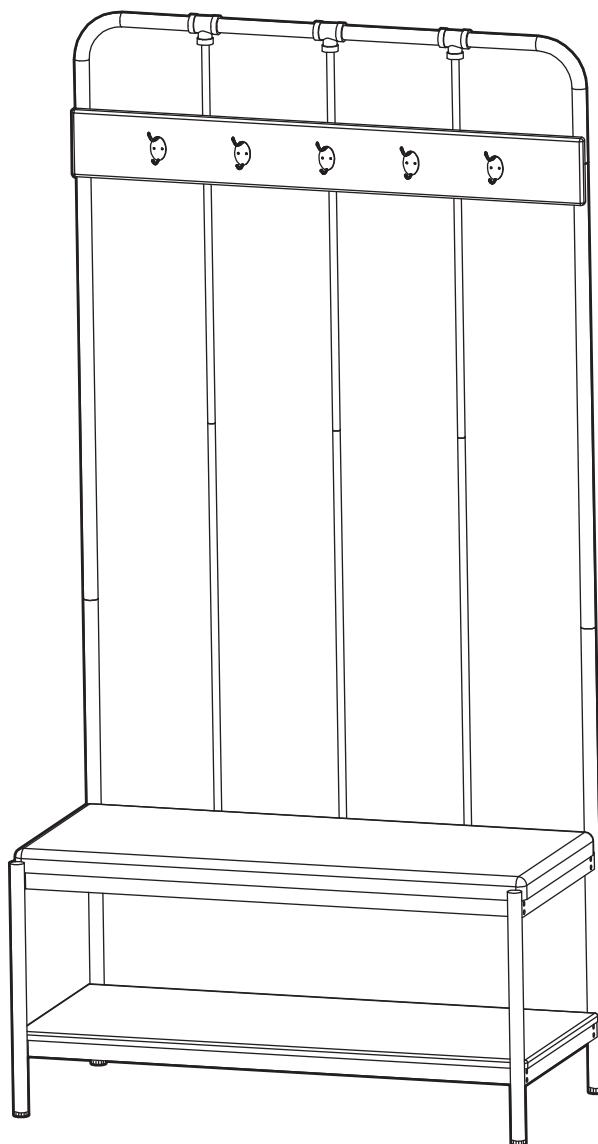







ORIGINAL INSTRUCTION MANUAL












DEAR CUSTOMER,


Thank you for choosing our product. Please read this manual carefully before assembling or using the product, to avoid damage caused by improper use. If the product is passed on to third parties, this manual has to be passed on along with the product. For any question don't hesitate to contact us.

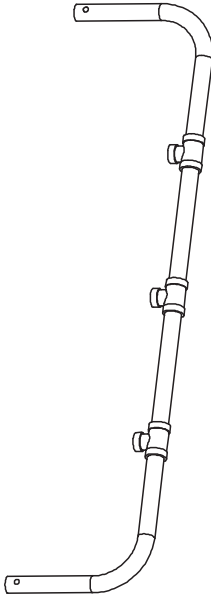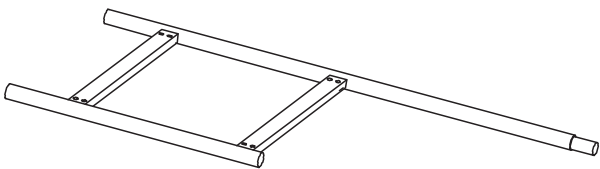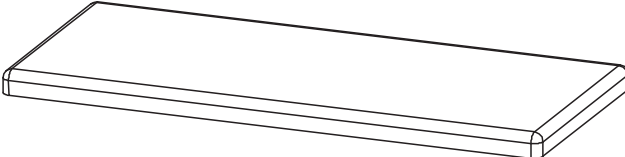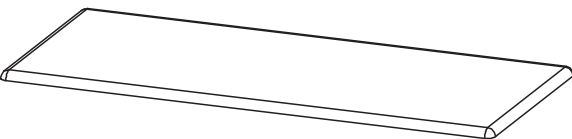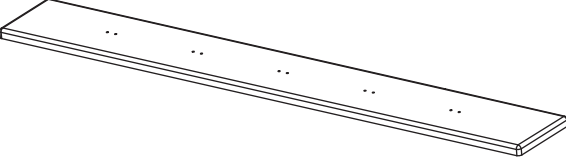PARTS LIST

A 1× 	B 3× 	C 3× 	D 2× 
E 2× 	F 1× 		
G 3× 	H 1× 		
I 1× 	J 1× 		

         1	20×	2	4×	3	4×
					
M6×35mm		M6×40mm		M6×45mm	
4	5×	5	10×	6	1×
					
M6×15mm		M3×12mm		M6	
8	2×	9	2×	10	2×
					
M4×30mm					
				11	4×
					

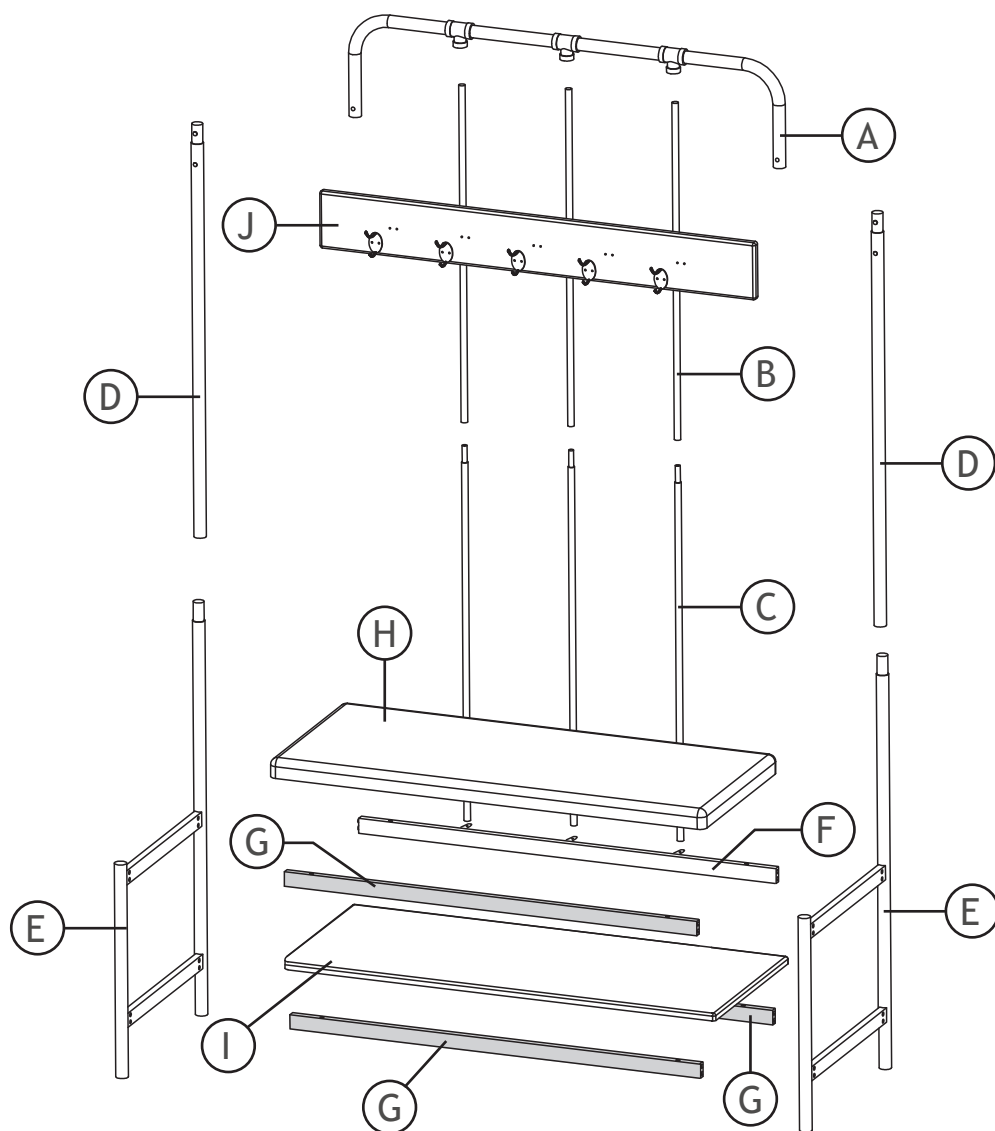
EXPLODED VIEW




ASSEMBLY

Before your installation, please make sure that you have all the parts listed on the manual. If you find something missing, stop installing and contact your supplier immediately.

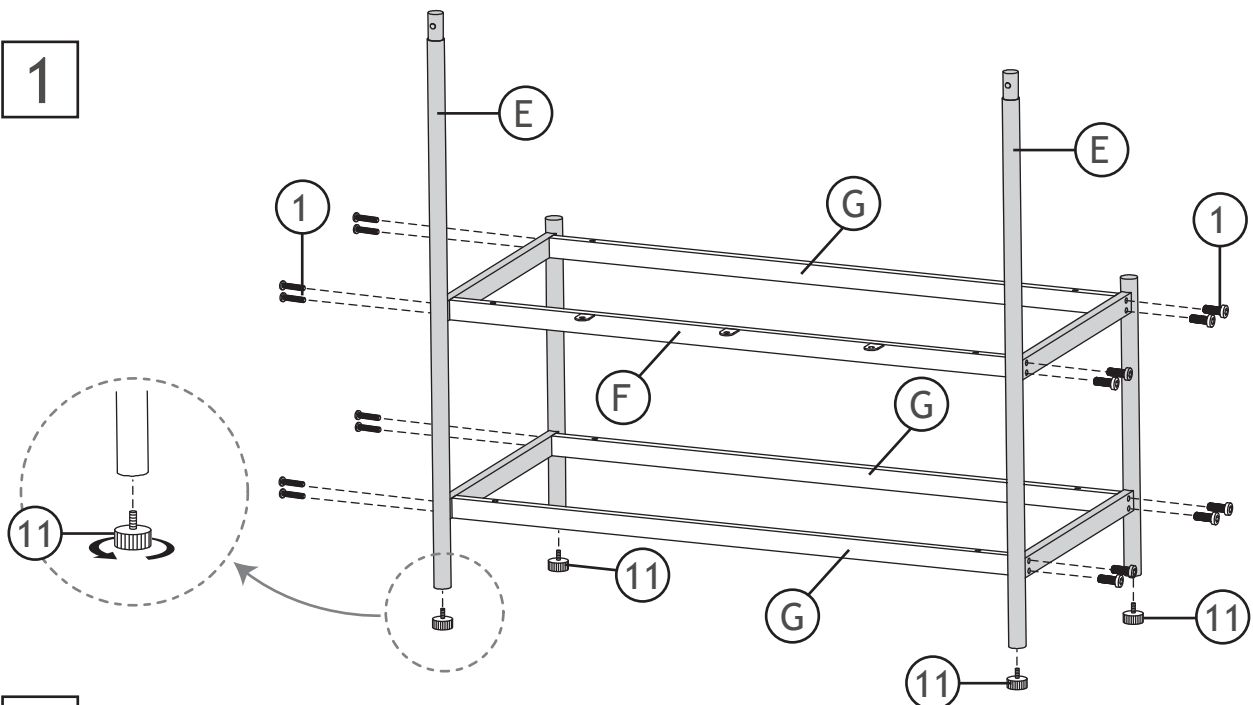
1




2

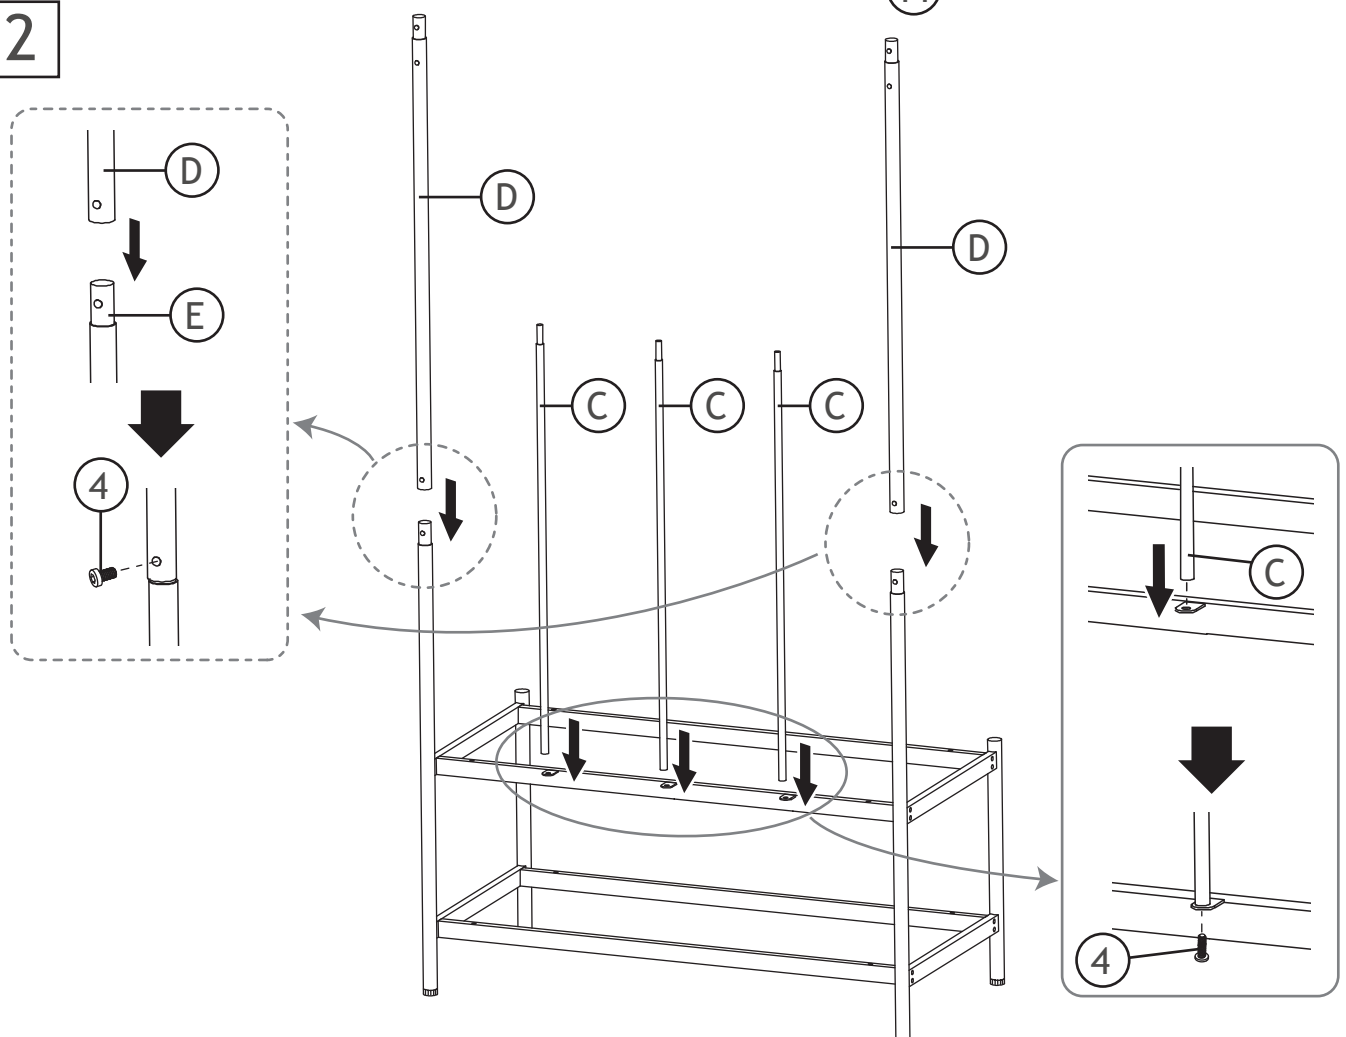


3

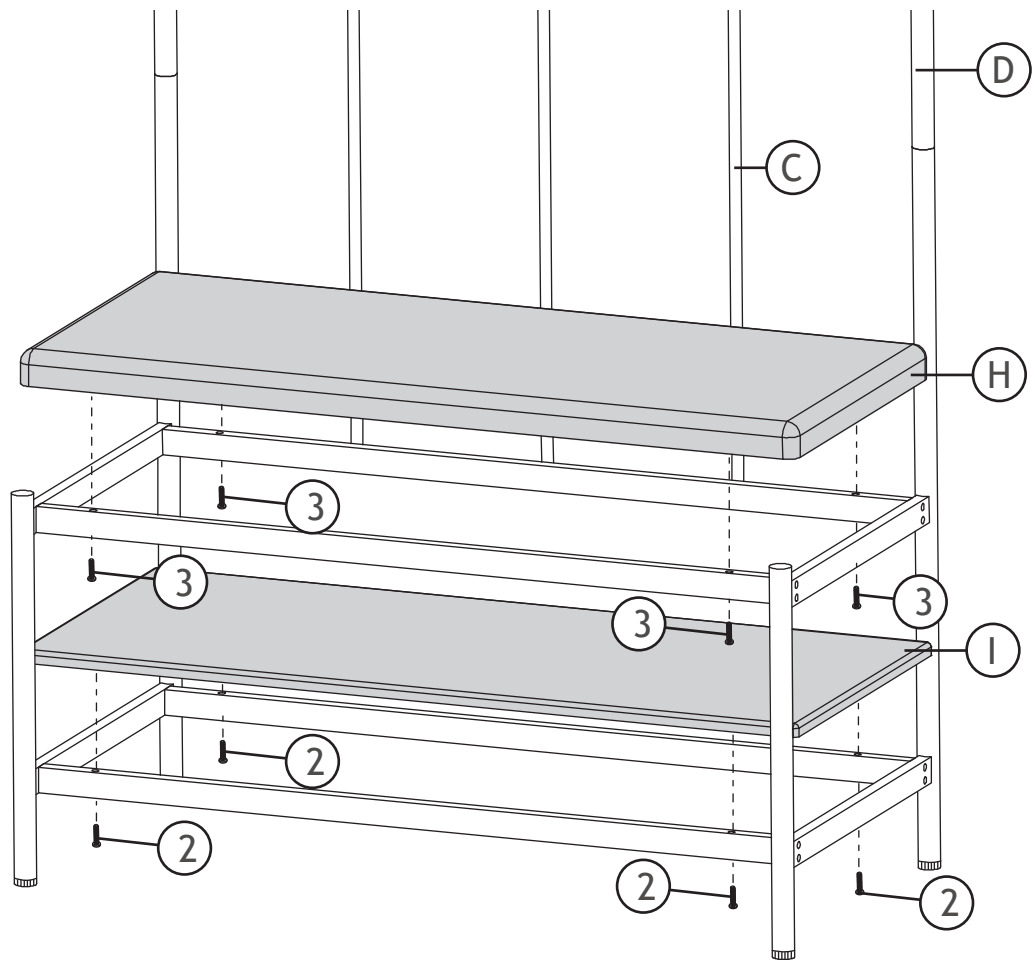


4

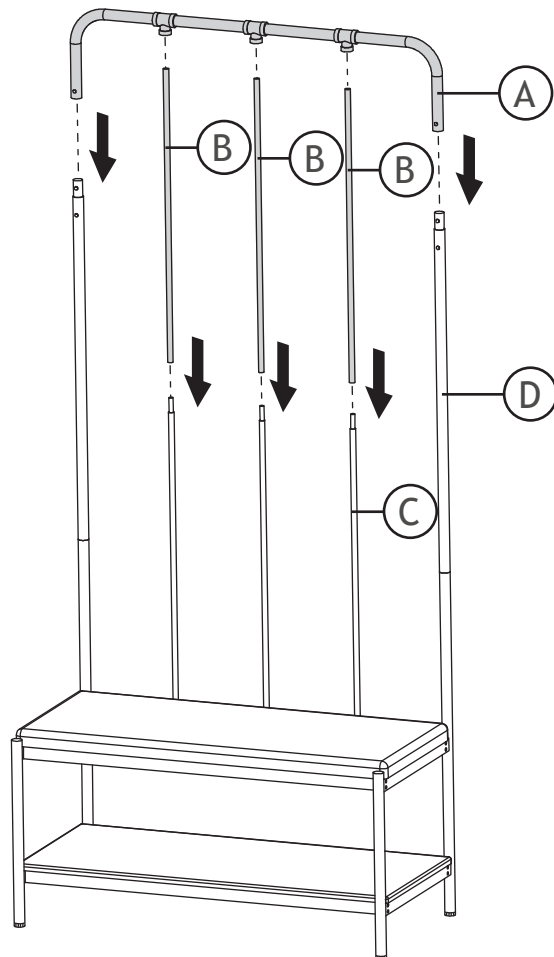

5

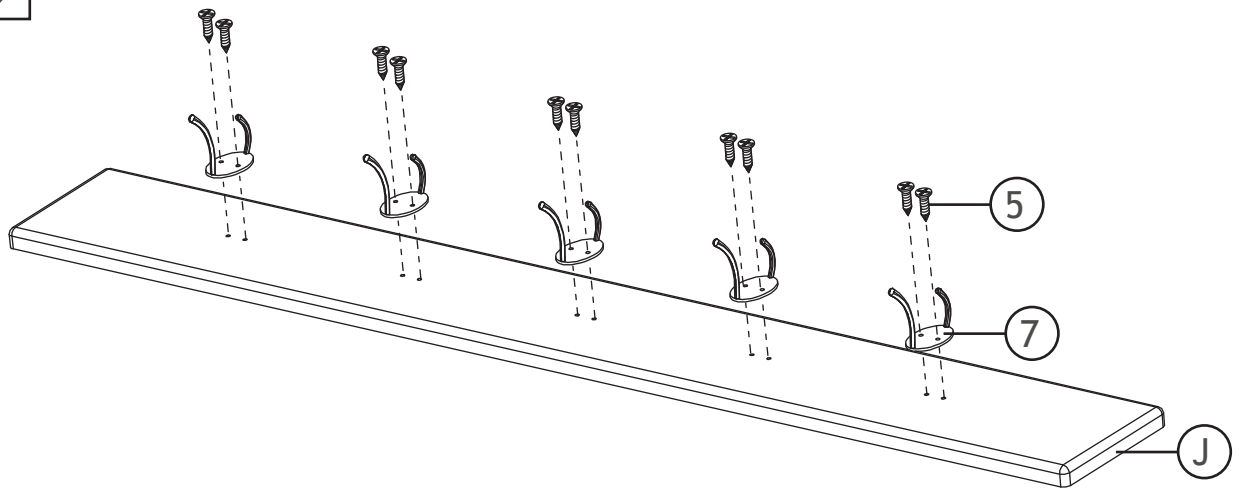



6

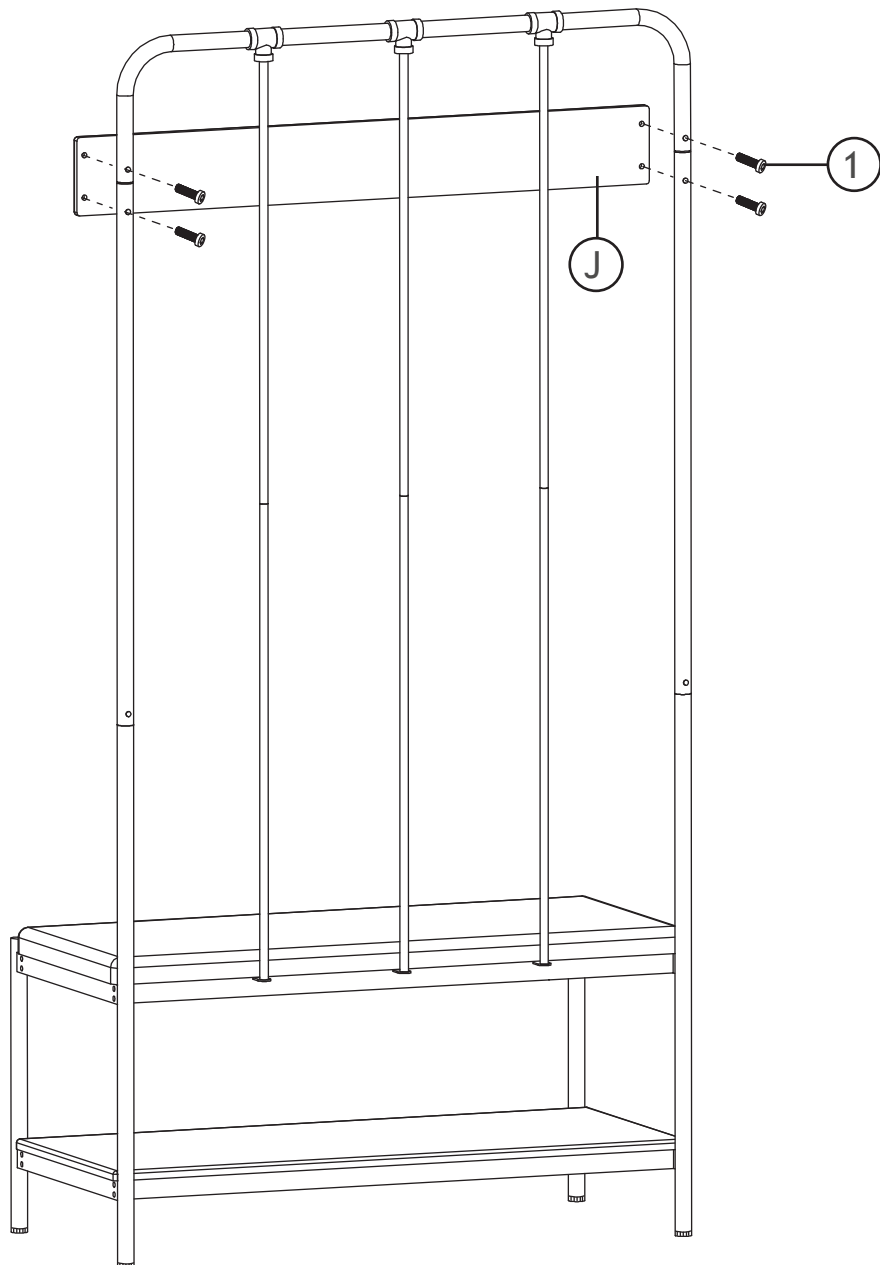

7

Anti-Toppling Device

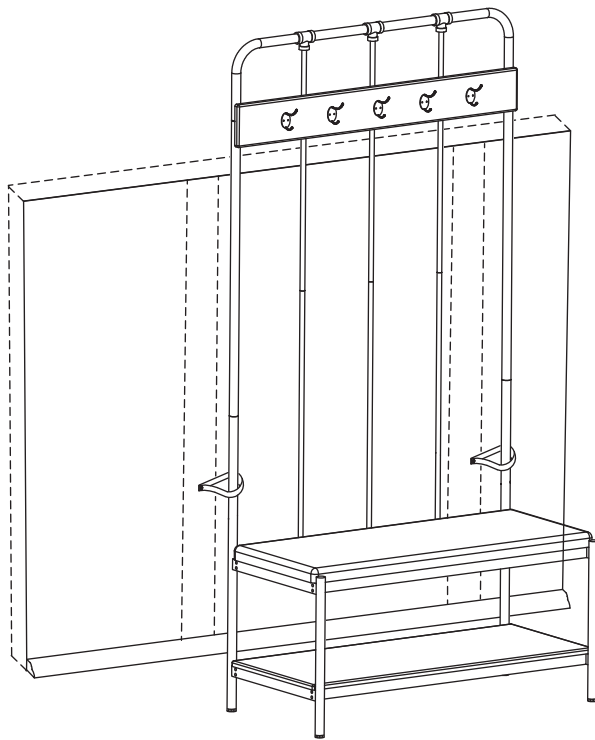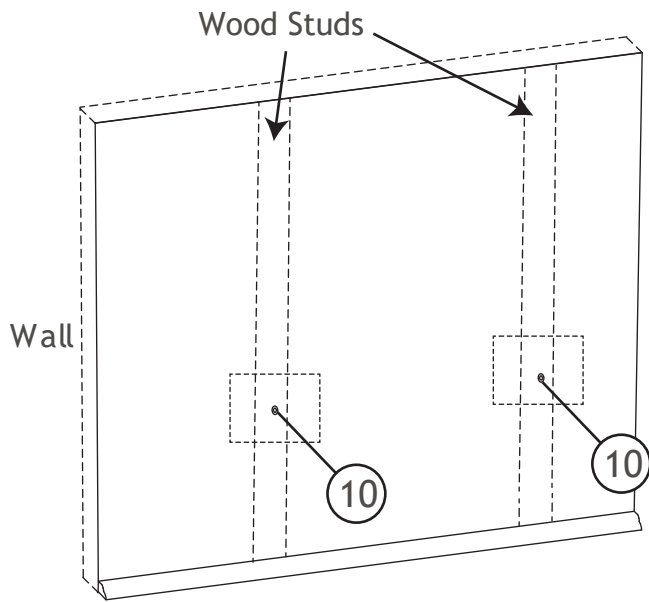⚠ Wall Mounting



Anti-dumping Design:
For safety during usage, you can fix the coat rack to the wall with screws and straps to prevent it from dumping.

Installation Methods:

1. Fix the expansion pipes (10) to the wall.
2. Connect the coat rack to the wall with straps (9) and screws (8).

