# **ASSEMBLY INSTRUCTION**

## **DINING TABLE**

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

### \*\*\*Do not fully tighten screws until fully assembled\*\*\*


	COMPONENT PARTS	
DESCRIPTION	PART NAME	Q'TY (PCS)
P1	PEDESTAL LEGS	2
P2	LEG PRONGS	4
Р3	BOTTOM STRETCHER	1
P4	TOP RAIL	1
P5	MOUNTING BAR	4
Р6	TABLE TOP	1

#### HAREWARES REQUIRED

Н1		WRENCH - 1 PC
Н2		HEX NUX - 24 PCS
Н3		M8 SPRING WASHER - 24 PCS
H4		M8 FLAT WASHER - 24 PCS
Н5		ALLEN KEY - 1 PC
Н6		JCBC BOLT M6 x 70MM - 2 PCS
Н7		M6 SPRING WASHER - 2 PCS
Н8	<b>⊕</b> ***********	CSK SCREW M4 X 32MM - 16 PCS

### Attention:

<sup>\*\*\*</sup> Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

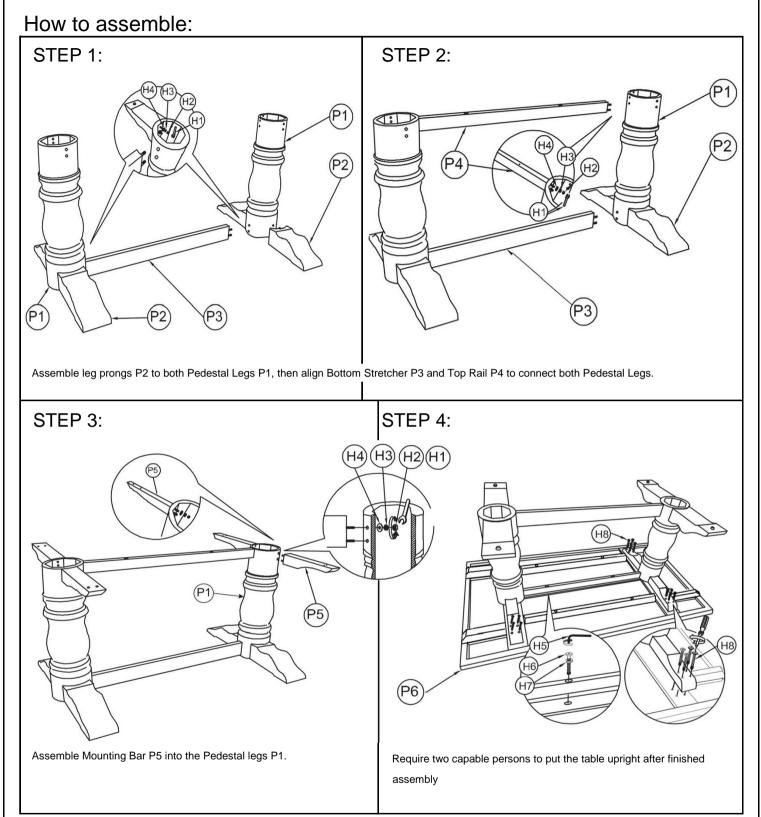

PAGE 2/2