 


# ASSEMBLY INSTRUCTION


## ALL WEATHER WICKER LED TABLE LAMP

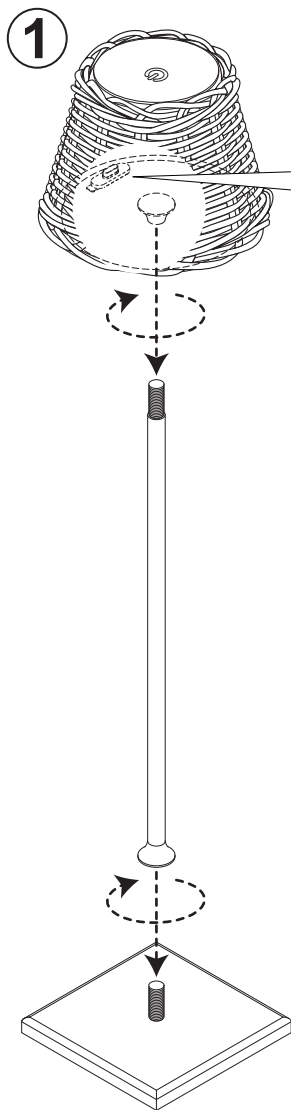


### CHARGING DETAILS:



USB WIRE,  
ADAPTOR, &  
LIGHT KIT  
INCLUDED

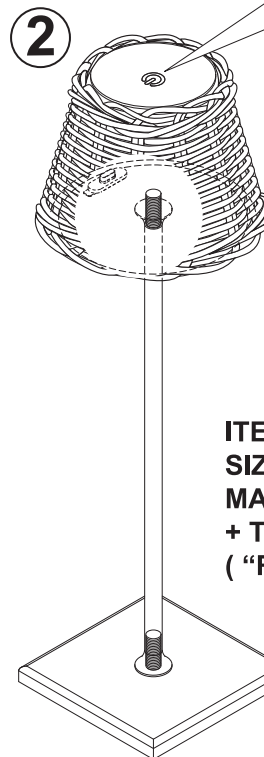

NOTE:  
PUSH SWITCH TO  
CHANGE (RGB)  
"RED-GREEN-BLUE"  
COLOR

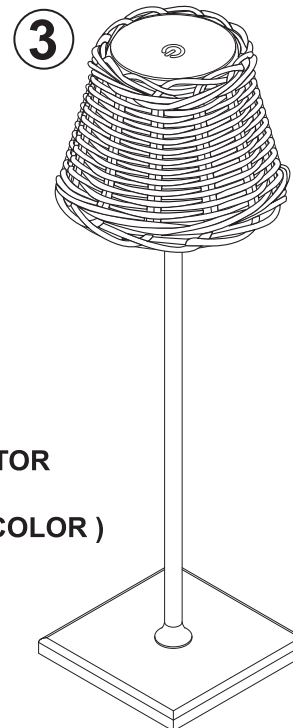

ITEM No.: RXB7  
SIZE : 13Ø X 39 CM H.  
MAX. 5V POWER ADAPTOR  
+ TYPE C CABLE  
( "RED-GREEN-BLUE" COLOR )

- 1) First tap: Regular light turns on. Tap again and hold for light to dim. Release hold at desired brightness.
  - 2) Second tap: Light cycles through 7 colors (red, green, blue, cyan, purple, yellow & orange) and automatically repeats the sequence.
  - 3) Third tap: Turn on color mode. Starts with solid red. Tap again and hold for light to cycle through all colors. Release hold at desired color.
  - 4) Fourth tap: Switch off light altogether.
- Note: The last selected brightness from step 1) is saved and automatically applied when the lamp is turned on again. To change brightness go back to step 1)

PS-RXB7-UL