


# Double motor lift desk

## Operation guide

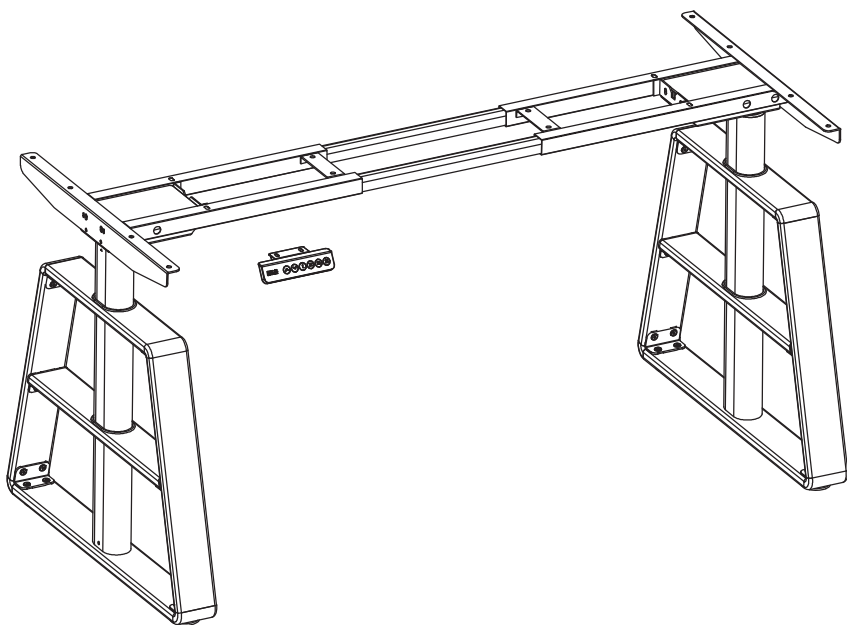









 

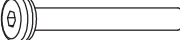










Before first use please.

Read this manual carefully! Be sure to follow the safety instructions!

Failure to comply can result in dangerous injury!

Keep this manual with care!

## List of parts

Sequence	Name	Figure	Quantity
1	Table leg		2
2	Beam		1
3	Bracket arm		2
A	Power supply		1
B	Manual controller		1
D	Thread buckle		8
E	Foot pad		4
F	4MM wrench		1
J	Screw M6x12		60
M	Motor extension cable		1
L	Screw M6X35		10
N	Electric wrench		1
T	Locakble Wheels		4
P	Self-tapping screw		20
T1	Connector		4
T2	Connector		4
T3	Connector		4
8	Pipe fittings		2
11	Pipe fittings		2
12	Pipe fittings		2
13	Pipe fittings		4


Kind reminder:

There is a backup quantity of screws, please keep them properly for future use.

**1**


<b>Jx8</b>	<b>Fx1</b>
Screws M6	4mm Allen Key

Open the welded beam (6), as shown in the figure, then put the two, table legs (5) into the beam according to the instructions, and then connect the beam with the table leg with M6x12 screw (F), then all screws (F) do not tighten.

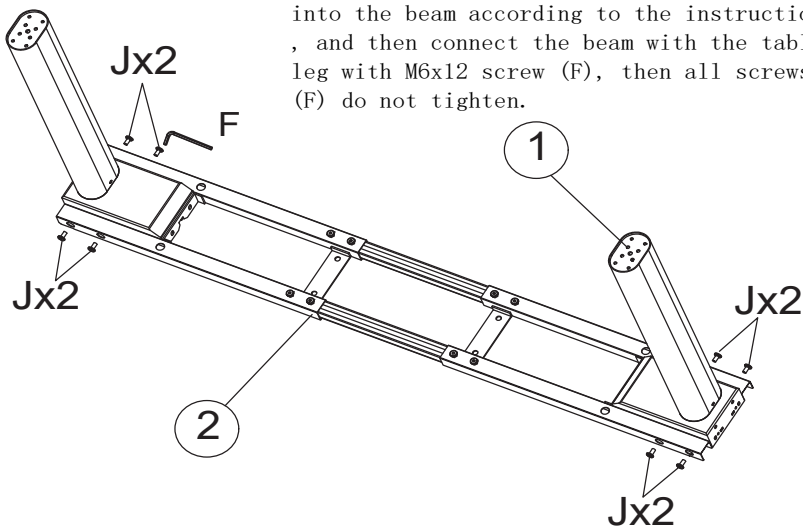**2**

<b>Jx4</b>	<b>Fx1</b>
Screws M6	4MM Allen Key


The front end of the table leg needs to be connected with M6x12 screws, but all the M6x12 screws in one step should be tightened and fixed.

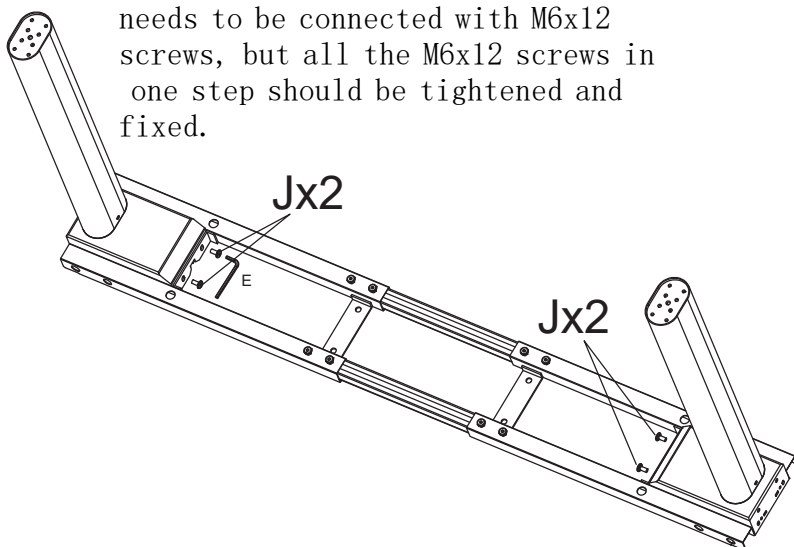

# 3

<b>Jx8</b>	<b>Fx1</b>
Screws M6	4MM Allen Key


Now the serial number 13 pipe fittings are placed according to the position in the figure, the screw hole is placed downward, and then the T1 and T3 parts are found and installed at both ends of the pipe fittings according to the way in the figure

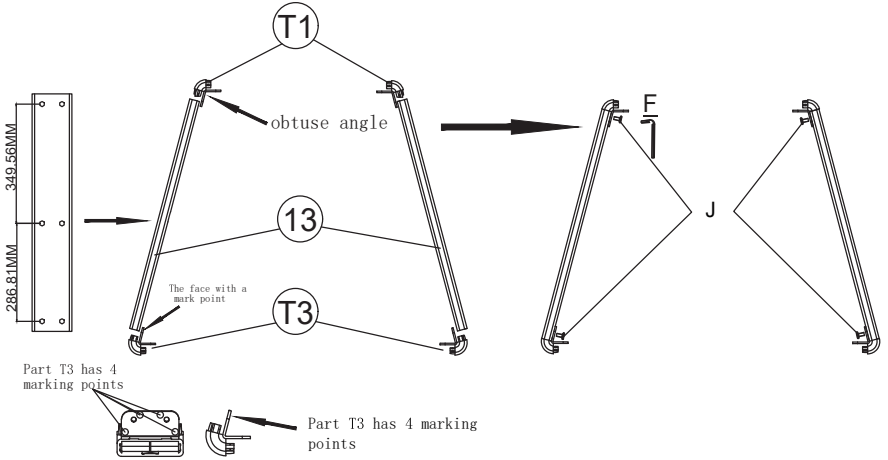

# 4


<b>Jx4</b>	<b>Fx1</b>
Screws M6	4MM Allen Key

Find out the pipe fittings with serial number 12, then find out the two parts with serial number T2, and install them at the two ends of the pipe fittings according to the method in the figure, with the screw hole of the pipe fittings facing down

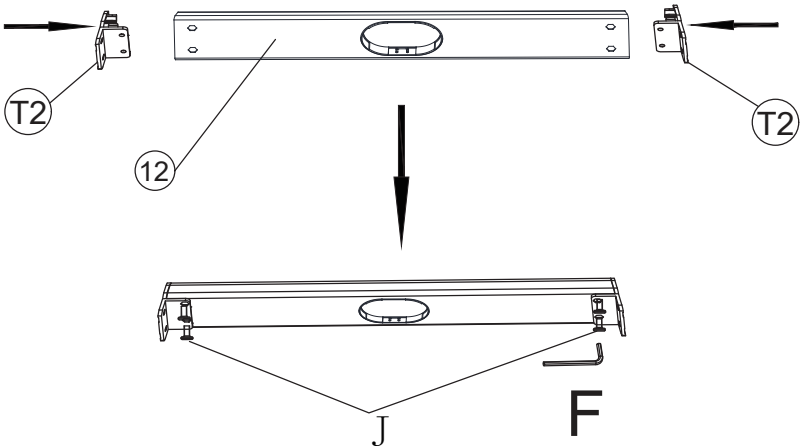

# 5


Find out the pipe fittings with No.11 and 8, put them according to the drawing, and then join together the installed 13 pipe fittings with No. 11. 12. 8

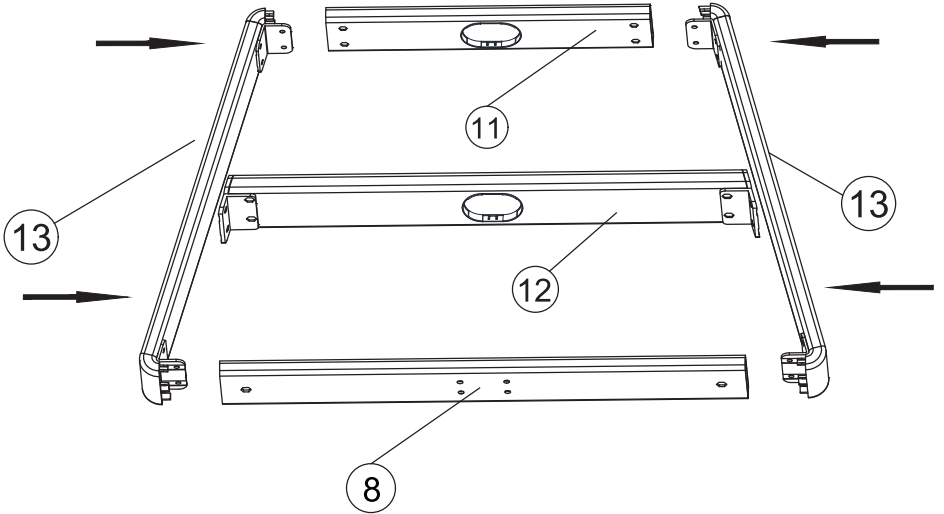

# 6


Pipe fittings are tightened with screws, and then? Install foot pads again

<b>Jx12</b>	<b>Fx1</b>
Screws M6	4MM Allen Key

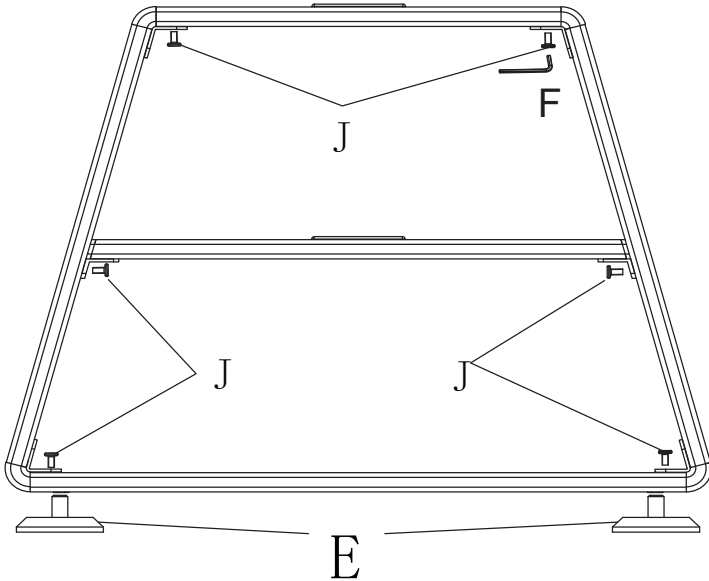

7


Jx24	Fx1
Screws M6	4MM Allen Key

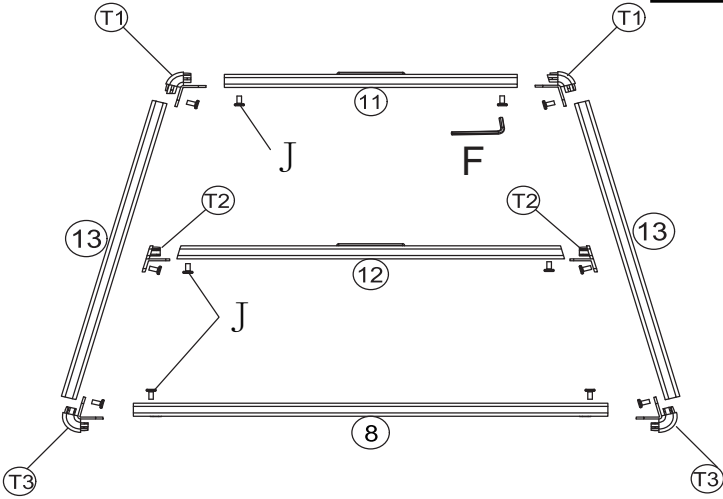

8

Lx4	Fx1
Screws M6	4MM Allen Key


Connect table heel table legs and screw M6x35

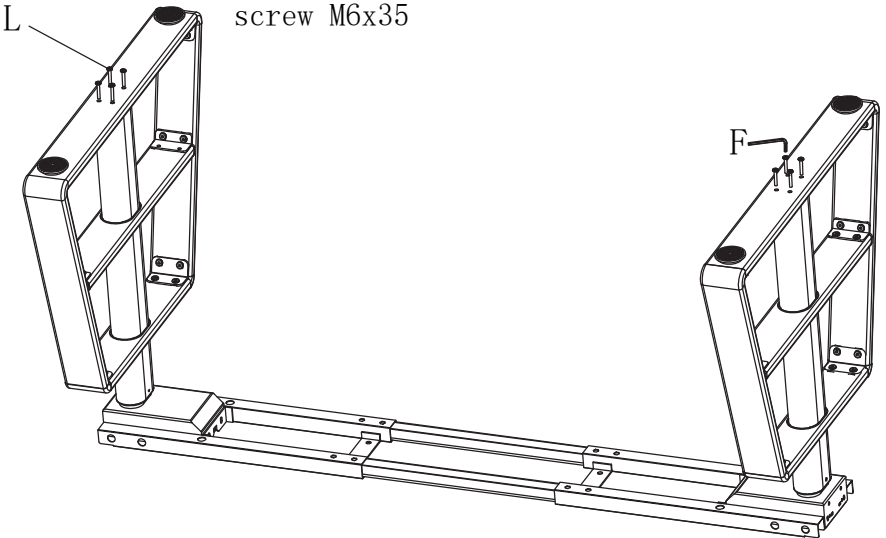

# 9

(7) Install on the table on the leg, with the arm  
Note that the boom is bent toward the inner M6x12 screw is  
fixed, side mounting.


<b>Jx4</b>	<b>Fx1</b>
Screws M6	4MM Allen Key

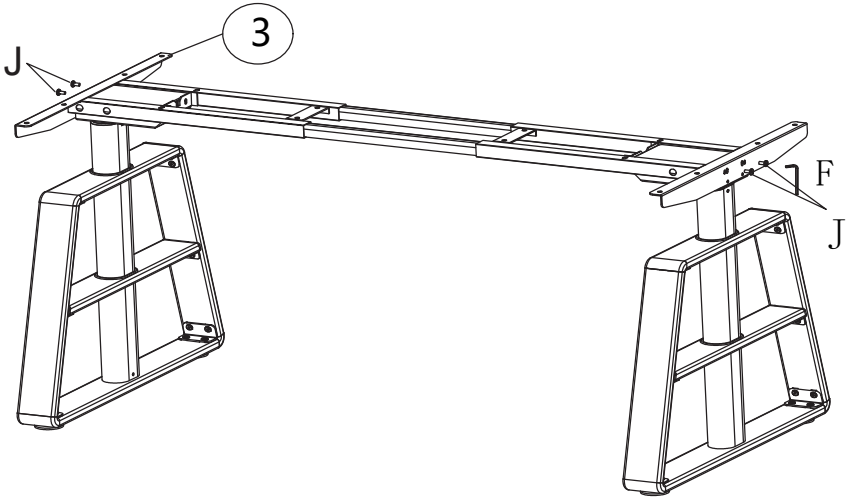

# 10


Install the table holder on the panel as shown  
with a tapping screw

<b>Px18</b>	<b>Fx1</b>
Screws M6	4MM Allen Key

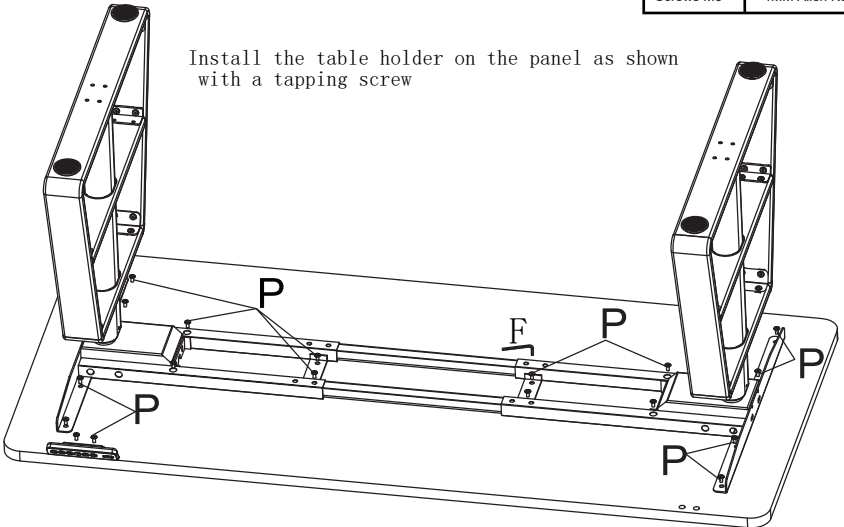


# 11

Inlay the data cable in the cable card, and then tear off the tape surface and paste it on the opposite side of the panel

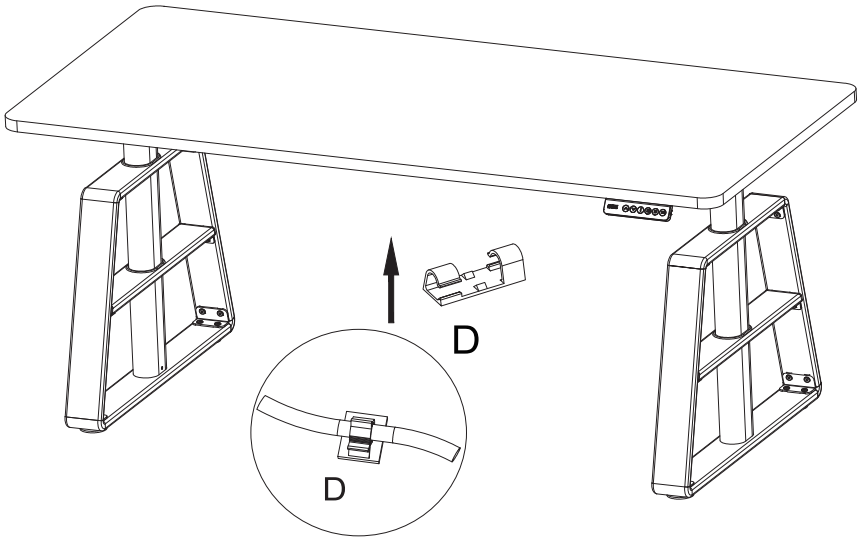


# 12

Refer to the motor cord, extension cord (M), hand controller (A) And power supply plug (B)

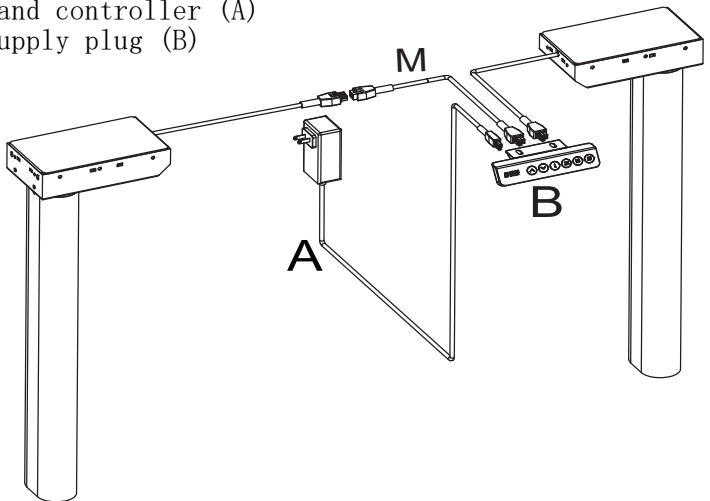

# Manual controller operation instructions

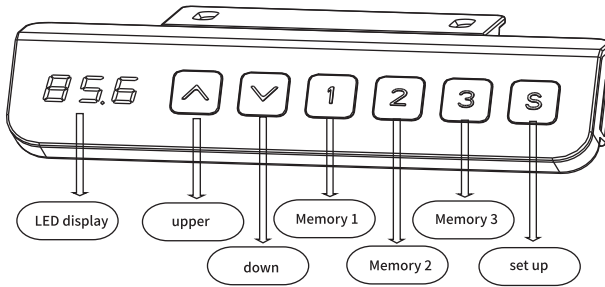

Operation procedure	Operating instruction
<b>Height adjustment</b>	Rise: Hold down “^”. Fall: hold down “v”.
<b>Memory storage</b>	Click the S key, and the height value will start flashing. At this time, press the number 1 key to save the current height to the corresponding position. The settings for numbers 2 and 3 are the same as those for number 1.
<b>Reset Settings</b>	Simultaneously press and hold “^” and “v”, the LED screen will start flashing, and the table will slowly descend, automatically lowering to the lowest level to display the LED screen's digits. The reset is successful.
<b>Safe child lock</b>	<p><b>Lock setting:</b> Press and hold the S key for 3 seconds. When the LED screen displays “SET”, press the number key 3 once to enter the lock screen state. At this time, the LED screen will flash and display “OFF”</p> <p><b>Unlocking setting:</b> In the lock screen state, press the S key for 3 seconds, and the LED screen will display the height value. At this time, release the S key to complete the unlocking process</p>
<b>advanced setting</b>	<p>Menu settings: Press and hold the S button for 6 seconds, and when the LED screen displays “HLP”, release the S button. At this time, the LED screen flashes alternately to display “HLP” and the current height value:</p> <ol style="list-style-type: none"> <li>1. Press the number key 1, the LED screen will flash to display “H-P”, and press the S key to save the current value.</li> <li>2. Press the number key 2, the LED screen will flash and display “L-P”. Press the S key to save the current value.</li> </ol> <p>Exit Settings: 1. When the LED screen flashes alternately to display “HLP” and the current height value, if the S key is not pressed to confirm within 15 seconds, the setting mode will be exited. 2. When the LED screen flashes alternately to display “HLP” and the current height value, the current height value can be adjusted by using the up or down keys. When the LED screen flashes alternately to display “HLP” and the current height value, press the number key 3 to directly delete the set maximum and minimum heights:</p>

<p><b>Rebound when encountering obstacles</b></p>	<p>Settings: Long press and hold the S button for 3 seconds. When the LED screen displays "SET", release the S button and press the number key 2 to enter sensitivity settings. At this time, the LED screen flashes alternately to display "cpt" and the current sensitivity value. Adjust the sensitivity value by using the up or down button, and press the S button to save the current setting</p> <ol style="list-style-type: none"> <li>1. Sensitivity 0/1/2/3/4, the higher the number, the higher the sensitivity</li> <li>2. When the LED screen flashes alternately to display "cpt" and the current sensitivity value, the S key is not used to save confirmation, and the system automatically saves the current unit setting for 15 seconds</li> </ol>
<p><b>Unit conversion</b></p>	<p>Long press and hold the S key for 3 seconds. When the LED screen displays "SET", release the S key and press the number key 1 to enter the unit conversion setting. At this time, the LED screen flashes alternately to display "unt" and the current height value. Adjust the unit by pressing the up or down button, and press the S key to save the current setting.</p>
<p><b>Restore factory settings</b></p>	<p>Press and hold the S key for 9 seconds. When the LED screen displays "FAC", release the S key and operate it again to restore the factory settings.</p> <p>After restoring the factory settings, clear the memory position, height range, sensitivity, and units that have been set</p>

**Troubleshooting guide:**

If your lifting table is not working properly, try to reset the setting.

If any error codes occur, reset the Settings.

If it does not work after the reset, please contact us for more help.

**Care and maintenance:**

1. Use a clean soft cloth to remove dust from the surface during routine maintenance. Do not wipe the table surface with damp cloth or hard material.
2. Avoid contact with acidic chemicals.
3. For slight scratches, wipe gently with a soft cloth to smooth the scratches. Do not stick adhesive items directly on the outer surface of the metal foot to prevent the surface from falling off.